

SUBJECT	PAGE	SUBJECT	PAGE
Accessories	14-1	Diagnosis and Testing	5-28
Back-Up Lamps	14-7	Disassembly of Unit	5-20
Direction Signal	14-4	General Description	5-14
Electric Antenna	14-2	Installation of Unit	5-27
Electric Clock	14-7	Periodic Service	5-19
Handicap Controls	14-8	Removing Unit	5-20
Radio	14-1	Special Tools	5-50
Underseat Heater and Defroster	14-5	Specifications	5-29
Windshield Washer	14-7	Moraine	5-30
Antenna, Electric	14-2	Adjustment	5-35
Assembly	14-3	Assembly of Unit	5-45
Disassembly	14-3	Cleaning and Inspection	5-44
Operation	14-2	Diagnosis and Testing	5-49
Removal	14-3	Disassembly of Unit	5-35
Anti-Freeze	6A-7	General Description	5-30
Axle Shaft	4-3	Installation of Unit	5-49
Bearing Replacement	4-6	Periodic Service	5-35
Oil Seal Replacement	4-5	Removing Unit	5-35
Unit Replacement	4-6	Special Tools	5-50
Battery	12-2	Specifications	5-50
Charging	12-9	Breaker Points	12-22
Periodic Service	12-4	Install and Adjust	12-29
Specifications	12-46	Trouble Diagnosis and Testing	12-32
Testing	12-9	Camshaft Bearing Installation	6-41
Bleeding Brakes	5-5	Camshaft, Clean and Inspect	6-32
Body	1-0	Camshaft, Replace	6-18
Adjustments	1-0	Camshaft Thrust Plate, Inspect	6-32
Serial Number and Body Number Location	1-0	Car Model Identification	00-4
Shimming	1-0	Carter Carburetor WCFB (4-Barrel)	6B-21
Brakes, Standard	5-1	Carter Carburetor WGD (2-Barrel)	6B-2
Adjustments on Car	5-3	Carburetor	
Diagnosis and Testing	5-8	Adjustment on Car	
Inspection	5-7	Carter WCFB (4-Barrel)	6B-25
Minor Repair	5-5	Carter WGD (2-Barrel)	6B-9
Bleeding	5-5	Rochester 2GC (2-Jet)	6B-44
Flushing	5-6	Rochester 4GC (4-Jet)	6B-61
Periodic Service	5-2	Description	
Reconditioning	5-6	Air Cleaner and Silencer	6B-2
Special Tools	5-50	Carter WCFB (4-Barrel)	6B-21
Specifications	5-12	Carter WGD (2-Barrel)	6B-2
Brakes, Power		Fuel Filter	6B-1
Bendix	5-14	Heat Control	6B-1
Adjustment	5-19	Rochester 2GC (2-Jet)	6B-39
Assembly of Unit	5-24	Rochester 4GC (4-Jet)	6B-56
Cleaning and Inspection	5-24		

SUBJECT	PAGE	SUBJECT	PAGE
Diagnosis and Testing		Oil Filter	6A-9
Carter WCFB (4-Barrel)	6B-36	Oil Pump	6A-8
Carter WGD (2-Barrel)	6B-18	Radiator	6A-9
Rochester 2GC (2-Jet)	6B-53	Thermostat	6A-8
Rochester 4GC (4-Jet)	6B-73	Water Pump	6A-9
Overhaul and Adjustment		Overhaul Oil Pump	6A-9
Carter WCFB (4-Barrel)	6B-25	Periodic Service	6A-7
Carter WGD (2-Barrel)	6B-9	Special Tools	6A-12
Rochester 2GC (2-Jet)	6B-45	Specifications	6A-11
Rochester 4GC (4-Jet)	6B-62	Trouble Diagnosis	6A-10
Special Tools		Core Hole Plugs, Replace	6-17
Carter WCFB (4-Barrel)	6B-38	Crankcase Ventilating System	6A-5
Carter WGD (2-Barrel)	6B-20	Crankshaft and Bearings, Clean and Inspect	6-32
Rochester 2GC (2-Jet)	6B-55	Cylinder Block, Clean and Inspect	6-32
Rochester 4GC (4-Jet)	6B-73	Cylinder Head Gasket Replacement	6-11
Specifications		Cylinder Head and Valves, Overhaul	6-24
Carter WCFB (4-Barrel)	6B-36	Defroster	14-5
Carter WGD (2-Barrel)	6B-19	Differential	4-1
Rochester 2GC (2-Jet)	6B-54	Description	4-1
Rochester 4GC (4-Jet)	6B-73	Diagnosis and Testing	4-22
Chassis Sheet Metal	11-0	Installation	4-22
Cigar Lighter	12-35	Removal	4-7
Replace	12-37	Repair	4-7
Replace Fuse	12-37	Specifications	4-33
Clock, Electric	14-7	Directional Signal	14-4
Clutch	6C-1	Distributor	12-22
Adjustment	6C-4	Adjust Ignition Timing	12-55
Description	6C-1	Assembly and Point Installation	12-29
Inspection	6C-5	Cleaning and Inspection	12-28
Installation	6C-5	Diagnosis and Testing	12-32
Periodic Service	6C-3	Disassembly	12-31
Removal	6C-4	Installation	12-31
Specifications	6C-6	Specifications	12-46
Clutch Pilot Bearing Replacement	6-21	Electric Clock	14-7
Coil Diagnosis and Testing	12-32	Engine	
Connecting Rod Bearing Replacement	6-44	Cooling System	6A-1
Connecting Rod Bushing Replacement	6-37	Description	6-1
Cooling System, Engine	6A-1	Electrical	12-1
Anti-Freeze	6A-7	Fuel	6B-1
Adding	6A-8	Oiling System	6A-3
Preparation For	6A-7	Engine Assembly	6-42
Testing	6A-8		
Description	6A-1		
Minor Repair	6A-8		

SUBJECT	PAGE	SUBJECT	PAGE
Engine Disassembly	6-22	Exhaust Pipe	8-3
Engine Mechanical	6-1	Muffler	8-3
Camshaft, Replace	6-18	Tail Pipe	8-3
Core Hole Plugs, Replace	6-17	Fan Belt Adjustment	6-8
Cylinder Head or Gasket, Replace	6-11	Filter Element, Oil, Replace	6A-7
Exhaust Manifold or Gasket, Replace	6-10	Flushing Cooling System	6A-7
Fan Belt, Adjust	6-8	Flywheel Housing, Alignment	7-14
Flywheel, Replace	6-21	Flywheel Replacement	6-21
Fuel Pump Eccentric, Replace	6-15	Frame	2-1
Harmonic Balancer, Replace	6-15	General Description	2-1
Hydraulic Valve Lifter, Replace	6-13	Repair	2-1
Installation, Engine	6-47	Front Shock Absorber Replacement	3-7
Insulators (Motor Mounts), Replace	6-14	Front Spring Replacement	3-9
Intake Manifold or Gaskets, Replace	6-8	Front Stabilizer Replacement	3-13
Intake Valve Stem or Shield, Replace	6-11	Front Suspension	3-1
Oil Pan, Replace	6-19	Adjustments	3-3
Overhaul		Alignment Checking	3-3
Assembly	6-42	Diagnosis and Testing	3-13
Camshaft Bearings	6-41	Remove and Replace	
Camshaft, Clean and Inspect	6-32	Front Shock Absorber	3-7
Camshaft Thrust Plate, Inspect	6-32	King Pin Bushings	3-12
Connecting Rod Bearings	6-44	Lower Control Arm	3-10
Connecting Rod Bushings	6-35	Lower Pivot Pin and Bushing	3-9
Crankshaft and Bearings,		Springs, Front	3-9
Clean and Inspect	6-32	Stabilizer, Front	3-13
Cylinder Block, Clean and Inspect	6-32	Upper Control Arm	3-11
Cylinder Head and Valves	6-24	Upper Pivot and Eccentric	3-7
Disassembly	6-22	Special Tools	3-18
Main Bearings	6-42	Specifications	3-17
Piston Pins	6-39	Front Wheel Bearing Adjustment	3-5
Piston Replacement	6-36	Fuel Gauge	12-41
Piston Ring Installation	6-39	Replace Instrument Panel Unit	12-43
Valve Guide, Replace	6-27	Replace Tank Unit	12-43
Valve Lifter	6-29	Testing	12-45
Periodic Service	6-8	Trouble Diagnosis	12-44
Push Rod Cover or Gasket, Replace	6-11	Fuel Pump	
Rear Main Bearing Seal, Replace	6-19	Assembly	6B-76
Removal, Engine	6-22	Description	6B-74
Rocker Arm Adjustment	6-45	Diagnosis and Testing	6B-77
Rocker Arm Stud, Replace	6-12	Disassembly	6B-74
Special Tools	6-51	Overhaul	6B-74
Specifications	6-48		
Timing Chain Cover or Gasket, Replace	6-15		
Timing Chain, Replace	6-17		
Timing Sprocket Oil Seal, Replace	6-15		
Torque Specifications	6-50		
Exhaust Manifold or Gasket, Replace	6-10		
Exhaust System	8-1		
Description	8-2		
Exhaust Crossover Pipe	8-3		

SUBJECT	PAGE	SUBJECT	PAGE
Fuel Pump Eccentric, Replace	6-15	Hydraulic Valve Lifter Service	6-29
Fuel Tank	8-1	Ignition	12-22
Description	8-1	Adjust Timing	12-25
Diagnosis and Testing	8-2	Circuit Description	12-22
Specifications	8-3	Distributor Assembly	12-29
Fuel Tank, Remove and Install	8-2	Cleaning and Inspection	12-28
Fuses	12-34	Disassembly	12-27
Gasoline Gauge	12-41	Installation	12-31
Replace Instrument Panel Unit	12-43	Removal	12-27
Replace Tank Unit	12-43	Minor Repairs	12-26
Testing	12-45	Specifications	12-46
Trouble Diagnosis	12-44	Ignition Lock, Replace	12-27
General Specifications	00-6	Installation, Engine	6-47
Generator	12-3	Instruments	12-41
Assembly	12-13	Replace Instruments	12-42
Circuit Description	12-2	Replace Speedometer Cable	12-44
Cleaning and Inspection	12-10	Trouble Diagnosis and Testing	12-44
Cleaning Commutator	12-16	Insulators (Motor Mounts), Replace	6-14
Diagnosis and Testing	12-16	Intake Mainfold or Gasket, Replace	6-8
Disassembly	12-10	Intake Valve Stem or Shield, Replace	6-11
Lubrication	0-3	King Pin Bushing Replacement	3-12
Repair	12-13	Leakdown Rate, Valve Lifter Test	6-31
Repolarizing	12-16	Light Circuit	12-34
Specifications	12-46	Fuses	12-34
Turning Commutator	12-13	Headlamp Aiming	12-35
Hand Brake Adjustment	5-5	Headlamp Replacement	12-37
Handicap Control	14-8	Switch Replacement	12-37
Harmonic Balancer Replacement	6-15	Tail Lamp Replacement	12-34
Headlamp, Aiming	12-35	Trouble Diagnosis and Testing	12-39
Heater and Defroster, Underseat	14-5	Lower Control Arm and Shaft Replacement ...	3-10
Horn	12-34	Lower Pivot Pin and Bushing Replacement ...	3-8
Check and Adjust	12-38	Lubrication	0-1
Circuit Description	12-35	Body	0-6
Diagnosis and Testing	12-40	Brake Cables	0-4
Horn Relay	12-38	Carburetor	0-4
Check and Adjust	12-38	Carburetor Air Cleaner	0-5
Hydraulic Brake System, Flushing	5-6	Chassis	0-2
Hydraulic Valve Lifter, Replace	6-13	Clutch Release Bearing	0-3
		Crankcase Ventilator	0-5
		Distributor	0-3

SUBJECT	PAGE	SUBJECT	PAGE
Engine	0-1	Piston Pin Replacement	6-39
Front Wheel Bearings	0-4	Piston Replacement	6-36
Gearshift Controls	0-4	Piston Ring Installation	6-39
Generator	0-3	Power Steering Gear	See Steering Gear
Manifold Heat Valve	0-5	Propeller Shaft	4-25
Master Cylinder, Brake	0-5	Assembly	4-27
Rear Axle	0-3	Cleaning and Inspection	4-27
Rear Springs	0-3	Diagnosis and Testing	4-28
Rubber Bushings	0-5	Disassembly	4-25
Shock Absorbers	0-4	Installation	4-28
Speedometer Drive Cable	0-4	Removal	4-25
Starting Motor	0-3	Push Rod Cover or Gasket, Replace	6-11
Steering Gear	0-3	Radiator, Replacement	6A-9
Transmission		Radio	14-1
Hydra-Matic	0-3	Rear Axle Shaft	
Synchro-Mesh	0-3	Replace	
Universal Joints	0-5	Axle Shaft	4-6
Water Pump	0-2	Axle Shaft Bearing	4-6
Lubrication Chart	0-0	Axle Shaft Oil Seal	4-5
Lubrication System, Engine	6A-3	Rear Main Bearing Oil Seal, Replace	6-19
Description	6A-3	Rear Shock Absorber Replacement	4-33
Minor Repair	6A-8	Rear Spring	
Overhaul, Oil Pump	6A-9	Installation	4-32
Periodic Service, Oil Filter	6A-7	Minor Repair	4-29
Specifications	6A-11	Periodic Service	4-29
Main Bearing Replacement, Engine	6-42	Removal	4-32
Model Information	00-4	Specifications	4-33
Oil Filter	6A-3	Regulator, Voltage and Current	12-3
Cleaning	6A-7	Adjustment	12-14
Oil Pan and Gasket Replacement	6-19	Installation	12-16
Oil Pump	6A-3	Removal	12-14
Overhaul	6A-9	Specifications	12-46
Remove	6A-8	Trouble Diagnosis and Testing	12-16
Replace	6A-8	Reline Brakes	5-6
Oiling System, Engine	6A-3	Removal, Engine	6-22
Description	6A-3	Rochester Carburetor 2GC (2 Jet)	6B-39
Minor Repair	6A-8	Rochester Carburetor 4GC (4 Jet)	6B-56
Overhaul, Oil Pump	6A-9		
Periodic Service, Oil Filter	6A-7		
Specifications	6A-11		
Pilot Bearing, Clutch	6-21		
Pinion and Ring Gear, Tooth Contact Test	4-12		
Pinion Bearing Oil Seal Replacement	4-4		

SUBJECT	PAGE	SUBJECT	PAGE
Rocker Arm Adjustment	6-45	Speedometer Cable, Replace	12-44
Rocker Arm Stud, Replace	6-12	Starting Motor	12-16
Serial Number and Body Number	1-1	Assembly	12-20
Sheet Metal, Chassis	11-0	Circuit Description	12-16
Adjustment	11-0	Cleaning and Inspection	12-19
Front End	11-1	Cleaning Commutator	12-19
Hood	11-0	Diagnosis and Testing	12-22
Description	11-0	Disassembly	12-18
Fender Replacement	11-1	Lubrication	0-3
Hood Hinge Replacement	11-1	Specifications	12-46
Shift Linkage		Starting Motor Switch	12-24
Adjust	7-5	Replace	12-26
Replace	7-7	Steering Gear, Power	9-10
Solenoid, Starting Motor	12-16	Adjustment	9-13
Testing, See Starting Motor		Description	9-10
Spark Plug	12-24	Diagnosis and Testing	9-26
Cleaning and Adjustment	12-26	Gear	
Description	12-24	Installation in Car	9-23
Special Tools		Overhaul	9-16
Brakes	5-50	Removal	9-14
Engine		Periodic Service	9-14
Mechanical	6-51	Pump	
Cooling and Lubrication	6A-12	Installation	9-26
Clutch	6C-1	Overhaul	9-25
Front Suspension	3-18	Removal	9-24
Rear Suspension	4-34	Trouble Diagnosis and Testing	9-26
Steering	9-29	Special Tools	9-29
Transmission	7-20	Specifications	9-28
Specifications		Steering Gear, Special Tools	9-29
Brakes		Steering Gear, Standard	
Power	5-2 & 5-50	Adjustment on Car	9-1
Standard	5-12	Assembly	9-7
Electrical	12-46	Cleaning and Inspection	9-5
Engine		Description	9-1
Clutch	6C-1	Diagnosis and Testing	9-9
Cooling	6A-11	Disassembly	9-5
Mechanical	6-48	Installation	9-8
Front Suspension	3-17	Periodic Service	9-1
General	00-6	Removal	9-4
Rear End Suspension	4-33	Replace	
Steering		Steering Linkage	9-3
Power	9-28	Steering Wheel	9-3
Standard	9-9	Specifications	9-9
Transmission	7-19	Temperature Gauge	12-41
Wheels and Tires	10-6	Diagnosis	12-45
		Replace Engine Unit	12-42
		Testing	12-45

SUBJECT	PAGE	SUBJECT	PAGE
Thermostat Replacement	6A-8	Ignition Circuit	12-22
Timing Chain Cover or Gasket, Replace	6-15	Instrument	12-41
Timing Chain Replacement	6-17	Lighting and Horn Circuit	12-34
Timing Sprocket Oil Seal, Replace	6-15	Starting Circuit	12-16
Tires		Engine	
Description	10-1	Cooling	6A-10
Diagnosis and Testing	10-6	Fuel	
Balancing	10-6	Carburetor	
Noise	10-6	Carter WGD (Two Barrel)	6B-18
Tread Wear	10-6	WCFB (Four Barrel)	6B-36
Inspection	10-4	Rochester 2GC (2 Jet)	6B-53
Misalignment	10-5	4GC (4 Jet)	6B-73
Overinflation	10-4	Fuel and Vacuum Pump	6B-77
Side Wear	10-5	Mechanical	6-21
Underinflation	10-4	Front Suspension	3-13
Minor Repair	10-3	Rear End Suspension	
Removal from Wheel	10-3	Differential	4-22
Replace on Wheel	10-3	Propeller Shaft	4-28
Periodic Service	10-1	Steering	
Inflation	10-1	Power	9-26
Rotation	10-2	Standard	9-9
Specifications	10-7	Transmission	7-18
Torque Specifications		Wheels and Tires	10-6
Engine	6-50	Upper Control Arm and Shaft Replacement ..	3-11
Transmission and Gearshift Control		Upper Pivot Pin and Eccentric Bushing	
Adjustment of Shift Lever	7-5	Replacement	3-7
Assembly	7-15	Vacuum Pump Diagnosis and Testing	6B-77
Description	7-1	Valve Guide, Replace	6-27
Diagnosis and Testing	7-18	Valve Lifter Leakdown Rate, Test	6-31
Disassembly	7-9	Valve Lifter—Oversize	6-13
Inspection	7-12	Valve Lifter Service	6-29
Installation	7-17	Valve Reconditioning	6-12
Periodic Service	7-3	Valve Timing	6-6
Power Flow	7-3	Valves and Cylinder Head, Overhaul	6-24
Removal	7-9	Valves and Seats, Recondition	6-26
Repairs	7-14	Washer, Windshield	14-7
Replace Linkage	7-5	Water Pump Replacement	6A-9
Replace Rear Bearing Oil Seal	7-5	Wheels and Tires	10-1
Special Tools	7-20	Wiring Diagrams	12-0
Specifications	7-19		
Trouble Diagnosis and Testing			
Brakes			
Power	5-28 & 5-49		
Standard	5-8		
Electrical			
Battery and Generator Circuit	12-16		