

SUBJECT	PAGE	SUBJECT	PAGE
Accessories	14-1	Brakes, Power	
Back-Up Lamps	14-5	Bendix	5-13
Electric Antenna	14-3	Adjustment	5-18
Electric Clock	14-9	Assembly of Unit	5-23
Handicap Controls	14-10	Cleaning and Inspection	5-23
Radio, Electromatic	14-1	Diagnosis and Testing	5-27
Radio, Deluxe	14-2	Disassembly of Unit	5-19
Underseat Heater and Defroster	14-8	General Description	5-13
Windshield Washer	14-6	Installation of Unit	5-26
Antenna, Electric	14-3	Minor Repair	5-18
Assembly	14-4	Periodic Service	5-18
Disassembly	14-4	Principles of Operation	5-15
Operation	14-3	Removing Unit	5-19
Removal	14-3	Special Tools	5-48
Antenna Trimmer Adjustment		Specifications	5-28
Deluxe Electromatic Radio	14-2	Moraine	5-29
Deluxe Radio	14-1	Adjustment	5-33
Anti-Freeze	6A-7	Assembly of Unit	5-43
Axle Shaft	4-3	Cleaning and Inspection	5-42
Bearing Replacement	4-6	Diagnosis and Testing	5-47
Oil Seal Replacement	4-5	Disassembly of Unit	5-33
Unit Replacement	4-6	General Description	5-29
Battery	12-2	Installation of Unit	5-47
Charging	12-9	Minor Repair	5-33
Periodic Service	12-4	Periodic Service	5-33
Specifications	12-52	Principles of Operation	5-30
Testing	12-5, 12-9	Removing Unit	5-33
Bleeding Brakes	5-5	Repair of Unit	5-43
Body	1-1	Special Tools	5-48
Adjustments	1-1	Specifications	5-48
Serial Number and Body Number Location	1-1	Breaker Points	12-22
Shimming	1-1	Install and Adjust	12-29
Brakes, Standard	5-1	Trouble Diagnosis and Testing	12-32
Adjustments on Car	5-3	Camshaft Bearing Installation	6-43
Cautions	5-12	Camshaft, Clean and Inspect	6-34
Diagnosis and Testing	5-8	Camshaft, Replace	6-20
General Description	5-1	Camshaft Thrust Plate, Inspect	6-34
Inspection	5-7	Car Model Identification	00-2
Minor Repair	5-5	Carter Carburetor WCFB (4-Barrel)	6B-2
Bleeding	5-5	Carburetor	
Flushing	5-6	Adjustment on Car	
Periodic Service	5-2	Carter WCFB (4-Barrel)	6B-6
Reconditioning	5-6	Rochester 2GC (2-Jet)	6B-26
Special Tools	5-48	Rochester 4GC (4-Jet)	6B-43
Specifications	5-12		

SUBJECT	PAGE	SUBJECT	PAGE
Carburetor (cont.)		Description	6A-1
Description		Minor Repair	6A-8
Air Cleaner and Silencer	6B-1	Oil Filter	6A-9
Carter WCFB (4-Barrel)	6B-2	Oil Pump	6A-8
Rochester 2GC (2-Jet)	6B-20	Radiator	6A-9
Rochester 4GC (4-Jet)	6B-36	Thermostat	6A-8
Diagnosis and Testing		Water Pump	6A-9
Carter WCFB (4-Barrel)	6B-18	Overhaul Oil Pump	6A-9
Rochester 2GC (2-Jet)	6B-34	Periodic Service	6A-7
Rochester 4GC (4-Jet)	6B-54	Special Tools	6A-11
Overhaul and Adjustment		Specifications	6A-11
Carter WCFB (4-Barrel)	6B-6	Trouble Diagnosis	6A-10
Rochester 2GC (2-Jet)	6B-27		
Rochester 4GC (4-Jet)	6B-43	Core Hole Plugs, Replace	6-19
Special Tools			
Carter WCFB (4-Barrel)	6B-20	Crankcase Ventilating System	6A-5
Rochester 2GC (2-Jet)	6B-36		
Rochester 4GC (4-Jet)	6B-55	Crankshaft and Bearings, Clean and Inspect	6-34
Specifications			
Carter WCFB (4-Barrel)	6B-20	Cylinder Block, Clean and Inspect	6-34
Rochester 2GC (2-Jet)	6B-36		
Rochester 4GC (4-Jet)	6B-54	Cylinder Head Gasket Replacement	6-13
Carburetor Air Cleaner and Silencer	6B-1		
Chassis Sheet Metal	11-0	Cylinder Head and Valves, Overhaul	6-27
Cigar Lighter	12-35		
Replace	12-40	Defroster	14-8
Replace Fuse	12-40		
Clock, Electric	14-9	Differential	4-1
Clutch	6C-1	Description	4-1
Adjustment	6C-4	Diagnosis and Testing	4-21
Description	6C-1	Installation	4-21
Inspection	6C-5	Minor Repairs	4-3
Installation	6C-5	Periodic Service	4-3
Periodic Service	6C-3	Removal	4-6
Removal	6C-4	Repair	4-7
Specifications	6C-6	Specifications	4-32
Clutch Pilot Bearing Replacement	6-21	Differential Carrier, Remove and Replace	4-20
Coil Diagnosis and Testing	12-32		
Connecting Rod Bearing Replacement	6-47	Differential Case, Remove and Replace	4-19
Connecting Rod Bushing Replacement	6-40		
Cooling System, Engine	6A-1	Directional Signal	12-38
Anti-Freeze	6A-7		
Adding	6A-8	Distributor	12-22
Preparation For	6A-7	Adjust Ignition Timing	12-25
Testing	6A-8	Assembly and Point Installation	12-29
		Cleaning and Inspection	12-28
		Diagnosis and Testing	12-32
		Disassembly	12-27
		Installation	12-31
		Specifications	12-50

SUBJECT	PAGE	SUBJECT	PAGE
Electric Clock	14-9	Specifications	6-50
Engine		Timing Chain Cover or Gasket, Replace	6-18
Cooling System	6A-1	Timing Chain, Replace	6-20
Description	6-1	Timing Sprocket Oil Seal, Replace	6-18
Electrical	12-1	Torque Specifications	6-53
Fuel	6B-1	Exhaust Manifold or Gasket, Replace	6-11
Oiling System	6A-3	Exhaust System	8-1
Engine Assembly	6-45	Description	8-2
Engine Disassembly	6-25	Exhaust Crossover Pipe Replacement	8-3
Engine Detonation or Spark Knock	00-6	Exhaust Pipe Replacement	8-3
Engine Mechanical	6-1	Muffler Replacement	8-3
Camshaft, Replace	6-20	Specifications	8-3
Core Hole Plugs, Replace	6-19	Tail Pipe Replacement	8-3
Cylinder Head or Gasket, Replace	6-13	Fan Belt Adjustment	6-9
Exhaust Manifold or Gasket, Replace	6-11	Filter Element, Oil, Replace	6A-7
Fan Belt, Adjust	6-9	Flushing Cooling System	6A-7
Flywheel, Replace	6-24	Flywheel Housing, Alignment	7-14
Fuel Pump Eccentric, Replace	6-18	Flywheel Replacement	6-24
Harmonic Balancer, Replace	6-17	Frame	2-1
Hydraulic Valve Lifter, Replace	6-15	Checking Chart	2-1
Installation, Engine	6-50	General Description	2-1
Insulators (Motor Mounts), Replace	6-16	Repair	2-1
Intake Manifold or Gaskets, Replace	6-9	Front Shock Absorber Replacement	3-7
Intake Valve Stem or Shield, Replace	6-12	Front Spring Replacement	3-10
Oil Pan, Replace	6-21	Front Stabilizer Replacement	3-14
Overhaul		Front Suspension	3-1
Assembly	6-25	Adjustments	3-3
Camshaft Bearings	6-43	Alignment Checking	3-3
Camshaft, Clean and Inspect	6-37	Diagnosis and Testing	3-14
Camshaft Thrust Plate, Inspect	6-37	General Description	3-1
Connecting Rod Bearings	6-42	Minor Repairs	3-7
Connecting Rod Bushings	6-40	Periodic Service	3-2
Crankshaft and Bearings,		Remove and Replace	
Clean and Inspect	6-34	Front Shock Absorber	3-7
Cylinder Block, Clean and Inspect	6-34	King Pin Bushings	3-13
Cylinder Head and Valves	6-27	Lower Control Arm	3-11
Disassembly	6-25	Lower Pivot Pin and Bushing	3-9
Main Bearings	6-44	Springs, Front	3-10
Piston Pins	6-40	Stabilizer, Front	3-14
Piston Replacement	6-38	Upper Control Arm	3-12
Piston Ring Installation	6-42	Upper Pivot and Eccentric	3-8
Valve Lifter	6-31		
Periodic Service	6-9		
Push Rod Cover or Gasket, Replace	6-12		
Rear Main Bearing Seal, Replace	6-22		
Removal, Engine	6-25		
Rocker Arm Stud, Replace	6-14		
Special Tools	6-54		

SUBJECT	PAGE	SUBJECT	PAGE
Front Suspension (cont.)		Handicap Control	14-10
Special Tools	3-20	Harmonic Balancer Replacement	6-17
Specifications	3-19	Headlamp, Aiming	12-36
Front Wheel Bearing Adjustment	3-5	Heater and Defroster, Underseat	14-8
Fuel Gauge	12-45	Horn	12-34
Replace Instrument Panel Unit	12-47	Check and Adjust	12-41
Replace Tank Unit	12-47	Circuit Description	12-35
Testing	12-50	Diagnosis and Testing	12-43
Trouble Diagnosis	12-48	Horn Relay	12-41
Fuel Pump		Check and Adjust	12-41
Assembly	6B-58	Hydraulic Brake System, Flushing	5-6
Description	6B-55	Hydraulic Valve Lifter, Replace	6-15
Diagnosis and Testing	6B-59	Hydraulic Valve Lifter Service	6-31
Disassembly	6B-56	Ignition	12-22
Overhaul	6B-56	Adjust Timing	12-25
Fuel Pump, Eccentric, Replace	6-18	Circuit Description	12-22
Fuel Tank	8-1	Distributor Assembly	12-29
Description	8-1	Cleaning and Inspection	12-28
Diagnosis and Testing	8-2	Disassembly	12-27
Replacement	8-2	Installation	12-31
Specifications	8-3	Removal	12-27
Fuses	12-34	Minor Repairs	12-26
Gasoline Gauge	12-45	Specifications	12-50
Replace Instrument Panel Unit	12-47	Ignition Lock, Replace	12-27
Replace Tank Unit	12-47	Installation, Engine	6-50
Testing	12-50	Instruments	12-45
Trouble Diagnosis	12-48	Replace Instruments	12-46
General Specifications	00-4	Replace Speedometer Cable	12-48
Generator	12-3	Trouble Diagnosis and Testing	12-48
Assembly	12-13	Insulators (Motor Mounts), Replace	6-16
Circuit Description	12-2	Intake Manifold or Gasket, Replace	6-9
Cleaning and Inspection	12-10	Intake Valve Stem Seal or Shield, Replace	6-12
Cleaning Commutator	12-16	King Pin Bushing Replacement	3-13
Diagnosis and Testing	12-16	Leakdown Rate, Valve Lifter Test	6-34
Disassembly	12-10		
Lubrication	0-3		
Repair	12-13		
Repolarizing	12-13		
Specifications	12-50		
Turning Commutator	12-13		
Hand Brake Adjustment	5-5		

SUBJECT	PAGE	SUBJECT	PAGE
Light Circuit	12-34	Model Information	00-3
Fuses	12-34	Oil Filter	6A-3
Headlamp Aiming	12-36	Cleaning	6A-7
Headlamp Replacement	12-39	Oil Pan and Gasket Replacement	6-21
Switch Replacement	12-39	Oil Pump	6A-3
Tail Lamp Replacement	12-34	Overhaul	6A-9
Trouble Diagnosis and Testing	12-42	Remove	6A-8
Lower Control Arm and Shaft Replacement	3-11	Replace	6A-8
Lower Pivot Pin and Bushing Replacement	3-9	Oiling System, Engine	6A-3
Lubrication	0-1	Description	6A-3
Body	0-6	Minor Repair	6A-8
Brake Cables	0-4	Overhaul, Oil Pump	6A-9
Carburetor	0-4	Periodic Service, Oil Filter	6A-7
Carburetor Air Cleaner	0-5	Specifications	6A-11
Chassis	0-2	Pilot Bearing, Clutch	6-24
Clutch Release Bearing	0-3	Pinion and Ring Gear	
Crankcase Ventilator	0-5	Tooth Contact Information	4-9
Distributor	0-3	Tooth Contact Test	4-11
Engine	0-1	Pinion Bearing Oil Seal Replacement	4-4
Front Wheel Bearings	0-4	Piston Pin Replacement	6-40
Gearshift Controls	0-4	Piston Replacement	6-38
Generator	0-3	Piston Ring Installation	6-42
Manifold Heat Valve	0-5	Power Steering Gear	See Steering Gear
Master Cylinder, Brake	0-5	Propeller Shaft	4-24
Rear Axle	0-3	Assembly	4-26
Rear Springs	0-3	Cleaning and Inspection	4-26
Rubber Bushings	0-5	Diagnosis and Testing	4-27
Shock Absorbers	0-4	Disassembly	4-25
Speedometer Drive Cable	0-4	Installation	4-27
Starting Motor	0-3	Periodic Service	4-25
Steering Gear	0-3	Removal	4-25
Transmission		Push Rod Cover or Gasket, Replace	6-12
Hydra-Matic	0-3	Radiator, Replacement	6A-9
Synchro-Mesh	0-3	Radio	14-1
Universal Joints	0-5	Rear Axle Shaft	
Water Pump	0-2	Replace	
Lubrication Chart	0-0	Axle Shaft	4-6
Lubrication System, Engine	6A-3	Axle Shaft Bearing	4-6
Description	6A-3	Axle Shaft Oil Seal	4-5
Minor Repair	6A-8		
Overhaul, Oil Pump	6A-9		
Periodic Service, Oil Filter	6A-7		
Specifications	6A-11		
Main Bearing Replacement, Engine	6-44		
Manifold Heat Control Valve	6B-1		

SUBJECT	PAGE	SUBJECT	PAGE
Rear Main Bearing Oil Seal, Replace	6-22	Solenoid, Starting Motor	12-16
Rear Shock Absorber		Testing, See Starting Motor	
Description	4-28	Spark Plug	12-24
Minor Repairs	4-28	Cleaning and Adjustment	12-26
Periodic Service	4-28	Description	12-24
Replacement	4-32	Specifications	12-50
Rear Spring		Special Tools	
Description	4-28	Brakes	5-49
Installation	4-31	Engine	
Minor Repair	4-28	Mechanical	6-54
Periodic Service	4-28	Cooling and Lubrication	6A-11
Removal	4-31	Clutch	6C-6
Specifications	4-32	Front Suspension	3-18
Regulator, Voltage and Current	12-3	Rear Suspension	4-33
Adjustment	12-14	Steering	9-40
Installation	12-15	Transmission	7-19
Removal	12-14	Specifications	
Specifications	12-50	Brakes	
Trouble Diagnosis and Testing	12-15	Power	5-28 & 5-49
Reline Brakes	5-6	Standard	5-12
Removal, Engine	6-25	Electrical	12-50
Ring Gear and Pinion Set,		Engine	
Remove and Replace	4-20	Clutch	6C-6
Rochester Carburetor 2GC (2 Jet)	6B-20	Cooling	6A-11
Rochester Carburetor 4GC (4 Jet)	6B-36	Mechanical	6-50
Rocker Arm Stud, Replace	6-14	Front Suspension	3-19
Serial Number and Body Number	1-1	General	00-5
Sheet Metal, Chassis	11-0	Rear End Suspension	4-32
Adjustments	11-0	Steering	
Face Bar and Grille	11-1	Power	9-39
Fenders	11-0	Standard	9-9
Front End	11-0	Transmission	7-18
Hood	11-0	Wheels and Tires	10-7
Description	11-0	Speedometer Cable, Replace	12-46
Sheet Metal Replacements	11-1	Starting Motor	12-16
Battery Support	11-1	Assembly	12-20
Face Bar and Grille	11-1	Circuit Description	12-16
Fender	11-1	Cleaning and Inspection	12-18
Hood	11-1	Cleaning Commutator	12-19
Shift Linkage		Diagnosis and Testing	12-22
Adjust	7-2	Disassembly	12-18
Replace	7-4	Lubrication	0-3
		Specifications	12-50
		Starting Motor Switch	12-24
		Replace	12-27

SUBJECT	PAGE	SUBJECT	PAGE
Steering Gear, Power	9-10	Inspection	10-4
Adjustment	9-13	Misalignment	10-5
Description	9-10	Overinflation	10-4
Diagnosis and Testing	9-37	Side Wear	10-5
Gear		Underinflation	10-4
Installation in Car	9-27	Minor Repair	10-3
Overhaul	9-14	Removal from Wheel	10-3
Removal	9-13	Replace on Wheel	10-3
Periodic Service	9-13	Periodic Service	10-1
Pump		Inflation	10-1
Installation	9-37	Rotation	10-2
Overhaul	9-35	Specifications	10-7
Removal	9-31		
Trouble Diagnosis and Testing	9-37	Torque Specifications	
Special Tools	9-40	Engine	6-53
Specifications	9-39		
		Transmission and Gearshift Control	
Steering Gear, Special Tools	9-40	Adjustment of Shift Lever	7-2
		Assembly	7-15
Steering Gear, Standard		Description	7-1
Adjustment on Car	9-1	Diagnosis and Testing	7-17
Assembly	9-7	Disassembly	7-9
Cleaning and Inspection	9-5	Inspection	7-12
Description	9-1	Installation	7-16
Diagnosis and Testing	9-9	Periodic Service	7-2
Disassembly	9-5	Power Flow	7-1
Installation	9-8	Removal	7-8
Periodic Service	9-1	Repairs	7-13
Removal	9-4	Replace Linkage	7-6
Replace		Replace Rear Bearing Oil Seal	7-4
Steering Linkage	9-3	Special Tools	7-19
Steering Wheel	9-3	Specifications	7-18
Specifications	9-9		
		Trouble Diagnosis and Testing	
Temperature Gauge	12-45	Brakes	
Diagnosis	12-48	Power	5-27 & 5-48
Replace Engine Unit	12-47	Standard	5-8
Testing	12-50	Electrical	
		Battery and Generator Circuit	12-15
Thermostat Replacement	6A-8	Ignition Circuit	12-22
		Instrument	12-48
Timing Chain Cover or Gasket, Replace	6-18	Lighting and Horn Circuit	12-42
		Starting Circuit	12-22
Timing Chain Replacement	6-20	Engine	
Timing Sprocket Oil Seal, Replace	6-18	Cooling	6A-10
Tires		Fuel	
Description	10-1	Carburetor	
Diagnosis and Testing	10-6	WCFB (Four Barrel)	6B-18
Balancing	10-6	Rochester 2GC (2 Jet)	6B-34
Noise	10-6	4GC (4 Jet)	6B-54
Tread Wear	10-6	Fuel and Vacuum Pump	6B-59

SUBJECT	PAGE	SUBJECT	PAGE
Engine (cont.)		Valve Lifter—Oversize	6-36
Front Suspension	3-14	Valve Lifter Service	6-31
Rear End Suspension		Valves and Seats—Recondition	6-28
Differential	4-3	Valve Timing	6-20
Propeller Shaft	4-24	Valves and Cylinder Head, Overhaul	6-27
Steering		Washer, Windshield	14-6
Power	9-37	Water Pump Replacement	6A-9
Standard	9-9	Wheels and Tires	10-1
Transmission	7-17	Wiring Diagrams	12-0
Wheels and Tires	10-6		
Upper Control Arm and Shaft Replacement ..	3-12		
Upper Pivot Pin and Eccentric Bushing			
Replacement	3-8		
Vacuum Pump Diagnosis and Testing	6B-59		
Valve Lifter Leakdown Rate, Test	6-34		