


SECTION NO. 8

EXTERIOR MOLDINGS

2562, 2562DF, 2563F

The exterior moldings are secured to the body by a combination of clips and screws. Before removing a molding which has to be pried from a body panel, apply a strip of masking tape to the painted surface adjacent to the molding to prevent possible damage to the paint finish. When installing moldings, apply medium-bodied sealer around molding clip and screw attaching holes.

REMOVAL AND INSTALLATION

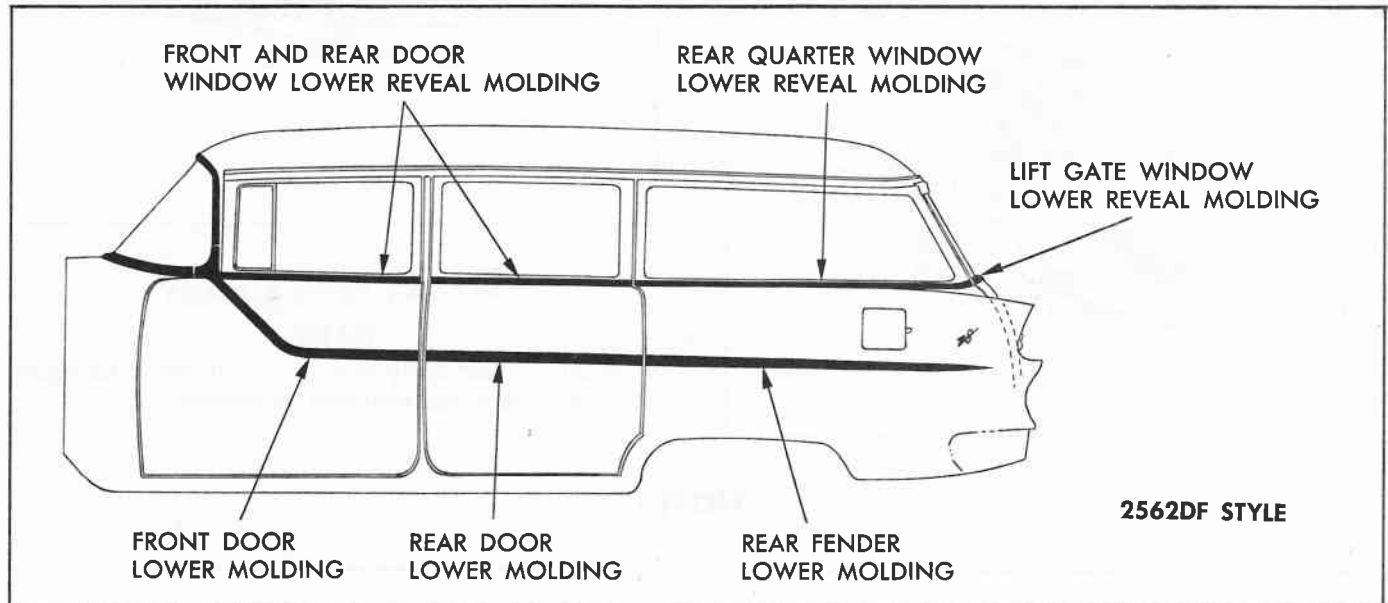

FRONT AND REAR DOOR WINDOW LOWER REVEAL MOLDING

2562DF

Each molding is secured to the panel by snap-in clips and a screw at each end of the molding. To remove molding remove screw at each end of molding, then with flat-bladed tool carefully pry molding with attached clips from panel. To install molding, apply medium-bodied sealer around clip attaching holes and reverse removal procedure.

FRONT DOOR LOWER MOLDING

2562, 2562DF, 2563F

The molding is secured to the panel by snap-on clips, and a screw at the rear end of the molding. To remove molding, remove screw at rear end of molding, then with flat-bladed tool, carefully pry molding from snap-on clips. To install molding, replace clips as required and reverse removal procedure.

REAR DOOR LOWER MOLDING

2562, 2562DF

The molding is secured to the door outer panel by snap-on clips and a screw at each end of the molding. To remove molding, remove screw at each end of molding, then with flat-bladed tool carefully pry off molding. To install molding, reverse removal procedure.

REAR QUARTER WINDOW LOWER REVEAL MOLDING

2562DF

The molding is secured to the panel by snap-in clips and a screw at the rear end of the molding. To remove molding, remove screw at rear end of molding, then with flat-bladed tool carefully pry molding with attached clips from panel. To install molding, apply medium-bodied sealer around clip holes and reverse removal procedure.

REAR FENDER LOWER MOLDING

2562, 2562DF

The molding is secured to the outer panel by a combination of tee bolt clip assemblies and snap-on clips. To remove molding, remove molding attaching nuts from front and rear end of molding, then with flat-bladed tool carefully pry molding from panel. To install molding, apply medium-bodied sealer around clip attaching holes and reverse removal procedure.

LIFT GATE WINDOW LOWER REVEAL MOLDING

2562DF


The molding is secured to the lift gate by screw-on clips and a screw at each end of the molding. To remove molding, remove screw at each end of molding, then with flat-bladed tool carefully pry molding from clips on lift gate panel. To install molding, reverse removal procedure.

REAR FENDER LOWER MOLDING

2563F

The molding is secured by a combination of tee bolt clip assemblies and snap-on clips. To remove molding, remove rear quarter front trim panel and access hole cover. Remove molding attaching nuts and washers, then

with flat-bladed tool carefully pry molding from clips on panel. To install molding, apply medium-bodied sealer around clip holes and reverse removal procedure.

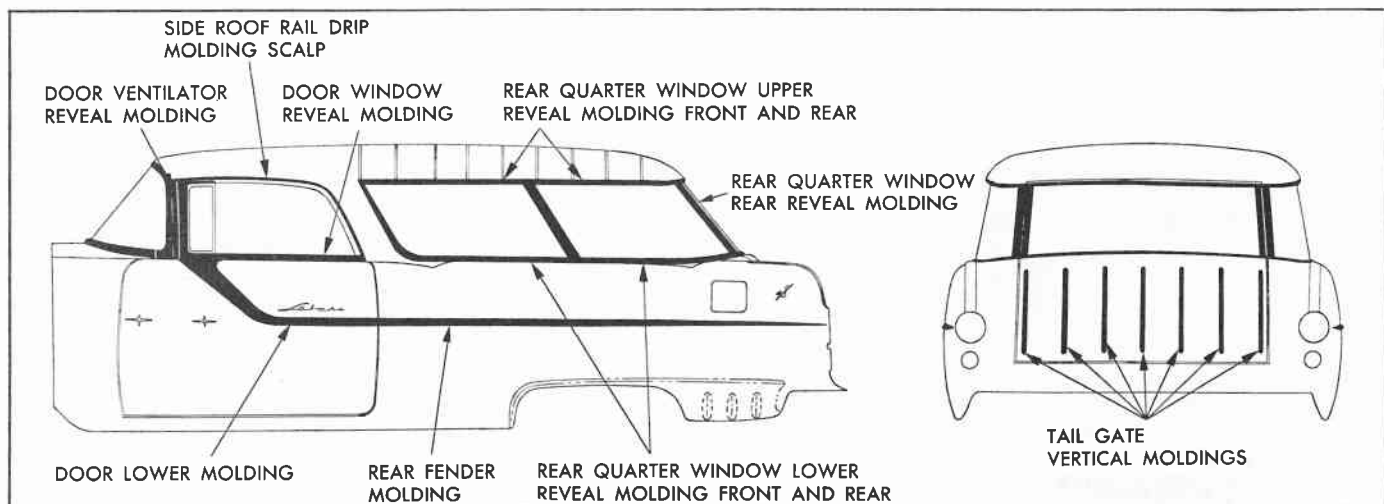

EXTERIOR MOLDINGS

2564DF

DOOR LOWER MOLDING

2564DF

The molding is secured to the door outer panel by two (2) sheet metal screws at the top edge, bolt and clip assemblies along the length of the molding and by a screw at the hemming flange. To remove molding, remove door window reveal molding, then remove molding attaching screws and nuts. To install molding, apply medium-bodied sealer around molding attaching clip and screw holes, then reverse removal procedure.

REAR FENDER MOLDING

2564DF

The molding is secured to the body by a combination of bolt and clip assemblies and snap-on clips. To remove molding, remove rear quarter front trim panel and access hole cover, then remove molding attaching nuts. With flat-bladed tool carefully pry molding from clips on body panel. To install molding apply medium-bodied sealer around clip attaching holes and reverse removal procedure.

DOOR VENTILATOR REVEAL MOLDING

2564DF

The molding is secured to the door hinge pillar extension by self-tapping metal screws. To remove molding, remove door ventilator and molding attaching screws, then carefully bend out molding screw tabs sufficiently to detach molding from hinge pillar. To install molding, reverse removal procedure.

REAR QUARTER WINDOW UPPER AND LOWER REVEAL MOLDING REAR

2564DF

Each molding is secured to the body by self-tapping screws. To remove molding, remove the rear quarter front and rear windows, then remove molding attaching screws and disengage front end from under front molding. To install molding, seal around window opening as specified and reverse removal procedure.

DOOR WINDOW REVEAL MOLDING

2564DF

The molding is secured to the door outer panel return flange by self-tapping screws. To remove molding, remove door belt finishing molding and three of the ventilator lower attaching screws which also secure window reveal molding, then remove door inner panel access hole cover and disengage glass from the window sash channel cam. Lower glass until access to molding attaching screws is available, then remove screws and molding. To install molding, reverse removal procedure.


TAIL GATE VERTICAL MOLDINGS

2564DF


The moldings are secured to the tail gate outer panel by snap-in clips. To remove moldings use a flat-bladed tool and carefully pry moldings with attached clips from tail gate. To remove center vertical molding lower, remove tail gate handle before prying molding. To install moldings, apply sealer around clip holes and reverse removal procedure.

SIDE ROOF RAIL DRIP MOLDING SCALP**2564DF**

The molding is secured to the roof rail by self-tapping screws. To remove molding, remove side roof rail weatherstrip, then remove molding attaching screws and carefully remove molding. To install molding apply bead of medium-bodied sealer to roof rail as shown at one (1) in Section "B-B" and "C-C" and reinstall molding. In addition, apply bead of medium-bodied sealer to weatherstrip as indicated at two (2), then reinstall weatherstrip.

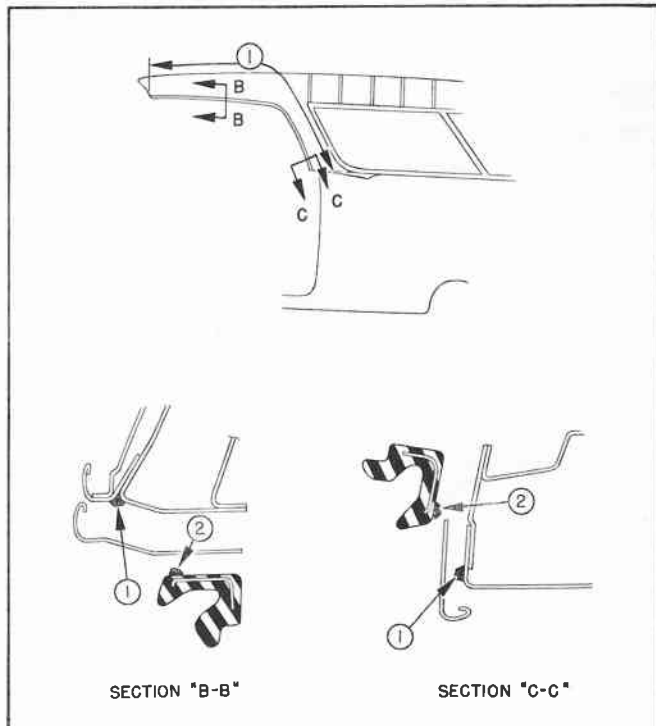**REAR QUARTER WINDOW LOWER REVEAL MOLDING FRONT****2564DF**

The molding is secured to the body by self-tapping screws. To remove molding, remove rear quarter window front, the lower glass run channel and the upper reveal molding, then remove lower reveal moldings attaching screws. To install molding, seal around window opening as specified and reverse removal procedure.

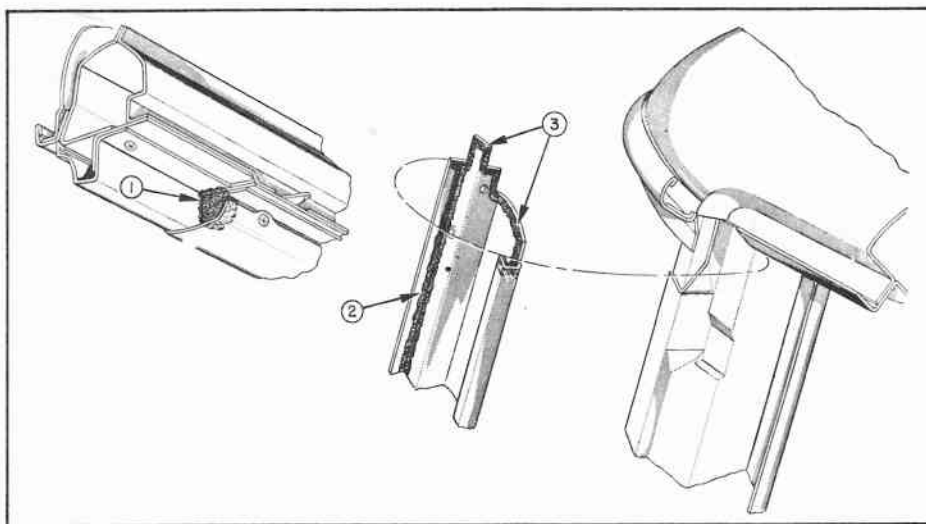**REAR QUARTER WINDOW UPPER REVEAL MOLDING FRONT****2564DF**

The molding is secured to the body by self-tapping screws. To remove molding, remove rear quarter window front and loosen upper glass run channel sufficiently to remove molding attaching screws, then

remove screws. To install molding, apply body caulking compound between front and rear moldings as indicated at one (1), then seal around window as specified and reverse removal procedure.

REAR QUARTER WINDOW REAR REVEAL MOLDING**2564DF**

The molding is secured to the body by screws. To remove molding, loosen weatherstrip at screw locations, remove rear quarter window lower rear reveal molding, and rear reveal molding attaching screws.

To install molding, seal around window opening as specified and apply body caulking compound along edge of molding as shown at two (2) and three (3), then reverse removal procedure.



NOTES

A series of horizontal lines for writing notes, spanning the width of the page.

