

YEAR	MODEL	PART NAME	PART NO.	PER CAR	PART NO.
Group 2.004 PEDAL, STARTER					
1941-48	All L.H.D.			1	512180
Group 2.041 MOTOR AND SWITCH ASSEMBLY, STARTER (L.H.D.)					
1949-54	P/6 H.T. & S.T.			1	1107079
1953	P/6 P.G.			1	1107144
1953	P/8 P.G.			1	1108031
1955	All S.S.			1	1107631
1955	All P.S.			1	1107632
1956	All			1	1107641
1957	All			1	1107661
1958	All S.T.			1	1107661
1958	All H.T.			1	1107700
1959-60	All	for use w/low compression engines		1	1107661
1959-60	All	for use w/high compression engines		1	1107777
1935-54	All	BOLT, starter to clutch housing	(Hex. 7/16"-14x1-1/8")	2	497289
1955-57	All		(Hex. 7/16"-14x1-1/8")	1	497289
1955-60	All		(Hex. 7/16"-14x2-3/4")	1	122327
Group 2.043 ARMATURE, STARTER MOTOR					
1939-54	All			1	1917855
1955	All			1	1926626
1956-57	All			1	1932185
1958	All S.T.			1	1932185
1958	All H.T.			1	1941888
1959-60	All	use w/1107661 starter motor assy.		1	1932185
1959-60	All	use w/1107735 & 1107777 starter motor assy.		1	1941888
Group 2.049 COIL, STARTER MOTOR FIELD					
1935-38,					
1949-54	P/8		Upper	1	826282
1935-38,					
1949-54	P/8		Lower	1	826281
1939-48	P/6		1921607 RH		1921608 LH
1949-54	P/6		1921195 RH		1921196 LH
1955	All		Upper	1	1932696
1955	All		Lower	1	1932743
1956-57	All		Upper	1	1935128
1956-57	All		Lower	1	1932183
1958	All S.T.		Lower	1	1932183
1958	All H.T.		Upper	1	1941900
1958	All H.T.		Lower	1	1941910
1958-60	All	use w/1107661 starter motor assy.	Upper	1	1935128
1959-60	All	use w/1107661 starter motor assy.	Lower	1	1932183
1959	All	use w/1107735 starter motor assy.	Upper	1	1941900
1959	All	use w/1107735 starter motor assy.	Lower	1	1941910
1960	All	use w/1107777 starter motor	Upper	1	1949332
1960	All	use w/1107777 starter motor	Lower	1	1952304

Group 2.051 BRUSH, STARTER MOTOR

1935-54	All	4	811553
1955-60	All	4	1906945

Group 2.052 HOLDER, STARTER MOTOR BRUSH

1935-54	All	4	810226
1955-60	All	ground	2	1926617
1955-60	All	insulated	2	1926618
1935-54	All	PIN, brush holder stop (w/insulation)	2	812015
1935-54	All	brush holder hinge (w/insulation)	2	812016
1935-54	All	brush holder hinge	2	817313
1955-57	All	brush holder support attaching	2	1926600
1958	All S.T.	brush holder support attaching	2	1926600
1958	All H.T.	brush holder support attaching	2	1938058
1959-60	All	brush holder support attaching-use w/1107735 & 1107777 starter motor assy.	2	1938058
1960	All	brush holder support attaching-use w/1107661 starter motor	2	1926600
1956-57	All	SUPPORT, brush holder	2	1928015
1958	All S.T.	2	1928015
1958	All H.T.	2	1941985
1959	All	use w/1107735 starter motor assy.	2	1941985
1960	All	brush holder	2	1928015

Group 2.053 SPRING, STARTER MOTOR BRUSH

1935-54	All	4	813521
1955-60	All	2	1926622

Group 2.055 LEAD, STARTER MOTOR BRUSH

1935-54	All	ground (2 terminals - 2-7/8" long)	2	813554
1935-54	All	field (4 terminals)	1	819362
1955-57	All	ground (2 terminals - 2-3/8" long)	2	1926605
1958	All S.T.	ground (2 terminals - 2-3/8" long)	2	1926605
1958	All H.T.	ground	2	1935767
1959-60	All	ground	2	1926605

Group 2.063 COLLAR-RING-WASHER, STARTER MOTOR THRUST

1955-60	All	COLLAR, pinion stop-drive end	1	1927849
1955-60	All	RING, thrust-drive end	1	1927848
1935-60	All	WASHER, commutator end-leather	1	818265
1936-38	P/6	drive end-steel . . (1/2" I.D., x3/4" O.D., x1/16" thick)	1	1838568
1939-54	All	drive end	1	1838568
1955-60	All	drive end	1	1927850

Group 2.067 FRAME, STARTER MOTOR (C.E.)

1935-38	All	1	1908580
1939-54	P/8	1	1908580

1939-54	P/6	1	1907038
1955-56	All	1	1926606
1957-60	All	1	1928966

Group 2.070 BAND, STARTER MOTOR COMMUTATOR COVER

1935-54	All	1	817114
---------	-----	---	--------

Group 2.077 BOLT, STARTER MOTOR THRU

1935-54	All	2	809053
1955-60	All	2	1926625

Group 2.083 BUSHING, STARTER MOTOR DRIVE END

1935-54	All	1	1839345
1955-60	All	1	1923907

Group 2.085 HOUSING, STARTER MOTOR DRIVE, WITH BUSHING

1949-54	P/6 exc. P.G.	1	1912392
1949-54	P/8 exc. P.G.	1	1912389
1953	P/6 P.G.	1	1928849
1953	P/8 P.G.	1	1928850
1955	All S.S.	1	1930059
1955	All P.S.	1	1930076
1956-60	All	1	1932187

Group 2.086 DRIVE GEAR ASSEMBLY, STARTER MOTOR

1934-54	All	1	1873789
1955	All	1	1931585
1956-60	All	1	1932188

Group 2.100 SWITCH ASSY., STARTER MOTOR

1935-38	P/6	1	820052
1939-48	All	1	820052
1949-52	All L.H.D.	1	1996053
1953-56	All (2.188)	1	1116472
1949-54	All L.H.D.	1	1118140
1955	All	1	1119760
1956	All	1	1119781
1957-58	All (2.188)	1	1116533
1957	All	1	1119798
1958	All S.T.	1	1119798
1958-59	All	1	1118811
1959-60	All	1	1119798
1959-60	All exc. Circulaire		
	A.C. (2.188)	1	1116558
1959-60	All Circulaire A.C. (2.188)	1	1116557
1960	All	1	1114257
1949-52	All L.H.D.	1	1911548

BUSHING ASSY., starter switch to instrument panel

Group 2.102 CONNECTOR, SOLENOID SWITCH

1949-54	P/6	to starting motor	1	1912117
1949-54	P/8	to starting motor	1	1912920
1955-58	All	to starting motor	1	1930075
1955-56	All	BLOCK, solenoid wires junction	1	520046
1957-58	All		1	523591
1955	All	COVER, solenoid wires junction block	1	520195
1955	All	WIRE ASSY., starter to junction block	1	2961689
1956	All		1	2964181
1957-58	All		1	2966973

Group 2.108 LEVER, STARTER MOTOR DRIVE SHIFT

1949-54	All		1	1912114
1955	All S.S.		1	1926642
1955	All P.S.		1	1930072
1956-60	All		1	1932205
1935-55	All	NUT, drive shift lever stud	1	805258
1956-60	All		1	1926640
1935-38	P/8	PIN, gearshift lever	1	1853305
1949-55	All		1	1853305
1956-60	All	(8.939)	1	455106
1935-40	P/6	SPRING, lever return	1	1859742
1941-54	All		1	1881861
1955	All	shift lever return	1	1927763
1956-60	All		1	1932208
1956-60	All	shift lever assist	1	1932209
1935-54	P/8 exc. 1939-40 L.H.D.	STUD, drive shift lever	1	1848796
1937-54	P/6 L.H.D.		1	1848796
1955	All		1	1926645
1956-60	All		1	1932197

Group 2.113 LINK, STARTER MOTOR GEAR SHIFT

1955	All	LINK, shift lever adj.	1	1927033
1949-54	All	PLUNGER AND LINK ASSY., starter solenoid	1	1912055
1955	All S.S.		1	1926647
1955	All P.S.		1	1929626
1956-60	All		1	1953041
1949-55	All	BOOT, starter motor solenoid plunger	1	1912448

Group 2.170 COIL, IGNITION

1935-47	All		1	1911441
1948-54	All		1	1115378
1955-57	All exc. 2/4B.C.-3/2B.C. S.T.		1	1115087
1956-57	All 2/4B.C.-3/2B.C.S.T.		1	1115099
1958	All		1	1115084
1959	All		1	1115118
1960	All		1	1115134

Group 2.173 RESISTANCE UNIT, IGNITION COIL

1955-57	All 2/4 B.C.-3/2 B.C.-F.I.	1.52 ohm	1	1935134
1955-59	All	1.80 ohm-for use in extremely cold climates	1	1933400
1956-57	All 2/4 B.C.-3/2 B.C.33 ohm-ballast type	1	1931385
1958	All	1.52 ohm	1	1940096
1959-60	All	1.52 ohm	1	1944395
1955-57	All	SPACER, resistor to dash	1	520294

Group 2.175 RETAINER, IGNITION COIL TO DISTRIBUTOR WIRE

1955-60	All		1	494104
---------	---------------	--	---	--------

Group 2.183 BRACKET, IGNITION COIL MOUNTING

1949-54	P/6		1	512170
1957	All 3/2 B.C.		1	528723
1959-60	All		1	1944511

Group 2.187 KEY, LOCK (UNCODED)

1935-60	All	octagon head-blank	2	3694624
1935-60	All	round head-blank	2	7002238

Group 2.188 CYLINDER, IGNITION LOCK

1935-60	All		1	1458180
---------	---------------	--	---	---------

Group 2.188 SWITCH, IGNITION (LESS CYLINDER & KEYS)

1940-47	All L.H.D.	with cable	1	1116255
1948	All	less cable	1	1116455
1949-52	All	less cable	1	1116464
1953-56	All	starter and ignition	1	1116472
1957-58	All	starter and ignition	1	1116533
1959-60	All exc. Circulaire A.C.	starter and ignition	1	1116558
1959-60	All Circulaire A.C.	starter and ignition	1	1116557
1949-52	All	NUT, ignition switch to bracket . . . (Hex No. 10-24)	1	510266

Group 2.189 BRACKET, IGNITION SWITCH

1949-52	All	ignition switch support	1	512165
1955-56	All L.H.D.	HOUSING ASSY., ignition lock and lamp support	1	519568
1957	All L.H.D.		1	529055
1958	All		1	530041
1959	All		1	533354
1960	All		1	536370
1959-60	All	SEAL, housing	1	534132

Group 2.192 FERRULE, IGNITION SWITCH LOCK

1942-48	All		1	507109
1949-52	All		1	515703
1953-54	All		1	1923766
1955	All	w/insert	1	1929497
1956	All	w/insert	1	1933205
1957-58	All L.H.D.	w/insert	1	1938604
1959-60	All	to instrument panel	1	534170
1953-54	All	INSERT, ignition and starter switch	1	515377

Group 2.239 PACKAGE, SPARK PLUG AND COIL WIRES

1937-47	P/8		1	509152
1948-49	P/6	for large towers	1	511870
1948-49	P/8	for large towers	1	5291015
1950-54	P/6		1	5290888
1950-53	P/8		1	5290889
1954	P/8		1	2961132
1955	All		1	2961714
1956-57	All 2 B.C.-4 B.C.		1	2964685
1956-57	All 2/4 B.C.-3/2 B.C.		1	2968242
1957	All F.I.		1	2969538
1958	All F.I.		1	2970722
1958	All exc. F.I.		1	2970721
1959-60	All exc. 3/2 B.C.		1	2971986
1959-60	All 3/2 B.C.		1	2971987

Group 2.251 BRACKET, SPARK PLUG WIRE CLAMP

1949-54	P/6		1	512169
1955	All		2	518212
1956-57	All 2 B.C.-4 B.C.		1	521526
1956	All 2/4 B.C.	to coil	1	522915
1957	All 3/2 B.C.	to coil	1	524624
1957	All 3/2 B.C. & F.I.			521526 LH
1957	All F.I.	to coil		522915 RH
1958	All S.T.	intermediate support	1	530844
1959-60	All			532996 RH
1959	All exc. 3/2 B.C.			534584 LH
1959-60	All 3/2 B.C.			532998 LH
1960	All 2 B.C.-4 B.C.			534584 LH
1954	P/8	BRACE, spark plug wire support	1	518875
1954	P/8	CLAMP, spark plug wire	2	517746
1954	P/8		2	517746
1949-53	P/8	COVER, wire manifold	1	511172
1955	All	GROMMET, spark plug wires	2	518217
1949-53	P/8	MANIFOLD, spark plug wire	1	512172
1959-60	All	RETAINER, spark plug wires	2	2965746
1954	P/8	SUPPORT, spark plug wires	1	517747
1958	All exc. F.I.	intermediate		530845 RH
				530846 LH

Group 2.258 NIPPLE, IGNITION WIRE

1935-54	All	to distributor cap	w/small towers	AR	431508
1937-52	All	to spark plug-w/type 45 plug		AR	510269
1948-49	All	to distributor cap	w/large towers	AR	1885405

1948-54	All	to coil	1	510267
1952-54	All	to spark plug-w/type 44-5 plug	AR	515604
1955	All	to spark plug	AR	5297901
1955-60	All	to coil	1	5290441
1955-58	All exc. F.I.	to distributor cap	AR	5289527
1956-60	All	to spark plug	8	2973794
1957-59	All F.I.	to distributor cap	9	2962992
1960	All	to distributor-plastic	AR	5289527
1960	All	secondary wire to distributor-neoprene	1	2962992

Group 2.270 PLUG, SPARK

1934-51	All	type 45, 14 m/m	AR	1559493
1952-55	All	type 44, 14 m/m	AR	1559492
1955	All	type 44S, 14 m/m-extended shell	AR	5612386
1956	All 2 B.C.-4 B.C.	type 46, 14 m/m	AR	1559494
1956	All exc. 2/4 B.C.	type 46S, 14 m/m-extended shell	AR	5612390
1956	All 2/4 B.C.	type 44, 14 m/m	AR	1559492
1956	All 2/4 B.C.	type 44S, 14 m/m-extended shell	AR	5612386
1957	All	type 45, 14 m/m	AR	1559493
1957	All	type 45S, 14 m/m-extended shell	AR	5612371
1957-58	All	type 43, 14 m/m	AR	5569857
1958-59	All exc. police	type 45, 14 m/m	AR	1559493
1958-60	All exc. spec. police	type 45S, 14 m/m-extended shell	AR	5612371
1958-59	All police	type 44, 14 m/m	AR	1559492
1958-60	All spec. police	type 44S, 14 m/m-extended shell	AR	5612386

Group 2.271 GASKET, SPARK PLUG

1935-60	All	for 14 m/m plugs	AR	1555475
---------	-----	------------------	----	---------

Group 2.274 PULLEY AND FAN, GENERATOR

1940-48	All		(3-1/2" dia.)	1	1885475
1946-51	All w/police gen.			1	1880689
1949-52	All exc. heavy duty		(3" dia.)	1	1923266
1953-54	All exc. heavy duty			1	1925294
1955	All exc. A.C.			1	1921939
1955-57	All w/A.C.		(2-7/8" dia.)	1	1935804
1956	All w/25 amp. gen.			1	1921939
1956	All w/35 amp. gen. exc. A.C.		(3" dia.)	1	1925586
1957	All exc. A.C.		(3" dia.)	1	1925586
1958	All w/30 amp. gen.			1	1921939
1958	All Cool Pack A.C.		(2-7/8" dia.)	1	1935804
1951-54	All w/heavy duty gen.	FAN		1	1930022
1955	All w/35 amp. police gen.			1	1866400
1956-57	All 2/4 B.C.-3/2 B.C.			1	1922950
1958	All A.C.	w/6 cyl. comp.		1	1939842
1958-59	All w/40 amp. gen.			1	1940994
1959-60	All w/30 amp. gen.			1	1944437
1959-60	All w/35 & 45 amp. gen.	(▲)		1	1939842
1960	w/35 & 45 amp. gen.			1	1940994
1951-54	All w/heavy duty gen.	PULLEY	(3" dia.)	1	1881158
1956-57	All 2/4 B.C.-3/2 B.C.			1	1936435
1957	All A.C.		(3-1/2" dia.)	1	1938564
1958	All w/40 amp. gen.		(2-5/8" dia.)	1	1939886
1959-60	All w/30 amp. gen.			1	1944639
1959-60	All w/40 amp. gen.			1	1940995
1960	All w/35 amp. gen.	generator		1	1947620

▲NOTE: Use to avoid generator belt throw off at high speed.

Group 2.274 CLAMP-DUCT-HOSE-INLET-SLEEVE-SPACER, GENERATOR COOLER

1958	All	CLAMP, gen. cooler air hose	(2-1/4" I.D.)	1	1171607
1958	All	gen. cooler air hose		2	1171816
1958	All	gen. cooler air duct to gen.	(4-1/8" I.D.)	1	451244
1958	All	DUCT ASSY., gen. cooler air		1	1181828
1958	All Circulaire A.C.	HOSE, gen. cooler air		1	531815
1958	All	INLET, gen. cooler air		1	1181126
1958	All Circulaire A.C.	SLEEVE, gen. cooler air hose		1	531816
1958	All	SPACER, gen. cooler air inlet to radiator upper baffle		1	532874

Group 2.275 NEW GENERATOR ASSEMBLIES

1940-50	All	less pulley (35 amp.)		1	1102810
1946-51	All w/police gen.	less pulley		1	1106403
1951	All exc. police & h.d. gen.	less pulley (40 amp.)		1	1102717
1951-52	All exc. heavy duty gen.	less pulley (45 amp.)		1	1102785
1953-54	All exc. heavy duty	less pulley		1	1102797
1955-57	All	less pulley (25 amp.)		1	1100313
1955	All	less pulley (30 amp.)		1	1102012
1955	All A.C.	less pulley (35 amp.)		1	1102050
1956-57	All	less pulley (35 amp.)		1	1102055
1957	All heavy duty	less pulley (40 amp.)		1	1102078
1958	All	less pulley (30 amp.)		1	1102124
1958-60	All	less pulley (40 amp.)		1	1102123
1959-60	All	less pulley (30-35 amp.)		1	1102168

Group 2.275 BOLT, GENERATOR MOUNTING

1955-57	All w/25 amp. gen.	(8,900)	generator to bracket	(Hex. 5/16"-24x1")	2	186634
1955-56	All w/30 & 35 amp. gen.	(8,900)	generator to bracket	(Hex. 3/8"-24x1-1/4")	2	181639
1955-57	All exc. A.C.	(8,900)	bracket to manifold	(Hex. 3/8"-16x3/4")	2	180120
1957	All exc. 2/4 B.C.	(8,902)	strap to generator	(Step 5/16"-18x7/8")	1	128417
1958-60	All A.C.		generator mtg. bracket to cyl. head- w/6 cyl. comp.	(3/8"-16x3-1/4")	2	537608
1958-60	All	(8,900)	generator to bracket	(Hex. 5/16"-24x2")	2	181620
1959-60	All A.C.	(8,900)	generator to bracket	(Hex. 5/16"-24x1-5/8")	1	181617
1959-60	All A.C.		gen. mounting rear bracket to intake manifold	(Spec. 3/8"-16x1-1/4")	1	9408975
1933-60	All exc. A.C. and police gen.		NUT, generator mounting bolt	Special	2	517011
1959-60	All A.C.				3	517011

Group 2.277 BRACKET, GENERATOR MOUNTING

1935-51	All exc. police gen.			Rear	1	505573
1940-48	All with police gen.			Front	1	504945
1941-51	All w/police gen.			Rear	1	512362
1952-54	All			Rear	1	505573
1955-56	All w/police gen.		auxiliary 6 volt generator		1	518000
1955-56	All exc. A.C.-2/4 B.C.				1	518073
1956	All A.C.-2 B.C.-4 B.C.				1	522520
1956	All 2/4 B.C.				1	522851
1957	All 2 B.C.-4 B.C.				1	523817
1957	All 3/2 B.C.-F.I.				1	524853
1958	All 2 B.C.-4 B.C. exc. A.C.				1	529466
1958	All A.C.-2 B.C.-4 B.C.				1	530615
1958	All 3/2 B.C. exc. A.C.				1	531180
1958	All A.C.-3/2 B.C.				1	530616
1958	All F.I. exc. A.C.				1	531178
1958	All exc. A.C.-heavy duty			Rear	1	1943608

1958-60	All A.C.	generator adj.-w/6 cyl. comp.	1	537609
1958-60	All A.C.	generator mtg.-w/6 cyl. comp.	1	541750
1959-60	All	w/1102142-1102143 and 1102163 gen.	Rear	1 1943608
1959	All	w/1102164 gen.	Rear	1 1946938
1959-60	All exc. A.C.			1 532568
1959	All A.C.		Rear	1 534659
1960	All Cool Pack A.C.		Rear	1 1946938
1960	All A.C.		Rear	1 535556
1958	All exc. A.C.-heavy duty	BRACE PKG., generator		1 531743
1959-60	All A.C.	BRACE, generator mounting	Front	1 532870
1959	All A.C.		Rear	1 532871
1959	All exc. A.C.		Rear	1 532761
1960	All A.C.	generator mounting	Rear	1 535272
1958	All exc. A.C.-heavy duty	BRACE, generator rear support		1 531675
1959-60	All A.C.	PLATE, generator mounting	Front	1 532875
1955-56	All heavy duty exc. A.C.	SPACER, generator mounting	Rear	1 518847
1957-58	All heavy duty		Rear	1 518847
1958	All A.C.	generator brkt. to manifold-w/6 cyl. comp.		1 541746
1959	All A.C.	generator front mtg. plate		2 532874
1959	All exc. A.C.	generator mounting		1 532757
1959-60	All A.C.-2 B.C., 4 B.C.	generator brkt. to manifold-w/6 cyl. comp.		1 541747
1959-60	All A.C.-3/2 B.C.	generator brkt. to manifold-w/6 cyl. comp.		1 541746
1959-60	All exc. A.C.	generator mounting		2 532901
1959-60	All exc. A.C.	SUPPORT, generator mounting		1 532262
1958-60	All A.C.	w/6 cyl. comp.	Front	1 541749
1958-60	All A.C.	WASHER, gen. frt. support to end frame-w/6 cyl. comp.		1 537209
1959-60	All exc. A.C.	rear support brace to generator		1 518266
1960	All	gen. rear bracket to cyl. head (13/32" LD, x3/4" O.D. x1/8" thick)		1 502306

Group 2.279 ARMATURE, GENERATOR

1940-50	All			1 1921235
1951-54	All heavy duty			1 1918009
1951-54	All w/40 amp. gen.			1 1935778
1955-57	All w/25 amp. gen.			1 1928952
1955	All w/30 amp. gen.			1 1923535
1955-57	All w/35 amp. gen.			1 1932900
1957	All w/40 amp. gen.			1 1935778
1958	All w/30 amp. gen.	w/1102124		1 1923535
1958-60	All w/40 amp. gen.			1 1939837
1959-60	All w/30 amp. gen.	w/1102163, 1102164 and 1102203 gen.		1 1946931
1959-60	All w/35 amp. gen.	w/1102168 and 1102200 gen.		1 1946719

Group 2.280 NUT-WASHER, GENERATOR ARMATURE SHAFT

1935-60	All	NUT (5/8"-20x1/4")	1	1911324
1960	All (2.275)	(w/45 amp.) low cut-in Dir. C. generator (5/16"-24)	2	517011
1937-59	All	WASHER, lock	1	1888439
1960	All	generator shaft spring	1	1941978

Group 2.285 BRUSH, GENERATOR

1940-51	All		2	1906917
1952-55	All exc. heavy duty gen.		2	1923295
1952-57	All exc. A.C. and heavy duty	to eliminate excessive brush noise	2	1932506
1954	All heavy duty		2	1906931
1955	All w/35 amp. gen.		2	1906931
1956-57	All		2	1923295

1958-59	All w/30 amp. gen.	2	1923295
1958-59	All w/40 amp. gen.	2	1932506
1959-60	All w/1102168 gen.	2	1932506

Group 2.286 SPRING, GENERATOR BRUSH

1940-51	All	2	1878184
1952-55	All exc. heavy duty gen.	2	1908829
1955	All w/35 amp. gen.	2	1878184
1956-60	All	2	1908829

Group 2.287 PLATE, GENERATOR BRUSH

1940-48	All	1	1878177
---------	---------------	---	---------

Group 2.291 ARM, GENERATOR BRUSH

1940-60	All	2	1878183
---------	---------------	---	---------

Group 2.297 FRAME, GENERATOR COMMUTATOR END

1940-51	All exc. police gen.	bushing type	1	1913990
1952-54	All exc. heavy duty gen.	bushing type	1	1933933
1955-56	All exc. A.C. & police gen.	bushing type	1	1940001
1955	All A.C.	bushing type	1	1930826
1955	All w/35 amp. police gen.	bushing type	1	1929712
1956	All w/35 amp. gen.	bushing type	1	1934298
1957	All	bushing type	1	1934298
1958	All w/30 amp. gen.	bushing type	1	1940001
1959	All w/30 amp. gen.	bushing type-use 1948320 Frame Kit (▲)	1	1940001
1958-60	All w/40 amp. gen.	bearing type	1	1939984
1959	All	bearing type-w/1102163 gen.	1	1939984
1959-60	All	bearing type-w/1102164 and 1102200 gen.	1	1946928
1959	All	bearing type-w/1102168 gen.	1	1946720
1960	All w/30 amp. gen.	bearing type	1	1949248
1955-59	All	FRAME KIT, generator commutator end (▲)	1	1948320

▲NOTE: For converting generators with bushing type commutator end frames to ball bearing type.

Group 2.298 BUSHING, GENERATOR COMMUTATOR END FRAME

1935-48	All		1	812823
1955-60	All w/40 amp. gen.	BEARING, commutator end-ball type	1	904751
1959	All w/30 amp. gen.	exc. 1102142 gen.-ball type	1	904751
1960	All w/30 amp. gen. . . (2.306)	commutator end-ball type	1	954378
1959-60	All	RETAINER, commutator end bearing	1	1929959

Group 2.299 BAND, GENERATOR COMMUTATOR COVER

1935-58	All	1	816340
---------	---------------	---	--------

Group 2.300 GASKET, GENERATOR COMMUTATOR END DUST

1935-48	All	1	817220
---------	-----	-------	-------	---	--------

Group 2.301 WICK, GENERATOR OILER

1935-48	All	felt	1	804076
1958-59	All	w/30 amp. gen.	1	804076
1935-60	All (8.984)	OILER, exc. 1102164 and 1102168 (3/16")	AR	125069
1955	All	w/35 amp. gen.	1	1880641
1959	All (8.984)	w/1102164 and 1102168 gen. (1/4")	1	113702

Group 2.305 FRAME PACKAGE, GENERATOR DRIVE END

NOTE: Package consists of 1 drive end frame, 1 plate and 1 gasket.

1937-52	All	1	1910404
1953-54	All	exc. heavy duty	1	1925295
1955-56	All	w/25 and 30 amp. gen.	1	1927598
1955	All	w/35 amp. gen.	1	1930823
1955	All	w/35 amp. police gen.	1	1932707
1956	All	w/35 amp. gen.	1	1934300
1957	All	1	1934300
1958	All	w/30 amp. gen.	1	1927598
1958-60	All	w/40 amp. gen.	1	1934300
1959	All	w/30 amp. gen.	w/1102163 and 1102142 gen.	1	1927598
1959-60	All	w/30 amp. gen.	w/1102164 and 1102203 gen.	1	1910404
1959	All	w/35 amp. gen.	w/1102168 gen.	1	1938790
1960	All	w/35 amp. gen.	w/1102200 gen.	1	1925295

Group 2.306 BEARING, GENERATOR DRIVE END

1935-51	All	exc. police gen.	ball type	1	954378
1952-60	All	drive end-ball type	1	954378

Group 2.307 COLLAR-GASKET-PLATE-SCREW-WASHER, GENERATOR DRIVE END

1935-60	All	COLLAR, spacer	1	1858603
1935-60	All	GASKET, bearing retainer plate	1	1912008
1935-60	All	PLATE, bearing retainer	1	1911263
1937-60	All	RETAINER, felt washer	1	819104
1960	All	bearing-rubber (3/32" O.D. x 5-1/4" long)	1	1929959
1937-60	All	SCREW, bearing retainer plate (No. 10-32x7/16")	3	1904370
1935-60	All	WASHER, bearing spacer-
			inside (11/16" I.D. x 15/16" O.D. x 3/32")	1	809945
1935-60	All	bearing felt (29/32" I.D. x 1-5/16" O.D.)	1	809961

Group 2.310 COIL UNIT, GENERATOR FIELD

1949-50	All	exc. police gen.	1	1912654
1951-54	All	exc. heavy duty gen.	1	1922702
1955-57	All	w/25 amp. gen.	1	1927700

1955	All w/30 amp. gen.	w/1102012 gen.	1	1922701
1955	All w/35 amp. police gen.		1	1931686
1956	All w/35 amp. gen.		1	1931686
1956	All w/35 amp. gen.	w/1102073 gen.	1	1936388
1957-60	All w/30 and 35 amp. gen.		1	1936388
1957-60	All w/40 amp. gen.		1	1935779

Group 2.313 STUD-BUSHING-WASHER, GENERATOR

1935-48	All	STUD, w/terminal	1	1858754
1951-60	All	field terminal	1	1921860
1951-60	All	armature terminal	1	1921369
1951-60	All	BUSHING, armature terminal	1	1921362
1951-60	All	WASHER, field terminal stud insulator	1	1858753
1952-60	All	INSULATOR, field terminal	1	1885090

Group 2.316 BOLT, GENERATOR THRU

1940-54	All	(5/16"-18x7-7/8")	2	809763
1955-58	All w/25 and 30 amp. gen.	(5/16"-18x7-7/8")	2	809763
1955	All w/35 amp. gen.	(5/16"-18x8")	2	1845053
1959-60	All	(5/16"-18x7-7/8")	2	809763

Group 2.317 STRAP, GENERATOR ADJUSTING

1949-51	All w/police gen.		1	512363
1949-51	All exc. police gen.		1	516634
1952-54	All		1	516634
1955-57	All-2 B.C.-4 B.C. exc. A.C.		1	518072
1955	All A.C.		1	519056
1956	All 2/4 B.C.		1	522864
1956	All A.C.-2 B.C.-4 B.C.		1	522521
1957	All A.C.-2 B.C.-4 B.C.		1	529529
1957	All 3/2 B.C. exc. A.C.		1	522864
1957	All 3/2 B.C.-A.C.-F.I.		1	528719
1957	All Cool Pack A.C.-H.T.		1	531832
1958	All exc. A.C.		1	522864
1958	All A.C.		1	531298
1959-60	All exc. A.C.		1	532569
1935-54	All exc. police gen.	SPACER, generator adjusting strap	1	499778
1933-54	All	WASHER, generator adj. strap to gen. . (Special 5/16")	1	525083
1955-56	All exc. A.C.	(Special 7/8" dia. x11/32" I.D.)	1	518266
1955	All A.C.	(Special 1" dia. x13/32" I.D.)	1	520785
1957-58	All		1	518266
1959-60	All exc. A.C.		1	518266

Group 2.333 BRACKET-BRACE-SUPPORT, BATTERY

1949-52	All	BRACKET, battery support to frame	Rear	1	511863
1949-52	All		Front	1	511862
1953-54	All		Front	1	515405
1953-54	All		Rear	1	515406
1955-56	All	to fender skirt		2	518906
1957	All	to fender skirt		2	523608
1959	All	tray to radiator supt.		1	533195

1949-52	All	BRACE, battery to fender skirt	2	511864
1953-54	All		2	515382
1955-56	All		1	520055
1957	All		2	523607
1938-54	All	SUPPORT	1	501214
1955-57	All w/std. btry.		1	518907
1955-57	All w/heavy duty btry.		1	519824
1958	All	radiator lower baffle battery mtg.	1	529987
1955-57	All	SPACER, battery	4	522205
1958	All w/std. btry.	TRAY, battery	1	529081
1958	All w/heavy duty btry.		1	529111
1959-60	All w/std. btry.		1	532201
1959-60	All w/heavy duty btry.		1	532714
1955-57	All	ANGLE NUT, battery brace to fender skirt	2	520054

Group 2.334 BOLT-NUT-WASHER, BATTERY HOLD DOWN

1938-57	All	BOLT, battery hold down . . . (Carr. 5/16"-18x8-3/4")	2	508676
1958	All	Short	1	530248
1958	All	Long	1	530249
1959-60	All	(5/16"-18x8-13/32")	2	532704
1946-60	All	NUT, battery clamp bolt . . . (Hex. Spec. 5/16"-18)	2	508677
1958-60	All	WASHER, battery hold down-lead plated	2	531622

Group 2.335 BUMPER-COVER-PLATE-RETAINER, BATTERY

1949-54	All	(8.024) BUMPER, battery supt. to fender	2	506351
1949-54	All	COVER	1	417420
1949-54	All	PLATE, battery filler hole cover	1	417422
1939-48	All	RETAINER, battery	1	508673
1955-57	All w/std. btry.		1	520297
1955-57	All w/heavy duty btry.		1	519590
1958	All w/std. btry.		1	533308
1958	All w/heavy duty btry.		1	530122
1959-60	All		1	533308

Group 2.341 STRAP, BATTERY GROUND

NOTE: Length measured from center to center of holes.

1938-54	All	(16-1/2" long)	1	5286925
1955-57	All	(20-1/2" long)	1	2963169
1958	All	(33-3/4" long)	1	2969983
1959	All P.S.-A.S.	(22" long)	1	2971876
1959-60	All S.S. exc. A.S.	(18-1/2" long)	1	2972623
1960	All P.S.	(22-1/4" long)	1	2972624
		see Group 2.342 for use		5286911

Group 2.342 LEAD, BATTERY POSITIVE

NOTE: Length measured from center to center of holes

1937	All	(30" long)	1	5286913
1938-48	All exc. P/8 1938	(16-1/2" long)	1	5286909
1949-54	P/6	(27" long)	1	5286912
1949-54	P/8 (2.341)	(23-1/2" long)	1	5286911

1955	All	(46-1/2" long)	1	2961755
1956-57	All	(37-9/16" long)	1	2964182
1958	All H.T.	(50-1/4" long)	1	2970016
1958	All S.T.	(50-13/16" long)	1	2970017
1959	All	to junction block	1	2972625
1959-60	All	junction block to starting motor	1	2971414
1960	All	battery to junction block	1	2975321

Group 2.343 BRACKET-BOLT-CLIP-NUT AND BOLT, BATTERY CABLE

1955-57	All	BRACKET, battery ground strap	1	520196
1958	All	BOLT, battery cable to starting motor	2	1916529
1955	All	CLIP, battery cable	1	520206
1955-58	All	NUT AND BOLT, battery terminal	2	1846534

Group 2.360 DISTRIBUTOR REPAIR KIT

1937-48	P/8	1	1913500
1937-48	P/6	1	1913502
1949-54	P/6	1	1912609
1949-54	P/8	1	1917253
1955-56	All	1	1925369

Group 2.361 DISTRIBUTOR, IGNITION

1937-52	P/6	less cap and rotor	1	1912884
1937-54	P/8	less cap and rotor	1	1912885
1953	P/6	less cap and rotor-w/7.7 ratio head	1	1925987
1953	P/6	less cap and rotor-w/7.0 ratio head	1	1925988
1954	P/6	less cap and rotor-w/7.7 ratio head	1	1928820
1954	P/6	less cap and rotor-w/7.0 ratio head	1	1928821
1955	All	less cap and rotor	1	1930531
1956	All 2 B.C.-4 B.C.	less cap and rotor	1	1934591
1957	All F.I.	less cap	1	1938794
1957	All	less cap, w/rotor	1	1938591
1958	All	less cap, w/rotor-8.5 to 1 comp. ratio engine	1	1942213
1958	All	less cap, w/rotor-10 to 1 comp. ratio engine	1	1941995
1958	All F.I.	less cap	1	1941932
1959	All	less cap	1	1945357
1960	All	less cap-w/8.6 to 1 comp. ratio engine	1	1110965
1960	All	less cap-w/10.25 & 10.75 to 1 comp. ratio engines	1	1110970

Group 2.362 HOUSING, DISTRIBUTOR

1949-53	P/6	1	1912602
1949-54	P/8	1	1912670
1954	P/6	1	1927351
1955-56	All 2 B.C.-4 B.C.	1	1927384
1956	All 2/4 B.C.	1	1935926
1957-60	All	1	1935669

Group 2.363 BUSHING, DISTRIBUTOR HOUSING

1937-54	P/8	1	1874335
---------	-----	-------	-------	---	---------

1949-54	P/6		1	1874335
1955-56	All		1	1923250
1955-56	All	Upper	1	1927386
1955-60	All	Lower	1	518068
1933-54	All	CLAMP, distributor hold down	1	495206
1955-60	All	GASKET, distributor to block	1	516149

Group 2.364 WICK, DISTRIBUTOR SHAFT OIL

1935-48	P/6		1	816803
1935-48	P/8		1	819639
1949-56	All		1	819639
1935-54	All	GREASE CUP, distributor hsg.	AR	805579
All	All	LUBRICANT, distributor cam and bearing (13 oz. tube)	AR	1912969
1955-56	All	OILER ASSY., distributor	1	1927396
1957-60	All		1	1931982

Group 2.367 CAP, DISTRIBUTOR

1935-54	P/8	with small towers	1	1837974
1935-53	P/6	with small towers	1	824735
1948-49	P/8	with large towers (radio)	1	1911566
1948-49	P/6	with large towers (radio)	1	1911597
1954	P/6		1	1924248
1955-56	All		1	1917247
1957	All exc. 3/2 B.C.		1	1942654
1957	All 3/2 B.C.		1	1917247
1958-60	All		1	1942654

Group 2.368 SPRING, DISTRIBUTOR CAP RETAINER

1935-54	P/6		2	1871838
1949-56	P/8		2	1909594

Group 2.369 SUPPORT, DISTRIBUTOR CAP RETAINER SPRING

1935-48	P/6		2	1847289
1949-56	All		2	1847289
1935-54	P/8	SUPPORT PKG. (Contains 1 spring and 1 support)	2	1911336

Group 2.372 SHAFT, DISTRIBUTOR MAIN

1949-51	P/8		1	1923045
1949-52	P/6		1	1912607
1953	P/6		1	1925242
1954	P/6		1	1927354
1955	All		1	1927388
1956	All 2 B.C.-4 B.C.		1	1933383
1956	All 2/4 B.C.		1	1935929
1957	All	w/cam	1	1935662
1958	All	w/cam-8.5 to 1 comp. ratio engine	1	1941862
1958-59	All	w/cam-10 to 1 comp. ratio engine	1	1941133
1960	All	w/cam-8,6 to 1 comp. ratio engine	1	1949200
1960	All	w/cam-10,25 & 10,75 to 1 comp. ratio engines	1	1941133

Group 2.374 GEAR, DISTRIBUTOR DRIVE

1955-60	All	(▲)	1	1927398
---------	-----	-----	---	---------

▲NOTE: See group 1.643 for 1948-54 usage.

Group 2.379 COLLAR-PIN, DISTRIBUTOR SHAFT

1949-54	All	COLLAR, distributor shaft	1	821865
1937-54	All	PIN, collar attaching	1	813131
1955-60	All	gear attaching	1	822273
1955-56	All	WASHER, dist, shaft spacer	(.005" thick) AR	1848595
1955-56	All		(.010" thick) AR	1848596
1955-60	All		(3/32" thick)	1 1945776

Group 2.381 CAM ASSEMBLY, DISTRIBUTOR

1945-54	P/8		1	1912674
1949-52	P/6		1	1912605
1953	P/6		1	1913882
1954	P/6		1	1927356
1955	All		1	1929565
1956	All 2 B.C.-4 B.C.		1	1927126
1956	All 2/4 B.C.		1	1935930
1957	All	w/weight base	1	1935665
1958	All	w/weight base-8.5 to 1 comp. ratio engine	1	1941864
1958	All	w/weight base-10 to 1 comp. ratio engine	1	1941135
1959	All	w/weight base	1	1943835
1960	All	w/weight base-8.6 to 1 comp. ratio engine	1	1945210
1960	All	w/weight base-10.25 & 10.75 to 1 comp. ratio engines	1	1943835

Group 2.382 ROTOR, DISTRIBUTOR

1935-54	P/8		1	1836893
1935-53	P/6		1	820445
1954	P/6		1	1924245
1955-56	All		1	1927393
1957-58	All exc. 3/2 B.C.		1	1932015
1957	All 3/2 B.C.		1	1927393
1959-60	All		1	1932015

Group 2.384 POINT PACKAGE, DISTRIBUTOR

NOTE: Point Package consists of 1 Breaker Arm and 1 Support with Points.

1937-54	P/6		1	1871678
1937-56	P/8		1	1918148
1937-56	All	assembled	1	1938330
1956-57	All 2/4 B.C.-3/2 B.C.		2	1918148
1957	All exc. 3/2 B.C.		1	1931988
1958-60	All		1	1931988

Group 2.385 PLATE, DISTRIBUTOR BREAKER

1949-54	P/6		1	1912783
---------	-----	--	---	---------

1949-54	P/8			1	1912784	
1955-56	All 2 B.C.,-4 B.C.			1	1925439	
1956-57	All 2/4 B.C.,-3/2 B.C.			1	1935507	
1957-58	All exc. 3/2 B.C.			1	1935622	
1959-60	All			1	1935622	
1935-48	All	(8.899)	BALL, steel (1/4" dia.)	3	104918	
1937-48	P/8		REPAIR PKG., dist. breaker plate and brgs.	1	1914446	
1937-48	P/6			1	1914448	
1949-54	P/6		RETAINER, dist. breaker plate	1	1912614	
1949-56	P/8			1	1912226	
1949-54	All		SPRING, dist. breaker plate washer	1	1912227	
1955-56	All			1	1925375	
1957-60	All		dist. breaker plate retainer-wave type	1	1932024	
1949-54	All		WASHER, dist. breaker plate	AR	1912225	
1949-55	All		dist. breaker plate brg.	Fiber	1	1912224
1949-54	All		dist. breaker plate stop		1	1869357
1956	All		dist. breaker plate brg.	Fiber	1	1927778
1957-60	All		dist. breaker plate	Felt	1	1932418

Group 2.387 SCREW, DISTRIBUTOR CONTACT POINT SUPPORT CLAMP

1935-56	All		(No. 8-32x5/16")	1	816784
1937-48	P/8		CLIP, distributor contact arm tension spring screw	1	1868992
1949-56	All		distributor breaker lever attach. screw	1	1868992
1957-60	All		INSULATOR, dist. breaker lever spring attach. screw	1	1931998
1957-60	All		NUT, distributor contact point support clamp screw	1	1931997
1935-56	All		NUT, distributor contact point support clamp screw	1	817363
1937-55	All	(8.900)	SCREW, distributor contact arm spring		
			(Hex. No. 8-32x3/8")	1	455880
1957-60	All		dist. breaker lever spring attaching (5/32"-32x5/8")	1	1931999
1957-60	All		dist. contact adjusting (3/16"-28x3/8")	1	1931996
1957-60	All		dist. contact attaching-w/lockwasher		
			(No. 8-32x5/16")	2	1938527
1957-60	All		SPRING, dist. contact adjusting screw	1	1931995
1937-48	All		WASHER, distributor contact arm spring screw insulator	1	1865977

Group 2.388 WEIGHT, DISTRIBUTOR

1935-54	P/8			2	1880902
1937-52	P/6			2	1881371
1953-54	P/6			2	1880902
1955-58	All exc. 2/4 B.C.			2	1881371
1956	All 2/4 B.C.			2	1924737
1959-60	All			2	1881371

Group 2.389 SPRING, DISTRIBUTOR WEIGHT

1949-51	P/8			2	1887553
1949-52	P/6			2	1887743
1953-54	P/6			2	1925251
1952-54	P/8			2	1884610
1955	All			2	1886277
1956	All 2 B.C.,-4 B.C.			2	1933350
1956	All 2/4 B.C.			2	1935843
1957	All			2	1938064
1958	All		8.5 to 1 comp. ratio engine	2	1942012

1958	All	10 to 1 comp. ratio engine	2	1885339
1959	All		2	1885339
1960	All	8.6 to 1 comp. ratio engine	2	1946276
1960	All	10.25 & 10.75 to 1 comp. ratio engines	2	1885339

Group 2.390 PLATE, DISTRIBUTOR WEIGHT HOLD DOWN

1949-56	All		1	1885557
---------	-----	--	---	---------

Group 2.393 CONDENSER, DISTRIBUTOR

1937-56	All	with bracket and lead	1	1869704
1957-60	All		1	1932004
1957-60	All	BRACKET, condenser to distributor	1	1869573

Group 2.400 LEAD-STUD, DISTRIBUTOR TERMINAL

1937-56	All	LEAD ASSEMBLY, distributor terminal	1	1865978
1957	All	3/2 B.C. contact to primary terminal	1	1865978
1937-54	All	LEAD, distributor breaker plate ground	1	1879140
1956-57	All	2/4 B.C.-3/2 B.C. contact to contact	1	1930587
1957-60	All	distributor ground	1	1932002
1957-58	All	distributor primary	1	1935668
1959-60	All	distributor primary	1	1943906
1935-50	All	STUD, distributor terminal, w/bushing	1	1853625

Group 2.401 BUSHING-CLIP, DISTRIBUTOR TERMINAL

1937-48	All	BUSHING, distributor terminal stud-inside housing	1	1865985
1949	All		1	1912229
1957-60	All	GROMMET, distributor primary lead	1	1932023
1935-55	All	(2,387) NUT, distributor terminal stud	1	817363

Group 2.410 VACUUM CONTROL, DISTRIBUTOR

1937-52	P/6		1	1116051
1940-54	P/8		1	1116050
1953	P/6		1	1116077
1954	P/6		1	1116079
1955-56	All		1	1116080
1957	All		1	1116126
1958-59	All		1	1116136
1960	All	8.6 to 1 comp. ratio eng.	1	1116173
1960	All	10.25 to 1 & 10.75 to 1 comp. ratio eng.	1	1116172

Group 2.414 CLAMP, DISTRIBUTOR ADJUSTING

1939	P/6	with arm	1	1914530
1940-54	All	with arm	1	1914530

Group 2.420 HOSE, DISTRIBUTOR VACUUM PIPE

1959-60	All	(3.440)	to carburetor	(3/16" L.D. x 22-1/2")	1	542278
---------	-----	---------	---------------	------------------------	---	--------

Group 2.421 GASKET, DISTRIBUTOR VACUUM CONTROL COUPLING

1935-48	All				1	1841901
1955-56	All		to housing		1	1917246

Group 2.447 SWITCH, STOPLIGHT

1940-54	All				1	1997725
1955-57	All	L.H.D., S.B.			1	1997923
1955	All	P.B.			1	1998104
1956-57	All	L.H.D., P.B.			1	1998142
1958-60	All				1	536289
1958	All	(4.634)	BRACKET, stoplight switch mounting		1	529315
1959-60	All				1	532925

Group 2.459 SWITCH, DIMMER

1935-57	All				1	1997008
1958-60	All				1	1997023
1959-60	All		PAD, dimmer switch		1	535017
1958	All		PLATE, dimmer switch mounting		1	529588
1959-60	All				1	3756017
1955-56	All	L.H.D.	SHIELD, dimmer switch		1	521845
1957	All	L.H.D.			1	524116

Group 2.480 HARNESS, CHASSIS WIRING (L.H.D.)

1948	All		except cars with direction signal		1	5288134
1948	All		cars with direction signal		1	5288490
1949-50	All		except cars with direction signal		1	5291191
1951-52	All		except cars with direction signal		1	5291063
1951-52	All		cars with direction signal		1	5291062
1953-54	All		cars with direction signal		1	5292828
1955	All				1	2961359
1956	All				1	2964180
1957	All				1	2966574
1958	All				1	2969202
1958	All		instrument panel cluster		1	2969756
1959	All	exc. A.C.			1	2971411
1959	All	A.C.			1	2971961
1959	24-28	All	stop light switch to relay adapter		1	2972404
1960	All	exc. Circulaire A.C.	exc. P.B.C, heater		1	2975534
1960	All	exc. Circulaire A.C.	w/P.B.C, heater		1	2974496
1960	All	Circulaire A.C.			1	2974497

Group 2.482 CLAMP, WIRE ASSEMBLY THRU DASH

1949-50	All		CLAMP ASSY., main wire and speedo cable dash		1	514117
1951-54	All				1	514372

1955	All		Upper	1	519609
1955	All		Lower	1	519607
1956-57	All		Upper	1	522648
1956-57	All		Lower	1	522652
1958	All		Upper	1	530038
1958	All		Lower	1	530039
1949-54	All exc. 1949 2567	CLAMP ASSY., accessory wires		1	512260
1955-57	All			1	519604
1958	All		Upper	1	530035
1955-60	All	CLIP, main wire harness to rad. support brace	AR	1	520321
1959-60	All S.T.	GROMMET, main wire harness thru dash		1	2973058
1959-60	All H.T.	thru dash		1	2971540
1959-60	All	accessory dash		1	533577
1953-54	All	MANIFOLD ASSY., wires to dash	Left side	1	515452
1953-54	All		Center	1	515449
1949-54	All	PLATE, speedo, cable and wiring harness cover		1	512517
1955-57	All			1	519847
1958-60	All A.C. (3.440)	RETAINER, gen. and comp. wires to rocker arm cover-w/6 cyl. comp.		1	537380
1959	All	generator wires to rocker arm cover		1	534140
1960	All	main wire harness		1	536789
1960	All	generator wires to rocker arm cover		1	534674
1949-54	All	FELT, speedo, cable and wiring harness cover plate		1	512518
1955-57	All			1	519848

Group 2.483 BLOCK-COVER-ADAPTER-RETAINER, ACCESSORY FUSE AND TERMINAL

1941	All	BLOCK, accessory fuse and terminal-U/S heater		1	1998760
1942-48	All	dash heater		1	1998760
1949-50	All			1	1998777
1951-52	All			1	1998783
1953-54	All			1	1998785
1955-56	All			1	520217
1957	All			1	523457
1958	All			1	530259
1959	All			1	2965760
1960	All			1	2973442
1960	All	CLIP ASSY., radio fuse		1	2973185
1949-50	All	COVER, accessory fuse and terminal block		1	512109
1951	All			1	514681
1952	All			1	516514
1953-54	All			1	515446
1957-60	All	ADAPTER, fuse block terminal	AR	1	523456
1959-60	All	ADAPTER ASSY., fuse block terminal	AR	1	2965785
1955	All	RETAINER, fuse and terminal block wires		1	519503
1956	All			1	521970

Group 2.485 SWITCH, LIGHT

1942-48	All			1	1995035
1949-54	All			1	1995052
1955-56	All			1	1995059
1957-59	All L.H.D.			1	1995073
1960	All			1	1995094

Group 2.486 KNOB, LIGHT SWITCH CONTROL

1942-48	All			1	507216
1949-50	All			1	511828

1951-52	All	black	1	515708
1953-54	All	black-chrome insert	1	516942
1955	All		1	518909
1956	All		1	522296
1957	All L.H.D.	with chrome insert	2	523455
1957	All	chrome	1	523212
1958	All		1	529613
1959	All		1	532398
1960	All		1	536190

Group 2.487 SPACER, KNOB TO INSTRUMENT PANEL

1941-48	All	light switch mounting-behind panel	1	511508
1955-56	All	BRACKET, light switch mounting	1	519502
1941-48	All	BUSHING, light switch knob	1	505825
1949-52	All		1	511754
1953-55	All		1	515441
1956	All		1	1165135
1957	All L.H.D.		1	1938995
1958-59	All		1	530069
1960	All		1	1938995
1949-52	All	FERRULE, lighting switch	1	515699
1953-54	All		1	516921
1955-56	All		1	518908
1957	All L.H.D. exc. 2867 & A.C.		1	523103
1958	All		1	523103
1941-48	All	FLANGE, light switch mounting	1	505826

Group 2.500 REGULATOR ASSEMBLY, VOLTAGE AND CURRENT CONTROL

1938-39	All exc. 1938 P/8		1	1118309
1940-50	All exc. police gen.		1	1118301
1948-51	All w/police gen.		1	1118352
1951	All w/40 amp. gen.		1	1118300
1951-54	All w/heavy duty gen.		1	1118835
1951-54	All w/45 amp. gen.		1	1118827
1955-57	All w/25 amp. gen.		1	1119000
1955-57	All A.C. and 35 amp. gen.		1	1119002
1957	All w/40 amp. gen.		1	1119163
1958-59	All w/30 amp. gen. exc. A.C. or H.D.		1	1119003
1958	All A.C. and 40 amp. gen.		1	1119600
1958	All w/45 amp. gen.	w/generator cooler	1	1119601
1958	All w/45 amp. gen.	w/spec. eqpt. low cut-in D.C. generator	1	1119603
1958-60	All w/50 amp. gen.	w/spec. eqpt. alternating current gen.	1	1119160
1959-60	All w/40 amp. gen.	(28-45 amp. range)	2	1119623
1960	All w/30 amp. gen.		1	1119263
1960	All w/35 amp. gen.		1	1119264
1955	All	BRACKET, regulator mounting	1	520211
1956	All		1	522065
1959-60	All w/45 amp. gen.	FUSE, voltage regulator cut-out relay-w/brown ceramic insulator	1	1945171
1960	All exc. heavy duty gen.	voltage regulator-w/white ceramic insulator (45 amp.)	1	1945172

Group 2.515 AMMETER, INSTRUMENT PANEL

1948	All		1	1501065
1949-50	All		1	1501156

1951-52	All			1	1501286
1953-54	All			1	1501357
1955	All			1	1501607
1956	All			1	1501748
1957	All			1	1501790
1958	All			1	1501859
1959	All			1	1501908
1960	All			1	1502009

Group 2.521 INSULATOR, AMMETER

1958-60	All			1	857982
---------	-----	--	--	---	--------

Group 2.525 GROMMET, FUEL GAUGE WIRE

1939	All	(9.775)	GROMMET, fuel gauge wire rear compartment (3/8" I.D.)	1	216551
1960	All		TERMINAL, fuel gauge conn.	2	5640012

Group 2.530 CABLE, ELECTRICAL

All	All		16 gauge (100 ft. roll)	AR	5298971
All	All		14 gauge (100 ft. roll)	AR	5298978
			CONNECTOR (see Group 2.697 for use)		5289849
			CONNECTOR (see Group 2.649 for use)		2962449

Group 2.560 BLOCK ASSEMBLY, HEADLAMP WIRE JUNCTION

1939-54	All			2	1998792
1948	All L.H.D.			2	1998763
1955-56	All		520947 RH		520948 LH

Group 2.585 LAMP ASSY., PARKING

NOTE: When Parking Lamp Assy. is used with direction signal see Group 2.899 for Wire and Socket.

1949	All		928550 RH		928549 LH
1950	All		928094 RH		928093 LH
1951	All	w/die cast chrome door	928994 RH		928993 LH
1951-52	All	w/stamped chrome door	928696 RH		928695 LH
1953	All		928282 RH		928281 LH
1954	All		928804 RH		928803 LH
1955	All		897588 RH		897587 LH
1956	All		898352 RH		898351 LH
1957	All		898486 RH		898485 LH
1958	All			2	898694
1959	All		899082 RH		899081 LH
1960	All			2	899385

Group 2.586 HOUSING ASSY., PARKING LAMP

1960	All		includes socket and wire	2	5950979
------	-----	--	------------------------------------	---	---------

Group 2.587 BRACKET-PLATE, PARKING LAMP

1955	All	BRACKET, parking lamp mounting	5945786 RH	5945785 LH
1954	All	PLATE ASSY., parking lamp mounting	Inner	2 5945171
1954	All		Outer	2 5945173
1954-55	All	SCREW, mounting plate to body (Spec. No. 8-32x21/64")		8 5942856
1955	All	parking lamp frame to body (Spec. No. 8-32x3/4")		4 5945852
1959	All	WASHER, parking lamp to front bumper		4 534401

Group 2.589 LENS, PARKING LAMP

1949	All			2 5938308
1950	All			2 5939313
1951-52	All			2 5939984
1953	All			2 5940671
1954	All		5945178 RH	5945177 LH
1955	All		5945790 RH	5945789 LH
1956	All			2 5946847
1957	All			2 5948352
1958	All			2 5948853
1959	All		5950092 RH	5950091 LH
1960	All			2 5950982

Group 2.590 GASKET, PARKING LAMP LENS

1949	All			2 5938311
1950-53	All			2 5939312
1954	All			2 5945179
1955	All			2 5945799
1956	All			2 5946848
1957	All			2 5948351
1958	All			2 5948852
1959	All			2 5950093
1960	All			2 5950981
		GASKET (see Group 2.697 for use)		5935956

Group 2.593 FRAME-DOOR, PARKING LAMP

1955	All	FRAME	5945788 RH	5945787 LH
1955	All		5945788 RH	5945787 LH
1949	All	DOOR	5938310 RH	5938309 LH
1950	All		5939316 RH	5939315 LH
1951	All	die cast-chrome 1st type	5942576 RH	5942575 LH
1951-52	All	stamped-chrome 2nd type on 1951	5942184 RH	5942183 LH
1953	All		5943806 RH	5943805 LH
1954	All		5945176 RH	5945175 LH

Group 2.594 SCREW, PARKING LAMP LENS

1956	All	(2,688)	(No. 8-32x1/2")	4 5946849
1957	All	(8,906)	(No. 8-32x7/8")	4 455601
1958	All		(No. 8-32 x 45/64")	12 5947760

1959	All	(Special No. 8-32 x 3/4" spiral shouldred)	4	5950010
1960	All	(No. 8-32x5/8")	4	444468
		NUT (see Group 2.698 for use)		5933049
		SCREW (see Group 2.680 and 2.697 for use)		5945860

Group 2.596 SOCKET AND WIRE, PARKING LAMP

1949	All	without direction signal	2	5938314
1950-52	All	without direction signal	2	5939328
1954	All	RETAINER, parking lamp wire seal	2	517660
1954	All	SEAL, parking lamp wire	2	517695

Group 2.599 SEAL, PARKING LAMP

1949-50	All	Rubber	2	511432
1951-53	All	Rubber	2	514749
1956	All	Rubber	2	521485

Group 2.660 GASKET, TAIL LAMP

1960	All exc. 2135-45, 2735 & H.D.C.	536361 RH		536362 LH
1960	2135-45, 2735 & H.D.C.	536711 RH		536712 LH

Group 2.660 PAD, TAIL LAMP

1949-50	All exc. 2561-62-71	to fender	2	511661
1949-52	2562 All	to body		512478 RH
1949	2571		2	3688914
1950-52	2571			514053 RH
1951-52	All exc. 2562-71	to fender	2	514648
1953-54	All exc. 2562-71	to fender	2	515259
1953-54	2562-71 All	to fender	2	5943402
1954	28 All		2	5945161
1955	All exc. 2562-63	to fender	2	5945920
1955-56	25/2762-63 All	to fender	2	5945814
1956	27D, 28 All		2	5946942
1956	2711-19-37-39		2	5945920
1957	All exc. 2762-63	to fender	2	524798
1957	2762-63 All	to fender	2	524998
1958	2547-67 All	to fender	2	5949836
1958	2731-39-41-49,			
	2831-39-49 All	to fender	2	5949837

1958	2793-94 All		2	5949835
1959	21-27 All	to body	2	5949894
1959	24-28 All	to body	2	5949923

Group 2.662 BRACKET, TAIL LAMP

1949	2571	mounting	512208 RH	512209 LH
1950-52	2571	mounting	513910 RH	513911 LH
1949-52	2562 All		Outer	2 512451
1949-52	2562 All		Inner	2 512450
1949	2561 All			2 512457
1959	All exc. H.D.C.	mounting		AR 532759
1960	All exc. 2135-45, 2735 & H.D.C.			4 536327

Group 2.664 TAIL LAMP MOUNTING PARTS

1949	2561 All	BOLT, tail lamp link		2 512550
1939-47	Sta. wag. (4.036)	PIN, tail lamp bracket pivot		2 502495
1949	2561 All	tail lamp clevis		2 512552
1949-52	2562 All (4.036)	tail lamp outer bracket		2 502495
1939-48	Sta. wag. (4.017)	SPRING, tail lamp bracket pivot pin		2 3655726
1949	2561 All	tail lamp anti-rattle		2 512454
1949-52	2561-62 All L.H.D.	outer brkt. pivot pin		4 3687624
1957	All exc. 2762-63 (8.977)	SCREW, tail lamp to lamp mounting plate	(1/4"-20x1")	2 186810
1957	2762-63 All	tail lamp to lamp mounting plate	(1/4"-20x2-1/4")	2 524266
1949-52	2562 All	LINK, tail lamp		2 512472
1949	2561 All			2 512553
1949	2561 All	ANCHOR, tail lamp link	Lower	2 512456
1949	2561 All	BRACKET, tail lamp link anchor		2 512551
1949-52	2562 All		Lower 512515 RH	512516 LH
1949-52	2562 All		Upper	2 512453
1949-52	2571	REINFORCEMENT, tail lamp brkt.	512211 RH	

Group 2.679 LAMP ASSEMBLY, TAIL

1937-48	Sta. wag.			1 897861
1949-50	All exc. 2561-62-71		927608 RH	927607 LH
1949-52	2561-62 All		927630 RH	927629 LH
1949	2571		927610 RH	927609 LH
1950-52	2571		927868 RH	
1951-52	All exc. 2562-71		927870 RH	927869 LH
1953-54	All exc. 2562-71			2 927847
1953-54	2562-71 All			2 928273
1954	28 All			2 928682
1955	2511-19-37-64 All D			2 897585
1955-56	25/2711-19			2 897818
1955	2819-37-67 All			2 897585
1955-56	25/2762-63 All			2 897640-
1956	2719-37-39-64 All D			2 897932
1956	2819-37-39-67 All			2 897932
1957	2711-19-37-39 All	w/back up lamp		2 898296
1957	2762FC-62DF-63F	w/back up lamp		2 898376
1957	2762SDF	w/back up lamp		2 898649
1957	2764, 2819-37-39-67 All	w/back up lamp		2 898294
1958	2547-67 All		898700 RH	898699 LH

1958	2731-39-41-49, 2831D-39D-49D	898698 RH	898697 LH
1958	2793-94 All		2 898701
1958	2831-39-49 All SD	898696 RH	898695 LH
1959	21 All		2 899018
1959	24-28 All		2 899191
1959	2735		2 899192
1960	2111-19-37-39-67, 2337-39	899334 RH	899333 LH
1960	2135-45, 2735	899338 RH	899337 LH
1960	24-28 All	899460 RH	899459 LH

Group 2.680 ORNAMENT-LENS-MEDALLION, TAIL LAMP

1955-56	25/2762-63 All	ORNAMENT, tail lamp exc. w/back-up lamps	2 5945813
1957	All exc. 2762-63	exc. w/back-up lamps	2 5947716
1957	2762-63 All	exc. w/back-up lamps	2 5948129
1957	2764, 2819-37-39-67 All	LENS, tail lamp reflector Upper	2 5947863
1953-54	2562-71 All	MEDALLION, tail lamp	2 5943947
1940	All (8.040)	RETAINER, tail lamp ornament, nut type	2 3695282
1957	2764, 2819-37-39-67 All	BRACKET, tail lamp reflector lens Upper	2 5948000
1955-56	25/2762-63 All	GASKET, tail lamp ornament	2 5945806
1957	All exc. 2762-63 (2.697)		2 5947861
1957	2762-63 All (2.697)		2 5948151
1957	2764, 2819-37-39-67 All	reflector lens Upper	2 5947999
1957	2764, 2819-37-39- 67 All (2.587)	SCREW, tail lamp reflector bracket (Spec. No. 8-32x21/64")	4 5942856
1957	All (2.594)	tail lamp ornament (Spec. No. 8-32 x 39/64")	4 5945860

Group 2.681 DOOR-HOUSING, TAIL LAMP

1949	2571	DOOR, tail lamp-less lens	2 920628
1950-52	2571	less lens	2 5939360
1949-50	All exc. 2561-62-71	less lens 5937854 RH	5937853 LH
1951-52	All exc. 2562-71	less lens 5940986 RH	5940985 LH
1942-52	All sta. wag.	with lens	AR 914084
1953-54	2511-37-39-69 All	less lens	2 5942451
1953-54	2562-71 All	less lens	2 5943946
1954	28 All		2 5945158
1955	All exc. 2562-63-64		2 5945744
1955-56	25/2762-63 All		2 5945801
1956	2711-19-37-39		2 5945744
1956	2719-37-39-64 All D		2 5946938
1956	2819-37-39-67 All		2 5946938
1957	2711-19-37-39 All	HOUSING ASSY., tail lamp	2 5948001
1957	2762FC-62DF-63F		2 5948149
1957	2762SDF		2 5948624
1957	2764, 2819-37-39-67 All		2 5947997
1958	All exc. 2547-67, 2793-94		5948914 RH 5948913 LH
1958	2547-67 All		5948906 RH 5948905 LH
1958	2793-94 All		2 5948919
1960	2111-19-37-39-67, 2337-39		Inboard 2 5950797
1960	2111-19-37-39-67, 2337-39		Outboard 2 5950795
1960	2411-19-39, 2837-39-67		5951202 RH 5951201 LH
1959	21-27 All	BEZEL, tail lamp	2 5949893
1959	24-28 All		2 5949895
1960	2111-19-37-39-67, 2337-39		5950956 RH 5950955 LH
1960	2135-45, 2735		5951090 RH 5951089 LH
1960	24-28 All	RING, tail lamp lens retainer	4 5951206

Group 2.682 LENS, TAIL LAMP DOOR

1941-47	All exc. 1941 29 & sta. wag.	with die cast lamp	2	5931535
1948-50	All exc. sta. wag. & 1949 2571		2	5937590
1949	2571		2	5937162
1950	2571		2	5937590
1951-52	All exc. 2562-71		2	5939888
1953-54	2511-37-67-69 All		2	5942453
1953-54	2561-71 All		2	5939888
1953-54	2562-71 All	tail lamp ornamental	4	5943919
1954	28 All	w/ring	2	5945163
1955	2511-19		2	5946382
1955-56	All D exc. 25/2762-63	w/ring	2	5948446
1955-56	25/2762-63 All		2	5945809
1956	2711-19-37-39		2	5946382
1956	2819-37-39-67 All		2	5948446
1957	2711-19-37-39-62-63 All		2	5948002
1957	2764, 2819-37-39-67 All		2	5947813
1958	2547-67, 2831-39-49 All SD		4	5948909
1958	2731-39-41-49,			
	2831D-39D-49D		4	5948910
1958	2793-94 All		4	5948923
1959	21 All		2	5949891
1959	24-28 All		2	5950252
1959	2735		2	5950385
1960	21-23-27 All		4	5950799
1960	24-28 All		4	5951207

Group 2.684 GASKET, TAIL LAMP DOOR AND LENS

1937-42	Sta. wag.		1	911771
1939	All exc. sta. wag.		AR	921874
1948-49	All exc. 2561-62-71		2	5937599
1949	2571		2	920625
1950-52	2571		2	5937599
1950	All exc. 2562		2	5937599
1951-52	All exc. 2562-71		2	5939889
1953-54	2511-37-67-69 All		2	5942457
1953-54	2562-71 All		2	5939889
1953-54	2562-71 All	tail lamp ornament lens	4	5943920
1954	28 All		2	5945162
1955	All exc. 2562-63	tail lamp lens	2	5945747
1955-56	25/2762-63 All	tail and signal lamp lens to body	2	5945808
1956	2711-19-37-39		2	5945747
1956	2719-37-39-64 All D		2	5946945
1956	2819-37-39-67 All		2	5946945
1957	All		2	5947862
1958	All exc. 2793-94		4	5948912
1958	2793-94 All		4	5948926
1959	21-27 All		2	5949892
1959	24-28 All		2	5949922
1960	21-23-27 All		AR	5950784
1960	24-28 All		4	5951205

Group 2.685 LENS, TAIL LAMP SIDE AND TOP

1937-52	Sta. wag.	clear	AR	914778
1949	2571	clear		920634 LH
1950-52	2571	clear		914778 LH

Group 2.686 GASKET, TAIL LAMP CLEAR LENS

1937-52	Sta. wag.		1	914779
1950-52	2571		1	914779

Group 2.688 SCREW, TAIL LAMP DOOR

1937-52	Sta. wag.		(No. 8-32x5/8")	AR	132764
1949	2571			2	920627
1950-52	2571		(No. 8-32x5/8")	AR	132764
1955-56	25/2762-63 All		(Fil. hd. No. 10-24x1-3/4")	4	153374
1958	All exc. 2793-94 (8,906)	tail lamp lens	(No. 8-32x3/4")	8	445527
1958	2793-94 All (8,906)	tail lamp lens	(No. 8-32x5/8")	8	444468
1960	2111-19-37-39-67, 2337-39	to housing		12	3950972
1960	2135-45, 2735	to housing		6	5950952
1959	21-27, H.D.C. All	SCREW, tail lamp hsg. to bezel	(No. 8-32x7/16")	AR	274690
1959	24-28 All	SCREW (see Group 2.594 for use)	(No. 8-32x1/2")	16	5950369
					5946849

Group 2.694 SOCKET ASSY., TAIL LAMP

1948	All exc. sta. wag.			2	5937588
1949-50	All exc. 2561-62-71			2	5938601
1951-52	All exc. 2562-71	with cup		2	5939945
1953-54	All	with cup		2	5939945
1959-60	All	SOCKET AND WIRE, single contact		1	2974307
1959-60	All	double contact		1	2976474
1948-50	All exc. 2561-62-71	GASKET, socket		2	5937600
1951-52	All exc. 2562-71			2	5939951
1953-54	All			2	5939951
1951-58	All	PLUG, tail lamp wire connector		2	2971074
1955-57	All	back up lamp wire connector		2	2971077
1951-52	All exc. 2562-71	SPRING, socket and cup retainer		2	5939950
1953-54	All			2	5939950
1955	2562-63 All	CLIP, tail lamp wire-on lamp supt.		2	4576889

Group 2.697 LAMP, BACK UP

1942-48	All	LAMP ASSEMBLY, chrome door		1	927589
1949-50	All exc. 2561-62-71			2	928041
1949-52	2561-62 All		928048 RH		928047 LH
1950-52	2571		928660 RH		928659 LH
1951-52	All exc. 2562-71	with stamped door		2	928193
1953-54	All exc. 2562-71		928180 RH		928179 LH
1953-54	2562-71 All			2	928942
1955-56	All exc. 25/2762-63			2	897586
1958	All exc. 2793-94	with wire	898730 RH		898729 LH
1958	2793-94 All	with wire	898732 RH		898731 LH
1959	All			2	899025
1960	All exc. 2135-45, 2735			2	899339
1960	2135-45, 2735			2	899340
1959	All	BEZEL		2	5949885
1960	All exc. 2135-45, 2735			2	5951065

1960	2135-45, 2735		2	5951094	
1960	All	BRACKET, back up lamp mounting	2	536296	
1960	All	lamp mounting	2	536321	
1960	All exc. 2135-45, 2735 & H.D.C.	lamp mounting	2	536302	
1960	All	lamp opening cover mounting	2	536296	
1960	All	lamp opening cover mounting	2	536321	
1960	All exc. 2135-45, 2735 & H.D.C.	lamp opening cover mounting	2	536302	
1951-54	All exc. 2562-71 . . . (2.530)	CONNECTOR, lamp to body wire	2	5289849	
1953-54	All	lamp to body wires	1	5289770	
1955-56	All exc. 25/2762-63	COVER, back up lamp opening	2	519637	
1958	All exc. 2793-94			530425 RH	530422 LH
1958	2793-94 All			530421 RH	530441 LH
1959	All	COVER, lamp opening-exc. back-up lamp	2	532247	
1960	All exc. 2135-45, 2735 & H.D.C.		2	536324	
1960	2135-45, 2735	lamp opening	2	536346	
1942-48	All	DOOR ASSEMBLY	1	5931447	
1949-50	All exc. 2561-62-71		2	5938298	
1949-52	2561-62-71 All		2	5931447	
1951-52	All exc. 2562-71		2	5939817	
1953-54	All exc. 2562-71			5940658 RH	5940657 LH
1953-54	2562-71 All		2	5939817	
1955-56	All exc. 25/2762-63		2	5945735	
1949-52	All exc. 2561-62-71 . . . (2.590)	GASKET, back-up lamp	2	5935956	
1953-54	All exc. 2562-71		2	5940662	
1953-54	2562-71 All . . . (2.590)		2	5935956	
1955-56	All exc. 25/2762-63	back up lamp opening cover	2	519642	
1955-56	All exc. 25/2762-63	back up lamp lens	2	5945737	
1955-56	25/2762-63 All . . . (2.680)	back up lamp lens to body	2	5945806	
1957	All exc. 2762-63	back up lamp lens	2	5947861	
1957	2762-63 All	back up lamp lens	2	5948151	
1958	All exc. 2793-94	back up lamp lens	2	5949210	
1958	2793-94 All	back up lamp lens	2	5949410	
1958	All exc. 2793-94	back-up lamp bezel		5949207 RH	
1959	All	back up lamp lens	2	5949887	
1959	All	lamp opening cover	2	534472	
1958	All exc. 2793-94	GASKET, back-up lamp bezel		5949466 LH	
1958	2793-94 All	back-up lamp bezel		5949406 RH	5949467 LH
1960	All exc. 2135-45, 2735	lamp bezel to housing	2	5951063	
1960	2135-45, 2735	lamp lens	2	5951093	
1960	All exc. 2135-45, 2735 & H.D.C.	lamp opening cover to body	2	5951064	
1960	2135-45, 2735	lamp opening cover to body	2	5951095	
1960	All exc. 2135-45, 2735 & H.D.C.	lamp lens to body	2	5951064	
1960	2135-45, 2735	lamp to body	2	5951095	
1942-48	All	LENS, door	1	5938015	
1949-52	All exc. 2561-62-71	with back-up lamp	2	5938297	
1949-52	2561-62-71 All		1	5938015	
1953-54	All exc. 2562-71		2	5940663	
1953-54	2562-71 All		2	5938297	
1955-56	All exc. 25/2762-63		2	5945736	
1955-56	25/2762-63 All		2	5945807	
1957	All exc. 2762-63	plastic	2	5947715	
1957	2762-63 All	glass	2	5948128	
1958	All exc. 2793-94		2	5949209	
1958	2793-94 All		2	5949409	
1959	All		2	5949886	
1942-52	All	switch mounting	1	509294	
1960	All exc. 2135-45, 2735		2	5951066	
1960	2135-45, 2735		2	5951096	
1960	2135-45, 2735 . . . (11.128)	back up lamp or cover to body	2	4776962	
1959	All	NUT AND SEALER ASSY., lamp opening cover to body	6	534542	
1949-50	All exc. 2561-62-71	PAD, to body		512320 RH	512321 LH

1951-52	All exc. 2562-71		2	514750
1953-54	All exc. 2562-71		2	515479
1953-54	2562-71 All	512320 RH		512321 LH
1955-56	All exc. 25/2762-63		2	519898
1949-50	All exc. 2561-62-71	RETAINER, back-up lamp	512356 RH	512357 LH
1949-52	2561-62-71 All (2,688)	SCREW, back-up lamp door (No. 8-32x5/8")	AR	132764
1951	All exc. 2562-71	w/die cast door (Fill. Hd. No. 6-32x3/8")	4	224535
1951-52	All exc. 2562-71	w/stamped door (Pan Hd. No. 6-32x1/4")	4	451323
1953-54	2562-71 All		4	451323
1955-56	All exc. 25/2762-63		4	5945824
1957	All (2,594)	back-up lamp lens (No. 8-32x39/64")	4	5945860
1959	All (8,906)	back-up lamp lens (No. 8-32x5/8")	4	444468
1958	All exc. 2793-94	SEAL, back-up lamp opening cover retainer	2	530405
1958	2793-94 All		2	530406
1953-54	All exc. 2562-71	SOCKET AND WIRE ASSY., back-up lamp	2	5940664
1953-54	All exc. 2562-71	SPACER, back-up lamp to body	4	5939849
1953-54	All exc. 2562-71	STRIP, back-up lamp lens decorative	4	5940666
1960	All	STUD, back up lamp mounting (No. 10-24x1-3/4")	4	5951068
1960	All		AR	5951067
1949-52	All	WIRE ASSY., switch to fuse block	1	5289339
1953-54	All S.T.	back-up lamp	1	5293127
1953-54	All H.T. & P.G.	back-up lamp	1	5293128
1955	All S.T.	back-up lamp	1	2961412
1955	All H.T.	back-up lamp	1	2961411
1956	All	back-up lamp	1	2961411
1957	All	switch to main wire	1	2966978
1958	All	back-up lamp	1	2970019
1959-60	All	back-up lamp	1	2971601
1959-60	All	back-up lamp-w/socket	2	2971872

Group 2.698 SWITCH, BACK-UP LAMP, AND PARTS

1960	All 4 SPD.-S.T.	BRACKET, back-up lamp switch	1	3770180
1960	All 4 SPD.-S.T.	HARNES ASSY., back-up lamp switch	1	2976875
1958	All S.T.	LEVER ASSY., back-up lamp switch	1	530168
1959-60	All S.T.		1	533476
1959	All S.T.	use w/535051 tube assy.	1	535065
1960	All S.T.	back up lamp switch (w/base 3/4" wide x 1" long)	1	535065
1956-57	All S.T.	NUT, back-up lamp switch actuating (5/16-24x1" set)	1	9400895
1958-60	All S.T. (4,054)	back-up lamp switch lever (Spec. No. 10-32x9/32")	1	529150
1960	All 4 SPD.-S.T.	ROD, back-up lamp switch	1	3770181
1958-60	All 3 SPD.-S.T. (4,054)	SCREW, back up lamp lever switch (No. 10-32x9/32")	1	529150
1949-52	All L.H.D., S.T.	STOP, switch	1	512323
1949-52	All L.H.D., S.T.	SUPPORT, switch	1	512325
1949-52	All S.T.	SWITCH ASSEMBLY, back-up lamp	1	512541
1953-54	All S.T.		1	1997895
1955	All S.T.		1	1998107
1956-57	All S.T.		1	1998141
1949-52	All H.T. (4,054)		1	1997846
1953-56	All H.T. exc. C.C. (4,054)		1	1998039
1953	All P.G. (4,054)		1	1998071
1956-57	All C.C.-H.T. (4,054)		1	1998129
1958	All H.T. (4,054)		1	1998664
1958	All S.T.		1	1998665
1959-60	All S.T.	back-up lamp and solenoid junction block	1	1998708
1959-60	All H.T. (4,054)	back-up lamp	1	1998705
1960	All 4 SPD.-S.T.	back-up lamp	1	1993525

Group 2.700 LAMP ASSEMBLY, REAR LICENSE

1949-50	All exc. 2561-62-71		2	927594
---------	---------------------	--	---	--------

1951-52	All exc. 2562-71		1	927803
1953-54	All exc. 2562-71		1	897463
1953-54	2562-71 All		1	898585
1955-56	All exc. 25/2762-63-64		1	897574
1955-56	25/2762-63-64 All		2	897701
1957	All		2	898302
1958	All		1	898766
1959	21 All exc. 2135-45, 2735		1	899165
1959	24-28 All		1	899261
1959	2135-45, 2735		2	899209
1960	All exc. 2135-45, 2735 & H.D.C.		1	899424
1960	2135-45, 2735		1	899314

Group 2.702 PAD, REAR LICENSE LAMP BODY

1940	2611-19	rubber	1	502240
1949-50	All exc. 2561-62-71		2	512555
1951-52	All exc. 2562-71	GROMMET, lamp wire thru floor pan	1	514383
1953-54	All exc. 2562-71		1	515506
1955-56	All exc. 25/2762-63		1	518955
1957	All exc. 2762-63-64		2	4567223

Group 2.705 BRACKET ASSY., REAR LICENSE AND LAMP

1953-56	All exc. 25/2762-63-64-71		1	5942458
1960	2135-45, 2735	w/socket and wire	1	5950759

Group 2.706 COVER-DOOR-SHIELD, REAR LICENSE LAMP

1949-50	All exc. 2561-62-71	COVER	2	5937942
1958	All		1	5935911
1959	All exc. 2135-45, 2735		1	5950598
1951-52	All exc. 2562-71	DOOR	1	5939872
1953-54	All exc. 2562-71		1	5943380
1953-54	2562-71 All		1	5939957
1955-56	25/2762-63 All		2	5945959
1959	2135-45, 2735	SHIELD, rear license lamp	1	531840

Group 2.707 GASKET, LICENSE LAMP OUTLOOK LENS

1949-50	All exc. 2561-62-71		2	5937940
1951-52	All exc. 2562-71		1	5939870
1953-56	All exc. 25/2762-63-64-71	rubber	1	5935949
1953-56	All exc. 25/2762-63-64-71	felt	1	5936537
1953-54	2562-71 All		1	5939870
1958	All	lens to back plate	1	5948767
1958	All	felt	1	5936537
1959	All exc. 2135-45, 2735	felt	1	5936537
1959	All exc. 2135-45, 2735	lens to back plate	1	5948767
1960	All		1	5950750
1960	21 All	cover to lens	1	5936537
1960	21 All	cover to back plate	1	5948767

Group 2.708 SCREW, LICENSE LAMP COVER RETAINER

1949-52	All exc. 2561-62-71 . . . (8.206)	bracket to body (No. 14-10x1")	2	3651216
1953-54	2562-71 All (8.206)	2	3651216
1955-56	25/2762-63 All	license lamp door to bumper guard (Spec. No. 8-32x9/16")	4	3719610
1957	All	rear license lamp to burner . (Spec. No. 8-32x9/16")	4	524396
1959	All exc. 2135-45, 2735 (8.977)	cover to back plate (No. 8-32x5/8")	2	166617
1959	2135-45, 2735 & H.D.C.	lamp to bumper (No. 8-32 x 1/2")	4	533594
1960	All (8-32 x 5/8")	2	5951579

Group 2.709 LENS, REAR LICENSE LAMP OUTLOOK

1939-42	All exc. sta. wag.	1	922042
1949-50	All exc. 2561-62-71	2	5938832
1951-52	All exc. 2562-71	1	5940540
1953-56	All exc. 25/2762-63-64-71	1	5935947
1953-54	2562-71 All	1	5940540
1957	All	w/body	2	5947721
1958	All	1	5935910
1959	All exc. 2135-45, 2735	1	5935910
1959	2135-45, 2735	w/body	1	5947721
1960	All	1	5950753

Group 2.714 WIRE ASSEMBLY, REAR LICENSE LAMP

1949-50	All exc. 2561-62-71	w/socket	1	5937937
1955-56	All exc. 25/2762-63-64	w/door	1	5945492
1957	All	w/socket	2	5947723
1959	All exc. 2135-45, 2735	w/socket and plate	1	5950339
1959	2135-45, 2735	w/socket	1	5950430
1946-48	All exc. sta. wag.	SOCKET, lamp bulb	1	5932764

Group 2.721 SPRING, HEADLAMP INNER BODY TENSION

1941-46	All	12	5931749
1947-55	All	1st type on 1955 (1-1/2" long)	2	5937452
1955	All	2nd type (1-1/4" long)	2	5946543
1956-57	All (1-1/4" long)	2	5946543
1958	All (1-13/64" long)	4	5948814

Group 2.722 GASKET, HEADLAMP BODY TO FENDER

1949-52	All	2	509478
1953-54	All	2	515258
1955-57	All	2	519628
1958	All	2	5949665

Group 2.724 NUT, HEADLAMP ORNAMENT

1942	All (8.040) (Clip type 3/16")	2	3695282
------	-----------------------	-------------------------	---	---------

Group 2.725 HEADLAMP ASSEMBLY

1949-52	All L.H.D.	with door	2	925809
1953-54	All L.H.D.	with door	2	925971
1955	All L.H.D.	with door	2	898144
1956	All L.H.D.	with door	2	898137
1957	All L.H.D.	with painted door	2	898526
1957	All L.H.D.	with chrome door	2	898307
1958	All	less door	897186 RH	897185 LH
1959	All	less door	5949790 RH	5949789 LH
1960	All L.H.D.	less door	5950870 RH	5950869 LH
1940-57	All (8.977)	SCREW, headlamp to fender	(No. 10-12x5/8")	16 161901
1958-59	All (8.977)		(Hex. No. 10-12x5/8")	14 451625
1960	All (8.977)	headlamp to fender and grille	(Hex. Hd. 10-24x1/2")	18 9413355
1958	All	LUG PKG., headlamp door to body retaining		2 5949550
1940-54	All	NUT, headlamp to fender screw	(Spring type)	AR 413395
1955-56	All		(Spring type)	16 519912
1959	All	headlamp to grille	(Spring type)	8 533612

Group 2.726 BODY, HEADLAMP

1949-52	All		2	5937072
1953-54	All		2	5940667
1955-56	All		2	5946624
1957	All		2	5947832
1958	All		5948810 RH	5948809 LH
1959	All		5950006 RH	5950005 LH
1940-55	All	RING, inner-1st type (▲)	2	924535
1955-57	All	2nd type on 1955 (▲▲)	2	5947771
1958-60	All		Outboard 5948826 RH	5948827 LH
1958-60	All		Inboard 5948824 RH	5948825 LH
1960	All		5951022 RH	

▲NOTE: 1st type has rolled outer edge with three tabs for attaching retainer ring.

▲▲NOTE: 2nd type has flat outer edge with four notches.

Group 2.727 SEALED BEAM UNIT, HEADLAMP

1940-54	All	glass reflector (type T-3 Improved Lighting)	6 volt	2 5956006
1955-57	All	glass reflector (type T-3 Improved Lighting)		
		heavy duty	12 volt	2 5956013
1955-57	All	glass reflector (type T-3 Improved Lighting)	12 volt	2 5956012
1958-60	All	glass reflector-single filament		2 5948501
1958-60	All	glass reflector double filament		2 5948502

Group 2.728 DOOR, HEADLAMP

1942-48	All	DOOR ASSY., includes door, clip, gasket and spring	2	5932754
1942-48	All		2	5932754
1949-52	All D & 2571	chrome	2	5940532
1949-52	All exc. D & 2571	prime	2	5940567
1953-54	All	chrome	2	5940574
1955	All		2	5945563
1956	All	prime	2	5947113
1957	All exc. D	prime	2	5948418
1957	All D & SD	prime w/bezel	2	5947742
1958	All exc. D & SD		2	5949328

1958	All D & SD		2	5948845
1959	All	aluminum	2	5950322
1959	All	die cast	2	5949821
1960	All		2	5950874
1957	All D & SD	BEZEL, headlamp door, chrome	2	5947745

Group 2.729 SCREW, HEADLAMP DOOR CLAMPING

1942-48	All		(Oval Hd. No. 10-32x13/16")	2	507004
1957	All	(8.977)	(Rd. Hd. No. 8-15x7/8")	8	273711
1958	All	(8.977)	(Oval Hd. No. 8-15x3/4")	8	187605
1959	All	(8.977)	(Pan Hd. No. 8-15x3/4")	8	161870
1960	All	(8.977)	(No. 8-15 x 5/8")	8	162400

Group 2.731 RING, HEADLAMP SEALED BEAM RETAINER

1940-55	All	(▲)		2	5950248
1955	All	(▲▲)		2	5946431
1956-57	All			2	5948399
1958-60	All			4	5948828

▲NOTE: 1st type w/three tabs for attaching.

▲▲NOTE: 2nd type w/2 tabs welded to ring for attaching.

Group 2.735 GASKET, HEADLAMP LENS

1940-48	All L.H.D.	at door, rubber		2	5930594
1949-54	All			2	5930594
1955-57	All			2	5945844
1958	All			2	5948942

Group 2.736 CLIP-SCREW, HEADLAMP MOUNTING RING

1955	All L.H.D.	CLIP		AR	5947712
1940-56	All	SCREW	(No. 8-32x21/64")	6	924552
1959-60	All			6	924552

Group 2.737 BRACKET-SCREW-NUT, HEADLAMP BEAM ADJUSTER

1958-60	All	BRACKET PKG., beam adjuster		AR	5949838
1940-60	All	SCREW, beam adjuster	(1/4"-28x1")	AR	924561
1940-48	All	NUT, beam adjuster screw		4	5930896
1949-56	All			4	5939769

Group 2.746 SPRING, HEADLAMP DOOR SEAL RETAINER

1942-52	All		Bottom	2	5939791
1951-52	All		Top	2	5939983
1953-54	All		Top	2	5940578
1953-54	All		Side and bottom	2	5940579
1955-56	All			2	5945961

Group 2.750 WIRE AND SOCKET, HEADLAMP

1949-52	All	with sealed beam type	2	5937970
1953-54	All	with sealed beam type	2	5942852
1955-56	All		2	5945680
1957	All		2	5947831
1958-60	All		2	5948820
1957-59	All	CLIP, connector to fender skirt	2	523928

Group 2.810 HORN ASSEMBLY

1937-41,				
1946-48	All	high note-die cast		9000310 LH
1949-54	All	low note	1999645 RH	
1949-54	All	high note		1999646 LH
1955-56	All	low note	9000303 RH	
1955	All	high note		9000304 LH
1956	All	high note		1999768 LH
1957-58	All	low note	9000317 RH	
1957-58	All	high note		9000318 LH
1959	All	low note	9000367 RH	
1959	All	high note		9000342 LH
1960	All	high note		1 9000376
1960	All	low note		1 9000383

Group 2.815 RELAY ASSEMBLY, HORN

1934-54	All	for dual horns	1	1116775
1955-56	All		1	1116781
1957-58	All		1	1116980
1959-60	All	RELAY AND JUNCTION BLOCK ASSY., horn	1	1116970

Group 2.817 BUTTON-CAP, HORN

1942-48	All	BUTTON, w/std. center blowing type wheel-steering wheel cap	1	507532
1942-48	All	w/std. center blowing type wheel-steering wheel cap	1	507532
1946-47	All	w/D wheel	1	508698
1949-50	All	CAP, steering wheel, w/std. wheel	1	511934
1951-52	All	w/std. wheel	1	514650
1953-54	All	w/std. wheel	1	516940
1955	All	w/std. wheel	1	519591
1956	All	w/std. wheel	1	522306
1957	All	w/std. wheel	1	523481
1958	All	w/std. wheel	1	529974
1959	21 All	w/std. wheel	1	534282
1960	21 All	w/std. wheel	1	536201
1949	All	CAP ASSEMBLY, horn ring w/D wheel	1	512418
1950	All	w/D wheel	1	513826
1951-52	All	red-w/D wheel	1	515706
1952	2537 SD	green	1	516525
1953	All	red-w/D wheel	1	516842
1953	2537 SD	green	1	517175
1954	All D-S.S.	red	1	516842
1954	All SD-S.S.	beige	1	518346
1954	All SD-S.S.	coral red	1	518347
1954	All SD-S.S.	yellow	1	518348

1954	All D-P.S.	red	1	517903
1954	All SD-P.S.	beige	1	517904
1954	All SD-P.S.	coral red	1	518349
1954	All SD-P.S.	yellow	1	518350
1955	All D-S.S.	black	1	519508
1955	All SD-S.S.	blue	1	520597
1955	All SD-S.S.	firegold	1	520598
1955	All D-P.S.	black	1	519594
1955	All SD-P.S.	blue	1	520596
1955	All SD-P.S.	firegold	1	520595
1956	All D-S.S.		1	521501
1956	All P.S.		1	521488
1957	All D-SD-S.S.	EMBLEM, horn ring	1	523155
1957	All D-SD-P.S.		1	523174
1958	All	ORNAMENT ASSY., steering wheel horn ring- w/D wheel	1	530241
1959	All	w/D wheel	1	532445
1960	All	horn ring-w/D wheel	1	536465
1957	All D-SD	PLATE, horn ring name	1	523931

Group 2.819 CONTACT, HORN BUTTON

1939-52	All exc. 1940 29	w/std. wheel, center blowing type on 1942 25	1	265172
1941	All	w/D wheel	1	512246
1942-48	All	w/D wheel	1	504339
1949-56	All	w/D wheel	1	512246
1958	All	w/D wheel Upper	1	530763
1958	All	w/D wheel Lower	1	530758
1939-52	All	CONTACT AND SPRING ASSEMBLY, horn button connector-use 5660044 with this assy.	1	5660046
1953-56	All	use w/5660044 insulator-w/D wheel	1	5660046
1953-57	All	w/std. wheel	1	759037
1957	All	w/D wheel	1	761670
1958-60	All	w/std. wheel	1	530173
1958-60	All	w/D wheel (see note 2)	1	763269
1960	All	horn ring connector brush-w/D wheel (see note 1)	1	761670
1937-38	All	CONNECTOR ASSEMBLY, horn cable-on column	1	263549
1958	All	horn button cable to main wire assy.	1	2962458
1939-52	All	INSULATOR, horn button connector	1	5660044
1953-56	All	w/std. wheel	1	759230
1953-56	All	use w/5660046 assy.-w/D wheel	1	5660044
1957	All		1	759230
1958-60	All	w/std. wheel	1	530178
1958	All	w/D wheel	1	530759
1959-60	All	w/d wheel (see note 2)	1	763319
1960	All	w/D wheel (see note 1)	1	759230
1941,				
1949-56	All	RING, horn ring contact, w/D wheel	1	506075
1948	All	w/D wheel	1	509556
1957	All	horn ring adapter pivot-w/D wheel	1	761947
1959-60	All	horn ring pivot-w/D wheel	1	763323
1937-39	All	SEPARATOR, horn button contact Rubber	1	264584
1940,				
1942-52	All exc. 1940 29	center blowing type on 1942 25 Rubber	1	264584
1942-56	All	w/D wheel	1	507722
1949-52	All	SPRING, horn ring ground-w/D wheel	1	512247
1953-57	All	horn button-w/std. wheel	1	758408
1957	All	horn ring-w/D wheel	1	761218
1958-60	All	horn button-w/std. wheel	1	530181
1958	All	horn ring pivot-w/D wheel	1	530765
1959-60	All	horn ring-w/D wheel	1	763322

1941-48	All	PLATE, contact separator backing-w/D wheel	1	506309
1949-52	All	contact retainer-w/D wheel	1	512734
1953-56	All	horn ring contact retainer-w/D wheel	1	517258
1953-56	All	horn button contact-w/std. wheel	1	758407
1957	All	horn ring contact-w/D wheel	1	761222
1957	All	horn button contact-w/std. wheel	1	761517
1958-60	All	horn button contact-w/std. wheel	1	530179
1958	All	horn ring retainer-w/D wheel	1	530762
1959	All	horn ring contact-w/D wheel	1	763321
1960	All	horn ring contact-w/D wheel (▲)	1	765001
1960	All	SWITCH ASSY., horn-w/D wheel (use w/536946 Horn Ring)	1	536956
1955-56	All	SCREW, horn ring contact retainer plate	3	9404951
1958	All	plate, contact and insulator to wheel (Truss Hd. No. 8-32x1/2")	3	274662
1958	All	WASHER, horn ring pivot spring support	1	530766

▲NOTE: Use prior to the use of 536956 Switch, on 1960.
▲▲NOTE: For use w/536956 Switch, on 1960.

Group 2.821 RETAINER, HORN BUTTON CAP

1942-52	All	w/std. wheel	1	506741
1942-48	All		2	507440
1957	All	ADAPTER, horn ring-w/D wheel	1	761219
1953-57	All	BUSHING, horn button cup spacer-w/std. wheel	2	757440
1957	All	horn ring adapter spacer insulating-w/D wheel	3	762275
1958-60	All	w/std. wheel	3	530172
1959-60	All	horn ring spacer-w/D wheel	1	763318
1953-54	All	CUP, horn button contact-w/std. wheel	1	758409
1955-56	All	w/std. wheel	1	759802
1957	All	w/std. wheel	1	761710
1958-59	All	w/std. wheel	1	530177
1960	21 All	horn button-w/std. wheel	1	536188
1941	All	INSULATOR, horn button, ring guide	2	506097
1942-48	All	w/D wheel	1	507959
1951-54	All		1	514412
1955-56	All	horn ring cap, w/D wheel	1	519397
1957	All	horn ring spring-w/D wheel	1	761220
1958	All	horn ring contact plate attaching-w/D wheel	3	530760
1958	All	horn ring to retainer plate-w/D wheel	1	530761
1960	All	horn ring spring and spacer bushing-w/D wheel (▲)	1	765000
1959	All	INSERT, horn ring	2	763324
1953-60	All	SCREW, steering wheel horn button cup bushing-w/std. wheel . . . (Spec. No. 8-32x1/2")	3	530180
1957	All	horn ring adapter bushing- w/D wheel (Spec. No. 10-24x27/32")	3	761221
1959	All	horn ring spacer bushing-w/D wheel	3	760085
1960	All	horn ring spacer bushing-w/D wheel (▲)	3	765002
1937-52	All exc. 1940 29	RING, cap retaining, center blowing type on 1942 25 and w/std. wheel on 1942 thru 52 except 1942 25	1	263703
1958	All D & SD	SHIM, horn ring support	1	529256
1949-52	All	SPACER, strg. wheel cap, w/std. wheel	1	511935
1942-48	All	horn button ring-w/D wheel	1	507442
1958	All	SUPPORT, horn ring-w/D wheel	1	530764

▲NOTE: Use prior to the use of 536956 Switch.

Group 2.829 RING, HORN BUTTON LOCK

1939-52	All exc. 1940 29	with std. wheel, center blowing type on 1942 25	1	265173
---------	------------------	---	---	--------

Group 2.830 COVER-RING, HORN OPERATING

1957	All	COVER, horn ring-w/D wheel	524239 RH	524240 LH
1949-50	All	RING, w/D wheel		1 511993
1949-50	All	w/D wheel		1 511993
1951-52	All	w/D wheel		1 515701
1953-54	All	w/D wheel		1 516941
1955-56	All	w/D wheel		1 519302
1957	All S.S.	w/D wheel		1 524174
1957	All P.S.	w/D wheel		1 524175
1958	All	w/D wheel		1 529541
1959	All	w/D wheel		1 763317
1960	All	w/D wheel (▲)		1 536946
1957	All	SCREW, cover to horn ring- w/D wheel	(Oval Hd. No. 10-24x1/2")	4 274460

▲NOTE: Use w/536956 Switch.

Group 2.845 BRACKET, HORN MOUNTING

1938-41,				
1946-54	All	with die cast horns		2 505716
1955-56	All			2 1924440
1938-54	All	SPACER, horn bracket		1 1860729

Group 2.859 CABLE, HORN BUTTON

1939-40	All L.H.D.			1 265076
1941-48	All			1 266918
1949-52	All			1 5660683
1953-54	All	with contact		1 5296935
1955-56	All L.H.D.	w/contact		1 2961695
1957-58	All	BEARING ASSY., steering column-w/horn cable	Upper	1 5670954
1959	All	w/horn cable	Upper	1 5672929
1960	All		Upper	1 5671740
1946-56	All	CLAMP, horn wire dual horns		1 269521
1957-58	All P.S.	STRIP, horn ground-at lower end of strg. shaft		1 5683937

Group 2.892 FLASHER-CONNECTOR-WIRE, DIRECTION SIGNAL

1946-54	All	FLASHER		1 1335220
1955	All			1 5943797
1956-57	All			1 3713382
1958	All			1 530675
1959-60	21-23-27 All			1 3713382
1959-60	24-28 All			1 530675
1959	All	CAP AND SLEEVE ASSY., direction signal indicator		2 1586751
1960	All	direction signal indicator		2 1587889
1953-55	All	CONNECTOR, flasher		1 560172
1949-50	All	WIRE ASSY., dir. signal and flasher socket-w/field installed dir. signal		1 5938733
1951-52	All	w/field installed dir. signal		1 5940264
1955	All	WIRE AND SOCKET, inst. panel light		2 2963861
1956-57	All			2 1886497

Group 2.895 CONTROL-SWITCH ASSEMBLY AND PARTS, DIRECTION SIGNAL

1948	All	SWITCH BASE AND WIRE ASSEMBLY w/factory installed direction signal	1	5937832
1949-50	All		1	5938246
1951-52	All		1	5943132
1953-54	All		1	5942764
1955	All		1	1929732
1956	All		1	1932941
1957	All		1	1998190
1958	All		1	1998670
1959-60	All		1	1998190
1949-52	All	CONTROL ASSEMBLY-includes: cover, wire, switch, and lever	1	928542
1953-54	All H.T. & P.G.		1	928460
1955	All S.T.		1	1995593
1955	All H.T.		1	1995592
1956	All S.T.		1	1995804
1956	All H.T.		1	1995803
1957	All S.T.	ACTUATOR ASSY., switch-less rod	1	1995813
1957	All C.C.-H.T.	switch-less rod	1	1995812
1958	All	switch-less rod	1	1995813
1959	All	switch-less rod	1	1995826
1960	All	switch-less lens	1	1995842
1957	All	BEARING, actuator rod Lower	1	523110
1958-60	All		1	530724
1955-56	All	CARRIER, switch contact	1	1929763
1955-56	All	CONTACT, switch-three point	2	1910372
1955-56	All	five point	1	1910373
1957-60	All	LEVER, switch actuator	1	1932216
1959	24-28 All	PAD, direction signal stop light relay	1	534382
1957	All	ROD, switch actuator	1	1937041
1958	All		1	1940916
1959	All		1	1943847
1960	All		1	1948124
1953-54	All	RING AND SCREW PKG., direction signal switch	1	897064
1959	24-28 All (2,815)	RELAY ASSY., direction signal and stop light	1	1116980
1953	All	SCREW, direction signal switch ring pivot (13/16" long)	1	5942768
1953-54	All		1	5944866
1953-54	All	SPRING, direction signal switch pawl (1-3/16" long)	2	5942766
1953-54	All	switch ring lock	1	5942761
1953-54	All	switch ring centering	1	5942767
1955-56	All	contact carrier	9	1926913
1957-60	All	switch actuator rod-anti-rattle	1	1932217
1957-58	All	switch actuator tension	1	528639
1960	All	switch actuator cancelling	1	1948149

Group 2.896 CAM-PIN, DIRECTION SIGNAL CANCELLING

1949-52	All	CAM	1	512425
1953-54	All		1	5942639
1955	All		1	1929717
1956	All		1	1933259
1957-60	All	PIN (5/32"x1" Spring type)	1	271448

Group 2.897 LEVER ASSEMBLY, DIRECTION SIGNAL SWITCH

1949-52	All	w/black knob	1	5938247
---------	-----	--------------	---	---------

1950	2537 SD	w/rust knob	1	5939468
1953-54	All		1	5943803
1955	All		1	1929716
1956	All		1	1933248
1957	All		1	523882
1958	All S.T.		1	530381
1958	All H.T.		1	530070
1959-60	All		1	532525

Group 2.899 SOCKET AND WIRE, DIRECTION SIGNAL PARKING LAMP

1948	All		5937806 RH	
1949	All		5938264 RH	5938263 LH
1950	All		5939330 RH	5939329 LH
1951-52	All		5939996 RH	5939995 LH
1953	All		5940676 RH	5940675 LH
1954	All	BODY AND WIRE ASSY., parking lamp	5945168 RH	5945167 LH
1955	All		5945818 RH	5945817 LH
1956	All		5947826 RH	5947825 LH
1957	All		5948346 RH	5948345 LH

Group 2.901 COVER, DIRECTION SIGNAL LOOM

1949-50	All		1	5939393
1951-52	All		1	5943134
1949-52	All	SPRING, loom cover	1	513750

Group 2.902 CLAMP-BRACKET, DIRECTION SIGNAL

1955	All L.H.D.	CLAMP, strg. col. jacket wire and flasher brkt.	1	520351
1956	All L.H.D.		1	515467
1949-52	All	BRACKET, flasher socket and multiple connector	1	512426
1953-54	All		1	515464

Group 2.906 HOUSING ASSEMBLY, DIRECTION SIGNAL SWITCH

1953-54	All S.T.		1	5944623
1953-54	All H.T. & P.G.		1	5944624
1955	All S.T.		1	1929785
1955	All H.T.		1	1929731
1956	All H.T.		1	1933564
1956	All S.T.		1	1933565
1957	All S.T.		1	1936556
1957	All C.C.-H.T.		1	1936555
1958	All		1	1936556
1959-60	All		1	1943979
1960	All	w/plain detent spring studs	1	1951814

Group 2.910 PLATE-SHIELD-SPRING, YOKE, DIRECTION SIGNAL SWITCH LEVER

1955	All	PLATE	1	1929734
1956	All		1	1933422
1957-58	All	switch actuator yoke	1	1936552

1957-60	All	SHIELD, direction signal housing	1	1936554
1955	All	SPRING, release	2	1921885
1956	All		1	1933423
1959	All	YOKE ASSY.	1	1943850
1960	All	w/taper roller	1	1948148
1960	All	w/straight roller	1	1951812

Group 2.916 SPRING, DIRECTION SIGNAL SWITCH DETENT

1955-56	All		1	1925279
1957-60	All	switch actuator yoke detent	1	1929964