

YEAR	MODEL	PART NAME	PART NO.	PER CAR	PART NO.
Group 7.003 FRAME ASSEMBLY, CHASSIS (L.H.D.)					
1951-52	All exc. 2537-67 & taxi			1	514693
1951-52	2567 & taxi			1	514694
1951-52	2537 All			1	514696
1953-54	2537 All			1	517980
1953-54	2511-62-69 All			1	517978
1953-54	2567 & taxi			1	517979
1954	2837 All			1	517547
1954	2867 All			1	517545
1954	2869 All			1	517543
1955	2511-19-62-63-64 All			1	519015
1955	2537 All			1	519017
1955	2819 All			1	519018
1955	2837 All			1	519020
1955	2867 All			1	519522
1956-57	27 All exc. 2737-62FC	also use 529175 shaft pkg.		1	528928
1956-57	2737 All	also use 529175 shaft pkg.		1	528929
1956-57	2762 FC	also use 529175 shaft pkg.		1	528930
1956-57	2819-39 All	also use 529175 shaft pkg.		1	528931
1956-57	2837 All	also use 529175 shaft pkg.		1	528933
1956-57	2867 All			1	521539
1958	25/2731-41-47-49 All A.S.			1	528976
1958	2567, taxi & police exc. A.S.			1	531761
1958	2567 All A.S.			1	528974
1958	2547, 2731-39-41-49 All exc. A.S.			1	530433
1958	2739 All A.S.			1	530435
1958	27 All taxi, police exc. A.S.			1	530433
1958	2793-94 All exc. A.S.			1	528209
1958	2793-94 All A.S.			1	528975
1958	2831-49 All A.S.			1	528977
1958	2831-39-49 SD exc. A.S.			1	530434
1958	2839 All A.S.			1	530436
1959	2111-19-37			1	532031
1959	2135, 2735			1	532035
1959	2139, taxi & police			1	532519
1959	2145			1	532983
1959	2167			1	532037
1959	2411-19			1	532032
1959	2439, 2837-39			1	532520
1959	2867-H,D,C.			1	532038
1960	2111-19-37, 2337			1	536096
1960	2135, 2735			1	536098
1960	2139, 2339, taxi & police			1	536100
1960	2145			1	536099
1960	2167			1	536102
1960	2411-19			1	536097
1960	2439, 2839			1	535207
1960	2837			1	536101
1960	2867-H,D,C.			1	536103

Group 7.010 CROSS MEMBER, FRONT FRAME

1941-48	All			1	506207
1949-52	All	(A)		1	512198
1953-54	All			1	517167
1955-57	All			1	522636

1958	All exc. A.S.			1	530585
1958	All A.S.			1	530538
1959-60	All	frt. suspension lwr. control arm	Front	1	533466
1959	All	frt. suspension lwr. control arm	Rear	1	534209
1959-60	2167, 2867 & H.D.C.	radiator support frame		1	532074
1960	All	frt. suspension lower control arm	Rear	1	536678

▲NOTE: See Group 7.061 for radiator and engine support cross member.

Group 7.011 CROSS MEMBER, FRONT CENTER (ENGINE REAR SUPPORT)

1953	2567 P.G.			1	518537
1953	All exc. 2567 P.G.			1	518492
1955-57	All S.T.			1	519092
1955-56	All H.T. exc. C.C.			1	519139
1956-57	All C.C. H.T.			1	521351
1958	All			1	528524
1959-60	All			1	532073
1958	All	PLATE, rear supt. cross member reinforcement		2	529194
1948	26 L.H.D., H.T.	CROSS MEMBER PKG., engine rear support		1	511535
1949-54	All H.T.			1	513209
1949-54	All S.T.			1	513199

NOTE: Cross member package includes: - 1 cross member, 6 bolts, 6 nuts and 6 washers.

Group 7.013 CROSS MEMBER, REAR CENTER

1949-50	All	rear shock absorber frame		1	512199
1951-54	All	rear shock absorber frame		1	514713
1955-57	All			1	519063

Group 7.014 CROSS MEMBER, REAR

1941-48	26 sta. wag.	fuel tank rear		1	506222
1949-52	All			1	511221
1953-54	All			1	517992
1955-57	All			1	519087
1958	All			1	528270
1959-60	2145			1	536105
1959-60	All exc. 2145			1	536104
1955-57	All	EXTENSION, rear cross member	519085 RH		519086 LH
1958	All		528674 RH		528675 LH

Group 7.061 BRACKET, RADIATOR SUPPORT FRAME

1949-54	All		Front	1	511209
1958	All			1	529655
1949-54	All	CROSS MEMBER, rad. and engine supt. frame	Front	1	515079
1955-57	All		Front	1	519062

Group 7.112 BRACKET, REAR SPRING FRONT

1941-48	26-29 All exc. sta. wag.	use w/508550 bolt		2	509051
1941-48	25-27 All exc. 2567 & taxi		509047 RH		
1949	All exc. 2567 & taxi		511203 RH		511204 LH

1949	2567 & taxi	511581 RH	511582 LH
1950	All exc. 2567 & taxi	513634 RH	513635 LH
1950	2567 & taxi	513636 RH	513637 LH
1951-52	All exc. 2567 & taxi	514704 RH	514705 LH
1951-52	2567 & taxi	514706 RH	514707 LH
1953-54	All exc. 2567 & taxi	515069 RH	515070 LH
1953-54	2567 & taxi	515341 RH	515342 LH
1955-57	All	519041 RH	519042 LH

Group 7.118 BRACKET, REAR SPRING REAR

1941-48	25 All	505232 RH	505233 LH
1949-50	All	511263 RH	511264 LH
1951-52	All		2 514708
1953-54	All		2 515071
1954	28 All	517553 RH	517554 LH
1955-57	All		2 519043

Group 7.229 BRACKET, ENGINE SUPPORT REAR

1953	All P.G.		2 518489
1953	All P.G.	REINFORCEMENT, engine rear support	2 518495

Group 7.238 NUT, FRONT STABILIZER

1937-57	All	(8.921) spring lock type	(5/16"-24)	2 107822
1958-60	All		Front and rear (5/16"-24)	4 531736

Group 7.240 LINK PACKAGE, STABILIZER

1937-52	All	Includes bolt, nut, washer, spacer, 4 bushings and cup	Front	2 500906
1953-57	All		Front	2 517319
1958	All		Front	2 530347
1959-60	All		Front	2 533016
1958-60	All	LINK, rear stabilizer		2 529666
1937-52	All	SPACER, stabilizer link	Front	2 410738
1953-57	All		Front	2 515218
1958	All		Front	2 528795
1958-60	All		Rear	2 529668
1959-60	All		Front	2 532410

Group 7.241 SHAFT, STABILIZER

1940	29 All		Front	1 504162
1941-48	All		Front	1 505661
1949-52	All		Front	1 511548
1953-54	All		Front	1 515217
1955-57	All		Front	1 519083
1958	All exc. A.S.		Front	1 528794
1958	All A.S.		Front	1 530998
1958	All		Rear	1 529667
1959-60	All		Front (3/4" dia.)	1 534263

1959-60	All Front (11/16" dia.)	1	532686
1959	2135-45, 2735 exc. A.S. Rear	1	532245
1959	All A.S. exc. 2135-45, 2735 Rear	1	532245
1960	Police (Spec. Order)	(▲) Front (13/16" dia.)	1	535309
1960	2135-45, 2735 H.D.C. & Spec. Police eqpt. Rear	1	532245

▲NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 7.242 BRACKET, STABILIZER

1941-57	All	front stabilizer frame	2	502138
1958	All	front stabilizer frame	2	530238
1958-60	All	rear stabilizer axle	2	502138
1959-60	All	front stabilizer frame	2	502138
1959-60	All	rear stabilizer frame	2	532432
1958	All (5.505)	WASHER, front stabilizer frame bracket	2	564352

Group 7.243 INSULATOR, STABILIZER BAR

1939-48	All Front	2	502722
1949-57	All	to frame Front	2	530268
1958	All exc. A.S.	2	529740
1958	All A.S.	2	530997
1958	All A.S. exc. 2793-94	rear stabilizer to axle	2	529741
1958	2793-94 & police exc. A.S.	rear stabilizer to axle	2	529741
1959-60	All Front (11/16" hole dia.)	2	529740
1959-60	All	use w/532686 shaft Front (5/8" hole dia.)	2	531959
1959-60	All	rear stabilizer axle	2	534240
1959	All	rear stabilizer axle	2	529741
1960	Police (Spec. Order)	(▲) Front (3/4" hole dia.)	2	530997
1958	All	SPACER, frt. stabilizer bar insulator	2	530239

▲NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 7.244 BUSHING, FRONT STABILIZER LINK

1937-60	All	8	1194162
---------	-----	-------	---	---------

Group 7.245 RETAINER, STABILIZER LINK BOLT GROMMET

1937-60	All Front	8	043468
1958	All A.S.	rear stabilizer link grommet	8	043468
1958-60	All	rear stabilizer link grommet to bracket	4	529671
1959-60	All	rear stabilizer link grommet	8	043468

Group 7.248 BOLT

BOLT (see Group 7.395 for use)	1284634
--------------------------------	-------	---------

Group 7.249 NUT, FRONT SHOCK ABSORBER TO FRAME BOLT

NUT (see Group 7.395 for use)	1297755
-------------------------------	-------	---------

Group 7.330 BRACKET, BODY TO FRAME FRONT

1949-53	All	Front	2	511229	
1949-54	All	Rear intermediate	AR	517990	
1953	2537-67 & taxi	517987 RH		517988	LH
1954	All	517987 RH		517988	LH
1954	All	Front intermediate	2	517989	
1955-57	All	519031 RH		519032	LH
1955-57	All exc. 2867	Front intermediate-inner		519033 RH	519034 LH
1955-57	2867	Front intermediate-inner		519525 RH	519526 LH
1955-57	All	Front intermediate-outer	2	519035	
1955-57	25/2737, 2837-67 All	Intermediate	4	519036	
1956-57	2739, 2839 All	Intermediate	1	521621	
1958	All exc. 2567	Front		528240 RH	528241 LH
1958	2567 All	Front		528240 RH	528241 LH
1958	2567 All	Front		529282 RH	529283 LH
1958	2567 All	Front intermediate	2	529284	
1958	2567, taxi & police	Center		529285 RH	529286 LH
1959-60	All	Front		532054 RH	532055 LH
1959-60	2167, 2867 & H.D.C.	Center		532755 RH	532756 LH
1959-60	All exc. 2135-45, 2735	Rear intermediate		532358 RH	532359 LH
1959-60	2135-45, 2735	Rear intermediate		532383 RH	532384 LH

Group 7.334 BRACKET, BODY TO FRAME REAR

1949-52	All		2	511231	
1953	All		2	515040	
1954	All		2	517991	
1955	All exc. 2867	519037 RH		519038	LH
1955	2867	519527 RH		519528	LH
1956-57	2762 FC	522355 RH		522356	LH
1958	25/2731-39-41-47-49-67 All		2	528245	
1958	2793-94 All		2	528246	
1958	2831-39-49 All		2	528247	
1959-60	21-23 All, 2735		2	532381	
1959-60	2411-19-39, 2837-39-67 & H.D.C.		2	532382	

Group 7.345 SHOCK ABSORBER

1939-48	All	Rear	2	5394983	
1939-48	All	Front		5352332 RH	5352333 LH
1949-54	All taxi and police cars	Front	2	5531208	
1949-52	All taxi and police cars	Rear	2	5513563	
1949-54	All exc. taxi & police cars	Front	2	5531207	
1949-54	All exc. taxi & police cars	Rear	2	5531200	
1953-54	All taxi & police cars	Rear	2	5531201	
1955	All exc. 2867 taxi & police cars	Front	2	5531207	
1955-57	All taxi, police cars & heavy duty	Front	2	5531208	
1955	All exc. taxi, police cars & 2867	Rear	2	5531200	
1955-57	All taxi, police cars & heavy duty	Rear	2	5531201	
1955	2562-63 w/8 leaf springs	Rear	2	5515727	
1955	2867	with grommet	2	5531201	
1956	All exc. taxi, police cars & heavy duty	Front	2	5531209	

1956-57	All 2/4 B.C.-3/2 B.C.	Front	2	5531208
1956	All exc. taxi, police cars & heavy duty	Rear	2	5532097
1956-57	All 2/4 B.C.-3/2 B.C.	Rear	2	5531201
1957	All exc. 2819-37-39 taxi & police cars	with grommet	Front	2 5535524
1957	All exc. 2819-37-39 taxi & police cars	with grommet	Rear	2 5535525
1957	2819-37-39 All exc. heavy duty	with grommet	Front	2 5535544
1957	2819-37-39 All exc. heavy duty	with grommet	Rear	2 5535545
1958	All A.S. exc. 2567	with grommet	Front	2 5535573
1958	2547, 2731-39-41-49 All A.S. .	with grommet	Rear	2 5543729
1958	All exc. 2567, taxi, police & A.S.	with grommet	Front	2 5552313
1958	All exc. 2793-94	with grommet	Rear	2 5552314
1958	All taxi, police & 2567 exc. A.S. & H.D.C.	with grommet	Front	2 5535576
1958	All taxi & police exc. H.D.C. .	with grommet	Rear	2 5543701
1958-59	All A.S.	with grommet	Front	2 5543752
1958-59	2167, 2567, 2867 All A.S.	with grommet	Rear	2 5543723
1958	2793-94 exc. A.S.	with grommet	Rear	2 5535578
1958-59	2135-45, 2735-93-94 All A.S. .	with grommet	Rear	2 5535577
1958	27, All taxi, Police & H.D.C. .	with grommet	Front	2 5552319
1959	All taxi, police & H.D.C. exc. A.S.	with grommet	Front	2 5552319
1958	All taxi, police & 27	with grommet	Rear	2 5552320
1958	2831-39-49 All A.S.	with grommet	Rear	2 5543728
1959	2111-19-37, 2411-19, 2837 All exc. A.S., taxi & police	with grommet	Front	2 5543750
1959	2111-19-37-39, 2411-19-39, 2837-39 All A.S.	with grommet	Rear	2 5543753
1959	2135-39-45-67, 2439, 2735, 2839-67 All exc. A.S.	with grommet	Front	2 5543756
1959	2139, 2439, 2839 All exc. A.S.	with grommet	Rear	2 5552301
1959	2167, 2867, taxi & police exc. A.S.	with grommet	Rear	2 5552301
1959-60	All taxi, police & H.D.C.	w/grommet	Rear	2 5552320
1960	2111-19-39, 2337, 2411-19, 2837 All exc. taxi & police . .	w/grommet	Front	2 5552311
1960	2111-19-37, 2337, 2411-19, 2837, All exc. taxi & police . .	w/grommet	Rear	2 5552312
1959-60	2135-45, 2735 all exc. A.S. . . .	w/grommet	Rear	2 5552315
1960	2135-39-45, 2339, 2439, 2735, 2839	w/grommet	Front	2 5552313
1959-60	All exc. 2135-45, 2735	w/grommet	Rear	2 5552314
1960	2167, 2867	w/grommet	Front	2 5552346
1960	2167, 2867	w/grommet	Rear	2 5552347
1960	All taxi-police & H.D.C.-exc. police (Spec. Order)	w/grommet	Front	2 5552319
1960	Police (Spec. Order)	w/grommet (▲)	Front	2 5552362
1960	Police (Spec. Order)	w/grommet (▲)	Rear	2 5552363

▲NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 7.364 BRACKET ASSEMBLY, FRONT SHOCK ABSORBER

1949-52	All	Upper	2	511590
1949-52	All	Lower	2	511552
1953-57	All	Upper	2	515212 -
1958	All A.S.	529384 RH		529385 LH
1959	All A.S.	532695 RH		532696 LH

Group 7.371 SHIELD, REAR SHOCK ABSORBER

1949-52	All	511639 RH		511640 LH
---------	-----	-----------	--	-----------

Group 7.377 BUSHING, SHOCK ABSORBER

1949-60	All	(7.244)	Front	AR	1194162
1937-60	All		Rear	8	1194163
1949-60	All	(7.245)	RETAINER, frt. shock abs. bushing	Front	8 043468

Group 7.395 BRACKET-BOLT-NUT, SHOCK ABSORBER MOUNTING

1941-48	25	BRACKET, rear shock absorber frame	2	505236	
1949-50	All		2	511210	
1958	All exc. 2793-94			530033 RH	
1958	2793-94 All		2	528254	
1937	All	(6.187)	BOLT, shock abs. to cross member-front, with shims	2	1298766
1949-59	All		to axle, rear	AR	502685
1939-48	All	(7.248)	to frame, front	4	1284634
1949-52	All		to upper bracket	4	511437
1949-60	All		to axle, rear	AR	502685
1937-48	All	(7.249)	NUT, front shock abs. to frame bolt	8	1297755
1940-48	All	(8.917)	rear shock abs. to frame bolt	AR	9416098
1946-55	All	(8.917)	rear shock abs. to axle bolt	AR	9416098

Group 7.397 WASHER, REAR SHOCK ABSORBER BOLT

1937-60	All	(21/32" I.D. x 1-1/4" O.D.)	Inner	AR	513978
1953-60	All	(8.929)	(9/16" I.D. x 1-1/4" O.D.)	Outer	2 446230
1939-40	25	SPACER, rear shock absorber to frame	2	502809	
1949-57	All		2	502809	

Group 7.412 SPRING ASSEMBLY, FRONT COIL

NOTE: Part number is stamped on lower end of coil for identification.

1940	26 exc. taxi		2	509037
1940-41	28-29 exc. 1940 28		2	509040
1941	24 sta. wag.		2	509040
1941	25 exc. taxi		2	509037
1941-48	26 taxi		2	509040
1941	24-26-27 exc. sta. wag.		2	509039
1941-48	25 taxi		2	509039
1941-52	All heavy duty		2	506481
1942-47	2567		2	509038

1942-48	2527 S.T.	2	509038
1942-48	26-27 exc. 2767, taxi & sta. wag.	2	509039
1942-48	26-28 sta. wag. S.T.	2	508116
1942-48	26 exc. sta. wag. S.T.	2	509040
1942-48	2507-11-19-27B All	2	509037
1948	25 H.T.	2	509039
1948	P/6-2567 S.T.	2	509039
1948	P/6-2567 H.T.	2	509040
1948	P/8-2767 S.T.	2	509040
1948	26-27 exc. taxi and sta. wag. H.T.	2	509040
1948	26-28 sta. wag. H.T.	2	511138
1948	P/8 H.T. exc. sta. wag.	2	511135
1949	P/8 S.T. 2507-08-11-27-27B- 69 All	2	511135
1949	P/8 H.T. 2507-08-11-27-27B- 69 All	2	512927
1949	P/6 S.T. 2507-08-11-27-27B- 69 All	2	509040
1949	P/6 H.T. 2507-08-11-27-27B- 69 All	2	511135
1949	P/8 S.T. 2561-62-71 All	2	511138
1949	P/8 H.T. 2561-62-71 All	2	511755
1949	P/6 S.T. 2561-62-71 All	2	508116
1949	P/6 H.T. 2561-71 All	2	511138
1949-52	P/8 S.T. 2567	2	512927
1949-52	P/8 H.T. 2567	2	512928
1949-52	P/6 S.T. 2567	2	511135
1949-52	P/6 H.T. 2567	2	512927
1949-52	P/8 S.T. & H.T. taxi & police cars	2	512928
1949-52	P/6 S.T. & H.T. taxi & police cars	2	511755
1950	P/8 S.T. 2507-08-11-27-27B- 69 All	2	511135
1950	P/8 H.T. 2507-08-11-27-27B- 69 All	2	512927
1950	P/6 S.T. 2507-08-11-27-27B- 69 All	2	509040
1950	P/6 H.T. 2507-08-11-27-27B- 69 All	2	511135
1950-52	P/8 S.T. 2562-71 All	2	511138
1950-52	P/8 H.T. 2562-71 All	2	511755
1950-52	P/6 S.T. 2562-71 All	2	508116
1950-52	P/6 H.T. 2562-71 All	2	511138
1951	P/8 S.T. 2507-11-27-27B-37- 69 All	2	511135
1951	P/8 H.T. 2507-11-27-27B-37- 69 All	2	512927
1951	P/6 S.T. 2507-11-27-27B-37- 69 All	2	509040
1951	P/6 H.T. 2507-11-27-27B-37- 69 All	2	511135
1952	P/8 S.T. 2511-37-69 All	2	511135
1952	P/8 H.T. 2511-37-69 All	2	512927
1952	P/6 S.T. 2511-37-69 All	2	509040
1952	P/6 H.T. 2511-37-69 All	2	511135
1953-54	P/6 S.T. 2511-37-69 All	2	516432
1953-54	P/8 S.T. 2511-37-69, 2837-69 All	2	516433
1953-54	P/6 H.T. 2511-37-69 taxi & police cars All	2	516433

1953-54	P/8 H.T.-P.G. 2511-37-62-69, 2837-69 All exc. A.C.	2	516434
1953-54	P/6 H.T.-P.G. 2562-67-71 All	2	516434
1953-54	P/6 S.T. 2562-67-71 taxi & police cars All	2	516433
1953-54	P/8 S.T. 2562-71, 2867 taxi & police cars All	2	516434
1953-54	P/8 H.T. 2567, 2867	2	516435
1953-54	All heavy duty exc. A.C.	2	516730
1954-56	P/8 H.T.-A.C.	2	518776
1955	All S.T.-A.C.	2	516435
1955-57	All S.T. 25/2762-63-64 All exc.	2	520926
1955-56	All S.T. 2867 exc. A.C.	2	520926
1955-56	All H.T. 25/2711-19-37-62-63- 64, 2819-37 All exc. A.C.	2	516434
1955-56	All H.T. 2867 exc. A.C.	2	520925
1955	All H.T.	2	520925
1955-57	All S.T. All taxi & police cars exc. A.C.	2	520926
1955-57	All heavy duty exc. A.C.	2	522106
1955-56	All S.T. exc. 25/2762-63-64	2	516433
1955-57	All H.T. 27 taxi and police cars exc. A.C.	2	520925
1957	All S.T. exc. 2762-63-64, 2867	2	516432
1957	All H.T. exc. 2762-63-64	2	528647
1957	All H.T. 2762-63-64, 2867 exc. A.C.	2	516434
1957	All S.T. 2867 D	2	528647
1957	All A.C.	2	516435
1958	All S.T. exc. 2793-94, taxi, police & H.D.C.	2	530141
1958	All H.T. exc. 2793-94, taxi, police, A.C. & H.D.C.	2	530143
1958	2547 All S.T.	2	530145
1958	2547 All H.T. exc. A.C.	2	530141
1958	2547 All A.C.	2	530627
1958	2567 All S.T.	2	530144
1958	2567 All H.T. exc. A.C.	2	530146
1955	2567 All A.C.	2	530625
1958	2741-49 S.T. police	2	530146
1955	2741-49 H.T. police	2	530625
1958	2749 S.T. taxi exc. A.C.	2	530146
1958	2749 H.T. taxi exc. A.C.	2	530625
1958	27-28 All A.C. exc. police	2	530626
1958	2793-94 All	2	530626
1958	27 All H.D.C.	2	530624
1959-60	2775 All H.T. exc. A.C. (exc. high rate springs)	2	532886
1959-60	All S.T. taxi & police	2	534359
1959-60	All H.T. taxi & police	2	532890
1959-60	All H.T. exc. 2135-45, 2735, taxi, police, H.D.C. & A.C.	2	532888
1959-60	2135-45 All S.T. (exc. high rate springs)	2	534358
1959-60	2135-45 All H.T. exc. A.C. (exc. high rate springs)	2	534359
1959-60	2135-45, 2735 exc. A.C. (w/high rate springs)	2	532890
1959-60	2135-45, 2735 All A.C. (exc. high rate springs)	2	532890
1959-60	2135-45, 2735 All A.C. (w/high rate springs)	2	532889
1959-60	2735 All S.T. exc. A.C. (exc. high rate springs)	2	532887
1959-60	All S.T. exc. 2135-45, 2735, taxi, police & H.D.C.	2	532886
1959-60	All A.C. exc. 2135-45, 2735, taxi, police & H.D.C.	2	532889
1959-60	All H.D.C.	2	532891
1960	All H.T. Police (Spec. Order) (See note)	2	535307

Group 7.420 SPACER, FRONT COIL SPRING

1959-60	All A.C.		2	521467
---------	------------------	--	---	--------

Group 7.422 BUMPER, STEERING KNUCKLE SUPPORT ARM LOWER

1939-57	All	at lower control arm	2	516442
1958-60	All	at lower control arm	2	529968
1935	P/6 mstr. (7.547)	BUSHING, front spring seat insulator	2	399303

Group 7.427 PIN, SPRING SHACKLE

1937-49	All005" oversize	Rear	4	500466
---------	---------------	--------------------------	------	---	--------

Group 7.428 BOLT, FRONT SPRING SHACKLE

1931-33	All (7.529)		Rear	4	3710479
1935-36	P/6 mstr. (7.529)		Rear	4	3710479

Group 7.443 WASHER, SPRING SHACKLE PIN OR BOLT

1933-49	All	cork, rear spring rear shackle pins	8	3717880
1939-49	All	cork, rear spring front bolt	4	502442

Group 7.445 VALVE-CLAMP-CONTROL, AIR SUSPENSION CAR LIFT

1958	All A.S. exc. 2793-94	VALVE ASSY., manual carlift and pressure regulator	1	5544050
1958	2793-94 All A.S.		1	5544545
1959	All A.S. exc. 2135-45, 2735		1	5544833
1959	2135-45, 2735 All A.S.		1	5544887
1958-59	All A.S.	CLAMP, car lift control cable to valve	1	1175729
1958	All A.S.	CONTROL ASSY., manual car lift valve	1	530743
1959	All A.S.		1	532931
1959	All A.S.	SUPPORT, car lift valve cont. cable	1	5540474

Group 7.446 VALVE-COVER-DIAPHRAGM-LEVER-PLATE-RETAINER-SEAL-SPRING, MANUAL CAR LIFT VALVE

1958-59	All A.S.	VALVE ASSY., manual car lift pressure regulator intake	1	5540454
1958	All A.S.	VALVE ASSY., manual override sliding	1	5540494
1959	All A.S.	CAMSHAFT ASSY., manual valve plunger	1	5549176
1958-59	All A.S.	COVER, pressure regulator adjusting screw	1	5540446
1958-59	All A.S.	DIAPHRAGM, manual car lift and pressure regulator valve	1	5540084
1958	All A.S.	FILTER AND RETAINER, manual valve	1	5540456
1959	All A.S.	pressure reg. valve	1	5549160
1959	All A.S.	HOUSING AND ADJUSTING SCREW, pressure reg. spring	1	5540447
1958	All A.S. exc. 2793-94	LEVER ASSY., manual car lift valve	1	5544052
1958	2793-94 All A.S.		1	5544551

1959	All A.S. exc. 2135-45, 2735 . . .	manual valve	1	5549177
1959	2135-45, 2735 All A.S.	manual valve	1	5549179
1959	All A.S.	PISTON, pressure reg. valve spring	1	5540451
1958	All A.S.	PLATE, manual car lift valve seat	1	5540466
1959	All A.S.	manual valve seat	1	5549175
1959	All A.S.	PLUNGER ASSY., manual valve	1	5549168
1958	All A.S.	RETAINER, manual car lift valve seat plate	1	5544244
1958	All A.S.	manual car lift and pressure regulator intake valve	1	5540452
1959	All A.S.	manual valve seat plate	1	5544844
1959	All A.S.	pressure reg. intake valve	1	5549173
1958-59	All A.S. (7.453)	RING, manual car lift valve cam retainer	1	274735
1959	All A.S.	manual valve shaft retaining	1	9411969
1958-59	All A.S.	SEAL, manual car lift valve seat plate-"O" ring	2	5540477
1958-59	All A.S.	manual valve filter and ret.-"O" ring . . (1/2" I.D.)	1	5372758
1959	All A.S.	manual valve camshaft "O" ring	1	5549197
1958-59	All A.S.	SPRING, manual override valve lever return	1	5540475
1958-59	All A.S.	manual car lift and pressure regulator valve	1	5540450
1958-59	All A.S.	manual car lift and pressure regulator intake valve return	1	5540453
1958	All A.S.	SCREW, manual valve lever to shaft	1	5544584
1959	All A.S. (8.907)	SCREW & LOCK WASHER, pressure reg. spring hsg. to body (No. 6-32 x 3/8")	4	451633
1959	All A.S.	WASHER, manual valve shaft thrust	1	5549198

Group 7,447 BRACKET-CLAMP-HOSE, AIR CLEANER

1958	All S.S.-A.S.	BRACKET, air cleaner to compressor hose-w/rubber comp. mtg.	1	530985
1958	All A.S. (8.948)	CLAMP, air cleaner to compressor	1	272795
1958	All A.S.	ELBOW, comp. air inlet pipe to comp. . . . (5/16"-90°)	1	531745
1958	All A.S.	HOSE, air cleaner to manual valve (3/16" I.D. x 30" long)	1	530991
1958	All A.S.	air cleaner to compressor (5/16" I.D. x 23" long)	1	530989
1959	All A.S.	air cleaner to manual valve (3/16" I.D. x 57-1/2" long)	1	533862
1959	All A.S. exc. 3/2 B.C.	air cleaner to comp. (5/16" I.D. x 23" long)	AR	531878
1958	All A.S.	NUT, comp. air inlet pipe to elbow	1	531746

Group 7,450 BELT-BRACKET-PULLEY, AIR COMPRESSOR

1958	All A.S. exc. A.C.	BELT, air compressor drive	1	531697
1958	All A.S.-A.C.	1	531651
1959	All A.S. exc. A.C. . . . (1,066) (1/2"x63-1/2" long)	1	532674
1958	All A.S.	BRACKET, air compressor idler pulley-w/rubber comp. mtg.	1	531283
1958-59	All A.S.	w/rigid comp. mtg.	1	532175
1958-59	All A.S. (1,062)	HUB, belt idler pulley-w/rigid comp. mtg.	1	516100
1958-59	All A.S.	PULLEY, air compressor	1	530028
1958	All A.S.	belt idler-w/rubber comp. mtg.	1	531329
1958	All A.S.	belt idler-w/rigid comp. mtg.	1	531689
1958	All A.S. exc. A.C.	air compressor belt guide	1	529489
1959	All A.S.	belt idler	1	532679
1958-59	All A.S.	NUT, air comp. pulley to crankshaft	1	5540261
1958-59	All A.S. (9,180)	SHAFT AND BEARING ASSY., idler pulley	1	954604
1958	All A.S.	STRAP, air comp. belt adj.-w/rubber comp. mtg.	1	531330

Group 7.452 ADAPTER-BOLT-BRACKET-INSULATOR-PLATE-SPACER-SUPPORT, AIR COMPRESSOR MOUNTING

1958	All S.S.-A.S.	ADAPTER ASSY., compressor to rear insulator-w/rubber comp. mtg.	1	530072
1958	All A.S. (6.606)	BOLT, air compressor mtg. bracket-w/rubber comp. mtg. (1/2"-20x23/32")	1	530068
1958	All A.S. (1.359)	compressor insulator to support (5/16"-24x5/8" lock bolt)	1	9409084
1958	All A.S.	w/rubber comp. mtg. (3/8"-16x5/8")	2	9410884
1958-59	All A.S.	w/rigid comp. mtg. (3/8"-16x1-1/8")	AR	9410367
1959	All A.S.	air comp. front mtg. brkt. to brace (3/8"-16x5/8")	3	9410884
1959	All A.S. (2.275)	idler pulley brkt. & flange to frt. mtg. brkt.	2	9408975
1959	All A.S.	comp. mtg. rear plate to rear bracket (3/8"-16x3/4" lock bolt)	2	9409003
1958	All S.S.-A.S. (6.606)	BRACKET, air compressor mtg.-w/rubber comp. mtg.	1	533374
1958	All A.S.	w/rigid comp. mtg.	Front	1 532169
1958	All A.S.	w/rigid comp. mtg.	Rear	1 532207
1959	All A.S.	w/rigid comp. mtg.	Front	1 532675
1959	All A.S.	w/rigid comp. mtg.	Rear	1 532676
1958	All A.S.	BRACE, air comp. front bracket-w/rigid comp. mtg.	1	531758
1959	All A.S.	comp. frt. brkt. to timing chain cover	1	533831
1958	All A.S.	INSULATOR ASSY., air compressor-w/rubber comp. mtg.	Front	1 529955
1958	All A.S.	w/rubber comp. mtg.	Rear	1 529956
1958	All S.S.-A.S.	PLATE, air comp. mtg.-w/rigid comp. mtg.	Rear	1 532170
1958	All P.S.-A.S.	w/rigid comp. mtg.	Rear	1 532171
1959	All A.S.	w/rigid comp. mtg.	Rear	1 532678
1958	All A.S.	SPACER, air compressor mtg. w/rubber comp. mtg.	Rear	1 530074
1958	All A.S.-F.I.	w/rigid comp. mtg.	Front	2 531587
1958	All A.S.	SUPPORT, air compressor-w/rubber comp. mtg.	Front	1 530612
1958	All A.S.	w/rubber comp. mtg.	Rear	1 529952

Group 7.453 AIR SUSPENSION COMPRESSOR PARTS

1958	All S.S.-A.S.	CAP ASSY., comp. to oil reservoir filler	1	5540268
1958	All S.S.-A.S.	COVER AND OIL RESERVOIR, comp. housing	1	5540269
1958	All S.S.-A.S.	ECCENTRIC, comp. oil reservoir pump	1	5540280
1958	All S.S.-A.S.	HOUSING AND REAR SEAL ASSY., comp. crankshaft	1	5540276
1958	All A.S.	MODIFICATION KIT, air suspension system	1	534507
1958-59	All A.S.	PLATE AND BEARING ASSY., comp.	1	5540199
1958-59	All A.S.	PLATE, comp. oil pump cover	1	5540244
1958-59	All A.S.	PLUG, comp. front bearing oil passage	1	5542529
1958-59	All A.S.	PUMP PKG., comp. oil circulating	1	5543269
1958	All A.S.	comp. oil reservoir	1	5543271
1958-59	All S.S.-A.S.	RING, reservoir pump check valve seat ret.	1	274735
1958	All A.S.	SCREEN, comp. vent filter	1	5540252
1958	All P.S.-A.S.	SEAL, P.S. pump to comp.-"O" ring (23/64" I.D.)	2	5664476
1958	All P.S.-A.S.	comp. oil passage-"O" ring (3" I.D.)	1	5680593
1958-59	All A.S.	comp. oil passage-"O" ring	2	5372757
1958-59	All A.S.	comp. crankshaft front brg. oil passage plug	1	5372757
1958	All S.S.-A.S.	comp. housing oil passage-"O" ring	2	5664476
1958	All S.S.-A.S.	comp. housing to comp.-"O" ring	Outer	1 5680593
1958	All S.S.-A.S.	comp. cover to housing-"O" ring	Outer	1 5372759
1958	All S.S.-A.S.	comp. cover to housing-"O" ring	2	5532010
1958-59	All A.S.	comp. by-pass valve plug-"O" ring	1	5372756
1959	All P.S.-A.S.	P.S. pump to comp. "O" ring (23/64" I.D.)	2	5664476
1959	All P.S.-A.S.	P.S. pump to comp. (3" I.D.)	1	5680593
1958	All A.S.	SEAL PKG., reservoir and crankshaft housing to comp.-"O" ring	1	5543272

1958	All S.S.-A.S.	comp. crankshaft and housing rear oil	1	5543259
1958	All A.S.	SHIELD, comp. oil pump	1	5540266
1958	All S.S.-A.S.	STUD, comp. housing and cover ret.-w/rubber comp. mtg.	2	5541453
1958	All S.S.-A.S.	w/rigid comp. mtg.	2	5544703
1958-59	All A.S.	VALVE KIT, comp. oil by-pass	1	5543268
1958-59	All A.S. (8.900)	BOLT, oil pump shield to bearing plate (Hex. No. 8-32x1/2")	4	451280
1958-59	All A.S. (8.900)	oil pump stator to bearing plate (Hex. No. 8-32x1/2")	2	451280
1958-59	All A.S.	comp. rear brg. plate to housing (Spec. 1/4"-20x15/16")	2	5540235
1959	All P.S.-A.S. (6.635)	WASHER, pump to comp. sealing	2	5687263

Group 7.454 FLUID, AIR SUSPENSION COMPRESSOR

1958-59	All P.S.-A.S.	(1 qt. can)	AR	577080
---------	---------------	-------------	----	--------

Group 7.455 COMPRESSOR ASSY., AIR

1958	All A.S.		1	5552105
1959	All A.S.		1	5549106
1959	All A.S.	BLOCK AND BEARING ASSY., comp. cylinder	1	5549126
1958-59	All A.S.	HEAD ASSY., comp. cylinder	2	5540194
1958	All A.S.	HOUSING AND BEARING, comp. cylinder	1	5540256
1958-59	All A.S.	PLATE, comp. sump cover	1	5552141
1958-59	All A.S.	PLUG, comp. housing air passage	1	5540193
1958-59	All A.S. (7.453)	BOLT, cyl. head to housing	12	5540235
1958-59	All A.S.	comp. sump cover plate (Hex. No. 10-32x1/2")	4	425568

Group 7.457 GASKET-SEAL, AIR COMPRESSOR

1958-59	All A.S.	GASKET, sump cover plate to cyl. housing	1	5540406
1958-59	All A.S.	bearing plate and pump to housing	1	5540407
1958-59	All A.S.	cyl. head	2	5540189
1958	All A.S.	cyl. head-use w/5540189	2	5549900
1958-59	All A.S.	SEAL, crankshaft front oil	1	5540259
1958	All S.S.-A.S.	comp. crankshaft rear oil	1	5544568
1958-59	All A.S.	comp. housing air passage-"O" ring (1/2" I.D.)	1	5533237
1958	All P.S.-A.S.	SEAL KIT, P.S. pump to compressor-"O" ring	1	5686511
1958-59	All A.S.	SEAL AND GASKET KIT, comp. cyl. head and housing	1	5543258
1958-59	All A.S.	comp. cyl. housing-"O" ring	1	5543270
1958-59	All A.S.	compressor "O" ring	1	5543266

Group 7.460 PISTON AND ROD ASSY.-RING-VALVE PKG., AIR COMPRESSOR

1958-59	All A.S.	PISTON AND ROD ASSY., air comp.	2	5544898
1958-59	All A.S. (7.453)	RING, piston pin retainer	2	274735
1958-59	All A.S.	RING PKG., air comp. piston	2	5549613
1958-59	All A.S.	VALVE PKG., suction-w/cyl. head gasket	1	5543261

Group 7.462 CRANKSHAFT-PIN, AIR COMPRESSOR

1958	All A.S.	CRANKSHAFT AND PIN, compressor	1	5540184
1959	All A.S.		1	5549110

1958-59	All A.S.	PIN, stator drive	1	5540265
1958-59	All A.S.	SCREW, comp. connecting rod	4	5540227
1958-59	All A.S. (8.932)	LOCK WASHER, comp. connecting rod screw (No. 8)	1	138530

Group 7.465 DRAIN COCK-HOSE-SEAL-TANK-VALVE, AIR COMPRESSOR

1958-59	All A.S.	DRAIN COCK, air reservoir tank	1	3746196
1958	All A.S.	HOSE ASSY., air compressor to reservoir tank (1/4" I.D., x40" long)	1	530987
1959	All A.S.		1	534242
1958-59	All A.S.	SEAL, service valve to reservoir-"O" ring type	1	531184
1958-59	All A.S.	air comp. to reservoir pipe and tank hose	2	3750230
1958	All A.S.	TANK ASSY., air reservoir	1	530497
1959	All A.S.		1	533488
1958	All A.S.	UNION ASSY., air reservoir tank to manual valve pipe (3/16")	1	531642
1959	All A.S.		1	533148
1958-59	All A.S.	VALVE ASSY., air compressor to tank check	1	530842
1958	All A.S.	air reservoir tank inlet and service	1	530843
1959	All A.S.	air reservoir tank inlet and service	1	533893
1959	All A.S. (4.671)	WASHER, reservoir tank drain cock	1	231343

Group 7.470 CYLINDER AND BELLOWS-PISTON, AIR SUSPENSION

1958	All A.S.	CYLINDER AND BELLOWS, air suspension	Front	531022 RH	531023 LH
1958	All A.S.		Rear	531602 RH	531603 LH
1959	All A.S.			Front	2 532340
1959	All A.S.			Rear	2 532406
1958	All A.S. exc. 2793-94	PISTON ASSY., air suspension		Front	2 531028
1958	All A.S. exc. 2793-94			Rear	2 531738
1958	2793-94 All A.S.			Front	2 531072
1958	2793-94 All A.S.			Rear	2 531739
1959	All A.S.			Rear	2 532243
1959	All A.S.			Front	2 531028

Group 7.472 BOLT-PLATE-SCREW-WASHER, PISTON SEAT

1958	All A.S. (8.900)	BOLT, piston seat (7/16"-20x1")	4	181666
1958-59	All A.S.	PLATE, frt. air spring piston reinf.	2	531274
1958-59	All A.S. (8.977)	SCREW, air piston to seat (3/8"-16x3/4")	2	172482
1958-59	All A.S. (3.275)	WASHER, cyl. and diaphragm to frame	2	501215

Group 7.475 VALVE AND LEVER ASSY., AIR SUSPENSION

1958	All A.S.		Rear	5549931 RH	5549930 LH
1958	All A.S.	VALVE ASSY., front orifice tee check		1	5338394
1958	All A.S.	height control	Front	1	5540050
1959	All A.S.	height control-partial	Front	1	5544774
1959	All A.S.	height control	Rear	5544775 RH	5544776 LH
1958	All A.S.	REPAIR PKG., height control valve core		3	5544713
1958	All A.S.	manual over-ride valve		1	5543277

Group 7.476 ADAPTER-CLIP-CORE-SEAL-SCREEN-VALVE, HEIGHT CONTROL VALVE

1958	All A.S.	ADAPTER, height control valve intake	Front	1	5540044
1958	All A.S.	height control valve intake	Rear	2	5549901
1958	All A.S.	height control valve exhaust		4	5540049
1958	All A.S.	height control valve ball check		2	5336717
1958-59	All A.S.	CLIP, exhaust valve stem		3	5540078
1958-59	All A.S.	CORE, intake valve	Inner	3	5533273
1958	All A.S.	intake check valve		3	5540498
1958-59	All A.S.	exhaust valve		3	5533276
1959	All A.S.	CONNECTOR AND SEAL ASSY., exhaust pipe to valve body	Front	1	5542867
1959	All A.S.	exh. pipe to valve body	Rear	2	5549098
1959	All A.S.	FILTER ASSY., rear height control check valve		2	5549038
1959	All A.S.	front and rear height control intake valve stem		3	5549039
1959	All A.S.	GASKET, valve body cover		3	5549018
1958	All A.S.	SEAL, side cover to body-"O" ring		3	5540079
1958-59	All A.S.	adapter and valve stem		12	5533240
1958	All A.S.	SCREEN, intake valve adapter		3	5540093
1959	All A.S.	STEM ASSY., intake valve	Front	1	5549877
1959	All A.S.	Rear	2	5549878
1958	All A.S.	VALVE ASSY., height control intake	Front	3	5540045
1958	All A.S.	Rear	2	5549934
1959	All A.S.	frt. valve outlet to air spring check		2	5549068
1959	All A.S.	rear valve outlet to air spring check		2	5549037
1959	All A.S.	front and rear height control intake valve stem check		3	5549560

Group 7.477 HEIGHT CONTROL VALVE PARTS

1959	All A.S.	ARM, control valve actuating		3	5549017
1959	All A.S.	(3.425) BUSHING, height valve lever		1	520401
1959	All A.S.	(3.425) height control valve lever		1	520401
1959	All A.S.	BEARING AND LIMIT STOP, control valve actuating arm		3	5549028
1958	All A.S.	BRACKET, height valve mtg.	Front	1	530806
1958	All A.S.	Rear	530100 RH	530101 LH
1959	All A.S.	over travel lever neutral gauging	Front	1	5549015
1959	All A.S.	over travel lever neutral gauging	Rear	5549015 RH	5549016 LH
1959	All A.S.	COVER, frt. control valve body		1	5549063
1959	All A.S.	rear control valve body	5549065 RH		5549064 LH
1959	All A.S.	ECCENTRIC, control valve lever	Rear	2	5549025
1959	All A.S.	FASTENER, control valve lever and over travel plug		3	5549027
1958-59	All A.S.	LEVER ASSY., to stabilizer bar		1	530807
1959	All A.S.	front control valve		1	5549060
1959	All A.S.	rear control valve	5549061 RH		5549062 LH
1958	All A.S.	LINK ASSY., control valve		2	5541016
1959	All A.S.		2	5544845
1959	All A.S.	NUT, control valve lever to over travel		3	1069635
1959	All A.S.	OVER TRAVEL ASSY., height control valve	Front	1	5549021
1959	All A.S.	Rear	5549021 RH	5549022 LH
1958	All A.S.	PLATE, height valve cover		3	5540076
1958	All A.S.	ROD, front height control valve		1	530810
1959	All A.S.	valve control	Front	1	533556
1958	All A.S.	SCREW, height control valve lever adj.-eccentric		2	5540069
1959	All A.S.	control valve lever to over travel assy.		3	9411839
1959	All A.S.	control valve arm to shaft		3	9411716
1959	All A.S.	control valve body cover		12	9411717
1958	All A.S.	(7.482) SEAL, height control valve port-"O" ring		3	5540299
1959	All A.S.	control valve shaft dust		3	5549096

1959	All A.S.	control valve shaft- "O" ring (19/64" I.D.) Front and rear	6	5549030
1959	All A.S.	SPRING, height control valve over travel Front and rear	3	5552479
1958	All A.S. (8.907)	BOLT, manual valve lever adjuster (No. 8-32x1-1/4")	1	131992
1958-59	All A.S.	"U" BOLT, height valve lever	1	530809

Group 7.482 BRACKET-GASKET-TEE-UNION, AIR SUSPENSION PRESSURE PIPE

1958	All A.S.	BRACKET, rear pipe tee to frame	1	530955
1959	All A.S.	FERRULE, air suspension pipes (3/16" pipe)	AR	573656
1959	All A.S.	GASKET, pressure pipe connector-rubber	AR	572870
1958	All A.S.	SEAL, pressure pipe connector- "O" ring (11/32" O.D.)	AR	531643
1958	All A.S.	TEE ASSY., rear pipe	1	531075
1959	All A.S.	TEE AND BRACKET ASSY., pressure relief valve . .	1	533172
1958	All A.S. (7.465)	UNION ASSY., frt. height valve to manual valve pipe (3/16")	2	531642
1959	All A.S.	air suspension pipes (3/16" pipe)	AR	573293
1958	All A.S.	VALVE AND TEE ASSY., pressure relief	1	531658
1958	All A.S.	SEAL (see Group 7.477 for use)		5540299

Group 7.495 COVER PACKAGE, SPRING (METAL)

1941-50	All exc. heavy duty	for one rear spring	2	507776
1951-54	25 All exc. heavy duty	for one rear spring	2	514327
1954	28 All	2	518415

Group 7.502 LINER, REAR SPRING LEAF

1953-54	All Rubber (56-1/4" long)	AR	529839
1956	2711-19-37-39 exc. taxi & police cars	LINER PKG., rear spring	2	523066
1956-57	2762-63 All	2	523067
1956	2764, taxi & police cars	2	523065
1956	28 All	2	523068
1957	2711-19-37-39 exc. taxi & police cars Cardboard	2	528412
1957	2711-19-37-39 exc. taxi & police cars Butyl	2	528945
1957	2764, taxi & police cars	2	528411
1957	28 All Cardboard	2	528413
1957	28 All Butyl	2	528946
1955	All heavy duty	AR	520901

Group 7.503 SPRING ASSEMBLY, REAR (LEAF)

NOTE: Identifying color appears on spring eye.

1939	2511-19-2611-19-27-27B	less cover	2	508947
1940	2527-27B	less cover	2	508952
1940	29-26 All	less cover	2	508947
1941	2927	2	507758
1941	2919	2	507759
1941-48	26 All	2	507759

1941-48	25 All		2	507758
1941-49	All taxi		2	507768
1941-48	All sta. wag.		2	507760
1941-48	All heavy duty		2	506091
1949	All exc. 2561-62-71, taxi & police cars	white	2	512401
1949	All police cars	green and red	2	513400
1949	All heavy duty		2	506091
1949-50	2561-62-71 All	red and aluminum	2	507760
1950	2507-08-11-27-37-67-69 All	white	2	513624
1950	All taxi & police cars	green and red	2	513625
1951-52	2507-11-27-37-67-69 All	yellow	2	529826
1951-52	All taxi & police cars	green and red	2	531521
1951-52	2562-71 All	red and aluminum	2	514313
1953-54	2511-67-69 All		2	529828
1953-54	2537 All	yellow	2	517006
1953-54	2562-71 All	white	2	517008
1957-54	All taxi & police cars	red	2	529832
1954	2837 All	light blue	2	517579
1954	2867-69 All	purple	2	517580
1955	2511-19 All	light green	2	522876
1955	2537 All	yellow	2	519874
1955-56	2819-39-67 All	purple	2	522885
1955-56	2837 All	light blue	2	522884
1955	2564, taxi & police cars	red	2	519876
1955	28 heavy duty	maroon	2	521835
1955-56	25/2762-63 All	white	2	523040
1956	2711-19-39 All exc. taxi & police	light green	2	522876
1956	2737 All	yellow	2	522875
1956	2764, taxi & police cars	red	2	523039
1956	28 heavy duty	maroon	2	523043
1957	2711-19-39 All	light green	2	524953
1957	2737 All	yellow	2	524952
1957	2762 FC-62DF-63 F All	white	2	524955
1957	2762 SDF-64, taxi & police cars	red	2	524954
1957	2819-39-67 All	purple	2	524958
1957	2837 All	light blue	2	524957
1957	28 heavy duty	maroon	2	524959
1955	All exc. heavy duty	INSERT	(3-1/4" x 2") AR	520529

Group 7.503 SPRING, REAR (COIL)

NOTE: Part number is stamped on lower end of coil for identification.

1958	2547 All		2	530153
1958	2567 All		2	530152
1958	2731-41 All exc. taxi & police		2	530150
1958	2739-49 All exc. taxi & police		2	528824
1958	2741-49 taxi		2	530629
1958	2741-49 police	not for use with raised pivot arm	2	530151
1958	2793-94 All		2	528825
1958	2831 All		2	530151
1958	2839-49 All		2	530149
1958	27 All H.D.C.		2	530628
1959-60	2111-37-2337 All exc. police		2	534313
1959-60	2119-39-2339 All exc. taxi, police		2	534257
1959-60	2135-45	(exc. high rate springs)	2	534315
1959-60	2135-45, 2735	(w/high rate springs)	2	534316
1959-60	2167		2	532895

1959-60	2411, 2837-67		2	532896
1959-60	2419-39, 2839 & police	(1st type on 1960)	2	532893
1959-60	2735	(exc. height rate springs)	2	532897
1959-60	All taxi		2	532899
1959-60	H.D.C.		2	532900
1960	2419-39, 2839 & police exc. police (Spec. Order)	(2nd type)	2	535273
1960	Police (Spec. Order)	(See note)	2	535308

NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 7.504 BUSHING, REAR SPRING

1931-38	All		Front	2	3690790
1937-49	All		Rear	4	499533
1939-49	All		Front	2	499533
1937-56	All		Rear	4	513639
1950-57	All		Front	2	513638
1957	All		Rear	2	524996
1957	All	(7/8" O.D.x3-3/16")	Rear	2	513639
1957	All	(1-5/32" O.D.x3-3/16")	Rear	2	524905
1937-56	All	BUSHING PACKAGE	Rear	2	514049

Group 7.506 BOLT, REAR SPRING CENTER

1935-57	All	(5/16"-24x3-1/4")	2	1288224
---------	-----	-------------------	---	---------

Group 7.516 CLIP, REAR SPRING

1937-57	All		4	500897	
1933-57	All	(8.915) NUT, spring clip, thick	(1/2"-20)	8	125653

Group 7.518 PLATE, REAR SPRING CLIP

1949	All		511641 RH	511642 LH	
1950-54	All		513641 RH	513642 LH	
1955-57	All		523172 RH	523173 LH	
1958	All	CLAMP, rear spring	Upper	2	1302057
1958	All		Lower	2	1341949
1959-60	All		Upper	2	533902
1959-60	All		Lower	2	533901
1958-60	All	WASHER, rear spring upper clamp	(33/64" LD. x 1-1/2" O.D. x3/16" thk.)	2	1305797

Group 7.523 SHACKLE, REAR SPRING

1935-40	All	short	Inner	2	495035
1941-57	All		Inner and outer	4	495035

Group 7.524 BUSHING, REAR SPRING BRACKET

1937-49	All	(7.504)	4	499533
---------	-----	---------	---	--------

Group 7.529 BOLT, REAR SPRING SHACKLE

1931-38	All	Front (3-5/8" long)	2	3710479
1937-57	All (8.903)	thru rear shackle	2	126720
1939-49	All	(Carr. 3/8"-16x3-3/4")	2	508550
1950-54	All	Front	2	3710479
1955-57	All	Front	2	519084

Group 7.545 PAD, REAR SPRING SEAT INSULATOR

1937-49	All	4	510277
1958	All	INSULATOR, rear spring	2	1305014
1958-60	All	rear spring clamp bolt	2	530201
1959-60	All	rear spring	2	531671

Group 7.547 BUSHING, SPRING INSULATOR PAD

1930-49	All	2	399303
---------	-----	-------	-------	-------	---	--------

Group 7.552 RETAINER, REAR SPRING SEAT INSULATOR PAD

1939-49	All	4	510291
---------	-----	-------	-------	-------	---	--------

Group 7.629 CLAMP, SPARE WHEEL

1942-48	Taxi	1	1441246
1949-54	All exc. 2561-62-63-64-71	1	511658
1949-55	2561-62-63-64-71 All	1	512416
1956-57	2762	1	511658
1959-60	24 All exc. police & H.D.C.	RETAINER AND COVER, spare wheel	1	534505

Group 7.629 SPARE TIRE CARRIER PARTS

1957	All	ARM AND SUPPORT ASSY., tire carrier swing	1	524463
1958	All	1	531512
1957-58	All	COVER, tire sidewall-open face	1	524457
1957-58	All	tire sidewall-closed face	1	524458
1957	All	tire tread-painted	1	524461
1957-58	All	tire tread-stainless steel	1	524462
1958	All	tire sidewall	1	531497
1958	All (12,182)	LETTER, tire cover-P	1	523485
1958	All (12,182)	O	1	523486
1958	All (12,182)	N	1	523487
1958	All (12,182)	T	1	523488
1958	All (12,182)	I	1	523489
1958	All (12,182)	A	1	523490
1958	All (12,182)	C	1	523491
1958	All (12,116)	CLIP, tire cover letter	18	520414
1954-58	All	SPRING, tire tread cover	1	528638

Group 7.632 BOLT, SPARE WHEEL CLAMP

1941-48	All exc. 2507	(Spec. Hex. 9/16"-12x2-3/4")	1	506462
1947-48	2607 All	(Spec. Hex. 9/16"-12x2-3/4")	1	506462
1949-54	2561-62-71 All	(Spec. Hex. 9/16"-12x6-3/4")	1	512417
1955	2562-63-64 All	(Spec. Hex. 9/16"-12x8")	1	521455
1956-57	2762 FC	(Spec. Hex. 9/16"-12x6-3/4")	1	512417
1956-57	2762 DF-63-64	(Spec. Hex. 9/16"-12x8")	1	521455
1958	2793-94		1	3749150
1959-60	All exc. 2135-45, 2735		1	533469
1959-60	2145		1	534136
1959-60	2135, 2735		1	3749150
1949-52	2511-27-37-67-69 All	STUD, spare wheel anchor	1	511659
1949-51	2507-08 All		1	513903
1953-54	2511-37-67-69 All		1	517055
1954	2837-67-69 All		1	511659
1955-56	All exc. 25/2762-63-64		1	520899
1957	All exc. 2762-63-64		1	523170
1958	All exc. 2793-94		1	530318

Group 7.633 NUT, SPARE WHEEL CLAMP BOLT

1941-48	2507-11-19, 2609, 2919 All	wing type	1	506581
1949-57	All exc. 25/2761-62-63-64-71		1	511592
1958	All exc. 2794-93		1	557601
1958	2794-93 All	wing type	1	3727540
1959-60	All	wing type (5/16"-18)	1	533470

Group 7.680 CYLINDER, TIRE CARRIER LOCK

1935-40	All	uncoded less keys	AR	601271
1934-40	All	PLUNGER, lock case	1	496557
1934-40	All	SPRING, plunger	1	496558

Group 7.800 BRACKET-BUMPER-STABILIZER-SUPPORT, LICENSE

1937-52	Sta. wag.	BRACKET ASSY., license support	Rear	1	5938846
1949-52	All exc. 2561-62-71	license support	Rear	1	5942640
1949-54	All	license support	Front	1	517849
1953-54	2562-71 All	license support	Rear	1	5944018
1953-56	All exc. 25/2762-63-64-71	(2.705) license support	Rear	1	5942458
1957	All	license support	Rear	1	523730
1955	All	BRACKET PKG., license support	Front	1	521069
1955-56	25/2764 All		Rear	1	521069
1956	All		Front	1	521637
1957	All	to grille	Front	1	523782
1957	All	to bumper	Front	1	528750
1958	All	to bumper	Front	1	530077
1959	All		Front	1	532096
1954-59	All	BUMPER, license plate	Front or rear	AR	517850
1949-52	All exc. rear on 2561-62-71	license plate bracket		AR	5937956
1953-54	All exc. 2562-71	license plate bracket	Rear	1	515590
1953	All	license plate bracket	Front	1	516785
1953-54	2562-71 All	license plate bracket	Rear	1	5937956
1957	All	license plate bracket	Front	2	516785

1958	All	license plate bracket	Rear	1	530317
1959	All	license plate to bumper	Rear	1	533196
1960	All	license plate	Front or rear	AR	530317
1955	All exc. 2562-63-64	STABILIZER, license plate	Rear	1	519674
1955-56	25/2764		Rear	1	520605
1956	All			1	520605
1950-52	2571	SUPPORT, tail lamp license			5939348 LH
1958	All	NUT, license plate to bumper bar	(14-10) Rear	2	530148
1959 All		nylon	Rear	2	534220
1960	All	license plate to bumper bar	Front or rear (14-10)	AR	530148
1949-52	All exc. 2561-62-71	WASHER, license supt. to body sealing	Rear	2	512178
1953-54	2562-71 All		Rear	2	512178
1941-48	26-29 All exc. sta. wag.	CAP, license holder to body screw	Rear	1	506121

Group 7.828 GUARD ASSEMBLY, BUMPER

1946-48	All		Rear	508542 RH	508541 LH
1946-48	All			Front	509274 LH
1949-52	All		Front	514374 RH	514375 LH
1949-52	All exc. 2561-62-71		Rear	514375 RH	514374 LH
1949-52	2561-62-71 All		Rear	2	514394
1953-54	2562-71 All		Rear	2	515867
1953-54	All		Front	515582 RH	515583 LH
1953-54	2511-37-67-69 All		Rear outer	515584 RH	515585 LH
1953-54	All exc. 2562-71			Rear center	1 515613
1954	28 All		Rear outer	517384 RH	517385 LH
1955-56	25/2762-63 All		Rear	3708912 RH	3708911 LH
1955-56	25/2764 All		Rear	520670 RH	520671 LH
1956	All		Front	521794 RH	521795 LH
1957	All		Front	523520 RH	523521 LH
1958	All		Front	529262 RH	529263 LH
1958	All		Rear inner	529584 RH	529585 LH
1958	All exc. 2547-67			Rear outer	2 529293
1958	All exc. 2547-67	RETAINER, rear bumper outer guard		2	529296
1958	All	WASHER, front bumper guard to impact bar		2	531315

Group 7.828 GUARD ASSEMBLY, BUMPER ACCESSORY

1946-48	All	GUARD ASSY., WING	Front	508758 RH	508759 LH
1946-48	All		Rear	508759 RH	508758 LH
1949-51	All		Front	515955 RH	515956 LH
1949-51	2561-62-71 All			Rear	512348 LH
1949-52	All exc. 2562-71		Rear	515957 RH	515958 LH
1952	All exc. 2562-71		Front	515955 RH	515956 LH
1953-54	All		Front	515562 RH	515563 LH
1953-54	All exc. 2562-71		Rear	515551 RH	515552 LH
1955	All exc. 2562-63		Rear	519970 RH	519971 LH
1956	All exc. 2762-63-64		Rear	521820 RH	521821 LH
1956	2764 All		Rear	519970 RH	519971 LH
1949-52	All	GUARD ASSY., MASTER	Front	514358 RH	514359 LH
1950-52	All exc. 2562-71		Rear	514359 RH	514358 LH
1953-54	All		Front	515924 RH	515925 LH
1955	All		Front	519979 RH	519980 LH
1956	All		Front	522150 RH	522151 LH
1960	All			536247 RH	536248 LH
1949-52	All	BOLT, wing guard to impact bar	Front outer	2	511956
1949-52	All	wing guard to impact bar	Front inner	2	511955
1949-52	All exc. 2561-62-71	to impact bar	Rear outer	2	511956
1949-52	All exc. 2561-62-71	to impact bar	Rear inner	2	511955

1949-52	2561-62-71	to impact bar	2	512353
1949-54	All (7.852)	master guard to brace-front or rear (Sp. Hd. 7/16"-14x1")	AR	499811
1955	All	master guard (7/16"-14x3" chrome)	2	521381
1946-48	All	SPACER, wing guard bolt	2	509204
1946-48	All	wing guard to impact bar	4	508934
1949-52	All exc. 2561-62-71	wing guard to impact bar	Rear outer	2 511953
1949-52	All exc. 2561-62-71	wing guard to impact bar	Rear inner	2 511954
1949-52	All	wing guard to impact bar	Front outer	2 511953
1949-52	All	wing guard to impact bar	Front inner	2 511954
1949-51	2561-62-71 All	wing guard to impact bar	Rear	2 512352

Group 7.829 BRACE, BUMPER MASTER GUARD

1949-52	All	Front	2	512684
1950-52	All exc. 2562-71	Rear	514877 RH	514878 LH
1953-54	All	Front	2	515916
1949-52	All	BRACKET, to frame	Front	512685 RH 512686 LH
1953-54	All	to frame.	515914 RH	515915 LH
1949-52	All	RETAINER, to cross bar	Front	2 512701

Group 7.831 BAR, FRONT BUMPER IMPACT, CHROME

1946-48	All	Outer	508529 RH	508530 LH
1946-48	All	Center	1	508528
1949-50	All		1	511756
1951-52	All		1	514659
1953-54	All		1	515014
1955	All	Upper	519110 RH	519111 LH
1955	All	Lower	1	518884
1956	All	Upper	521771 RH	521772 LH
1956	All	Lower	1	521374
1957	All	Upper	523492 RH	523493 LH
1957	All	Lower	1	523314
1958	All	Upper	528757 RH	528758 LH
1958	All	Lower	1	528648
1959	All		1	532022
1960	All	2nd type (see note)	1	535402
1959	All	MOLDING, front bumper impact bar	1	532293
1960	All	PLATE, frt. bumper adjustment	2	536639
1959	All	TAPE, frt. bmpr. mldg. to bmpr. anti-corrosion (25 ft.)	1	531933
1959	All (1.269)	WASHER, frt. bumper bar molding	5	534166
1960	All (1.270)	frt. bumper impact bar to frame (.060")	AR	533010

NOTE: 2nd type-Use w/535403 and 535404 Bumper to Frame Bar.

Group 7.831 BAR, REAR BUMPER IMPACT, CHROME

1946-48	All	Outer	508564 RH	508565 LH
1946-48	25	Center	1	508775
1946-48	26 exc. sta. wag.	Center	1	508563
1949	All exc. 2561-62-71		1	511757
1949-52	2561-62-71 All	Center	1	3698600
1949-51	2561-62-71 All	Outer	516298 RH	516299 LH
1950-52	All exc. 2562-71		1	513925
1952	2562-71 All	Outer	3698602 RH	3698601 LH
1953-54	All exc. 2562-71		1	515016

1953-54	2562-71 All	Center	1	3697690
1953-54	2562-71 All	Outer	3697344 RH	3697343 LH
1955-56	All exc. 25/2762-63-64	Outer	522413 RH	522414 LH
1955-56	All exc. 25/2762-63-64	Cross	1	518963
1955-56	25/2762-63 All	Outer	3707484 RH	3707483 LH
1955-56	25/2762-63 All	Center	1	3710241
1955-56	25/2764 All	Outer	520677 RH	520678 LH
1957	All	Center	1	523462
1957	All	Outer	524166 RH	524167 LH
1958	2547-67 All	w/single exh.	1	529604
1958	2547-67 All	w/dual exh.	1	530494
1958	27-28 All	w/single exh.	1	528978
1958	27-28 All	w/dual exh.	1	530493
1959	All exc. 2135-45, 2735 & H.D.C.	Center	1	532218
1959	2135, 2735 & H.D.C.	Center	1	532578
1959	All exc. 2135-45, 2735 & H.D.C.	Outer	534489 RH	534490 LH
1959	2135, 2735 & H.D.C.	Outer	533063 RH	533064 LH
1959	2145	Center	1	533819
1959	2145	Outer	533065 RH	533066 LH
1960	All exc. 2135-45, 2735 & H.D.C.		1	536021
1960	2135, 2735 & H.D.C.		1	536093
1960	2145 All		1	536169
1957	All exc. 2867SD	CAP, rear bumper outer impact bar-w/single exh.	2	524168
1957	All exc. 2867SD	w/dual exhaust	2	524163
1957	2867SD		528508 RH	528509 LH
1958	All	EXTENSION, rear bumper-w/outside spare tire carrier		531501 RH
1959	All exc. 2135-45, 2735 & H.D.C.	INSERT, rear bumper impact bar	532490 RH	532491 LH
1959	2135-45, 2735 & H.D.C.		532819 RH	532820 LH
1960	21-23-24 All		536198 RH	536199 LH
1960	27-28 All		536572 RH	536573 LH
1958	All	PLATE, rear bumper finish	529600 RH	529601 LH
1960	2135-45, 2735 & H.D.C.	rear bumper splash	2	536872
1959-60	All (1.270)	SHIM, frt. bumper impact bar to frame	(.060") AR	533010
1959-60	All	SPACER, rear bumper impact bar to frame	AR	533776
1958-60	All	WASHER, lower bumper bar to frame		
		Front and Rear (15/32" I.D. x1" O.D. x3/16" thk.)	8	531315

Group 7.831 BAR, BUMPER (Accessory Guard)

1949-50	All	master guard cross	Front	1	512683
1950-52	All exc. 2562-71	master guard cross	Rear	1	514876
1951-52	All	master guard cross	Front	1	514883
1953	All	master guard cross	Front	1	515920
1954	All	master guard cross	Front	1	517680
1955	All	master guard cross	Front	1	519957
1956	All	master guard cross	Front	1	522156

Group 7.832 ORNAMENT, FRONT BUMPER GUARD

1956	All			2	521308
1957	All			2	523587
1956	All	NUT, frt. bumper guard ornament-spring type		2	457006

Group 7.833 FILLER

FILLER (see Group 7.871 for use)	3705106
FILLER (see Group 7.871 for use)	3715221

Group 7.836 BAR, FRONT BUMPER TO FRAME

1946-48	All			Inner	1	508535
1946-48	All		Outer	508536 RH		508537 LH
1949-50	All		Inner	512402 RH		512403 LH
1949-50	All		Outer	512404 RH		512405 LH
1951-52	All			Inner	1	514576
1951-52	All		Outer	514577 RH		514578 LH
1953-54	All			Inner	1	515018
1953-54	All		Outer	515019 RH		515020 LH
1955	All		Upper	519514 RH		519515 LH
1955	All		Lower inner	519512 RH		519513 LH
1955	All		Lower outer	519518 RH		519519 LH
1955	All			Spacing	1	519516
1956	All		Upper	521335 RH		521336 LH
1956	All		Lower inner	521298 RH		521299 LH
1956	All		Lower outer	521294 RH		521295 LH
1956	All			Spacing	1	521337
1957	All		Upper	523374 RH		523375 LH
1957	All			Lower inner	1	523376
1957	All		Lower outer	523325 RH		523326 LH
1958	All		Lower inner	530292 RH		530293 LH
1958	All		Lower outer	530294 RH		530295 LH
1959	All			Inner		532343 LH
1959	All			Center		532344 LH
1959	All			Outer		532378 LH
1960	All		1st type (see note)	536076 RH		536077 LH
1960	All		2nd type (see note)	535403 RH		535404 LH
1949-50	All	BAR, front bumper support		Inner center	1	511810
1953-54	All	BRACE, front bumper to frame				517404 LH
1958	All			Upper		531341 LH
1959	All					534423 LH
1960	All					536059 RH
1949-50	All	SPACER, front bumper bar to frame bar			4	514018
1959	All	WEDGE, frt. bumper frame bar to frame			2	531957

NOTE: 1st type-Use w/536022 Front Bumper Impact Bar.

2nd type-Use w/535402 Front Bumper Impact Bar.

Group 7.836 BAR, REAR BUMPER TO FRAME

1946-48	24 All			Inner	1	508777
1946-48	26 exc. sta. wag.			Inner	1	508567
1946-48	26 exc. sta. wag.		Outer	508568 RH		508569 LH
1946-48	25 All		Outer	508778 RH		508779 LH
1949	All exc. 2561-62-71			Inner	1	511785
1949-52	2561-62-71 All			Center inner	1	511939
1949	All exc. 2561-62-71		Outer	511781 RH		511782 LH
1949-52	2561-62-71 All		Outer	514786 RH		514787 LH
1950-52	All exc. 2562-71			514714 RH		514715 LH
1953-54	All exc. 2562-71			515022 RH		515023 LH
1953-54	2562 All			515836 RH		515837 LH
1953	2571			517021 RH		517022 LH
1955-56	25/2762-63 All			519803 RH		519804 LH
1955-56	All exc. 25/2762-63			Front	2	518867

1955-56	All exc. 25/2762-63	Rear	518865 RH	518866 LH
1957	All exc. 2762-63	Front	523501 RH	523502 LH
1957	2762-63 All	Front	528672 RH	528673 LH
1957	All exc. 2762-63	Rear	523499 RH	523500 LH
1957	2762-63 All	Rear	523197 RH	523198 LH
1958	All exc. 2547-67	Inner	528522 RH	528523 LH
1958	All exc. 2547-67	Outer	528565 RH	528566 LH
1958	2547-67 All	Inner	529981 RH	529982 LH
1958	2547-67 All	Outer	529983 RH	529984 LH
1959	2145	rear bumper center impact bar to frame		1 533852
1960	All exc. 2145		536032 RH	
1960	2145		536144 RH	
1960	All			536033 LH
1951-52	2562-71 All	SPACER, rear bumper frame bar		2 514788
1953-54	2562 All			2 514788
1959	All exc. 2135-45, 2735 & H.D.C.	BRACE, rear bumper outer impact bar to ext.	533810 RH	533811 LH
1959	2135, 2735 & H.D.C.		533877 RH	
1959	2135-45, 2735 & H.D.C.			533878 LH
1959	2145		533867 RH	
1960	All exc. 2145	rear bumper impact bar to frame	536121 RH	
1960	2145		536154 RH	
1960	All	rear bumper bar	Center 536332 RH	536122 LH
1960	All			536333 LH
1955-56	All exc. 25/2762-63-64	BRACKET, rear bumper to frame	519770 RH	519771 LH
1955-56	25/2762-63 All		520962 RH	520963 LH
1955-56	25/2764 All			2 520669
1959	All exc. 2135-45, 2735 & H.D.C.	rear bumper to frame	Center	1 533705
1959	2135-45, 2735 & H.D.C.	rear bumper center bar to frame	Center	1 533858
1959	All exc. 2135-45, 2735 & H.D.C.	frame ext. to rear impact bar		
1959	2135-45, 2735 & H.D.C.	bar	Outer 532176 RH	532177 LH
1959	2145	frame ext. to rear impact bar	Outer 532622 RH	532623 LH
1959	All	BRACKET ASSY., rear bumper outer impact bar	533879 RH	
1957	All	EXTENSION ASSY., rear bumper to frame	524460 RH	
1958	All	w/outside spare tire carrier	531499 RH	
1959	All exc. 2145		Outer 532172 RH	
1959	All		Outer	532173 LH
1958	All	PLATE, bumper to frame extension		2 531506
1959	All	rear bumper brkt. outer ext. to frame		AR 533761
1959	2145	rear bumper R,H, outer impact bar brace to frame		2 533761
1960	All (7.831)	rear bumper adjustment		2 536639
1958	All	SUPPORT, bumper extension to frame-w/outside spare tire carrier	531513 RH	531514 LH

Group 7.852 BOLT-CAP-PLUG-NUT, BUMPER

1937-48	All	BOLT, impact bar to frame bar, outer front or rear	(Spec. Hd. 7/16"-14x1")	AR 499811
1946-48	All	to frame	Rear (Spec. Hd. 7/16"-14x1-1/2")	2 511784
1946-48	All	wing guard to bumper bar, standard equipment	(Spec. Hd. 7/16"-14 x 5/8")	4 509003
1941-48	All	without wing guards	(Spec. Hd. 7/16"-14x21/32")	AR 509666
1949-58	All	impact bar to frame	(7/16"-14x1-1/4")	Outer AR 511783
1949-50	All		Inner	2 511784
1955-56	All exc. 25/2762-63		Inner	2 519772

1955-56	25/2762-63 All (7.874)	impact bar to fender	2	3711155
1958	All	bumper extension to bumper-w/outside spare tire carrier	2	531495
1959-60	All	bumper impact bar to frame bar	AR	511783
1959	All	frt. bumper impact bar to frame bar	2	534473
1959	All	frt. bumper impact bar to frame bar	2	534474
1959	2145	rear bumper outer impact bar upper hole to frame bar	1	531958
1949-56	All	PLUG, bumper impact bar hole-less wing guards Front or rear (3/8" dia.)	AR	514180
1958-59	All	rear bumper drain hole	2	530302
1959	2145	rear bumper	2	534000 LH
1960	All	bumper drain hole	6	536641
1949-50	All	NUT, wing guard hole plug-less wing guards . (5/16")	8	513432
1950-56	All	less wing guards (3/8")	AR	514181
1958	All (8.921)	rear bumper drain hole plug (3/8")	2	274915
1959	All (12.118)	impact bar mldg. to bar (No. 10-12 spring type)	5	516711
1959	All (12.118)	impact bar insert (No. 10-12 spring type)	5	516711
1959-60	All (8.921)	front bumper drain hole plug (3/8")	2	274915
1959	2145 (8.921)	rear bumper L.H. side plug (3/8")	2	274915
1960	All (8.900)	SCREW, rear bumper insert (10-24 x 5/8")	4	440502

Group 7.859 BOLT, BUMPER

1940	All	center bar to clip (Spec. Hd. 7/16"-14x3-5/8")	4	504151
1946-54	All	rear bumper to frame (Spec. Hd. 1/2"-20 x 1-9/16")	AR	508895
1946-52	All	front bumper to frame	AR	508895
1949-50	All	front bump. assy. to frame (Zinc)	2	511830
1951-52	2562-71 All	rear bumper to frame bar Rear	2	514819
1953-54	2562 All	rear bumper to frame bar Rear	2	514819
1953-54	All	front bumper to frame (Spec. 1/2"-20x1-3/4")	4	517405
1955-58	All	front bumper height adjusting	2	519517
1955-57	All	front bumper to frame	4	511830
1955-58	All	rear bumper to frame (Spec. 1/2"-20x1-3/4")	4	517405
1955-58	25/2762-63 All	rear bumper to frame	2	511830
1955-57	All (8.908)	front bumper inner to upper bar (7/16"-14 x 1")	2	179158
1958	All	rear bumper height adjusting	2	519517
1959	All	front bumper impact bar to frame (1/2"-20x2")	4	534449
1959	2145 (8.900)	rear bumper impact bar brace to frame (1/2"-20 x 1-3/4")	2	181702
1959	All (8.900)	rear impact bar outer brkt. to outer frame ext. (Hex. Hd. 7/16"-24 x 1")	4	454944
1960	All	bumper impact bar to frame adjustment (1/2"-20x1-1/2")	4	536640
1955-58	All (8.929)	WASHER, front bumper height adj. bolt (15/16")	2	131018
1958-60	All	rear bumper frame bar to frame (35/64" I.D. x 7/16" O.D.)	AR	530357
1959-60	All	front bumper impact inner & center bar to frame . .	6	530357

Group 7.865 SEAL-SPACER, RETAINER (RUBBER)

1955	All	SEAL, bumper bar to radiator baffle Front	2	519547
1955	2562-63 All	SPACER, rear bumper bar to fender	2	3719622
1955	All	RETAINER, bumper bar seal	2	519548

Group 7.866 PLATE-STRAP, FRONT BUMPER

1958	All	PLATE, front bumper vibration dampener	2	530659
1958	All	STRAP, front bumper vibration dampener	2	530658

Group 7.868 BUMPER, FRONT BUMPER APRON

1947-48	All	(1.216)	front bumper apron to grille-rubber	3	503865
---------	-----	---------	-------------------------------------	---	--------

Group 7.870 APRON, BUMPER

1942-46	All		APRON, front bumper	1	506964
1947-48	All			1	510619
1949	All			1	511758
1950	All			1	513742
1951-52	All			1	514586
1953	All			1	515618
1954	All			1	517637
1946-48	2607-09	All	APRON, rear bumper	1	508556
1946-48	Sta. wag.			1	508963
1946-48	25	All		1	508780
1949-50	All exc.	2561-62-71		1	511693
1949-52	2561-62	All		1	512215
1949-52	2571			1	512216
1951-52	All exc.	2562-71		1	514585
1953-54	2511-37-67-69	All		1	515686
1953-54	2562	All		1	515902
1953	2571			1	515873
1954	28	All		1	517613
1957	All		APRON ASSY., spare tire carrier bumper		
			splash Center	524471 RH	524477 LH
		 Outer	524472 RH	524473 LH
		 Side	524475 RH	524476 LH
				531493 RH	531494 LH
1957	All		MOLDING, spare tire carrier bumper splash apron	6	531503
1957	All		PANEL, spare tire carrier bumper splash . . . Center	1	524474
1958	All	 531504 RH		531505 LH
1955-56	All exc.	25/2762-63	GUARD, rear bumper gravel	1	519932
1957	All			1	523465
1958	2547-67	All		1	529206
1958	All		rear bumper license	1	531434
1957	All		BRACKET, rear bumper gravel guard to frame	1	523467
1958	All		CLIP, bumper splash apron mldg.	24	531496
1958	All		SEAL, spare tire carrier splash apron to		
			body 531531 RH		531532 LH
1949-54	All	(8.143)	SCREW, front bumper apron to rad. splash apron		
			and to fender	AR	3650059

Group 7.871 EXTENSION-FILLER, REAR BUMPER APRON

1946-48	2607-09	All	EXTENSION ASSY., rear bumper apron	508570 RH	508571 LH
1949-52	All exc.	2561-62-71		511699 RH	511700 LH
1949-54	All exc.	2561-62-71	FILLER, rear bumper to apron		1 512103
1949-52	2561-62-71	All			1 3688856
1949-52	All exc.	2561-62-71	apron extension	512104 RH	512105 LH
1953-54	All exc.	2562-71	apron end	515271 RH	515272 LH
1953-54	2562-71	All			1 3705106
1955-56	All exc.	25/2762-63	rear bumper to body		2 519550
1955-56	25/2762-63	All	rear bumper to body		1 3715221
1957	All exc.	2762-63	rear bumper to body	Inner	2 523576
1957	All exc.	2762-63	rear bumper to body	Outer	2 523641
1957	2762-63	All	rear bumper to body	Inner	2 523575
1957	2762-63	All	rear bumper to body	Outer	2 523772
1958	All exc.	2547-67	rear bumper to body	Center	1 530105

1960	All exc. 2135-45 2735 & H.D.C.			1	536922
1955	All exc. 2562-63	RETAINER, rear bumper filler	520201 RH		520202 LH
1960	All exc. 2135-45, 2735 & H.D.C.	filler	Center	1	535172
1960	All exc. 2135-45, 2735 & H.D.C.	filler	Outer	2	535173
1941-54	All (8.143)	SCREW, bumper apron to body (Spec. Hex.No. 14x3/4")	Rear	AR	3650059
1960	All exc. 2135-45, 2775 & H.D.C. (8.977)	filler retainer to body	(10-12x5/8")	15	273556
1960	2135-45, 2735 & H.D.C. (8.977)	rear bumper splash apron plate	(10-12 x 3/4")	4	188754
1960	All exc. 2135-45, 2735 & H.D.C. (7.800)	CAP, rear bumper to body filler ret. screw-rubber		1	506121
1956	All exc. 2762-63	CLIP, rear bumper seal		12	1165143

Group 7.874 BOLT

NUT (see Group 7.852 for use)	3711155
---	---------

Group 7.875 SUPPORT ASSY., REAR BUMPER STEP

1959	2145		533529 RH		533530 LH
1960	2145			2	577869
1959	2145	PAD ASSY., rear bumper step	533543 RH		533544 LH