

CHASSIS ALPHABETICAL INDEX

The Alphabetical Index in this book is set up in straight alphabetical order so that all Accelerator Parts will come under "A", Brakes under "B", Clutch under "C", Transmission under "T" etc. Therefore, if a man knows a part is used in the Transmission (Trans. Countershaft) he can start with Transmission Assy., and follow it down until he finds (Trans. Countershaft) Group 4.428

and by turning to this group find the part for the model wanted. In this type index we have tried to keep away from Front Fenders and Rear Fenders, by showing Fenders (Front) 8.130, Fenders (Rear) 8.203. In this manner all Fenders are together and all Brake Parts are together, thereby making it unnecessary to list the part more than once and keeping down the size of this Index.

Name	Group No.	Name	Group No.	Name	Group No.
A					
Accelerator Cross Shaft.....	3.585	Air Intake Duct Assy.....	9.802	Brake Lining.....	5.018
Accelerator Cross Shaft Bracket-Spacer.....	3.589	Air Intake Hose—Deflector-Tube.....	9.786	Brake Lining Rivet.....	5.019
Accelerator Cross Shaft Spring.....	3.581	Air Intake Screen.....	9.802	Brake Master Cyl.....	4.650
Accelerator Cross Shaft Throttle Cracker Lever.....	3.581	Air Intake Valve Cont. Assy.....	9.787	Brake Master Cyl. Body.....	4.650
Accelerator Idler Lever.....	3.571	Air Vent. Valve and Body Assy.....	9.789	Brake Master Cyl. Boot.....	4.659
Accelerator Linkage Pkg.....	3.429	Ammeter Assy.....	2.515	Brake Master Cyl. Conn. Adapter—Gasket.....	4.661
Accelerator Pedal.....	3.451	Antenna Parts.....	9.647	Brake Master Cyl. Filler Cap-Gasket.....	4.651
Accelerator Pedal Brkt. to Floor Plate.....	3.456	Armature, Generator.....	2.279	Brake Master Cyl. Head Nut—Gasket.....	4.652
Accelerator Pedal Hinge Pin.....	3.452	Armature, Starter Motor.....	2.043	Brake Master Cyl. Pipe.....	4.685
Accelerator Pedal Rod—Trunnion.....	3.431	Automatic Choke Parts.....	3.256	Brake Master Cyl. Piston Cup.....	4.654
Accelerator Pedal Support.....	3.456	Axle Gear Lubricant.....	5.529	Brake Master Cyl. Piston Lock Ring.....	4.656
Accelerator Rod Return Spring.....	3.459	Axle Housing.....	5.387	Brake Master Cyl. Piston Spring.....	4.655
Accelerator Rod Toe Board Bellows.....	3.469	Axle Housing Cover Gasket.....	5.399	Brake Master Cyl. Repair Kit.....	4.649
Accelerator Stud.....	3.472	Axle Housing Filler Plug.....	5.400	Brake Master Cyl. Rod.....	4.658
Accessory Fuse and Terminal Block—Cover.....	2.483	Axle Housing Filler Plug Gasket.....	5.401	Brake Master Cyl. Rod Clevis-Pin.....	4.662
Air Cond. Air Hose Clamp.....	9.255	Axle Housing Oil Deflector.....	5.815	Brake Master Cyl. Rod Stop Plate.....	4.656
Air Cond. Air Outlet Control Knob.....	9.278	Axle Shaft.....	5.420	Brake Master Cyl. Check Valve Assy.....	4.657
Air Cond. Air Outlet Control Parts.....	9.277	Axle Shaft Lock-Spacer.....	5.422	Brake Oil Drain.....	5.815-6.037
Air Cond. Air Outlet Parts.....	9.264	B		Brake Pedal.....	4.625
Air Cond. Automatic Expan. Valve.....	9.198	Back-Up Lamp Parts.....	2.697	Brake Pedal Brkt.....	7.237
Air Cond. Blower Assy.....	9.215	Ball Sleeve.....	8.963	Brake Pedal Bushing.....	4.626
Air Cond. Blower Inlet Scoop.....	9.250	Balls (Steel).....	8.899	Brake Pedal Pad.....	4.630
Air Cond. Blower Motor.....	9.215	Battery.....	2.332	Brake Pedal Pivot Parts—P.B.....	4.634
Air Cond. Blower Outlet Duct.....	9.215	Battery Clamp Bolt.....	2.334	Brake Pedal Plate.....	9.038
Air Cond. Blower Outlet Hose.....	9.215	Battery Cover.....	2.335	Brake Pedal Ret. Spring.....	4.625
Air Cond. Compressor.....	9.170	Battery Fluid.....	2.332	Brake Pedal Return Spring.....	4.639
Air Cond. Compressor Brace.....	9.171	Battery Ground Strap.....	2.341	Brake Pedal Shaft.....	4.625
Air Cond. Compressor Bracket.....	9.171	Battery Ground Strap Brkt.....	2.343	Brake Pedal Shaft Pin.....	4.625
Air Cond. Comp. Discharge Pipe.....	9.225	Battery Positive Lead.....	2.342	Brake Pipe Conn.....	4.686
Air Cond. Comp. Drive Belt.....	9.185	Battery Retainer—Bolt.....	2.334	Brake Pipe Conn. Washer.....	4.671
Air Cond. Comp. Parts.....	9.180	Battery Support.....	2.333	Brake Pipes.....	4.685
Air Cond. Comp. Pipe Bracket.....	9.238	Battery Support to Fender Bumper.....	2.337	Brake Shoe Adj. Screw.....	5.110
Air Cond. Comp. Suction Pipe.....	9.229	Battery Terminal Clamp Bolt-Nut.....	2.343	Brake Shoe Adj. Screw Nut.....	5.111
Air Cond. Condenser.....	9.190	Battery Terminal Clamp Cover.....	2.343	Brake Shoe Adj. Screw Socket.....	5.111
Air Cond. Condenser to Receiver Pipe.....	9.227	Bearing Clearance Checking Material Pkg.....	0.093	Brake Shoe Anchor Pin.....	5.055
Air Cond. Control Panel-Clamp-Ret.....	9.279	Body Bolt Cushion.....	9.023	Brake Shoe Anchor Pin Guide.....	5.045
Air Cond. Control Parts.....	9.281	Body Bolt Nut.....	9.011	Brake Shoe Anchor Pin Nut.....	5.057
Air Cond. Dehydrator.....	9.205	Body Bolt Shim.....	9.023	Brake Shoe Anchor Pin Washer.....	5.056
Air Cond. Dehydrator Bracket.....	9.206	Body Bolt Washer.....	9.011	Brake Shoe Eccentric.....	5.050
Air Cond. Dehydrator Support.....	9.207	Body to Frame Bracket.....	7.330-7.334	Brake Shoe Eccentric Spacer.....	5.053
Air Cond. Dehydrator to Expan. Valve Pipe.....	9.235	Body Rocker Panel Ext.....	8.228	Brake Shoe Equalizer Spring.....	5.026
Air Cond. Evaporator-Core-Gasket.....	9.210	Body Rocker Panel Ext. Mat—Plate-Seal.....	8.229	Brake Shoe Hold Down Spring.....	5.043
Air Cond. Evaporator Hose.....	9.220	Body Rocker Panel Mldg.....	8.231	Brake Shoe Hold Down Spring Cup.....	5.042
Air Cond. Evaporator Hose Sleeve.....	9.220	Body Rocker Panel Mldg. Clip.....	8.231	Brake Shoe Hold Down Spring Pin.....	5.041
Air Cond. Evaporator Inlet.....	9.216	Bolts (Std. Parts).....	8.900-8.913	Brake Shoe Lining.....	5.018
Air Cond. Evaporator Inlet Filter Gasket.....	9.216	Brake Adj. Hole Cover.....	5.117	Brake Shoe & Lining Pkg.....	5.017
Air Cond. Distributor Outlet Hose.....	9.260	Brake to Axle Housing Bolt.....	5.024	Brake Shoe Rivet.....	5.019
Air Cond. Distributor Parts.....	9.262	Brake to Axle Housing Gasket.....	5.022	Brake Shoe Spring.....	5.026-5.043
Air Cond. Idler Pulley Parts.....	9.186	Brake Cable Anchor.....	4.785	Brake Support.....	5.001
Air Cond. Leak Detector.....	9.282	Brake Cable Anchor Felt.....	4.784	Brake Support Bolt.....	5.002
Air Cond. Liquid Indicator.....	9.202	Brake Cable Assy.....	4.779	Brake Support to Knuckle Spacer (Frt.).....	5.002
Air Cond. Liquid Indicator Gasket.....	9.202	Brake Cable to Brkt. Yoke.....	4.785	Brake Wheel Cyl. Assy.....	4.665
Air Cond. Master Switch.....	9.275	Brake Cable Clamp.....	4.785	Brake Wheel Cyl. Bleeder Valve.....	4.666
Air Cond. Refrigerant.....	9.282	Brake Clevis Pin.....	4.823	Brake Wheel Cyl. Boot.....	4.670
Air Cond. Refrigerant Receiver.....	9.195	Brake Drum (Rear).....	5.809	Brake Wheel Cyl. Conn. Adapter.....	4.686
Air Cond. Refrigerant Receiver to Ind. Pipe.....	9.231	Brake Drum Bolt-Washer.....	5.812	Brake Wheel Cyl. Conn. Link.....	4.675
Air Cond. Refrigerant Receiver to Ind. Pipe Brkt.....	9.242	Brake Drum Gasket.....	5.811	Brake Wheel Cyl. Cup.....	4.667
Air Cond. Refrigerant Receiver to Ind. Pipe Supt.....	9.242	Brake Drum & Hub (Front).....	6.306	Brake Wheel Cyl. Piston.....	4.668
Air Cond. Switch.....	9.276	Brake Drum Oil Deflector.....	5.815-6.037	Brake Wheel Cyl. Repair Kit.....	4.667
Air Cond. Switch Resistor.....	9.276	Brake Drum Oil Deflector Gasket.....	5.819	Brake Wheel Cyl. Spring.....	4.669
Air Cond. Thermostatic Expan. Valve.....	9.213	Brake Drum Silencer Spring Pkg.....	5.810	Bulbs, Light.....	8.991
Air Cond. Wire Harness.....	9.276	Brake Equalizer.....	4.765	Bumper Apron.....	7.870
Air Cleaner (Carburetor).....	3.402	Brake Fluid.....	4.683	Bumper Apron Cushion (Frt.).....	7.868
Air Cleaner—Crankcase.....	1.780	Brake Hose.....	4.680	Bumper Apron Ext. Anti-Squeak.....	7.871
Air Cleaner Brace.....	3.405	Brake Hose Conn. Brkt.....	4.681	Bumper Apron Ext. Assy. (Rr.).....	7.871
Air Cleaner Element.....	3.410	Brake Hose Conn. Breather Screw.....	4.687	Bumper Apron to Grille Ret.....	7.868
Air Cleaner Gasket.....	3.406	Brake Hose Ret. Yoke.....	4.681	Bumper Bar.....	7.831-7.836
Air Intake Cover—Gasket.....	9.785	Brake Lever to Shoe Strut.....	5.150	Bumper Bracket.....	7.836
		Brake Lever to Shoe Strut Spring.....	5.151	Bumper End Bolt.....	7.859
		Brake Lines.....	4.685	Bumper Frame Brkt. (Rear).....	7.836
				Bumper Guard Assy.....	7.828
				Bumper Guard Bolt.....	7.828
				Bumper Guard Brace.....	7.829

CHASSIS ALPHABETICAL INDEX—Continued

Name	Group No.	Name	Group No.	Name	Group No.
B		C		C	
Bumper Guard Bracket.....	7.829	Carb. Pump Relief Valve Plug Assy.....	3.844	Cock (Drain).....	8.951
Bumper Guard Retainer.....	7.829	Carb. Pump Ret.—Spring—Strainer.....	3.841	Coil to Dist. Wire Nipple.....	2.176
Bumper Guard Spacer.....	7.828	Carb. Repair Kit.....	3.725	Coil to Dist. Wire Ret.....	2.175
Bumper Guard Tapping Plate (Frt.).....	7.830	Carb. Rod Anti-Rattle Spring.....	3.524	Coil, Ignition.....	2.170
Bumper Master Guard Clamp.....	7.829	Carb. Rod Trunnion.....	3.425	Coil Mounting Brkt.....	2.183
Bumper Pad.....	7.865	Carb. Therm. Cover & Coil Assy.....	3.750	Coil Wire Rubber Nipple.....	2.176
Bumper Stabilizer.....	7.866	Carb. Therm. Housing & Coil Assy.....	3.750	Compression Coupling.....	1.740-8.963
C		Carb. Throttle Arm-Rod-Spring.....	3.762	Connecting Rod.....	0.603
Cable Clip.....	8.950	Carb. Throttle Body.....	3.729	Connecting Rod Bearing.....	0.616
Cable, Electrical—100 ft. roll.....	2.530	Carb. Throttle Body Gasket.....	3.735	Connecting Rod Bolt.....	0.623
Camshaft Assy.....	0.519	Carb. Throttle Body Screw & Washer.....	3.741	Connecting Rod Bolt Nut.....	0.626
Camshaft Bearing (Ctr. & Frt. Ctr.).....	0.543	Carb. Throttle Rod.....	3.430	Cotter Pin.....	8.938
Camshaft Bearing (Front).....	0.539	Carb. Throttle Rod Idler Lever.....	3.450	Cover, Battery.....	2.335
Camshaft Bearing (Rear).....	0.549	Carb. Throttle Rod Spring.....	3.459	Cowl Ledge Anti-Squeak.....	9.127
Camshaft Bearing (Rr. Ctr.).....	0.546	Carb. Throttle Shaft & Lever.....	3.759	Cowl Ledge Lacing Ret.....	9.128
Camshaft Fuel & Vac. Pump		Carb. Throttle Valve.....	3.758	Crankcase Breather Cap.....	1.758
Eccentric.....	0.737	Carb. Throttle Valve-Lever Adj.		Crankcase Oil Filler.....	1.760
Camshaft Sprocket.....	0.736	Screw.....	3.761	Crankcase Oil Filler Cap.....	1.758
Camshaft Sprocket Lock Nut.....	0.736	Carb. Vacuum Piston Assy.....	3.858	Crankcase Outlet Air Cleaner.....	1.780
Camshaft Sprocket Washer.....	0.738	Carb. Vacuum Piston Spring.....	3.859	Crankcase Outlet Vent.....	1.762
Camshaft Thrust Plate.....	0.533	Chassis Wire Harness.....	2.480	Crankcase Outlet Vent. Pipe Clip.....	1.779
Carb. Air Cleaner.....	3.402	Cigar Lighter Assy.....	9.709-9.712	Crankcase Vent. Outlet to Block	
Carb. Air Horn.....	3.730	Cigar Lighter Bracket.....	9.709	Screw.....	1.779
Carb. Air Horn to Bowl Cover Gskt.....	3.731	Clamp, Fuel Tank Pipe Hose.....	3.004	Crankcase Vent. Outlet Pipe Brkt.....	1.763
Carb. Anti-Perc. Arm—Cap—Spring.....	3.852	Clevis or End Yoke.....	8.946	Crankcase Vent. Outlet Gasket.....	1.773
Carb. Assy.....	3.725	Clevis Pin.....	8.942	Ck/Shaft Assy.....	0.646
Carb. Bowl Cover Assy.....	3.737	Clip.....	8.950	Ck/Shaft Balancer.....	0.659
Carb. Bowl Cover Gasket-Nut-Screen.....	3.740	Clock Parts (Electric).....	9.772	Ck/Shaft Bearing (Frt.).....	0.096
Carb. Choke Housing.....	3.751	Clutch Ctr/Shaft.....	0.852	Ck/Shaft Bearing (Frt. Ctr.).....	0.099
Carb. Choke Lever.....	3.752	Clutch Ctr/Shaft Bracket.....	0.852	Ck/Shaft Bearing (Ctr.).....	0.101
Carb. Choke Lever & Collar.....	3.752	Clutch Ctr/Shaft Felt.....	0.851	Ck/Shaft Bearing (Rr.).....	0.106
Carb. Choke Piston.....	3.752	Clutch Ctr/Shaft Spacer.....	0.852	Ck/Shaft Bearing (Rr. Ctr.).....	0.103
Carb. Choke Shaft.....	3.752	Clutch Ctr/Shaft Stud.....	0.851	Ck/Shaft Bearing Cap Bolt.....	0.086
Carb. Choke Shaft Lever & Link		Clutch Cover.....	0.861	Ck/Shaft Bearing Cap Bolt Ret.....	0.060
Assy.....	3.752	Clutch Cover to Fly Wheel Bolt.....	0.862	Ck/Shaft Bearing Cap Oil Seal.....	0.137
Carb. Choke Suction Packing.....	3.750	Clutch Cover & Pressure Plate.....	0.859	Ck/Shaft Bearing Oil Seal Packing.....	0.137
Carb. Choke Suction Tube & Seal.....	3.750	Clutch Driven Plate.....	0.886	Ck/Shaft Clutch Pilot Bearing.....	0.649
Carb. Choke Valve.....	3.751	Clutch Driven Plate Facings.....	0.885	Ck/Shaft Oil Hole Plug.....	0.647
Carb. Conversion Pkg.....	3.727	Clutch Driven Plate Facings Rivet.....	0.884	Ck/Shaft Rear Bearing Oil Drain.....	1.565
Carb. Dust Cover.....	3.732	Clutch Fork to Ctr/Shaft Rod.....	0.839	Ck/Shaft Sprocket.....	0.728
Carb. Dust Cover Gasket.....	3.732	Clutch Fork Guide Cover-Spring.....	0.797	Ck/Shaft Sprocket Key.....	0.729
Carb. Fast Idle Arm-Spring-Screw.....	3.767	Clutch Fork Return Spring.....	0.844	Cyl. Block Hole Plug.....	0.034-1.146
Carb. Fast Idle Cam-Lever.....	3.766	Clutch Housing.....	0.683	Cyl. Block Water Inlet Tube.....	1.135
Carb. Fast Idle Conn.-Link-Rod-Ret.....	3.768	Clutch Housing Bottom Cover.....	0.679	Cyl. Block Valve Chamber Baffle.....	0.033
Carb. Float.....	3.745	Clutch Housing Cover Shield.....	0.679	Cyl. Front End Plate Gasket.....	0.005
Carb. Float Bowl.....	3.734	Clutch Housing Dowel Pin.....	0.685	Cyl. Front End Plate.....	0.004
Carb. Float Lever Pin.....	3.747	Clutch Housing Gasket.....	4.005	Cyl. Head.....	0.269
Carb. Gasket Pkg.....	3.724	Clutch Inspection Cover.....	0.686	Cyl. Head Bolt.....	0.293
Carb. Heat Deflector.....	3.326	Clutch Pedal.....	0.830	Cyl. Head Gasket.....	0.289
Carb. Idle Adj. Screw.....	3.822	Clutch Pedal Adj. Link—Rod.....	0.839	Cyl. Head Plug.....	0.253
Carb. Idle Adj. Screw Spring.....	3.823	Clutch Pedal Adj. Screw.....	0.841	D	
Carb. Idle Port Rivet Plug.....	3.775	Clutch Pedal Bracket.....	7.237	Dash to Instrument Panel Brace.....	9.131
Carb. Intake Check Ball.....	3.862	Clutch Pedal Bushing.....	0.831	Defroster Parts.....	9.779
Carb. Intake Needle Pull Clip.....	3.814	Clutch Pedal to Ctr/Shaft Rod.....	0.839	Diff. Carrier.....	5.504-5.505
Carb. Intake Needle & Seat.....	3.814	Clutch Pedal Floor Hole Cover Plate.....	9.038	Diff. Carrier Bumper—Bracket.....	5.394
Carb. Low Speed Jet Assy.....	3.798	Clutch Pedal Over Center Link.....	0.846	Diff. Carrier to Housing Bolt.....	5.506
Carb. to Manifold Gasket.....	3.726	Clutch Pedal Over Center Link Pin.....	0.846	Diff. Carrier to Housing Gasket.....	5.508
Carb. to Manifold Stud.....	3.288	Clutch Pedal Over Center Push Rod.....	0.846	Diff. Case.....	5.510
Carb. Metering Rod.....	3.806	Clutch Pedal Pad.....	4.630	Diff. Gear Lubricant.....	5.535
Carb. Metering Rod Arm.....	3.807	Clutch Pedal Return Spring.....	0.844	Diff. Gear Package.....	5.527
Carb. Metering Rod Disc.....	3.811	Clutch Pedal Return Spring Anchor.....	0.845	Diff. Pinion Bearing Adj. Shim.....	5.460
Carb. Metering Rod, Jet & Gasket.....	3.792	Clutch Pedal Return Spring Pin.....	0.849	Diff. Pinion Bearing Lock Ring.....	5.489
Carb. Metering Rod Spring.....	3.810	Clutch Pedal Shaft.....	0.833	Diff. Pinion Bearing Lock Screw.....	5.452
Carb. Nozzle.....	3.774	Clutch Pedal Shaft Washer.....	0.837	Diff. Pinion Bearing Lock Sleeve.....	5.453
Carb. Power Valve Piston.....	3.858	Clutch Pilot Bearing.....	0.649	Diff. Pinion Bearing Splash Shield.....	5.468
Carb. Power Valve Piston Spring.....	3.859	Clutch Pilot Bearing Ret.....	0.650	Diff. Pinion Bearings.....	5.447-5.484
Carb. Power Valve Support Assy.....	3.794	Clutch Press. Plate.....	0.863	Diff. Pinion Shaft.....	5.517
Carb. Pump Arm & Collar.....	3.845	Clutch Press. Plate Ret. Sprg.....	0.864	Diff. Pinion Shaft Lock Screw.....	5.518
Carb. Pump Check Ball.....	3.826	Clutch Press. Spring.....	0.865	Diff. Pinion Shaft Packing.....	5.469
Carb. Pump Conn. Link.....	3.843	Clutch Release Bearing.....	0.799	Diff. Pinion Thrust Washer.....	5.542
Carb. Pump Discharge Ball-Spring-		Clutch Release Bearing Spring.....	0.805	Diff. Ring Gear Bolt.....	5.531
Guide.....	3.825	Clutch Release Bearing Support.....	0.821	Diff. Ring Gear & Pinion Set.....	5.529
Carb. Pump Discharge Check		Washer and Spring.....	0.803	Diff. Side Bearing.....	5.536
Needle—Plug.....	3.832	Clutch Release Fork.....	0.795	Diff. Side Bearing Adj. Nut.....	5.537
Carb. Pump Jet.....	3.844	Clutch Release Fork Ball.....	0.796	Diff. Side Bearing Nut Lock.....	5.539
Carb. Pump Operating Lever &		Clutch Release Fork Ball Ret.....	0.822	Diff. Side Gear.....	5.528
Ctr/Shaft.....	3.842	Clutch Release Fork Ball Sprg.....	0.823	Diff. Side Gear Thrust Washer.....	5.543
Carb. Pump Lever Spring.....	3.845	Clutch Release Fork Guide Plate.....	0.785	Dimmer Switch.....	2.459
Carb. Pump Plunger & Rod.....	3.838	Clutch Release Lever Trunnion.....	0.875		

CHASSIS ALPHABETICAL INDEX—Continued

Name	Group No.	Name	Group No.	Name	Group No.
D		F		F	
Direction Sig. Bracket	2.902	Fender Molding Bolt-Clip	8.148	Fuel Tank Fender Door Spring	8.209
Direction Sig. Cam	2.896	Fender Moldings—Ornament	8.204-8.147	Fuel Tank Filler Cap	3.028
Direction Sig. Cont. Assy.	2.895	Fender Panel Shield (Rr.)	8.175	Fuel Tank Filler Grommet	3.008
Direction Sig. Flasher	2.892	Fender to Rad. Brkt. (Frt.)	8.141	Fuel Tank Filler Pipe	3.003
Direction Sig. Lever Assy.	2.897	Fender Shield (Rr.)	8.175	Fuel Tank Filler Pipe Hose	3.003
Direction Sig. Loom Cover	2.901	Fender Shield Brkt.	8.179	Fuel Tank Filler Pipe Hose Clamp	3.004
Direction Sig. Socket & Wire	2.899	Fender Shield Mldg.	8.176	Fuel Tank Filler Pipe Suppt. Brkt.	3.010
Direction Sig. Switch Base & Wire Assy.	2.895	Fender Shield Seal (Rr.)	8.177	Fuel Tank to Pump Pipe	3.158
Direction Sig. Switch Housing	2.906	Fender Shield Seal Bolt (Rr.)	8.177	Fuel Tank Strap Bolt	3.023
Direction Sig. Switch Ruby Jewel	2.895	Fender Shield Seal Ret. (Rr.)	8.177	Fuel Tank Strap-Brkt.	3.022
Dist. Assy. & Parts	2.360 thru 2.421	Fender Shield Seal Screw (Rr.)	8.177	Fuel Tank Bar	7.225
Dist. to Block Gasket	2.363	Fender to Shroud Baffle Assy.	8.155	Fuse	8.965
Dist. Breaker Plate	2.385	Fender to Shroud Shim (Frt.)	8.136	Fuse Block—Cover	2.483
Dist. to Carb. Fitting	1.720-2.201	Fender Side Emblem (Frt.)	8.147	Fuse Block, Heater	8.852
Dist. to Carb. Pipe	2.201	Fender Skirt (Frt.)	8.153		
Dist. Clamp	2.414	Fender Skirt Baffle to Cowl Seal-Washer	8.154		
Dist. Drive Gear	2.375-1.643	Fender Skirt Battery Bumper	2.337	G	
Dist. Drive Spring	1.644	Fender Skirt Felt (Frt.)	8.154	Gearshift (See Trans. Gearshift)	
Door Fender Cap (See Fender Cap)	8.131	Fender Stone Shield (Rr.)	8.214	Generator Adj. Strap	2.317
Drain Cock	8.951	Fender Support	8.141	Generator Adj. Strap Spacer	2.317
Duct Assy. Air Intake	9.802	Fender Support Cushion (Frt.)	8.156	Generator Mounting Bolt	2.275
		Fender Support Cushion Plate (Frt.)	8.157	Generator Mounting Brkt.	2.277
		Fender Support Screw (Frt.)	8.143	Generator & Parts	2.274 thru 2.317
		Floor Board Plate	9.038	Grease Fittings	8.984
		Flywheel Assy.	0.666	Grommet (Rubber)	9.775
		Flywheel to Ck/Shaft Bolt	0.669		
		Flywheel to Ck/Shaft Sealer	0.665		
		Flywheel Housing	0.683		
		Flywheel Housing Cover	0.679		
		Flywheel Housing Dowel Pin	0.685		
		Flywheel Plate and Ring Gear	0.666		
		Flywheel Repair Pkg.	0.666		
		Flywheel Ring Gear	0.673		
		Fog Light Parts	9.774		
		Frame Assy.	7.003		
		Frame Body Brkt.	7.314-7.330-7.334		
		Frame Cross Member (Frt.)	7.010		
		Frame Cross Member (Frt. Ctr.)	7.011		
		Frame Cross Member (Rr.)	7.014		
		Frame Cross Member (Rr. Ctr.)	7.013		
		Front Axle King Pin	6.203		
		Front Bumper Grille Guard	7.831		
		Front Bumper Master Guard			
		Clamp	7.829		
		Front Fender	8.130		
		Front Spring	7.412		
		Front Suspension Arm & Bush. Pkg.	6.168		
		Front Suspension Fluid	6.386		
		Front Wheel	5.803		
		Front Wheel Bearing	6.319		
		Front Wheel Hub Oil Seal	6.326		
		Front Wheel Tie Rod	6.230		
		Fuel Filter Assy.	3.110-3.890		
		Fuel Gauge, Inst. Panel	3.108		
		Fuel Gauge Gasket	3.112		
		Fuel Gauge, Tank Unit	3.107		
		Fuel Gauge Wire & Grommet	2.525		
		Fuel Gauge Wire Clip	2.652		
		Fuel Gauge Wire Connector	2.525		
		Fuel Line Clip	3.158		
		Fuel Line Connections	3.900		
		Fuel Pump Assy.	3.900		
		Fuel Pump Bail	3.906		
		Fuel Pump Bolt	3.936		
		Fuel Pump Bowl	3.903		
		Fuel Pump Bowl Gasket	3.904		
		Fuel Pump to Carb. Pipe	3.201		
		Fuel Pump Connection-Tubing	3.908		
		Fuel Pump Diaphragm Kit	3.925		
		Fuel Pump Gasket	3.932		
		Fuel Pump Hose	3.158		
		Fuel Pump Oil Seal & Gasket Pkg.	3.925		
		Fuel Pump Repair Kit	3.901		
		Fuel Pump Pipe to Carb.	3.201		
		Fuel Tank	3.001		
		Fuel Tank Drain Plug	3.006		
		Fuel Tank Fender Barrel & Cap	8.209		
		Fuel Tank Fender Door	8.208		
		Fuel Tank Fender Door Bumper	8.210		
		Fuel Tank Fender Door Lock	8.209-8.211		
		Fuel Tank Fender Door Lock Cyl.	8.211		
				</	

CHASSIS ALPHABETICAL INDEX—Continued

Name	Group No.	Name	Group No.	Name	Group No.
H		H		L	
Heater Air Intake Hose.....	9.786	Horn Button Cable.....	2.859	License Lamp Gasket (Rear).....	2.707
Heater Air Intake Screen.....	9.784	Horn Button Cap.....	2.817	License Lamp Lens (Rear).....	2.709
Heater Assy. (Hot Water).....	8.845 thru 8.866	Horn Button Cap Ret.....	2.821	License Lamp Name Plate.....	2.710
Heater Blower.....	8.857	Horn Button Cap Ret. Ins.....	2.821	License Lamp Pad (Rear).....	2.702
Heater Blower Case.....	8.845	Horn Button Contact.....	2.822	License Lamp Screw (Rear).....	2.708
Heater Blower Impeller.....	8.857	Horn Button Contact Cup.....	2.821	License Lamp Spacer (Rear).....	2.703
Heater Blower Screw.....	8.857	Horn Button Contact Cup Ring.....	2.822	License Lamp Wire (Rear).....	2.714
Heater Cont. Panel.....	8.866	Horn Button Contact Ref. Plate.....	2.822	License Plate Brkt. (Rear).....	2.670
Heater Cont. Panel Elbow.....	8.866	Horn Button Contact Separator.....	2.822	License Plate Bumper.....	2.673
Heater Cont. Panel Knob.....	8.866	Horn Button Contact Spring.....	2.822	License Plate Spacer.....	7.797
Heater Cont. Panel Plate.....	8.866	Horn Button Cushion.....	2.816	License Plate Stabilizer.....	2.670
Heater Cont. Panel Reflector.....	8.866	Horn Button Ground Plate.....	2.823	License Plate Support.....	2.672-7.796
Heater Cont. Panel Socket & Wire.....	8.866	Horn Button Lock Ring.....	2.829	License Plate Support Bar.....	2.670-7.796
Heater Cont. Panel Switch.....	8.852-8.866	Horn Button Lock Ring.....	2.829	License Support Brkt. (Frt.).....	7.798
Heater Cont. Panel Transfer.....	8.866	Horn Button Operating Key.....	2.830	Light Bulbs.....	8.991
Heater Cont. Panel Wire.....	8.866	Horn Button Operating Ring.....	2.830	Light Switch.....	2.485
Heater Core Assy.....	8.854	Horn Button Ring Spacer.....	2.831	Light Switch Fuse.....	8.965
Heater Hose.....	8.846	Horn Button Ring Spacer Ins.....	2.831	Light Switch Knob.....	2.486
Heater Hose Clamp.....	8.948	Horn Button Wire Separator.....	2.822	Light Switch Knob Bushing-Ferrule.....	2.487
Heater Motor Assy.....	8.855	Horn Cable Conn.....	2.819	Light Switch Knob Spacer.....	2.487
Heater Motor Spacer.....	8.856	Horn Cable Contact Sleeve.....	2.819	Light Switch Mounting Brkt.....	2.487
Heater Shutoff Valve.....	8.866	Horn Relay.....	2.815	Lower Cont. Arm.....	6.168
Heater Shutoff Valve Cable.....	8.866	Horn Wire.....	2.859	Lower Cont. Arm Bolt.....	6.176
Heater Shutoff Valve Cam.....	8.866	Horn Wire Clamp.....	2.859	Lower Cont. Arm Bushing Seal.....	6.162
Heater Shutoff Valve Elbow.....	8.866	Horn Wire Conn. Grommet.....	9.775	Lower Cont. Arm Grease Cup.....	6.168
Heater Shutoff Valve Nipple.....	8.866	Hose (Radiator).....	1.159	Lower Cont. Arm Pivot Pin Pkg.....	6.174
Hood Bumper.....	8.024	Hose Clamp.....	1.160-8.948	Lower Cont. Arm Shaft Bushing.....	6.169
Hood Catch Bolt.....	8.082	Hub (Front).....	6.306	Lower Cont. Arm Shaft Pkg.....	6.170
Hood Catch Bolt Lever Spring.....	8.084	Hub Cap.....	5.858	Lubrication Fittings.....	8.984
Hood Catch Cont. Cable Grommet.....	8.076	Hydraulic Brake Parts.....	(See Brakes)		
Hood Catch Cont. Trunnion.....	8.077				
Hood Catch Hook Assy.....	8.036	I		M	
Hood Catch Lock Plate Ret.....	8.085	Ignition Cable.....	2.241	Main Bearing Drain Pipe (Rr.).....	1.565
Hood Catch Lock Plate Spring.....	8.081	Ignition Cable to Brace Clip.....	2.188	Main Bearings.....	0.096-0.106
Hood Catch Pilot Bolt.....	8.085	Ignition Coil (Also See Coil).....	2.170	Main Wire Clamp & Fuse Holder.....	2.482
Hood Catch Pilot to Hood Brkt. Assy.....	8.035	Ignition Coil Brkt.....	2.183	Manifold Clamp Washer.....	3.276
Hood Catch Plate Assy.....	8.080-8.083	Ignition Coil Resistance Unit.....	2.173	Manifold Cover (Exhaust).....	3.602
Hood Catch Plate Brace.....	8.080	Ignition Key.....	2.187	Manifold Gasket Set.....	3.270
Hood Center Grille Finish Plate.....	8.049	Ignition Lock Cyl.....	2.188	Manifold Gaskets.....	3.270
Hood Cross Brace Assy.....	8.000	Ignition Switch.....	2.188	Manifold Heat Control Valve.....	3.647
Hood Emblem.....	8.030	Ignition Switch Brkt.....	2.189	Manifold Heat Valve Air Tube.....	3.647
Hood Front Gusset.....	8.022	Ignition Switch Ferrule.....	2.192	Manifold Heat Valve Bushing.....	3.646
Hood Front Name Plate.....	1.303	Ignition Timing Indicator.....	0.219	Manifold Heat Valve Stud.....	3.656
Hood Front Name Plate Bar.....	1.303	Ignition Wire Nipple.....	2.258	Manifold Heat Valve Spring.....	3.641
Hood Front Name Plate Bezel.....	1.303	Ignition Wire Set.....	2.239	Manifold Heat Valve Therm.....	3.640
Hood Grille.....	8.049	Instrument Lamp Bulb.....	8.991	Manifold Heat Valve Therm.....	3.641
Hood Grille Bolt.....	8.050	Instrument Lamp Socket & Wire.....	2.776	Deflector.....	3.641
Hood Guide Assy. Brkt. (Rear).....	8.013	Instrument Lamp Switch.....	2.765	Manifold Intake—Exhaust.....	3.265-3.601
Hood Hinge.....	8.015	Instrument Lamp Switch Knob.....	2.768	Manifold Stud.....	3.288
Hood Hinge Link.....	8.015	Instrument Panel Brace.....	9.131	Master Cyl.....	4.650
Hood Hinge Rivet.....	8.015	Instrument Panel Gauge Case.....	9.743	Master Cyl. Conn. Rod Clevis.....	4.662
Hood Hinge Rod.....	8.016	Instrument Panel Radio Speaker.....		Muffler Assy.....	3.701
Hood Hinge Spring.....	8.013	Grille.....	9.655	Muffler Bracket.....	3.704
Hood Hinge Sprg. Dash Brkt.....	8.013	Intake Manifold.....	3.265	Muffler Clamp.....	3.708
Hood Hinge Washer.....	8.015	Intake Manifold Riser Tube.....	3.264	Muffler Support Strap.....	3.704
Hood Latch Striker Brace.....	8.080	Intake Valve.....	0.296	Muffler Tail Pipe.....	3.705
Hood Latch and Fender Supt. Brace.....	8.155			Muffler Tail Pipe Brkt.—Suppt.....	3.706
Hood Lock Control.....	8.075	J		Muffler Tail Pipe Clamp.....	3.708
Hood Lock Ornament Spring.....	8.032	Jack (Wheel).....	8.820	Muffler Tail Pipe Reinf. Plate.....	3.710
Hood Lock Pilot.....	8.035	Jack Base.....	8.820		
Hood Lock Pilot Spring.....	8.035	Jack Handle.....	8.823	N	
Hood Lock Pilot Spring Ret.....	8.035	Jack Repair Kit.....	8.820	Nuts.....	8.915 thru 8.925
Hood Lock Safety Catch Spring.....	8.036				
Hood Ornament.....	8.030	K		O	
Hood Ornament Insert.....	8.030	Key (Woodruff).....	8.960	Oil Cleaner Assy.....	1.660
Hood Panel.....	8.000	Key, Lock.....	2.187	Oil Cleaner Cover.....	1.660
Hood Panel Bumper.....	8.024	King Pin.....	6.203	Oil Cleaner Cup.....	1.663
Hood Panel Mldg.....	8.054	King Pin Bearing Plug & Ring.....	6.223	Oil Cleaner Screen.....	1.656
Hood to Shroud Water Baffle.....	9.127	King Pin Bushing.....	6.021	Oil Cleaner Screen Cover.....	1.660
Hood Side Ornament.....	8.039	King Pin Lock Pin.....	6.216	Oil Cleaner Screen Ret.....	1.660
Hood Side Panel Name Plate.....	8.039	King Pin Repair Kit.....	6.203	Oil Filler Cap.....	1.758
Hood Top Panel Side Mldg.....	8.054	King Pin Thrust Bearing.....	6.210	Oil Filler & Ventilator Inlet.....	1.760
Hood Upper Panel Mldg. Bolt.....	8.054	King Pin Thrust Bearing Shim.....	6.214	Oil Filter Assy.....	1.835
Hood Upper Panel Mldg. Fastener.....	8.054			Oil Filter Bolt—Cover.....	1.837
Horn Assy.....	2.810	L		Oil Filter Element.....	1.836
Horn Blowing Key Ret.....	2.829	License Brkt. to Body Sealing Wshr.....	2.674	Oil Filter Fittings.....	1.855
Horn Blowing Ring.....	2.830	License and Lamp Bracket (Rear).....	2.705	Oil Filter Gasket.....	1.844
Horn Blowing Key.....	2.830	License Lamp (Rear).....	2.700	Oil Gauge Pipe.....	1.729
Horn Bracket.....	2.845	License Lamp Cover (Rear).....	2.706		
Horn Bracket Lamination.....	2.847				
Horn Bracket Spacer.....	2.847				
Horn Button.....	2.817				

CHASSIS ALPHABETICAL INDEX—Continued

Name	Group No.	Name	Group No.	Name	Group No.
O					
Oil Gauge Pipe Clip	8.950	Rad. Grille Molding	1.268	Spring Bushing (Rr.)	7.504
Oil Gauge Pipe Fittings	1.737	Rad. Grille Name Plate	1.303	Spring Center Bolt	7.506
Oil Gauge Pipe Grommet	1.743	Rad. Grille Ornament	1.303	Spring Clip (Rr.)	7.516
Oil Level Indicator Rod	1.516	Rad. Grille Plate	1.266	Spring Clip Plate (Rr.)	7.518
Oil Pan	1.426	Rad. Grille Reinf.	1.268	Spring Cover Pkg.	7.495
Oil Pan Drain Screw	1.453	Rad. Grille Ret.	1.266	Spring Front Bracket (Rr.)	7.112
Oil Pan Drain Screw Gasket	1.456	Rad. Grille Screw	1.269	Spring Leaf Liner (Wood) (Rr.)	7.502
Oil Pan Gasket	1.429	Rad. Grille Spinner	1.303	Spring Rear Brkt. (Rr.)	7.118
Oil Pan Screen	1.656	Rad. Hose	1.159	Spring Retainers	8.934
Oil Press. Gauge	1.803	Rad. Hose Clamp	1.166	Spring Seat (Frt.)	7.418
Oil Press. Gauge Pipe	1.729	Rad. Hose Spring	1.160	Spring Seat Ins. Bushing (Frt.)	7.422
Oil Press. Gauge Pipe Fittings	1.737	Rad. Shell to Hood Bumper	1.216	Spring Seat Ins. Pad (Rr.)	7.545
Oil Press. Reg. Ball	1.609	Rad. Shell Support	1.264	Spring Seat Ins. Pad Bushing	7.547
Oil Press. Reg. Gasket	1.604	Rad. Splash Apron	8.125	Spring Seat Ins. Ret. (Rr.)	7.552
Oil Press. Reg. Spring	1.610	Rad. Support to Fender Baffle	1.272	Spring Shackie (Rr.)	7.523
Oil Press. Reg. Spring Ret.	1.613	Rad. Supt. to Fender Baffle Welt	1.286	Spring Shackie Bolt (Frt.)	7.428
Oil Pump Assy.	1.652	Rad. Support to Frame Spacer	8.156	Spring Shackie Bolt (Rr.)	7.529
Oil Pump Body	1.653	Rad. Support Frame Brkt.	7.061	Spring Shackie Bshg. Pkg. (Rr.)	7.504
Oil Pump Cover	1.723	Radio Antenna Parts	9.620 thru 9.647	Spring Shackie Cork Washer (Frt.)	7.443
Oil Pump Drive Gear	1.643	Radio Parts	9.649 thru 9.667	Spring Shackie Pin (Frt.)	7.427
Oil Pump Drive Gear & Shaft	1.709	Radio Fuse	8.965-9.654	Stab. Bar Bshg.	7.243
Oil Pump Drive Shaft	1.639	Rear Axle	(See Axle)	Stab. Bshg.—Ret.	7.244
Oil Pump Driven Gear	1.659	Rear Fender	8.203	Stab. Frame Brkt. (Frt.)	7.242
Oil Pump Driven Gear Shaft	1.658	Rear Fender Door Parts	8.209	Stab. Ins.—Bshg. (Frt.)	7.244
Oil Pump Gasket	1.655-1.724	Rear Fender Panel Shield	8.175	Stab. Link Bolt Grommet Ret.	7.245
Oil Screen Cover	1.660	Rear Fender Shield Seal (See Fender)	8.177	Stab. Link Nut	7.238
Oil Screen Ret.	1.660	Rear License Lamp	2.700	Stab. Link Pkg.—Spacer	7.240
Oil Suction Pipe-Nut-Screw	1.519	Rear License Suppt. Brkt.	2.670	Stab. Shaft	7.241
Oil Suction Pipe Gasket	1.520	Rear Wheel	5.803	Standard Parts	8.899 thru 8.991
Ornament, Hood Top Illum.	8.030	Repair Kit—Safety Jack	8.820	Starter to G/Shift Neutralizer Lever	4.053
P					
Parking Lamp	2.585	Rivets	8.967	Starter Mounting Bolt	2.041
Parking Lamp Parts	2.586 thru 2.596	Round Closed Gasket	8.955	Starter Pedal	2.004
Pedal Felt	9.039	Rubber Hose Tubing	8.962	Starter Pedal Pad	2.020
Pedal Plate	9.038	Running Board Assy.	8.299	Starter Pedal Rod Guide	2.016
Pedals	0.830-4.625	Running Board Bolt	8.900-8.906	Starting Crank Nut Washer	0.662
Pinion Bearings & Parts	5.447-5.484	Running Board Mldg.	8.304	Starting Motor & Parts	2.041 thru 2.113
Pins	8.938 thru 8.942	Running Board Mldg. Ret.	8.309	Starting Switch	2.100
Pipe Clip	8.950	S			
Pipe Fittings	8.963	Safety Light Parts	9.773	Strg. Arms	6.103-6.179
Pipe Plug	8.971	Set Screw	8.975	Strg. Col. Bracket—Plate	6.750
Piston Pin	0.636	Sheet Metal Plug	8.973	Strg. Col. Bracket Bolt	6.751
Piston & Pin Assy.	0.629	Sheet Metal Screw	8.977	Strg. Col. Bracket Pad	6.758
Piston Pin Bushing	0.613	Shock Absorber	7.345	Strg. Col. Jacket	6.518
Piston Pin Set Screw	0.639	Shk/Abs. Bolt—Nut	7.395	Strg. Col. Housing Plug	6.519
Piston Pin Set Screw Lockwasher	0.640	Shk/Abs. Brkt. Assy.	7.364	Strg. Col. & Pedal Plate Felt—Seal	9.039
Piston Ring	0.643	Shk/Abs. Bushing	7.377	Strg. Col. Plate	9.038
Pitman Arm	(See Steering Gear)	Shk/Abs. Fluid	6.386-7.377	Strg. Col. Toe Board Collar	9.045
Planet Carrier Assy., Rear H.T.	4.177	Shk/Abs. Frame Brkt.	7.314	Strg. Col. & Toe Board Grommet	9.045
Plug	8.970-8.971-8.973	Shk/Abs. Frame Spacer—Washer	7.397	Strg. Conn. Rod Ball Seat	6.874
Power Brakes	(See Vac. Power Brakes)	Shk/Abs. Shield	7.371	Strg. Conn. Rod Ball Seat Spacer	6.883
Power Steering Gear Parts	6.530-6.856	Shroud Hood Ledge Lacing Clip—Ret.	9.128	Strg. Conn. Rod Ball Seat Spacer Cover	6.883
Prop. Shaft	5.544	Sleeve, Ball	8.963	Strg. Conn. Rod Dust Cover	6.886
Prop. Shaft Coupling & Gear	5.555	Spare Wheel Clamp	7.629	Strg. Conn. Rod Dust Cover Spring	6.888
Prop. Shaft Housing Gasket	5.560	Spare Wheel Clamp Bolt	7.632	Strg. Conn. Rod End Plug	6.881
Prop. Shaft Packing Ret.	5.551	Spare Wheel Clamp Bolt Nut	7.633	Strg. Conn. Rod Idler Arm Assy.	6.895
Prop. Shaft Packing-Seal	5.550	Spare Wheel Lock Case (Rr.)	7.679	Strg. Conn. Rod Idler Lever Brkt.	6.896
Prop. Shaft Snap Ring	5.545	Spare Wheel Lock Cyl. (Rr.)	7.680	Strg. Conn. Rod Idler Lever Bshg.	6.897
Prop. Shaft Splash Shield	5.556	Spare Wheel Lock Plunger (Rr.)	7.680	Oil Seal—Ret.	6.898
Prop. Shaft to U/J Washer—Bolt	5.545	Spark Plug	2.270	Strg. Conn. Rod Safety Plug	6.882
R					
Rad. Baffle—Upper	1.285	Spark Plug Gasket	2.271	Strg. Conn. Rod Spring	6.876
Rad. Cap	1.203	Spark Plug Terminal Nipple	2.258	Strg. Conn. Rod or Tube	6.870
Rad. Cap Sealing Washer	1.206	Spark Plug Wire	2.239	Strg. Conn. Rod Washer	6.885
Rad. Center Panel	1.266	Spark Plug Wire Clamp	2.251	Strg. Gear Adj.	6.830
Rad. Core	1.219	Spark Plug Wire Clamp Brkt.	2.251	Strg. Gear Bolt	6.509
Rad. Drain Cock	1.229	Spark Plug Wire Grommet	2.251	Strg. Gear Elbow	6.679
Rad. Drain Hose—Pipe	1.240	Spark Plug Wire Manifold	2.251	Strg. Gear Elbow Bolt	6.679
Rad. & Eng. Supt. Frame X Member	7.061	Spark Plug Wire Manifold Cover	2.251	Strg. Gear Elbow Seal	6.674
Rad. to Fan Shroud	1.277	Speedo. Cable	4.342	Strg. Gear End Cover Brg.	6.826
Rad. Grille	1.266	Speedo. Drive Gear	4.343	Strg. Gear Flange Pivot Bolt	6.791
Rad. Grille Bar-Blade	1.266	Speedo. Drive Gear Spacer	4.345	Strg. Gear Hose to Valve Union	6.673
Rad. Grille Clamp	1.273	Speedo. Driven Gear & Shaft	4.337	Strg. Gear Hsg.	6.785-6.803
Rad. Grille Emblem	1.303	Speedo. Head Assy.	4.339	Strg. Gear Hsg. Brg. Adapter (Upper)	6.519
Rad. Grille Emblem Bezel—Plate	1.303	Spring Assy. (Frt.)	7.412	Strg. Gear Hsg. End Plate—Cover	6.824
Rad. Grille to Front Fender Support	1.268	Spring Assy. (Rr.)	7.503	Strg. Gear Hsg. End Plate Gasket—Packing	6.825
		Spring Brkt. Bushing (Rr.)	7.524	Strg. Gear Hsg. Side Plate	6.807
		Spring Bumper (Rr.)	5.395	Strg. Gear Hsg. Side Plate Gasket	6.809
		Spring Bumper Ret. (Rr.)	5.394	Strg. Gear Lash Adj. Shim	6.828
				Strg. Gear Oil Hose Clip	6.671
				Strg. Gear Oil Pressure Hose	6.670

CHASSIS ALPHABETICAL INDEX—Continued

Name	Group No.	Name	Group No.	Name	Group No.
S		S		T	
Strg. Gear Oil Pump Assy.	6.605	Strg. Knuckle Suppt. Upper Bshg.		Trans. Carrier Assy., Rr. Planet H.T.	4.177
Strg. Gear Oil Pump Belt.	6.660	Seal.	6.178	Trans. Case	4.103
Strg. Gear Oil Pump Body	6.608	Strg. Knuckle Thrust Bearing.	6.210	Trans. Case Bushing	4.104
Strg. Gear Oil Pump Body Cover	6.609	Strg. Lash Adj. Sleeve	6.830	Trans. Case Center Brg. Cap Lock	
Strg. Gear Oil Pump Bracket	6.606	Strg. Shaft Upper Brg.	6.521	Plate H.T.	4.131
Strg. Gear Oil Pump Brg. Ret. Ring	6.616	Strg. Shaft Upper Brg. Spring—Seat	6.526	Trans. Case Cover	4.105
Strg. Gear Oil Pump Control Valve	6.624	Strg. Wheel—Deluxe	6.513	Trans. Case Oil Filler Sleeve	4.132
Strg. Gear Oil Pump Drive Shaft	6.614	Strg. Wheel Hub Cover	6.512	Trans. Case Plug	4.103
Strg. Gear Oil Pump Plate	6.612	Strg. Wheel Nut	6.515	Trans. Case Side Cover Gasket	4.109
Strg. Gear Oil Pump Pulley	6.655	Strg. Wheel Shaft Washer	6.515	Trans. Clutch Annular Expander & Seal Pkg.	4.166
Strg. Gear Oil Pump Relief Valve	6.622	Stop Light Switch	2.447	Trans. Clutch Cont. Annular Piston	
Strg. Gear Oil Pump Reservoir	6.635	Stop Light Wire Connector	2.649	H.T.	4.166
Strg. Gear Oil Pump Rotor	6.610	Stud	8.981	Trans. to Clutch Hsg. Gasket	4.005
Strg. Gear Oil Pump Rotor Ring	6.611	Suspension Fluid (Frt.)	6.386	Trans. Clutch Plate H.T.	4.163
Strg. Gear Oil Pump Rotor Seal	6.611			Trans. Clutch Release Spring H.T.	4.164
Strg. Gear Oil Pump Shaft Brg.	6.615			Trans. Cont. Valve Lever Assy. H.T.	4.279
Strg. Gear Oil Pump Shaft Seal	6.617			Trans. Converter Cover Hub Bshg.	4.115
Strg. Gear Oil Pump Spring	6.612			Trans. Counter Gear Brg. Ret.	
Strg. Gear Oil Return Hose	6.671			Washer	4.423
Strg. Gear Pitman Arm	6.859			Trans. Ctr./Shaft	4.428
Strg. Gear Pitman Arm Nut	6.861			Trans. Ctr./Shaft Brg. Roller	4.422
Strg. Gear Pitman Arm Pack. Ret.	6.856			Trans. Ctr./Shaft Gear Assy.	4.421
Strg. Gear Pitman Shaft Bshg.	6.786			Trans. Ctr./Shaft Gear Bushing	4.422
Strg. Gear Power Cyl.	6.576			Trans. Ctr./Shaft Gear Spacer	4.426
Strg. Gear Power Cyl. Adapter	6.584			Trans. Ctr./Shaft Lock	4.429
Strg. Gear Power Cyl. Gasket	6.577			Trans. Ctr./Shaft Spacer & Bshg.	4.422
Strg. Gear Power Cyl. Piston	6.578			Trans. Ctr./Shaft Washer	4.442
Strg. Gear Power Cyl. Piston Ring	6.579			Trans. Cover Gasket	4.109
Strg. Gear Power Cyl. Piston Rod	6.580			Trans. Floor Hole Cover Assy.	9.106
Strg. Gear Power Cyl. Rack	6.586			Trans. Fluid—Hydramatic	4.101
Strg. Gear Power Cyl. Rack Pin	6.587			Trans. Frt. Bearing	4.355
Strg. Gear Power Cyl. Rod-Nut-Washer	6.581			Trans. Frt. Brg. Washer	4.376
Strg. Gear Power Rack Cover Shim	6.591			Trans. Frt. Brg. Oil Sling	4.374
Strg. Gear Power Rack Guide	6.590			Trans. Frt. Brg. Ret.	4.356
Strg. Gear Power Rack Guide Cover	6.592			Trans. Frt. Brg. Ret. Gasket	4.358
Strg. Gear Roller & Shaft	6.850			Trans. Frt. Brg. Snap Ring	4.361
Strg. Gear Roller Shaft Packing	6.855			Trans. Frt. Clutch Drum Assy. H.T.	4.162
Strg. Gear Sector Adj. Screw	6.822			Trans. Frt. Drive Gear H.T.	4.158
Strg. Gear Sector Adj. Screw Nut	6.823			Trans. Frt. Drum Oil Delivery	
Strg. Gear Sector & Shaft	6.850			Sleeve Assy. H.T.	4.179
Strg. Gear Shaft & Worm	6.524			Trans. Frt. Oil Pump & Cover	
Strg. Gear Thrust Bearing	6.530			Assy. H.T.	4.226
Strg. Gear Thrust Bearing Race	6.527			Trans. Frt. Oil Pump Cover Gasket	
Strg. Gear Valve	6.550			H.T.	4.124
Strg. Gear Valve Bleed Pipe	6.681			Trans. Frt. Oil Pump Cover Seal	
Strg. Gear Valve Centering Plunger	6.551			Assy. H.T.	4.125
Strg. Gear Valve Centering Spring	6.552			Trans. Frt. Oil Pump Drive Gear	
Strg. Gear Valve Check Valve	6.553			Key H.T.	4.126
Strg. Gear Valve Cover	6.554			Trans. Frt. Planet Carrier Assy. H.T.	4.161
Strg. Gear Valve Cover Oil Seal	6.555			Trans. Frt. Pump Oil Inlet Pipe	
Strg. Gear Valve Housing Seal	6.556			Assy. H.T.	4.222
Strg. Gear Valve Oil Pipe	6.677-6.678			Trans. Frt. Servo H.T.	4.225 thru 4.234
Strg. Gear Worm Ball	6.844			Trans. Frt. Servo Exh. Body	4.265
Strg. Gear Worm Ball Clamp	6.843			Trans. Gasket Set	4.005
Strg. Gear Worm Ball Guide	6.842			Trans. G/Shift Cont. Indicator	
Strg. Gear Worm Ball Nut	6.841			Assy. H.T.	4.038
Strg. Gear Worm Screw	6.830			Trans. G/Shift Cont. Indicator	
Strg. Gear Worm Seal	6.806			Cover & Lens	4.038
Strg. Inter. Arm	6.179			Trans. G/Shift Cont. Lever H.T.	4.035
Strg. Inter. Arm Bshg.	6.181			Trans. G/Shift Cont. Lever Shaft	
Strg. Inter. Arm Bshg. Sleeve	6.181			Parts H.T.	4.039
Strg. Inter. Arm Pivot Bolt	6.187			Trans. G/Shift Cont. Lower Lever	
Strg. Inter. Arm Pivot Bolt Lock	6.188			Brkt.	4.018
Strg. Inter. Arm Washer	6.180			Trans. G/Shift Cont. Lower Relay	
Strg. Knuckle	6.020			Lever	4.040
Strg. Knuckle Bushing	6.021-6.024			Trans. G/Shift Cont. Lower Suppt.	
Strg. Knuckle Expansion Plug	6.223			Bshg.—Cap	4.018
Strg. Knuckle Nut	6.022			Trans. G/Shift Cont. Rear Rod Parts	4.040
Strg. Knuckle Spindle Washer	6.321			Trans. G/Shift Cont. Rod Assy.	4.019
Strg. Knuckle Support	6.023			Trans. G/Shift Control Rod Clevis	4.019
Strg. Knuckle Support Arm	6.178			Trans. G/Shift Cont. Shaft Collar	4.021
Strg. Knuckle Suppt. Arm Bumper—Upper	6.176			Trans. G/Shift Cont. Shaft & Hsg. Assy.	4.039
Strg. Knuckle Suppt. Arm Bumper—Lower	7.422			Trans. G/Shift Cont. Shaft Lower Lever Bshg.	4.042
Strg. Knuckle to Support Bolt	5.002			Trans. G/Shift Cont. Shaft Lower Seal—Washer	4.043
Strg. Knuckle Support Bshg.	6.024			Trans. G/Shift Cont. Shaft Parts	4.017
Strg. Knuckle Suppt. Bshg. Seal	6.166			Trans. G/Shift Cont. Shaft Upper Brkt. H.T.	4.038
Strg. Knuckle Suppt. Clamp Bolt	6.018			Trans. G/Shift Cont. Suppt.	4.018
Strg. Knuckle Suppt. Lower Arm	6.168				
Strg. Knuckle Suppt. Pivot Pin Pkg.	6.178				
</					

CHASSIS ALPHABETICAL INDEX—Continued

Name	Group No.	Name	Group No.	Name	Group No.
T					
Trans. G/Shift Cont. Upper Lever Cover	4.015	Trans. Oil Supply Pump Parts	4.203	Trans. Selector Shaft Outer Lever	4.050
Trans. G/Shift Cont. Upper Lever Knob	4.035	Trans. Oil Delivery Sleeve	4.179	Trans. Selector Shaft Seal	4.313
Trans. G/Shift Cont. Upper Lever Parts	4.036	Trans. Oil Level Indicator Assy. H.T.	4.133	Trans. Selector Shaft Shift Lever	4.314-4.315
Trans. G/Shift Cont. Upper Suppt. Brg.	4.018	Trans. Oil Pan Assy. H.T.	4.195	Trans. Selector Shift Shaft	4.301
Trans. G/Shift Fork	4.303-4.304	Trans. Oil Pan Gasket H.T.	4.196	Trans. Servo Band Adj. Screw	4.253
Trans. G/Shift Lever Assy.	4.006	Trans. Oil Pipes H.T.	4.248	Trans. Servo Band & Lining H.T.	4.251
Trans. G/Shift Lever Cap—Cup	4.015-4.025	Trans. Oil Press. Reg. Valve H.T.	4.216	Trans. Servo Cover Assy. and Parts	4.212
Trans. G/Shift Lever Fulcrum Spacer	4.028	Trans. Oil Pump & Gov. Drive Gear H.T.	4.210	Trans. Servo Release Cyl.	4.225
Trans. G/Shift Lever Knob	4.009	Trans. Oil Pump & Gov. Driven Gear H.T.	4.211	Trans. Shift Bar	4.094
Trans. G/Shift Lever Knob Washer	4.009	Trans. Oil Pump Inlet Pipe H.T.	4.222	Trans. Shift Fork Poppet Spring—Ball	4.311
Trans. G/Shift Lever Pivot Pin	4.036	Trans. Oil Pump Inlet Pipe Gasket H.T.	4.223	Trans. Shift Fork Screw	4.312
Trans. G/Shift Lever Spring	4.047-4.026	Trans. Oil Screen Assy. H.T.	4.224	Trans. Shift Interlock Plate	4.095
Trans. G/Shift Lever Support Assy.	4.038	Trans. Oil Seal Ring H.T.	4.127	Trans. Shift Lever H.T.	4.152
Trans. G/Shift Low & Reverse Shift Fork	4.304	Trans. Outer Shift Lever	4.152	Trans. Shift Lever Spring	4.047
Trans. G/Shift Low and Rev. Shift Shaft	4.309	Trans. Parking Brake Parts	4.290	Trans. Shift Lever Spring Ext.	4.047
Trans. G/Shift Lower Control Lever	4.041	Trans. Parking Lock Lever Parts	4.220	Trans. Shift Lever Spring Yoke Suppt.	4.048
Trans. G/Shift Second & High Shift Fork	4.330	Trans. Planet Carrier and Parts	4.175-4.176	Trans. Shift Lever to Trans. Screw	4.046
Trans. G/Shift Second and High Shift Shaft	4.309	Trans. Planet Reverse Drum	4.190	Trans. Shift Selector Cable	4.020
Trans. G/Shift Selector Cable Seal	4.043	Trans. Primary Pump	4.115	Trans. Shift Selector Cont. Rod	4.020
Trans. G/Shift Selector Cont. Cable Assy.	4.020	Trans. Rear Brg. Oil Seal	4.318	Trans. Shift Selector Inner Lever	4.302
Trans. G/Shift Selector Cont. Rod Assy.	4.020	Trans. Rear Brg. Ret.—Seal—Supt.	4.317	Trans. Shift Selector Rod Plunger	4.021
Trans. G/Shift Selector Control Lever	4.045	Trans. Rear Brg. Ret. Gasket	4.318	Trans. Shift Shaft	4.309
Trans. G/Shift Selector Lever Pivot Pin	4.045	Trans. Rear Brg. Shield	4.335	Trans. Shift Shaft Assy. H.T.	4.016
Trans. G/Shift Selector Rod—Cable Parts	4.021	Trans. Rear Brg. Snap Ring	4.412	Trans. Shift Shaft Plug—Spring	4.017
Trans. G/Shift Selector Rod Insulator	4.019	Trans. Rear Clutch Drum Assy. H.T.	4.184	Trans. Shift Shaft Return Spring	4.017
Trans. G/Shift Strg. Col. Tube Assy.	4.039	Trans. Rear Clutch Hub H.T.	4.186	Trans. Shift Shaft Return Spring Clip	4.017
Trans. Gear Thrust Washer	4.398	Trans. Rear Drum H.T.	4.187	Trans. Shift Shaft Return Spring Cup	4.017
Trans. Gov. Assy. H.T.	4.256	Trans. Rear Drum Rear Band Strut H.T.	4.252	Trans. Shifter Lever	4.046
Trans. Gov. Oil Delivery Sleeve H.T.	4.255	Trans. Rear Oil Pump Assy. H.T.	4.200	Trans. Sliding Sleeve	4.414
Trans. Gov. Oil Delivery Sleeve Plug H.T.	4.255	Trans. Rear Oil Pump Check Valve Ball—Spring H.T.	4.213	Trans. Snap & Retaining Rings H.T.	4.128
Trans. Gov. Plunger & Bshg. Assy. and Parts	4.256	Trans. Rear Oil Pump Cover H.T.	4.203	Trans. Stator Parts	4.117
Trans. Hydraulic Modulator Parts	4.208	Trans. Rear Oil Pump Gear Pkg. H.T.	4.206	Trans. Strg. Col. Shift Shaft	4.016
Trans. Inner Cont. Lever Pin, Seal & Washer Pkg. H.T.	4.282	Trans. Rear Oil Pump Gov. Drive Flange H.T.	4.259	Trans. Synchro. Detent Spring	4.413
Trans. Input Shaft—Ring	4.123	Trans. Rear Servo H.T.	4.236 thru 4.250	Trans. Synchro. Drum	4.384
Trans. Line Exhaust Valve—Retainer	4.106	Trans. Rear Supt.—Shim	4.081	Trans. Synchro Drum Ret.	4.383
Trans. Low & Reverse Gear	4.417	Trans. Rear Supt. Ret.	4.083	Trans. Throttle Cont. Lever H.T.	4.286
Trans. Low Sun Gear and Clutch Parts	4.162-4.164	Trans. Reverse Anchor H.T.	4.294	Trans. Throttle Rod Assy. H.T.	4.040
Trans. Low Servo Parts	4.228	Trans. Reverse Anchor Retracting Spring H.T.	4.295	Trans. Throttle Rod Idler Lever Brkt. H.T.	3.589
Trans. Main Drive Gear	4.351	Trans. Reverse Band and Parts	4.246-4.251	Trans. Throttle Valve Inside Lever & Shaft H.T.	4.278
Trans. Main Drive Gear Nut	4.375	Trans. Reverse Blocker Piston H.T.	4.290	Trans. Thrust Washer H.T.	4.129
Trans. Main Drive Gear Oil Seal	4.354	Trans. Reverse Idler Gear	4.430	Trans. Torque Converter Stator Race	4.119
Trans. Main Shaft	4.403	Trans. Reverse Idler Gear Bushing	4.431	Trans. Torque Converter Stator Assy.	4.119
Trans. Main Shaft Coupling Washer	4.404	Trans. Reverse Idler Gear Shaft	4.433	Trans. Turbine	4.115
Trans. Main Shaft Ext.—Washer	4.403	Trans. Reverse Idler Gear Thrust Washer	4.437	Trans. Vacuum Modulator Parts	4.205
Trans. Main Shaft Ext. Bolt	4.405	Trans. Reverse Idler Shaft Lock Screw-Pin	4.435	Trans. Valve Body Gasket	4.217
Trans. Main Shaft & Gear H.T.	4.172	Trans. Reverse Internal Gear H.T.	4.193	Trouble Light Assy., Underhood	8.890
Trans. Main Shaft Parts	4.173	Trans. Reverse Internal Gear Suppt. H.T.	4.194	Tubing, Copper—Steel	8.964
Trans. Main Shaft Pilot Brg.	4.352	Trans. Reverse Servo Parts	4.241	Tubing, Rubber	8.962
Trans. Main Shaft Pilot Brg. Spacer	4.353	Trans. Reverse Shifter Crank Roller H.T.	4.293		
Trans. Main Shaft Rear Brg.	4.408	Trans. Reverse Unit Center Gear H.T.	4.190		
Trans. Main Shaft 2nd Speed Gear	4.395	Trans. Reverse Unit Parts H.T.	4.189		
Trans. Main Shaft Snap Ring	4.397	Trans. Reverse Unit Planet Carrier Assy. H.T.	4.192		
Trans. Main Shaft Washer	4.404-4.406	Trans. Second & High Sleeve	4.414		
Trans. Manual Cont. Shaft Seal H.T.	4.282	Trans. Second Speed Gear Oil Sleeve	4.335		
Trans. Manual Valve Lever—Seal—Spacer	4.218	Trans. Second Speed Gear Thrust Washer	4.398		
Trans. Name Plate	4.003	Trans. Selector Lever Shaft Oil Seal	4.302		
Trans. Neutralizer Rod Brkt.	4.054	Trans. Selector Lever Shaft Oil Seal Washer	4.302		
Trans. Neutralizer Sw. Rod Return Spring	4.054	Trans. Selector Shaft Lever	4.050		
Trans. Neutralizer Switch	4.054	Trans. Selector Shaft Lever Spring	4.047		
Trans. Oil Cont. Valve Body H.T.	4.265	Trans. Selector Shaft Lever Spring Yoke	4.048		
Trans. Oil Cooler and Parts	4.128				
				U	
				Underhood & Trouble Light Assy.	8.890
				Underhood & Trouble Light Fuse	8.890
				Underhood & Trouble Light Wire & Fuse Holder	8.890
				U/J Assy.	5.548
				U/J Bearing	5.566
				U/J Bearing Lock—Bolt	5.586
				U/J Bearing Ret. Ring—Plate	5.586
				U/J Cork Washer Packing	5.560
				U/J Dust Plug	5.557
				U/J Dust Shield	5.560
				U/J Flange	5.545
				U/J Flange Bolt	5.546
				U/J Flange Bolt Lock Plate	5.586
				U/J Flange to Pinion Nut	5.595
				U/J Flange Spacer (Rear)	5.549
				U/J Repair Kit	5.548
				U/J Ring Bolt	5.563
				U/J Spider Journal	5.578
				U/J Yoke Pkg.	5.555
				U/J Yokes	5.555
				Upper Cont. Arm Bshg.	6.178
				Upper Cont. Arm Pivot Pin	6.178

CHASSIS ALPHABETICAL INDEX—Continued

Name	Group No.	Name	Group No.	Name	Group No.
V		V		W	
Vac. Brake Cylinder Assy.....	4.901	Valve Rocker Arm Stud.....	0.349	Wheel Brg. Oil Deflector (Front).....	6.037
Vac. Brake Cyl. Air Cleaner Parts.....	4.913	Valve Spring.....	0.303	Wheel Brg. Oil Seal (Front).....	6.326
Vac. Brake Cyl. Air Valve Parts.....	4.918	Valve Spring Cage.....	0.308	Wheel Brg. Oil Seal (Rear).....	5.822
Vac. Brake Cyl. Check Valve.....	4.955	Valve Spring Cup.....	0.309	Wheel Brg. Pkg. (Inner) (Frt.).....	6.311
Vac. Brake Cyl. Check Valve Seal.....	4.944	Valve Spring Cup Lock.....	0.310	Wheel Brg. Pkg. (Outer) (Frt.).....	6.313
Vac. Brake Cyl. Elbow—Hose— Clamp.....	4.931	Valve Spring Damper.....	0.308	Wheel Brg. Ret. (Rear).....	5.816
Vac. Brake Cyl. End Cover—Plate.....	4.904	Valve Spring Seat.....	0.309	Wheel Brg. Washer (Front).....	6.321
Vac. Brake Cyl. Floating Control Valve Parts.....	4.935	Valve Spring Shield.....	0.208	Wheel Bumper Frame Stop (Front).....	6.177
Vac. Brake Cyl. Housing—Shell.....	4.906	Valve Stem Oil Seal.....	0.308	Wheel Disc.....	5.858-5.871
Vac. Brake Cyl. Housing Gasket.....	4.910	Valves.....	0.296-0.297	Wheel Drum (Rear).....	5.809
Vac. Brake Cyl. Mtg. Bracket—Plate.....	4.898	Voltage Regulator.....	2.500	Wheel Hub Bolt.....	5.812-6.335
Vac. Brake Cyl. Piston Air Valve Reaction Plate.....	4.934	W		Wheel Hub Bolt Nut.....	5.813
Vac. Brake Cyl. Piston Parts.....	4.922-4.924	Water Inlet Elbow.....	1.153	Wheel Hub Bolt Wrench.....	5.842
Vac. Brake Cyl. Piston Plate Reaction Lever.....	4.934	Water Inlet Elbow Gskt.....	1.154	Wheel Hub Cap.....	5.858
Vac. Brake Cyl. Piston Plunger Reaction Plate.....	4.934	Water Inlet Tube.....	1.135	Wheel Hub Cap (Inner).....	6.330
Vac. Brake Cyl. Plate and Tube— Gasket.....	4.931	Water Manifold Thermostat.....	1.246	Wheel Hub Cap Ret. Clip.....	5.864
Vac. Brake Cyl. Poppet Valve Parts.....	4.928	Water Manifold Thermostat Ret.....	1.251	Wheel Hub & Drum.....	6.306
Vac. Brake Cyl. Push Rod.....	4.658	Water Outlet Elbow.....	1.153	Wheel Hub Oil Deflector.....	6.037
Vac. Brake Cyl. Push Rod Pin.....	4.926	Water Outlet Elbow Gasket.....	1.154	Wheel Hub Oil Seal Assy.....	6.326
Vac. Brake Cyl. Vac. Cup.....	4.910	Water Pump Assy.....	1.069	Wheel Jack.....	8.820
Vac. Brake Hyd. Cyl. Fittings.....	4.930	Water Pump Body & Bolt.....	1.073	Wheel Jack Handle.....	8.823
Vac. Brake Hyd. Cyl. Parts.....	4.910-4.911	Water Pump Body Plate.....	1.113	Wheel King Pin.....	(See King Pin)
Vac. Brake Hyd. Cyl. Plunger.....	4.915	Water Pump Gasket.....	1.079-1.114	Wheel Oil Deflector.....	5.815
Vac. Brake Hyd. Cyl. Valve.....	4.930	Water Pump Hub.....	1.363	Wheel Static Collector.....	6.331
Vac. Brake Vac. Reserve Tank.....	4.902	Water Pump Impeller.....	1.109	Wheel Tie Rod (Front).....	(See Tie Rod)
Valve & Body Assy. Air Vent.....	9.789	Water Pump Pulley.....	1.406	Wheel Weights.....	6.367
Valve Cover.....	0.439	Water Pump Repair Kit.....	1.002	Wheel Wrench.....	5.842
Valve Cover Gasket.....	0.443	Water Pump Seal Pkg.....	1.123	W/S Defroster Parts.....	9.779
Valve Cover Screw.....	0.446	Water Pump Seal Ret. Ring.....	1.121	W/S Washer Cont. Assy.....	8.798
Valve Grind Gasket Set.....	0.289	Water Pump Shaft Ret.....	1.091	W/S Washer Jar.....	8.798
Valve Guide.....	0.283-0.286	Water Temp. Dash Thermogage.....	1.148	W/S Washer Nozzle.....	8.798
Valve Lifter.....	0.459	Washers.....	8.927 thru 8.932	W/S Wiper Pipe.....	8.964
Valve Lifter Adj. Screw.....	0.476	Wheel Front or (Rear).....	5.803	Wire Clip.....	2.652-8.950
Valve Rocker Arm Cover.....	0.386	Wheel Assy.—Chassis.....	5.803	Wire Connector.....	2.649
Valve Rocker Arm Cover Gskt.....	0.423	Wheel Balance Weight.....	6.367	Wire Harness.....	2.480
Valve Rocker Arm Cover Plate.....	0.386	Wheel Brg. (Front).....	6.319	Y	
Valve Rocker Arm Pkg.....	0.333	Wheel Brg. (Rear).....	5.855	Yoke, End.....	8.946
		Wheel Brg. Balls (Front).....	6.318-6.319	Z	
		Wheel Brg. Cone (Front).....	6.314-6.315	Zip Clip Kit.....	9.030
		Wheel Brg. Cup (Front).....	6.316-6.317		