

PONTIAC MASTER PARTS CATALOG

9.011-9.045

YEAR	MODEL	PART NAME	Per Car	Part No.	
Group 9.011 WASHER, BODY BOLT					
1939-52	All			560063	
All	All	NUT, body bolt..... $\frac{1}{16}$ " I.D.	AR	120371	(8.915)
All	All	self locking..... $\frac{1}{2}$ "-20	AR	126006	(8.917)
1950-54	All	PLUG, body bolt hole.....For $1\frac{1}{2}$ " hole	2	432449	
Group 9.023 CUSHION—INSULATOR—SHIM—SPACER, BODY TO FRAME					
1940-54	All	CUSHION, body bolt.....Round	AR	504374	
1955-56	2867	rubber.....Round	AR	519587	
1954-56	All exc. 2867	INSULATOR, body to frame—w/washer and spacer.	AR	560957	
1954-56	All exc. 2867	rubber.....($1\frac{3}{4}$ " O.D.x $\frac{1}{8}$ " I.D.x $\frac{3}{16}$ " thick)	AR	560958	
1954	All exc. 2867	rubber.....($1\frac{3}{4}$ "x $1\frac{1}{2}$ "x $\frac{3}{16}$ " thick)	4	517949	
1942-48	2567	SHIM, No. 1 bolt std.	2	507894	
1949-53	2537-67 All	No. 1 bolt	2	511865	
1949-56	All	steel (.060 thick)	AR	513290	
1955-56	2867	No. 1 bolt	2	519586	
1955-56	2867	rubber	AR	519589	
1955-56	All	SPACER, floor pan to frame—rubber	4	519585	
Group 9.030 KIT, UNIVERSAL CLIP AND TEE BOLT					
NOTE: For attaching moldings to body and fenders.					
All	All	zip clip kit	AR	561644	
Group 9.038 PLATE, STEERING COLUMN AND PEDAL					
1949-52	All L.H.D.	Lower	1	511566	
1949-52	All L.H.D.	Upper	1	513806	
1953-54	All L.H.D., S.B.	Lower	1	517086	
1953-54	All L.H.D., S.B.	Upper	1	517081	
1955-56	All L.H.D., S.T.-S.B.		1	520136	
1955-56	All L.H.D., H.T.-S.B.		1	521304	
1949	All L.H.D.	PLATE, steering column and pedal, felt retainer	1	511563	
1949-52	All L.H.D.	felt retainer filler	1	511564	
1950-52	All L.H.D.		1	513805	
1955-56	All L.H.D.		1	519386	
1948-51	All L.H.D., H.T.	PLATE, clutch pedal floor holcover	1	510961	
1953-56	All H.T. & P.G.	SEAL, clutch pedal floor hole	1	517090	
Group 9.039 FELT, STEERING COLUMN AND PEDAL PLATE					
1941-48	All exc. 2507 L.H.D.	Upper	1	506322	
1941-48	All exc. 2507 L.H.D.	Lower	1	506326	
1941-48	26-29 L.H.D.	Upper	1	506324	
1941-48	26-29 L.H.D.	Lower	1	506328	
1949	All L.H.D.	Upper	1	511570	
1949	All L.H.D.	Lower	1	511571	
1950-52	All L.H.D.	Upper	1	513798	
1950-52	All L.H.D.	Lower	1	513799	
1955-56	All S.B.	PLATE, pedal seal retaining	1	519387	
1953-56	All P.B.	RETAINER, clutch pedal seal	1	518326	
1953-54	All P.B.	steering column seal	1	518327	
1953-56	All S.T.	SEAL, clutch pedal	1	517089	
1953-56	All S.B.	brake pedal	1	517089	
1955-56	All exc. P.B.	SUPPORT, clutch and brake pedal seal	1-2	519385	
Group 9.045 GROMMET—SEAL, STEERING COLUMN TOE BOARD					
1949-52	All L.H.D.	GROMMET	1	511472	
1953-54	All L.H.D.	black	1	515043	
1954	All L.H.D.	beige	1	518384	
1954	All L.H.D.	red	1	518385	
1954	All L.H.D.	yellow	1	518386	
1955-56	All L.H.D.		1	519549	
1953-54	All L.H.D.	SEAL, steering column	1	517088	
1955-56	All	($3\frac{1}{8}$ " O.D.)	1	517088	

Group 9.106 COVER ASSY., TRANSMISSION FLOOR HOLE

1948	25 L.H.D., H.T.		1	510900
1948	26 L.H.D., H.T.		1	510958
1948	All H.T.	inspection hole	1	513996
1948	All H.T.	servo band adjusting	1	510897
1949-54	All H.T.	servo band adjusting	1	511999
1949-54	All	inspection hole	1	513996
1950-54	All	pressure regulator	1	513744

Group 9.127 ANTI-SQUEAK, COWL LEDGE

1941-48	25 All		1	4125516
1942-48	26 All		1	4125517
1946-48	Sta. wag.		1	4125517
1949-52	All		2	4562181
1953-54	All		1	4595571
1955	All		1	4650471
1956	All	Center	1	4674929
1956	All	Outer	2	4674930
1950-52	All	BAFFLE, hood to shroud water—rubber	1	514121

Group 9.128 RETAINER, SHROUD HOOD LEDGE LACING

1946-48	All		2	4148933
1949-54	All	CLIP, shroud hood ledge lacing	6	374488
1955-56	All		9	4649455

Group 9.131 BRACE, DASH TO INSTRUMENT PANEL

1949-52	2567		R.H.	1	512769
1949-52	2567		L.H.	1	512757
1953-54	2567		R.H.	1	515111
1953-54	2567		L.H.	1	515112

Group 9.170 COMPRESSOR, AIR CONDITIONER

1954	P/8 A.C.	COMPRESSOR ASSY.	1	3133322
1955	P/8 A.C.	partial	1	5441308
1956	P/8 A.C.	partial	1	5441499
1954	P/8 A.C.	GASKET, compressor bearing	2	3134102
1954	P/8 A.C.	compressor bottom plate	1	3134103
1954	P/8 A.C.	KIT, cyl. head and refrigerant pipe repair	1	3133304
1955	P/8 A.C.	SPACER, compressor discharge hose	2	3134293
1956	P/8 A.C.	compressor to condenser hose	2	3134293

Group 9.171 BRACKET—BRACE—INSULATOR, COMPRESSOR MOUNTING

1954	P/8 A.C.	BRACKET ASSY., compressor mounting	1	518695
1955	P/8 A.C.		1	521377
1955	P/8 A.C.	compressor to front inner insulator	1	521086
1955	P/8 A.C.	compressor to front outer insulator	1	521087
1955	P/8 A.C.	compressor to rear inner insulator	1	521088
1956	P/8 A.C.	compressor mounting	1	522522
1954	P/8 A.C.	BRACE, compressor mounting bracket	1	518921
1954	P/8 A.C.	compressor	1	519241
1956	P/8 A.C.	compressor mounting bracket	1	522523
1955	P/8 A.C.	INSULATOR, compressor	1	508748
1955	P/8 A.C.	Front inner	1	760350
1955	P/8 A.C.	Front outer	1	521089
		Rear	1	

Group 9.173 BOLT—NUT, COMPRESSOR INSULATOR

1955	P/8 A.C.	BOLT, front inner insulator	2	512389	(5.506)
1955	P/8 A.C.	NUT, front inner insulator bolt	2	1435440	(6.172)

Group 9.175 COMPRESSOR SHAFT OIL SEAL PARTS

1954	P/8 A.C.	KIT , compressor shaft seal	1	3135683
1956	P/8 A.C.	SEAL , clutch coil housing	(1 5/8" O.D.)	1 5918315
1956	P/8 A.C.	clutch coil housing to pump	(2 3/4" O.D.)	1 5916214
1956	P/8 A.C.	oil drain hole	(1/4" O.D.)	1 5918627
1955	P/8 A.C.	SEAL PKG. , compressor shaft oil	1	5876728
1956	P/8 A.C.		1	5876741
1956	P/8 A.C.	SPACER , compressor shaft oil seal	1	5918459
1956	P/8 A.C.	SHIM, PKG , compressor clutch mounting	AR	5876742
1955	P/8 A.C.	SLINGER , compressor shaft oil	1	5917441
1955	P/8 A.C.	PIN , seal seat	1	5917063
1955	P/8 A.C.	RETAINER , seal seat mounting	1	5917100
1955-56	P/8 A.C.	SCREW , seal housing mounting	6	439983 (8.908)

Group 9.177		CORE—ELBOW—CAP, COMPRESSOR OIL TEST			
1955	P/8 A.C.	CORE ASSY., compressor oil test valve	AR	1138041	
1955-56	P/8 A.C.	ELBOW ASSY., compressor oil test valve	1	5912192	
1955-56	P/8 A.C.	CAP, compressor oil test valve	1	5917484	(9.226)
Group 9.178		VALVE—GASKET, COMPRESSOR PRESSURE RELIEF			
1955-56	P/8 A.C.	VALVE ASSY.	1	5911708	
1955-56	P/8 A.C.	GASKET, pressure relief valve	1	640044	
Group 9.180		PULLEY—SHAFT—BRACKET, COMPRESSOR			
1954	P/8 A.C.	PULLEY, COIL AND BRG. ASSY., compressor	1	3133346	
1954-56	P/8 S.S.-A.C.	PULLEY, idler	1	518730	
1955	P/8 H.T.-A.C.	PULLEY AND BRG., compressor	1	5911928	
1956	P/8 A.C.		1	5912772	
1954-56	P/8 S.S.-A.C.	SHAFT AND BRG., idler pulley	1	954604	
1954	P/8 S.S.-A.C.	BRACKET ASSY., idler pulley	1	518727	
1955-56	P/8 A.C.		1	520972	
1955-56	P/8 S.S.-A.C.	compressor idler	1	520980	
1954-56	P/8 S.S.-A.C.	WASHER, idler pulley bracket	1	502306	
Group 9.181		BEARING—RING—SHIM—SCREW—WASHER, COMPRESSOR PULLEY			
1955	P/8 A.C.	BEARING, pulley	1	5911820	
1956	P/8 A.C.		1	5912761	
1955-56	P/8 A.C.	RING, pulley bearing retainer	1	5916837	
1955	P/8 A.C.	SHIM PKG., clutch mntg. (.015, .020 and .025 thick)	AR	5876664	
1956	P/8 A.C.	compressor pulley (.010, .015, .020 and .025" thick)	AR	5876760	
1956	P/8 A.C.	SPACER, compressor hub to pulley bearings	1	5918343	
1955	P/8 A.C.	SCREW AND WASHER, pulley retaining	1	5911821	
1955	P/8 A.C.	WASHER AND FELT ASSY., pulley retaining	1	5912455	
1956	P/8 A.C.	WASHER ASSY., bearing seal	1	5912760	
1956	P/8 A.C.	WASHER, pulley mounting—lock	1	5918358	
1956	P/8 A.C.	NUT, pulley mounting	1	639795	
Group 9.185		BELT, COMPRESSOR DRIVE			
1954	P/8 A.C.		1	518689	
1955-56	P/8 A.C.		1	519317	
Group 9.186		COIL—RETAINER—GASKET, COMPRESSOR CLUTCH			
1955-56	P/8 A.C.	COIL, clutch actuating	1	5912343	
1955-56	P/8 A.C.	RETAINER PKG., clutch coil	1	5876681	
1955	P/8 A.C.	GASKET, coil insulator	Inner	1	5917049
1955	P/8 A.C.		Outer	1	5917050
1956	P/8 A.C.		2	5917050	
Group 9.188		BRUSH—PLATE—RETAINER—RING, COMPRESSOR CLUTCH			
1954	P/8 A.C.	PLATE AND HUB ASSY., compressor clutch	1	3133392	
1955	P/8 A.C.	PLATE AND WEIGHT ASSY., clutch	1	5912346	
1956	P/8 A.C.		1	5912765	
1955	P/8 A.C.	PLATE AND ARMATURE ASSY., clutch	1	5912345	
1956	P/8 A.C.		1	5912762	
1955-56	P/8 A.C.	BALL, clutch actuating—nylon	3	5917481	
1954	P/8 A.C.	BRUSH AND BRACKET ASSY.	1	3133349	
1954	P/8 A.C.	BRUSH ASSY., compressor clutch	Positive	1	3132728
1954	P/8 A.C.		Ground	1	3134013
1954	P/8 A.C.	RETAINER, compressor clutch plate and hub	1	3132442	
1954	P/8 A.C.	RING, compressor clutch spacer	1	3132486	
1955-56	P/8 A.C.	clutch cover	1	5918169	
1955	P/8 A.C.	clutch spring retainer—snap	1	5916839	
1955	P/8 A.C.	SPRING, clutch	1	5916834	
1956	P/8 A.C.	compressor actuating plates	3	5918339	
1954	P/8 A.C.	BOLT, compressor clutch brush and bracket	2	3132635	
Group 9.190		CONDENSER ASSY., REFRIGERANT			
1954	P/8 A.C.		1	8522905	
1955	P/8 A.C.		1	8522665	
1956	P/8 A.C.		1	8523660	
1954	P/8 A.C.	SUPPORT, condenser mounting	1	520219	
Group 9.195		RECEIVER, REFRIGERANT			
1954	P/8 A.C.		2	3132218	
1955	P/8 A.C.	w/shut-off valve	1	3133064	

Group 9.198 VALVE ASSY., AUTOMATIC EXPANSION

1954-55	P/8 A.C.	by pass	1	3132215
---------	----------	---------	---	---------

Group 9.202 INDICATOR, LIQUID REFRIGERANT (SIGHT GLASS)

1954	P/8 A.C.		1	3132214
1955	P/8 A.C.		1	3133352
1956	P/8 A.C.		1	3135380
1954	P/8 A.C.	GASKET , indicator to dehydrator	1	3132439

Group 9.205 DEHYDRATOR ASSY., REFRIGERANT

1954-55	P/8 A.C.	(10" long)	1	3132362
1955	P/8 A.C.	DEHYDRATOR, FILTER AND RECEIVER ASSY. —2nd type (13 3/4" long)	1	3134839
1956	P/8 A.C.		1	5912676
1955	P/8 A.C.	CLAMP , dehydrator—1st type (2" dia.)	1	3133321
1955-56	P/8 A.C.	2nd type (2 1/4" dia.) Upper	1	3134439
1955-56	P/8 A.C.	2nd type (2 1/4" dia.) Lower	1	3134440

Group 9.206 BRACKET—SUPPORT, DEHYDRATOR

1954	P/8 A.C.	BRACKET , dehydrator to fender skirt	1	518827
1954	P/8 A.C.	SUPPORT , dehydrator to fender skirt	1	518826

Group 9.210 EVAPORATOR AND PARTS, REFRIGERANT

1954	P/8 A.C.	EVAPORATOR , w/expansion valve	1	3132093
1955	P/8 A.C.	w/3 outlet valve (see note)	1	3134452
1956	P/8 A.C.	w/expansion valve	1	3135230
1954	P/8 A.C.	CORE ASSY. , evaporator—w/insulation	1	8522715
1955	P/8 A.C.	w/fittings	1	8523319
1956	P/8 A.C.	w/fittings	1	8523722
1955	P/8 A.C.	DRAIN , evaporator case	1	3134505
1954	P/8 A.C.	GASKET , evaporator to fender baffle—rubber	1	3132263
1955	P/8 A.C.	evaporator case	1	3133261
1955-56	P/8 A.C.	evaporator to dash	1	3133317
1956	P/8 A.C.	evaporator case	2	3135372
1955	P/8 A.C.	TUBE ASSY. , expansion valve external equalizer	1	3133355
1954	P/8 A.C.	VALVE ASSY. , evaporator pressure regulator	1	3132678
1955	P/8 A.C.	three outlets (see note)	1	3134442

NOTE: Also use 3134453 Pipe, 3134490 Elbow and 3134491 Hose when replacing 1st type valve w/four outlets.

Group 9.213 VALVE ASSY., THERMOSTATIC EXPANSION

1954	P/8 A.C.		1	3132216
1955	P/8 A.C.		1	3135111
1956	P/8 A.C.		1	5910950

Group 9.215 BLOWER—MOTOR—DUCT, AIR CONDITIONER

1954	P/8 A.C.	BLOWER ASSY. , w/motor	1	3132090
1955	P/8 A.C.	w/motor	1	3133152
1956	P/8 A.C.	w/motor and filter	1	3135236
1954	P/8 A.C.	MOTOR ASSY. , blower	1	5047725
1955	P/8 A.C.		1	5047785
1956	P/8 A.C.		1	5047855
1954	P/8 A.C.	DUCT ASSY. , blower outlet—w/air valves	1	3132091
1955	P/8 A.C.	GASKET , blower to fender skirt	1	3133245
1954	P/8 A.C.	HOSE , blower outlet (4" I.D.)	1	518814
1955	P/8 A.C.		1	3134400
1956	P/8 A.C.		1	522416

(9.220)

Group 9.216 INLET—FILTER—GASKET, EVAPORATOR

1954	P/8 A.C.	INLET ASSY. , evaporator—w/filter	1	3132092
1955	P/8 A.C.	CONTROL ASSY. , air recirculating	1	520713
1956	P/8 A.C.	COVER , filter access hole—w/gaskets	1	3133293
1954	P/8 A.C.	FAN ASSY. , blower motor	1	3132700
1955	P/8 A.C.	FILTER ASSY. , evaporator inlet	1	3132237
1956	P/8 A.C.		1	3134296
1955	P/8 A.C.		1	3135652
1955	P/8 A.C.	HOUSING ASSY. , filter	1	3133249
1954	P/8 A.C.	BOOT , inlet valve to filter hsg.	1	3133254
1954	P/8 A.C.	BRACKET , filter retaining—on air scoop	Side	520409
1954	P/8 A.C.	on air scoop	Lower	520410
1955	P/8 A.C.	GASKET , inlet to fender baffle—rubber	1	3132255
1955	P/8 A.C.	filter housing to fender skirt	1	3133313
1955	P/8 A.C.	air inlet valve assy.	1	3133724
1955	P/8 A.C.	air filter access hole cover	1	3133320
1956	P/8 A.C.	LINK ASSY. , blower air valve lever	1	3133031
1955	P/8 A.C.	PLUG , filter housing flush hole	1	3134412
1955-56	P/8 A.C.	evaporator flush hole	2	3134412
1955	P/8 A.C.	RETAINER , air filter access hole cover screw	2	3134180
1955	P/8 A.C.	SCREW , air filter access hole cover	2	3133285
1955	P/8 A.C.	VALVE ASSY. , air inlet	1	3133251

(9.779)

Group 9.220		HOSE—CLAMP—SLEEVE, EVAPORATOR	
1954	P/8 A.C.	HOSE, (4" I.D.) Inlet	1 518814
1954	P/8 A.C.	HOSE, (4" I.D.) Outlet	1 3132253
1954	P/8 A.C.	CLAMP, hose	AR 3133386
1954	P/8 A.C.	SLEEVE, air outlet hose clamp—rubber	1 3132440
Group 9.225		HOSE ASSY., COMPRESSOR DISCHARGE	
1954	P/8 A.C.	to elbow	1 3133308
1955	P/8 A.C.		1 3133295
1956	P/8 A.C.	to condenser	1 3135235
1954	P/8 A.C.	ELBOW ASSY., discharge hose to condenser	1 3133303
1955-56	P/8 A.C.	GROMMET, discharge hose	1 3133318
Group 9.226		VALVE—CAP—GASKET—LEAF—SCREEN, COMPRESSOR	
1954	P/8 A.C.	VALVE ASSY., compressor shut-off Suction	1 3132368
1954	P/8 A.C.	Discharge	1 3133307
1955	P/8 A.C.	Suction and discharge	1 5912100
1956	P/8 A.C.	Suction and discharge	1 5912811
1955-56	P/8 A.C.	CAP, compressor valve	2 5917027
1955	P/8 A.C.	valve gauge connector (1/4" flare spec.)	2 5917484
1954	P/8 A.C.	GASKET, valves to compressor	2 3132986
1954	P/8 A.C.	suction screen recess	1 3134101
1955-56	P/8 A.C.	valve shaft cap	2 624357
1956	P/8 A.C.	suction and discharge valve	2 5917501
1956	P/8 A.C.	SEAL, suction and discharge valve "O" ring	2 5887779
1954	P/8 A.C.	LEAF, suction valve	2 3134089
1954	P/8 A.C.	PLATE ASSY., valve	1 3134086
1954	P/8 A.C.	SCREEN, suction recess	1 3134090
1954	P/8 A.C.	SCREW, valve to compressor	4 3133323
1956	P/8 A.C.		1 5917030
1955	P/8 A.C.	SCREW AND WASHER, valve body mounting	1 5911916
Group 9.227		PIPE ASSY., CONDENSER TO RECEIVER	
1954	P/8 A.C.		1 3132679
1955	P/8 A.C.	(7 3/4" long)	1 3133065
1955	P/8 A.C.	2nd type (11 1/4" long)	1 3134430
1956	P/8 A.C.		1 522514
Group 9.229		ELBOW—HOSE—PIPE, COMPRESSOR SUCTION AND BY-PASS	
1955	P/8 A.C.	ELBOW ASSY., w/1 male and 2 female fittings	1 3134490
1955	P/8 A.C.	HOSE—w/male and female fittings	1 3134491
1956	P/8 A.C.	w/male and female fittings	1 3135234
1954	P/8 A.C.	PIPE, vibration eliminator type	1 3132681
Group 9.231		PIPE ASSY., RECEIVER TO LIQUID INDICATOR	
1954	P/8 A.C.		1 3132680
1955	P/8 A.C.	expansion valve to indicator	1 3133353
1955	P/8 A.C.	receiver to dehydrator	1 3133337
1956	P/8 A.C.	receiver to indicator	1 3135233
1956	P/8 A.C.	GROMMET, receiver to evaporator tube	1 3133351 (9.235)
Group 9.235		PIPE ASSY., DEHYDRATOR TO EXPANSION VALVE	
1954	P/8 A.C.		1 3132428
1955	P/8 A.C.	1st type (see note)	1 3133350
1955	P/8 A.C.	2nd type (see note)	1 3134838
1955	P/8 A.C.	GROMMET, pipe	1 3133351
NOTE: 1st type used on cars with separate Receiver and Dehydrator. 2nd type used on cars with Receiver, Filter and Dehydrator in one unit.			
Group 9.238		PIPE ASSY., EVAPORATOR	
1955	P/8 A.C.	PIPE ASSY., regulator to by-pass valve (27 1/4" long)	1 3134453
1954	P/8 A.C.	BRACKET, compressor suction pipe to fender skirt	1 518828
Group 9.240		SEAL, COMPRESSOR VALVE BODY	
1955-56	P/8 A.C.	to compressor—"O" ring	2 5887997
Group 9.242		BRACKET—SUPPORT, PIPE	
1954	P/8 A.C.	BRACKET, receiver to liquid indicator and by-pass pipes	1 518825
1954	P/8 A.C.	SUPPORT, receiver to liquid indicator and by-pass pipes	1 518824
1955	P/8 A.C.	SPACER, fluid pipes—rubber	1 3133319

Group 9.250 SCOOP, BLOWER AIR INLET

1954	P/8 A.C.		1	3132089	
1955	P/8 A.C.	 w/gasket.....	1	3133250	
1955	P/8 A.C.	GASKET , air scoop..... Inlet end	1	3133314	
1955	P/8 A.C.	 Outlet end	1	3133315	

Group 9.255 CLAMP, AIR HOSE

1954	P/8 A.C.		5	513479	(9.786)
1955-56	P/8 A.C.	 air hose to steering column.....	1	520525	

Group 9.260 HOSE, DISTRIBUTOR OUTLET

1954	P/8 A.C.	 (2 1/2" I.D.) R.H.	1	518805	
1954	P/8 A.C.	 (3" I.D.) L.H.	1	518807	
1954	P/8 A.C.	 (2" I.D.) Center	1	518806	
1955-56	P/8 A.C.	 (2 1/2" I.D. x 12") R.H.	1	520313	
1955-56	P/8 A.C.	 (3" I.D. x 50") L.H.	1	520315	
1955-56	P/8 A.C.	 (2" I.D. x 26") Center	1	520314	
1955-56	P/8 A.C.	SUPPORT , air hose to dash..... R.H.	1	520528	
1955-56	P/8 A.C.	 L.H.	1	518923	
1955-56	P/8 A.C.	SCREW , air hose supt. to dash- L.H. (No. 10-12 x 5/8")	1	161901	(8.977)
1955-56	P/8 A.C.	NUT , air hose supt. to dash..... L.H.	1	511965	

Group 9.262 AIR DISTRIBUTOR PARTS

1954	P/8 A.C.	DISTRIBUTOR ASSY. , air.....	1	3132094	
1955	P/8 A.C.		1	3133252	
1956	P/8 A.C.		1	521242	
1954	P/8 A.C.	COVER , air distributor.....	1	519114	
1954	P/8 A.C.	FLANGE , air distributor to dash.....	1	518671	
1954	P/8 A.C.	RING , air distributor dash sealing.....	1	519492	
1954	P/8 A.C.	SLEEVE , air dist. to dash inlet flange.....	1	518813	
1954	P/8 A.C.	SPACER , air dist. to dash.....	4	518802	

Group 9.264 AIR OUTLET PARTS

1955-56	P/8 A.C.	ADAPTER , outlet nozzle..... R.H.	1	520184	
1955-56	P/8 A.C.	 L.H.	1	520185	
1954	P/8 A.C.	BEZEL ASSY. , air outlet nozzle..... R.H.	1	518737	
1954	P/8 A.C.	 L.H.	1	518738	
1955-56	P/8 A.C.	 R.H.	1	520481	
1955	P/8 A.C.	 L.H.	1	520482	
1956	P/8 A.C.	 L.H.	1	521857	
1955-56	P/8 A.C.	BRACKET , nozzle mounting..... Inner R.H.	1	520178	
1955-56	P/8 A.C.	 Inner L.H.	1	520179	
1955-56	P/8 A.C.	 Outer R.H.	1	520180	
1955-56	P/8 A.C.	 Outer L.H.	1	520181	
1954	P/8 A.C.	DUCT , air outlet..... Center	1	518711	
1955-56	P/8 A.C.	 Center	1	520273	
1954	P/8 A.C.	NOZZLE , air outlet.....	2	518681	
1955-56	P/8 A.C.		2	520398	
1955-56	P/8 A.C.	PLATE , nozzle retaining.....	2	520477	
1954	P/8 A.C.	RETAINER , nozzle..... R.H.	1	518739	
1954	P/8 A.C.	 L.H.	1	518740	
1955-56	P/8 A.C.		2	520189	
1954	P/8 A.C.	SPACER , nozzle mounting..... R.H.	1	518709	
1954	P/8 A.C.	 L.H.	1	518710	
1955-56	P/8 A.C.	SPRING , nozzle tension.....	2	520194	
1955-56	P/8 A.C.	SCREW , outlet adapter to nozzle (Hex. hd. 10-24 x 1/2")	4	172313	
1954	P/8 A.C.	NUT , air outlet spacer retaining..... (3 11/16" O.D.)	2	518708	

Group 9.275 SWITCH ASSY., MASTER

1954	P/8 A.C.	SWITCH	1	1998083	
1955	P/8 A.C.		1	520146	
1956	P/8 A.C.		1	1998144	
1955	P/8 A.C.	LINK , switch actuating.....	1	520137	
1954	P/8 A.C.	RELAY ASSY. , switch.....	1	1116897	(10.777)
1955-56	P/8 A.C.		1	1116895	(10.777)

Group 9.276 SWITCH-RESISTOR-WIRE-THERMOSTAT, AIR CONDITIONER

1954	P/8 A.C.	SWITCH ASSY. , blower motor.....	1	518966	
1955	P/8 A.C.		1	520161	
1956	P/8 A.C.		1	521599	
1954	P/8 A.C.	RESISTOR , blower switch.....	1	518967	
1954	P/8 A.C.	WIRE HARNESS , air conditioner.....	1	2961215	
1954	P/8 A.C.	master switch to relay.....	2	2961916	

Group 9.276 SWITCH-RESISTOR-WIRE-THERMOSTAT, AIR CONDITIONER (Continued)

1955-56	P/8 A.C.	voltage regulator to relay—w/fuse	1	2961693	
1955	P/8 A.C.	air conditioner main	1	2963457	
1956	P/8 A.C.	air conditioner main	1	2964253	
1955-56	P/8 A.C.	FUSE, regulator to relay	1	120114	(8.965)
1955	P/8 A.C.	STRAP, compressor ground	1	2963355	
1956	P/8 A.C.	THERMOSTAT ASSY., distributor	1	522239	
1954	P/8 A.C.	GROMMET, blower motor wire thru fender skirt	1	510458	(9.773)

Group 9.277 CONTROL-VALVE-SHAFT, AIR OUTLET

1954	P/8 A.C.	CONTROL ASSY., less knob	1	518797	
1955	P/8 A.C.		1	520147	
1956	P/8 A.C.		1	522166	
1954	P/8 A.C.	VALVE ASSY., center air outlet	1	518715	
1955-56	P/8 A.C.		1	520156	
1954	P/8 A.C.	SHAFT, center air outlet valve	1	518714	
1955-56	P/8 A.C.		1	520155	
1954-56	P/8 A.C.	WASHER, air valve anti-rattle	2	518713	

Group 9.278 KNOB, AIR CONTROL

1954	P/8 A.C.		1	516914	(8.866)
1955	P/8 A.C.		1	520154	
1956	P/8 A.C.		1	522293	
1954-56	P/8 A.C.	SCREW, air temp. control knob (No. 8-32 x 5/16")	1	453069	(8.975)

Group 9.279 PANEL ASSY., AIR CONDITIONER CONTROL

1954	P/8 A.C.	w/lens	1	518735	
1955	P/8 A.C.		1	520138	
1956	P/8 A.C.		1	522198	
1954	P/8 A.C.	CLAMP, control panel	1	518712	
1955	P/8 A.C.		Upper	1	520143
1955-56	P/8 A.C.		Lower	1	520144
1954	P/8 A.C.	RETAINER, control panel	1	518700	

Group 9.281 CABLE-CLAMP-BRACKET-LEVER, CONTROL

1954	P/8 A.C.	CABLE, air valve and master switch control (58 3/4" long)	1	518785	
1954	P/8 A.C.	air temp. valve control (55 3/4" long)	1	518786	
1955	P/8 A.C.	air valve control (43 1/4" long)	2	520271	
1956	P/8 A.C.	air valve control (21" long)	1	522322	
1956	P/8 A.C.	thermostat control (29 1/4" long)	1	522321	
1954	P/8 A.C.	CLAMP, control cables	4	518793	
1955-56	P/8 A.C.	air temp. and control valve cable	2	520145	
1954	P/8 A.C.	BRACKET, valve and master switch cable	1	518782	
1954	P/8 A.C.	air temp. valve control cable	1	518783	
1955	P/8 A.C.	air control valve cable clamp	1	521522	
1954	P/8 A.C.	LEVER, air valves control	2	518784	
1955-56	P/8 A.C.	SCREW, air temp. and valve control cable clamp	4	172313	(9.264)

Group 9.282 REFRIGERANT, AIR CONDITIONER

1954-56	P/8 A.C.	REFRIGERANT, air cond.—25 lb. cyl. Freon No. 12	AR	563875	
1954-56	P/8 A.C.	LEAK DETECTOR, 4 oz. bottle	AR	564255	
1955-56	P/8 A.C.	OIL, compressor—1 qt. bottle	1	5416939	

Group 9.647 ANTENNA PARTS, RADIO

1949-52	All	ADAPTER, antenna to fender—manual operated antenna	1	515717	
1953-54	All	antenna to fender	1	515536	
1955-56	All	antenna to shroud	Upper	1	520121
1955-56	All	antenna to shroud	Lower	1	520120
1952	All	ADAPTER, antenna switch to inst. panel—w/motor operated antenna	1	516427	
1952	All	antenna to fender	1	516421	
1953-54	All	antenna to fender	1	516591	
1953-54	All	antenna switch to inst. panel	1	516954	
1955-56	All	antenna to fender	1	520348	
1946-47	All w/Ward	BAR, antenna to fender bracket to spacer	1	509145	
1948	All w/Radiart	BODY AND TUBE ASSY., antenna support	1	511073	
1949-52	All	die cast type—manual operated antenna	1	512237	
1953-54	All	w/manual operated antenna	1	515537	
1955-56	All	w/manual operated antenna	1	520122	
1942-48	25 w/Radiart	BRACE, to fender	1	507608	
1946-47	All w/Ward		1	509146	
1942-47	All exc. w/Ward	BRACKET, antenna to lower brace	1	507591	
1946-47	All w/Ward		1	509142	
1949-52	All	support tube to fender—manual operated antenna	1	512240	
1952	All	support tube to fender—w/motor operated antenna	1	516426	
1952	All	antenna support—w/motor operated antenna	1	516423	

Group 9.647 ANTENNA PARTS, RADIO (Continued)

1953-54	All	support tube to fender—w/manual operated antenna	1	515540	
1953-54	All	support tube to fender—w/motor operated antenna	1	516906	
1953-54	All	antenna support—w/motor operated antenna	1	516903	
1949-50	All	CONTACT , antenna ground—hood	1	512244	
1949-50	All	fender	1	512245	
1952-54	All	antenna lead-in mast—w/motor operated antenna	1	517059	
1955-56	All	antenna lead in mast—w/motor operated antenna	1	520043	
1952-54	All	FUSE , 30 amp. w/motor operated antenna (1½" long)	1	120114	(8.965)
1955-56	All		1	147685	(8.965)
1941-52	All	GROMMET , antenna lead-in	1	4115225	
1953-54	All		1	4603180	
1946-47	All w/Ward	HOUSING ASSY. , antenna mast support	1	510972	
1942-48	All w/Radiant	INSULATOR , antenna mast mounting to fender	1	507981	
1942-48	All w/Ward	to fender	1	507930	
1953-54	All	antenna tube nipple—w/motor operated antenna	1	517171	
1955-56	All	antenna to fender—w/motor operated antenna	1	520037	
1942-47	All w/Radiant	LEAD IN ASSEMBLY , mast antenna	1	509272	
1946-47	All w/Ward		1	509149	
1947-48	All w/Radiant	w/detachable mast type	1	510584	
1949-52	All	antenna to radio	1	512241	
1953-54	All	antenna to radio	1	515541	
1955-56	All	w/manual operated antenna	1	520123	
1955	All	w/motor operated antenna	Front	520038	
1955	All	w/motor operated antenna	Rear	520476	
1956	All exc. 2762-63-64	w/motor operated antenna	Front (170" long)	522056	
1956	2762-63-64 All	w/motor operated antenna	Front (194" long)	522055	
1956	All	w/motor operated antenna	Rear (32" long)	522057	
1946-47	All w/Ward	MAST ASSEMBLY , antenna	1	509136	
1946-47	All w/Ward	less housing	1	510968	
1947-54	All	w/manual operated antenna	(63" long)	511188	
1948-54	All	w/manual operated antenna	(93" long)	511503	
1952-54	All	w/motor operated antenna		516641	
1955-56	All	w/manual operated antenna	(58" long)	520124	
1955-56	All	w/motor operated antenna		520946	
1952	All	MOTOR AND DRIVE UNIT ASSY. , w/motor operated antenna	1	516645	
1953-54	All	w/motor operated antenna	1	517315	
1955	All	w/motor operated antenna	1	520025	
1956	All	w/motor operated antenna	1	522058	
1942-48	All w/Radiant	NUT , mast mounting	1	507982	
1942-47	All w/Ward	antenna to fender mounting	1	507931	
1946-47	All w/Ward	mounting bracket to antenna	1	509143	
1947-48	All w/Radiant	w/detachable mast antenna	1	510746	
1949-54	All	to fender	1	554422	
1949-54	All	mast to support	1	554371	
1952	All	antenna mounting—w/motor operated antenna	1	516424	
1952	All	switch to inst. panel—w/motor operated antenna	1	516430	
1952-54	All	support bracket mounting—w/motor operated antenna	1	516646	
1953-54	All	antenna mounting—w/motor operated antenna	1	517192	
1953-54	All	switch to inst. panel—w/motor operated antenna	1	516958	
1955-56	All	switch to inst. panel—w/motor operated antenna	1	520207	
1955-56	All	antenna mounting—w/manual operated antenna	1	520125	
1955-56	All	body to adapter—w/manual operated antenna	1	520126	
1955-56	All	antenna to fender—w/motor operated antenna	1	517193	
1942-48	All w/Radiant	PAD , to fender insulator	1	507983	
1942-47	All w/Ward		1	507932	
1949-52	All	to fender adapter—manual operated antenna	1	512242	
1952	All	to fender adapter—w/motor operated antenna	1	516428	
1953-54	All	antenna to fender—w/motor operated antenna	1	517172	
1955-56	All	antenna to shroud—w/manual operated antenna	1	520127	
1955-56	All	antenna to fender—w/motor operated antenna	1	520039	
1956	2762-63 All	antenna to fender—w/motor operated antenna	1	522393	
1955-56	All	RETAINER , antenna lead in contact	1	1166016	
1942-54	All	SEAL , antenna mounting nut—manual operated antenna	1	507984	
1953-54	All	fender adapter—w/manual operated antenna	1	515543	
1953-54	All	(¾" O.D.)	1	515542	
1942-54	All	fender adapter—w/manual operated antenna	1	515542	
1950-54	All	(1" O.D.)	1	515542	
1952-54	All	SCREW , tube and bracket support—manual operated antenna	3	142806	
1950-54	All	SLEEVE , antenna non-glare—w/manual operated antenna	1	514102	
1952-54	All	w/motor operated antenna	1	517017	
1942-47	All w/Radiant	SPACER , antenna to fender	1	507915	
1946-47	All w/Ward		1	509144	
1947-48	All w/Radiant	w/detachable type antenna	1	511197	
1949-54	All	antenna to fender—manual operated antenna	1	512243	
1953-54	All	antenna tube to fender—w/motor operated antenna	1	517173	

Group 9.647 ANTENNA PARTS, RADIO (Continued)

1955-56	All	lower adapter to body—w/manual operated antenna	1	520128
1946-47	All w/Ward	STUD , antenna mast contact	1	510969
1952	All	SWITCH , antenna—w/motor operated antenna	1	516429
1953-54	All		1	520492
1955-56	All		1	520040
1952-54	All	TIP , antenna mast—w/motor operated antenna	1	516643
1955-56	All	w/motor operated antenna	1	1166019
1952	All	TUBE ASSY. , antenna nylon housing—w/motor operated antenna	1	516644
1952	All	antenna body—w/bushing and insulator—w/motor operated antenna	1	516640
1953-54	All	antenna nylon housing—w/motor operated antenna	1	516905
1953-54	All	antenna body—w/bushing and insulator—w/motor operated antenna	1	516904
1955	All	antenna nylon housing—w/motor operated antenna	1	520856
1955-56	All	antenna body—w/bushing and insulator—w/motor operated antenna	1	520029
1956	All	antenna nylon housing—w/motor operated antenna	1	522271
1940	All Vacuum	WASHER , antenna mtg.	1	1429832
1941-42	All	antenna control valve—mounting	1	1429830
1942-47	All w/Ward	contact stud to housing	1	511032
1942-48	All w/Radiart	to fender spacer rubber	1	508160
1946-47	All w/Ward	antenna mast contact stud (flat)	1	510970
1946-47	All w/Ward	antenna mast contact stud (lock)	1	510971
1955-56	All	mast to body—w/manual operated antenna	1	520129
1952-54	All	WIRE ASSY. , switch to antenna—w/motor operated antenna	1	5296415
1955-56	All	antenna brace to fender brkt. ground	1	2961567
1955-56	All	switch to fuse block	1	2961569
1955	All	switch to dash (47" long)	1	2961568
1955	All	motor to dash (166" long)	1	2963451
1956	All exc. 2762-63-64	motor to dash (184" long)	1	2964189
1956	2762-63-64 All	motor to dash (133" long)	1	2963759
1956	2762-63-64 All	switch to dash (47½" long)	1	2964337

NOTE: The Ward Antenna may be identified by the red plastic ball on the top.

The Radiart Antenna may be identified by the steel ball on the top.

Group 9.649 KNOB, RADIO

1942-48	All	tuning and volume control	2	507505
1949-50	All	tuning and volume control	2	511834
1951	All	tuning and volume control—chrome	2	514608
1951-52	All	tuning and volume control—black	2	515718
1942-48	All	tone control	1	507511
1949-52	All	tone control—black	1	511833
1951	All	tone control—chrome	1	514784
1953-54	All	tuning and volume control	2	516948
1953-54	All	tone control	1	516946
1955	All	tuning and volume control	2	518916
1955-56	All	tone control	1	518915
1956	All	sensitivity control—Electromatic	1	522248
1956	All	tuning and volume control	2	522253
1949-52	All	KNOB ASSY. , rear speaker control	1	514265
1953-54	All	rear speaker control	1	515125
1956	All Electromatic	ADAPTER , rear speaker control mounting	1	522262
1955	All	DIAL ASSY. , rear speaker control	1	519815
1956	All exc. A.C.	rear speaker control	1	522264
1942-48	All	DUMMY KNOB SPACER —back of tuning control knob	1	507510
1949-52	All	back of tuning control knob—black	1	511831
1953-54	All	back of tuning control knob	1	516945
1955-56	All	back of tuning control knob	1	518914
1949-52	All	PLATE , rear speaker control	1	515854
1942	All	PUSH BUTTON , radio tuner—master radio	5	1215931
1942-48	All	chrome trim—deluxe radio	5	7242136
1942-48	All	super deluxe radio	6	1215813
1946-48	All	master radio	5	1216587
1949-50	All		5	1218885
1940	All	SCREW , knob to shaft (No. 8-32x $\frac{3}{16}$ ")	2	128036
1941-52	All	(No. 8-32x $\frac{1}{16}$ ")	AR	187437
1953-54	All	(No. 8-32x $\frac{3}{16}$ ")	2	217217
1941-48	All	WASHER , knob spacer collar spring	1	7238755
1941-54	All	radio tone control knob—felt	1	505630
1949-52	All	dummy knob anti-rattle	1	513486
1953-56	All	dummy knob spring	1	7238755

NOTE: See Group 10.256 for Radio Controls Finish Plate.

Group 9.650 STATIC COLLECTOR PARTS

1937-54	All	BRACKET, rear wheel static collector	2	231895	(5.424)
1937-54	All	BRUSH, rear wheel static collector	2	1862394	(5.424)
1934-54	All	COLLECTOR, front wheel static	2	494786	(6.331)
1935-48	All	INSULATOR, radio distributor suppressor	1	509129	
1937-54	All	SPRING, rear wheel static collector	2	231896	(5.424)
1937-55	All	STRAP, cylinder head ground	1	5298902	
1935-47	All	SUPPRESSOR, radio distributor	1	1207821	

Group 9.654 CONTROL—CONNECTOR—FUSE—HOLDER—SPEAKER, RADIO

1949-52	All	CABLE AND CONTROL ASSY., radio rear speaker	1	514255	
1953-54	All		1	7260922	
1955	All		1	7265158	
1956	All		1	7266674	
1956	All		1	2962737	
1932-37	All	CONNECTOR, radio rear speaker lead wires	1	120151	
1938-39	All	FUSE, radio—15 amp. (1 1/4" long)	AR	147685	(8.965)
1940-47	All	14 amp. (1 1/16" long)	AR	147685	(8.965)
1940-54	All	9 amp—master 8 tube radio. (7/8" long)	AR	147684	(8.965)
1940-48	All	14 amp—deluxe radio. (1 1/16" long)	AR	147685	(8.965)
1947	All	20 amp—deluxe and super deluxe radio. (1 1/4" long)	1	106653	(8.965)
1940-47	All L.H.D.	14 amp—master 6 tube radio. (1 1/16" long)	AR	147685	(8.965)
1940-47	All	HOLDER, radio "A" lead and female fuse master radio	1	504617	
1941-48	All L.H.D.	super deluxe radio	1	504842	
1947	All L.H.D.	radio "A" lead fuse—deluxe radio	1	5273906	
1948	All L.H.D.	master 6 tube radio	1	511057	
1948	All L.H.D.	super deluxe radio	1	7257464	
1956	All	radio "A" lead fuse—standard radio	1	511056	
1956	All	SPEAKER ASSY., radio rear seat	R.H. 1	522337	
			L.H. 1	522338	

Group 9.655 GRILLE, INSTRUMENT PANEL RADIO SPEAKER

1946-48	All		1	508580	
1949-50	All		1	511573	
1951-52	All		Outer 1	515786	
1951-52	All		Inner 1	515785	
1953-54	All		Inner 1	516812	
1953-54	All		Center 1	516813	
1953-54	All		Outer 1	516814	
1955	2564, 2819-37-67 All		1	519630	
1955	2511-19-37-62-63 All		1	519631	
1956	2711-19-37-39-62-63 All		1	521499	
1956	2764, 2819-37-39-67 All		1	521725	
1947-48	P/8	NAME PLATE, radio speaker grille	1	509625	
1955	2564, 2819-37-67 All		Star Chief 1	520214	
1955	25 All		Pontiac 1	519632	
1956	2564, 2819-37-39-67 All		Star Chief 1	521817	
1956	All L.H.D.		Pontiac 1	521818	
1955-56	All	NUT, grille name plate—spring type	AR	520026	
1956	2764, 2819-37-39-67 All		AR	445149	
1953-54	All	RETAINER, radio speaker grille	1	514938	

Group 9.656 GASKET—INSULATOR—NUT—WASHER, RADIO GRILLE

1949-52	All	GASKET, radio speaker grille	1	511576	
1953-54	All	grille screen to outer grille	1	517444	
1946-48	All	INSULATOR, radio speaker grille screen	1	508582	
1949-50	All		1	511574	
1941-48	All	NUT, grille to panel—spring type	AR	187490	
1953-54	All	WASHER, grille screen to inner grille	3	517445	

Group 9.658 SCREEN, RADIO SPEAKER GRILLE

1946-52	All exc. 1947-48 P/8		1	508581	
1949-50	All		1	511575	
1951	All		1	514581	
1952	All		1	516492	
1953-54	All		1	514937	

Group 9.663 CONDENSER, RADIO

1941-48	All	ammeter	1	1910147	
1940-54	All	generator—w/clamp (.5 mfd.)	1	1917580	
1949-55	All	generator regulator—w/clamp (.5 mfd.)	1	1921835	
1956	All L.H.D.	generator regulator—w/clamp (.5 mfd.)	1	1932222	
1949-52	All	CLAMP, generator regulator	1	1911137	

Group 9.667 BRACE—BOLT—NUT, RADIO RECEIVER TO INSTRUMENT PANEL

1955-56	All	BRACE, receiver unit to panel	1	519417	
1941-54	All	BOLT, receiver unit to brace	1	505629	
1940-56	All	NUT, receiver unit to panel	2	7235968	

Group 9.709 LIGHTER ASSEMBLY, CIGAR

1941	All		1	505669	
1942-48	All		1	507400	
1949-50	All		1	511823	
1951	All	w/chrome knob	1	514611	
1951-52	All	w/black knob	1	515712	
1953-54	All		1	516950	
1955-56	All		1	518910	
1956	All		1	518910	
1940	25 L.H.D.	BASE ASSY., cigar lighter—w/Casco lighter.	1	7008641	
1940	26-29 L.H.D.	CASE AND CIRCUIT BREAKER ASSY., lighter—	1	504473	(2.189)
1941-48	All L.H.D.	w/Rochester lighter	1	504268	(2.189)
1938-54	All	BRACKET, cigar lighter	1	505860	(2.189)
1955	All		1	609829	
1956	All	HEATING ELEMENT, with plug	1	1459551	
1956	All	w/Casco lighter	1	3710581	
1940-48	All	w/Rochester lighter	1	7006626	
1942-48	All	INSULATOR, cigar lighter	1	503486	
1949-50	All	KNOB, cigar lighter	1	507402	
1951-52	All		1	511827	
1953-54	All		1	515715	
1955	All		1	516953	
1956	All		1	518913	
1942-48	All	w/Casco lighter	1	522268	
1949-50	All	KNOB, PLUG and ELEMENT, cigar lighter	1	507401	
1951	All		1	511825	
1951-52	All	w/chrome knob	1	514612	
1953-54	All	w/black plastic knob	1	515713	
1955	All		1	516952	
1956	All		1	518912	
1956	All	w/Casco lighter	1	522263	
1956	All	w/Rochester lighter	1	7008642	
1956	All	RETAINER, lighter to inst. panel—w/Rochester	1	7003065	
		lighter	1	7003065	

Group 9.712 FUSE, CIGAR LIGHTER

1940	All		1	504562	
1941-56	All		1	1314453	

Group 9.718

NOTE: For windshield wiper pipes see Group 8.964 copper tubing.

Group 9.743 INSTRUMENT PANEL CLUSTER PARTS

1942-46	All	CASE, includes bezel, dial and glass	(Miles)	1	1566504
1947	All	includes bezel, dial and glass	(Miles)	1	1568670
1948	All	includes bezel, dial and glass	(Miles)	1	1569567
1953-54	All	(battery and fuel)		1	1501356
1953-54	All	(oil and water)		1	1507706
1955-56	All	(fuel and oil)		1	1583250
1955-56	All	(battery and water)		1	1583258
1955-56	All	BEZEL, instrument cluster (fuel-oil, battery-water)		1-2	1583255
1949-50	All	BODY ASSY., instrument cluster		1	1569911
1951	All			1	1580821
1952	All			1	1581956
1953-54	All			1	1582147
1955	All	speedometer—black		1	1583739
1956	All	speedometer		1	1584196
1951-52	All	FACE, instrument cluster (oil and water)		1	1580817
1951-52	All	(battery and fuel)		1	1580818
1953-54	All	instrument panel cluster	(Miles)	1	1581321
1955	All	speedometer	(Miles)	1	1583243
1956	All	speedometer	(Miles)	1	1584220
1955-56	All	GASKET, speedo. ret. and case to face		2	1583274
1955	All	bezel to ret. and face (fuel-oil, battery-water)		1-2	1583257
1949-50	All	PLATE, instrument cluster back (oil and water)		1	1507349
1949-50	All	(battery and fuel)		1	1501155
1951-52	All	(battery and fuel)		1	1501285
1951-52	All	(oil and water)		1	1512286
1949-50	All	RING, speedometer head plastic figure	(Miles)	1	1569876
1951-52	All		(Miles)	1	1580814
1949-50	All	RETAINER AND BEZEL ASSEMBLY, instrument			
		panel cluster (oil and water)		1	1507352
		(battery and fuel)		1	1501161
1949-50	All	(speedometer figure ring)		1	1569875
1955	All	RETAINER AND FACE ASSY. (fuel and oil)		1	1583316
1955	All	(battery and water)		1	1583317

Group 9.743 INSTRUMENT PANEL CLUSTER PARTS (Continued)

1956	All	(fuel and oil)	1	1584228
1956	All	(battery and water)	1	1584229
1955	All	RETAINER AND CASE ASSY., speedometer	1	1583247
1956	All		1	1584219
1951-52	All	RETAINER, instrument panel face (oil and water)	1	1580819
1951-52	All	(battery and fuel)	1	1580820
1951-52	All	(speedometer figure ring)	1	1580816
1953-54	All	instrument panel face	1	1581320
1953-54	All	SCREW, instrument cluster to brace	2	516922

Group 9.772 CLOCK PARTS, ELECTRIC

1942-48	All	BEZEL	1	507833
1949-50	All		1	512511
1951-52	All		1	515710
1953-54	All		1	517382
1942-48	All	CRYSTAL	1	1566496
1949-50	All		1	512512
1951-54	All	CRYSTAL PKG., clock—consists of crystal, reflector and instruction sheet	1	517390
1956	All	LENS—New Haven (4" dia.)	1	522998
1956	All	Jaeger (3 3/4" dia.)	1	522999
1949-50	All	GASKET	1	512513
1937	All	FUSE, 2 amp. used w/983525 clock	1	148086
1955-56	All	1 1/2 amp.	1	432640
1951	All	SCREW, set, clock to grille	2	514599
1951-54	All	clock to grille (No. 10-24x3/8")	2	140908
1949-50	All	WIRE ASSEMBLY	1	5289477
1951-52	All		1	5291069
1953-54	All		1	5292830
1955-56	All		1	2961353

(8.965)

(8.965)

(8.975)

Group 9.773 SAFETY LIGHT PARTS

1949-52	All exc. 2561-62	ARM AND PINION PACKAGE	1	5938740
1949-52	2561-62 All		1	5943640
1953-54	All exc. 2562		1	5943972
1953-54	2562 All		1	5943976
1955-56	All		1	5946521
1949-52	All	BASE AND SWITCH KNOB ASSEMBLY	1	5938510
1953-54	All		1	5943852
1949-53	All	BEARING, handle	1	5937965
1949-52	All	BRACKET, outside mounting R.H.	1	5940980
1949-52	All	outside mounting L.H.	1	5940979
1953-54	All exc. 2562	outside mounting R.H.	1	5940786
1953-54	All exc. 2562	outside mounting L.H.	1	5940785
1953-54	2562 All	outside mounting L.H.	1	5943825
1955-56	All	outside mounting L.H.	1	5945825
1949-52	All	BRACKET AND NUT ASSY., inside mounting R.H.	1	5939016
1949-52	All	inside mounting L.H.	1	5940959
1953-54	All exc. 2562	inside mounting R.H.	1	5943820
1953-54	All exc. 2562	inside mounting L.H.	1	5943819
1953-54	2562 All	inside mounting L.H.	1	5943821
1955-56	All	inside mounting L.H.	1	5945831
1939-42	All	CAP, switch	1	3699178
1955	All	COVER AND SWITCH	1	5946258
1956	All		1	5947329
1941-48	All	CONNECTOR, wire	1	3114169
1949-54	All	DOOR ASSEMBLY, chrome	1	5938025
1955-56	All		1	5946248
1941-48	All	FUSE, 14 amp. (1 1/16" long)	1	147685
1949-54	All	20 amp. (1 1/4" long)	1	106653
1948-54	All L.H.D.	GROMMET, wire thru instrument panel	1	510458
1949-54	All	HANDLE	1	5938359
1955	All		1	5946259
1956	All L.H.D.		1	5947327
1950-53	All	MIRROR ASSEMBLY	1	5939383
1954	All		1	5945261
1955-56	All		1	5946240
1949-54	All	PINION AND BEARING ASSEMBLY, handle end	1	5936462
1949-52	All	PINION AND BEARING PACKAGE, lamp end	1	5938954
1953-56	All	lamp end	1	5940643
1949-54	All	SCREW, handle	1	5937929
1949	All	mirror attaching	1	445542
1950-54	All	mirror attaching	1	450628

(2.649)

(8.965)

(8.965)

Group 9.773 SAFETY LIGHT PARTS (Continued)

1948	All	SEALED BEAM UNIT	R.H. or L.H.	1	444279	
1949-54	All			1	451681	
1955-56	All			1	273227	
1949-54	All	SPRING, base and switch knob contact		1	5936458	
1949-54	All	lens retaining unit		3	238288	(9.774)
1949-54	All	STIFFENER, mirror		1	5938145	
1939-48	All	SWITCH		1	602272	
1949-54	All	WASHER, mirror—spring type		1	5938700	
1941-48	All	WIRE ASSEMBLY, connector to fuse holder	L.H.	1	510456	
1941-48	All	fuse holder to lighting switch	L.H.	1	510457	

Group 9.774 FOG LIGHT PARTS

1948	All	BODY ASSEMBLY		2	5937627	
1946	All	BRACKET	R.H.	1	5936206	
1946	All		L.H.	1	5936205	
1947	All	BRACKET, mounting	R.H.	1	5936858	
1947	All		L.H.	1	5936857	
1948	All		R.H.	1	5937428	
1948	All		L.H.	1	5937427	
1949	All			2	5938529	
1950	All			2	5939451	
1951-52	All			2	514751	
1953	All			2	5940750	
1954	All		R.H.	1	5945038	
1954	All		L.H.	1	5945037	
1946-52	All	CONNECTOR, with dual fog lamp		AR	1872486	(2.649)
1953-54	All	(3 wire type)		1	3698457	
All	All	CAP, lamp bulb—with 145431 bulb, Group 8.991		AR	920325	
1942-46	All	DOOR ASSEMBLY		1-2	5934459	
1947	All	with dual fog lamps		2	5936674	
1948	All	with dual fog lamps		2	5937619	
1949-54	All	with dual fog lamps		2	5938377	
1949-52	All	ESCUTCHEON, fog light switch mounting		1	512660	
1953-54	All	fog light switch mounting		1	516920	
1949-50	All	KNOB ASSEMBLY, fog light switch		1	512659	
1951	All	chrome		1	514543	
1951-52	All	black		1	515722	
1953-54	All			1	516966	
1946-47	All	LAMP ASSEMBLY		2	926852	
1948	All			2	926859	
1949-52	All			2	926827	
1953-54	All			2	926078	
1942-47	All	LENS		1-2	5933400	
1949-53	All	NUT, fog light switch mounting		1	512658	
1942	All	SCREW, auxiliary lamp door (Fill. Hd. No. 8-32x1/2")		1-2	924622	(2.729)
1953-54	All	fog lamp switch knob		1	128036	(8.975)
1948	All	SEALED BEAM UNIT—with dual lights (4 3/8" dia.)		2	451653	
1949-52	All	(5" dia.)		2	451652	
1953-54	All	(5" dia.)		2	453910	
1949-52	All	SPACER, mounting bracket bolt		1	512661	
1953-54	All	switch mounting		1	515348	
1946	All	SUPPORT, bracket		2	5936204	
1949	All			2	5938530	
1950	All			2	5939472	
1951-52	All			2	514752	
1940-47	All	SWITCH		1	5932084	
1948	All			1	510814	
1949-52	All	use with factory installed fog lights		1	512657	
1949-52	All	use with field installed fog lights		1	512929	
1953-54	All			1	515349	
1947	All	TAPPING PLATE, fog light mounting bracket		2	5936856	
		See Group 9.773 for use			238288	

Group 9.775 GROMMET, RUBBER

Type	For Hole	Inside Dia.	For Groove	
Two Holes	1 1/16" x 3/4"	2 at 1/4"	1/16"	493908
One Hole	1/2"	3/8"	1/16"	216551
1933	All L.H.D.	see Group 1.743 and Group 10.152 for use		493908
1933-34	All	w/s cleaner line thru dash	1	216551
1935-36	P/6	choke-throttle contact thru dash	1	216551
1939-40	All	choke-throttle contact thru dash	1	216551
		horn wire thru steering column hsg.	1	216551

Group 9.775 GROMMET, RUBBER (Continued)

1940-47	All	fuel gauge wire thru rear compartment	1	216551
1948	All	horn and ignition wire thru dash	1	510582
1953-54	All	thermo gauge pipe thru dash	1	515384
1955-56	All	oil and thermo gauge pipes thru dash	1	520277
1955	All	head and parking lamp wires thru baffle	4	117972

Group 9.779 DEFROSTER ASSEMBLY, HOT WATER HEATER WINDSHIELD

1942-47	All	less tubes and fittings—U/S heater	1	507303
1953-54	All	with U/S heater	1	3128087
1955-56	All	with U/S heater	1	3132229
1949-52	All	DEFROSTER PKG. , consists of defroster and shaft end	1	514453
1940-47	All	BLOWER AND MOTOR , w/s defroster—U/S heater	1	3120792
1942-48	All	CLAMP , defroster inlet elbow support—U/S heater	1	507958
1955-56	All	CLIP , air control rod to dial hsg. lever	1	520511 (8.866)
1955-56	All	air valve control rod to defroster lever	1	520511 (8.866)
1942-48	All	COLLAR , defroster air inlet tube—U/S heater	1	507463
1942-48	All	CORE ASSEMBLY , defroster—U/S heater	1	3116289
1949-52	All	U/S heater	1	3126137
1953-54	All	U/S heater	1	3128258
1955-56	All	U/S heater	1	3133236
1942-48	All	ELBOW , defroster air inlet	1	507464
1949-52	All	ELBOW AND SUPPORT ASSY. , air outlet—U/S heater	1	512276
1953-54	All	U/S heater	1	515277
1940-48	All	GROMMET , defroster pipe thru dash—U/S and dash heater	2	503425 (8.846)
1950-52	All	heater pipe thru dash—dash heater	2	503425 (8.846)
1940-48	All	HOSE , U/S and dash heater (1 1/8"x21 1/2")	1	3113681
1942-48	All	defroster pipe connector air, rubber—U/S heater	2	509176
1949-54	All	defroster air inlet—U/S heater (8 3/4" long)	1	512285
1949-52	All	defroster nozzle air—U/S heater (33" long)	R.H.	512286
1949-52	All	defroster nozzle air—U/S heater	L.H.	514165
1950-52	All	defroster air—dash heater	R.H.	514094
1950-52	All	defroster air—dash heater	L.H.	514095
1953-54	All	defroster nozzle air—U/S heater	R.H.	515447
1953-54	All	defroster nozzle air—U/S heater	L.H.	521881 ■
1955	All	defroster nozzle air—U/S heater	Inner R.H.	521881 ■
1955	All	defroster air to inner and outer nozzle	L.H.	521882 ■
1955	All	defroster air to outer nozzle	R.H.	520578
1955	All	defroster air inlet—U/S heater	1	518548
1956	All	defroster nozzle air—U/S heater	R.H.	522212
1956	All	defroster nozzle air—U/S heater	L.H.	522213
1942-48	All	INLET , defroster deflector—dash heater	R.H.	3116231
1942-48	All	dash heater	L.H.	3116232
1940-48	All	KNOB , defroster switch—dash heater	1	3115980
1953-54	All	LEVER ASSY. , defroster air control—U/S heater	1	516887
1953-54	All	defroster air valve shaft	1	3128091
1955-56	All	LINK ASSY. , defroster air valve lever	1	3133031
1940-41	All	MOTOR ASSEMBLY , defroster	1	5047531
1942-48	All	dash heater	1	5047531
1949-52	All	NOZZLE ASSEMBLY , defroster air hose	2	512288
1953-54	All	U/S heater	R.H.	515184
1953-54	All	U/S heater	L.H.	515185
1955-56	All	U/S heater	Inner R.H.	519810
1955	All	U/S heater	Inner L.H.	519811
1955	All	U/S heater	Outer R.H.	519808
1955	All	U/S heater	Outer L.H.	519809
1956	All	U/S heater	2	521414
1955	All	OUTLET ASSY. , defroster air to hose	1	520336
1956	All	U/S heater	1	522465
1942-48	All	RETAINER , defroster elbow seal at fender skirt—U/S heater	1	507474
1942-48	All	defroster inlet collar to dash—U/S heater	1	507471
1953-54	All	ROD , defroster air control—U/S heater	1	515298
1955	All	U/S heater	1	519786
1956	All	U/S heater	1	522242
1942-48	All	SEAL , defroster elbow, at fender skirt—U/S heater	1	507475
1949-50	All	SHAFT ASSEMBLY , defroster, air control—U/S heater	1	513652
1951-52	All	U/S heater	1	514432
1949-52	All	SHAFT AND LINK ASSEMBLY , defroster air valve (thru defroster unit) U/S heater	1	3122391
1949-55	All	SPRING , defroster air valve—U/S heater	1	3124496
1949-50	All	defroster air valve shaft, anti-rattle—U/S heater	1	3124513
1951-54	All	defroster air valve shaft, anti-rattle—U/S heater	1	3127573
1949-56	All	temperature control shaft anti-rattle, U/S heater	1	507329
1953-54	All	control lever and pivot anti-rattle—U/S heater	1	515296
1953-54	All	STUD , control lever pivot—U/S heater	1	515295
1937-39	All	SWITCH , w/s defroster—dash heater	1	3115112 (8.852)
1942-48	All	dash heater	1	3115979

Group 9.779 DEFROSTER ASSEMBLY, HOT WATER HEATER WINDSHIELD (Continued)

1942-48	All	heater and defroster—U/S heater	1	515740	(8.852)
1949-56	All	TRUNNION , defroster air valve shaft outer lever—U/S heater	1	512452	
		air control rod—U/S heater	1	515331	
1953-54	All	air control rod—U/S heater	1	512452	
1955	All	TUBE , defroster air inlet, steel—U/S heater	1	509177	
1942-48	All	VALVE ASSEMBLY , car temperature control—U/S heater	1	510768	
1942-48	All	U/S heater	1	514452	
1949-52	All	U/S heater	1	3128099	
1953-54	All	U/S heater	1	519769	
1955-56	All	U/S heater	1	3133033	
1955-56	All	defroster air—U/S heater	1	3114299	(9.792)
1941-48	All	WIRE , blower to switch—U/S heater	L.H.		
1941-47	All	SCREW , defroster inlet—dash heater			
		(Bind. Hd. No. 6-20x $\frac{1}{4}$ ")	4	187163	(8.977)
			4	3120880	(8.857)
1948	All	defroster blower and adapter—U/S heater			
1941-48	All	(Bind. Hd. No. 6-20x $\frac{1}{4}$ ")	8	187163	(8.977)
1951-52	All	air control shaft to defr.—U/S heater	1	140918	(8.866)

Group 9.779 BACK WINDOW DEFROSTER PARTS

1955-56	All	MOTOR ASSY.	1	520094	
1955	All	BRACKET , switch mounting	1	520225	
1955-56	All	GRILLE	1	520095	
1955	All	KNOB , switch	1	520096	
1955-56	All exc. 2562-63-64, 2867	SWITCH , back window defroster	1	515349	(9.774)

Group 9.782 ELBOW, AIR INTAKE

1942-54	All	air intake frame—U/S heater	1	510729	
1942-48	All	blower to front tube	1	507288	
1955	All	air intake frame—U/S heater	1	519420	
1956	All	air intake frame—U/S heater	1	522357	

Group 9.784 SCREEN, AIR INLET

1942-48	All	U/S heater	1	507472	
1942-46	All	BAFFLE , heater air intake—U/S heater	1	509232	
1941-48	All	CLAMP , air inlet screen to tube—U/S heater			
		(for 2 $\frac{1}{2}$ " I.D. hose)	1	3692864	(1.166)

Group 9.785 COVER, AIR INTAKE

1942-48	All	COVER , air intake in fender skirt	1	507122	
1942-48	All	in L.H. radiator baffle	1	507092	
1949-54	All	in L.H. fender skirt baffle	1	507092	
1949-54	All	NUT , air intake deflector to dash (Spring type)	6	511965	
1949	All	air control cable clip to dash	1	511965	

Group 9.786 AIR INTAKE PARTS

1941	All	HOSE , elbow to tube—U/S heater... (2½" I.D. x 7½"	1	506009
1942-48	All	long) rear intermediate—U/S heater (4⅛" I.D. x 19" long)	1	510941
		to dash connector (Rubber)	2	511966
1949-54	All	heater to blower—U/S heater	1	515423
1949-54	All	blower to elbow—U/S heater	1	518547
1955	All	blower to elbow—U/S heater	1	522304
1956	All	BOOT , air intake valve case to blower flange	1	518546
1955	All	COVER , heater intake valve cont. rod—		
1949-52	All	U/S heater Upper	1	512338
		U/S heater Lower	1	512317
1949-52	All	U/S heater Upper	1	515425
1953-54	All	U/S heater Lower	1	515428
1953-54	All	U/S heater	1	519793
1955-56	All	CLAMP , air intake-tube support—U/S heater	2	507461
1942-48	All	rear tube to body bracket—U/S heater	1	507462
1942-48	All	rear tube to body bracket—U/S heater	1	511901
1949-54	All	hose clamp type—U/S heater	3	513479
1942-56	All	elbow to frame—U/S heater	1	520622
1955-56	All	DEFLECTOR , air intake	2	511964
1949-54	All	FLANGE , air intake tube to air duct	1	512284
1949-54	All	GRILLE , air intake—on cowl trim pad R.H.	1	4651629
1955-56	All	L.H.	1	4651630
1955-56	All			

Group 9.786 AIR INTAKE PARTS (Continued)

1955-56	All	SCREEN, air intake grille	2	4667701
1956	All		2	4667701
1942-48	All	SHIELD, air intake rear tube—U/S heater	1	507478
1949-52	All	car heater air hose—U/S heater	1	511903
1953-54	All	heater air hose—U/S heater	1	515424
1942-54	All	SLEEVE, air intake elbow to heater—U/S heater	1	513389
1955-56	All	U/S heater	1	518572
1942-48	All	TUBE, air intake—front (metal)—U/S heater	1	507289
1942-48	All	intermediate (metal)—U/S heater	1	507290
1942-48	All	rear (steel)—U/S heater	1	507831
1949-54	All	car heater rear air—U/S heater	1	511904
1949-52	All	heater air intake (complete)—U/S heater	1	512307
1953-54	All	heater air intake (complete)—U/S heater	1	515427
1955	All	VALVE ASSY., heater air inlet	1	520242

Group 9.787 CONTROL ASSEMBLY, AIR INLET

1949-50	All	includes knobs, bracket and rods	1	511963
1951	All		1	514834
1952	All		1	516499
1953-54	All		R.H.	516923
1953-54	All		L.H.	516924
1955	All		R.H.	4651481
1955	All		L.H.	4651482
1956	All		R.H.	4678334
1956	All		L.H.	4678335
1949-54	All	CLIP, control cable to body	2	511984
1953-54	All	FERRULE, air intake control	2	516832
1955-56	All	SUPPORT, air vent control	2	4648770

(8.077)

Group 9.789 VALVE AND BODY ASSEMBLY, AIR VENTILATOR

1949-54	All	in right hand duct	1	511967
1949-54	All	in left hand duct	1	511968

Group 9.792 WIRE ASSEMBLY

see Group 8.852 and Group 9.779 for use 3114299

Group 9.802 DUCT ASSEMBLY, BODY AIR INTAKE

1949-54	All		R.H.	511722
1949-54	All		L.H.	511723
1949-54	All	SCREEN, body air intake	2	511793

Group 9.988 LENS, LUGGAGE COMPT. LAMP

1956	All exc. 2762-63-64		1	568467
------	---------------------	--	---	--------