

The Alphabetical Index in this book is set up in straight alphabetical order so that all Accelerator Parts will come under "A", Brakes under "B", Clutch under "C", Transmission under "T" etc. Therefore, if a man knows a part is used in the Transmission

(Trans. Countershaft) he can start with Transmission Assy., and follow it down until he finds (Trans. Countershaft) Group 4.428 and by turning to this group find the part for the model wanted.

A

Accelerator Cross Shaft	3.585
Accelerator Cross Shaft Bracket-Spacer	3.589
Accelerator Cross Shaft Spring	3.581
Accelerator Cross Shaft Throttle Cracker Lever	3.581
Accelerator Idler Lever	3.571
Accelerator Linkage Pkg.	3.429
Accelerator Pedal	3.451
Accelerator Pedal Brkt. to Floor Plate	3.456
Accelerator Pedal Hinge Pin	3.452
Accelerator Pedal Rod - Trunnion	3.431
Accelerator Pedal Support	3.456
Accelerator Rod Return Spring	3.459
Accelerator Rod Toe Board Bellows	3.469
Accelerator Stud	3.452
Accessory Fuse and Terminal Block - Cover	2.483
Air Cond. Air Hose Clamp	9.255
Air Cond. Air Outlet Control Knob	9.278
Air Cond. Air Outlet Control Parts	9.277
Air Cond. Air Outlet Parts	9.264
Air Cond. Automatic Expan. Valve	9.198
Air Cond. Blower Assy.	9.215
Air Cond. Blower Inlet Scoop	9.250
Air Cond. Blower Motor	9.215
Air Cond. Blower Outlet Duct	9.215
Air Cond. Blower Outlet Hose	9.215
Air Cond. Compressor	9.170
Air Cond. Compressor Brace	9.171
Air Cond. Compressor Bracket	9.171
Air Cond. Comp. Clutch Parts	9.186
Air Cond. Comp. Oil Pump Cover-Gear-Pin	9.172
Air Cond. Comp. Discharge Hose	9.225
Air Cond. Comp. Drive Belt	9.185
Air Cond. Comp. Pulley	9.180
Air Cond. Comp. Pipe Bracket	9.238
Air Cond. Comp. Suction Hose	9.229
Air Cond. Condenser	9.190
Air Cond. Condenser to Receiver Pipe	9.227
Air Cond. Control Panel-Clamp-Ret.	9.279
Air Cond. Control Parts	9.281
Air Cond. Dehydrator	9.195
Air Cond. Dehydrator Bracket	9.206
Air Cond. Dehydrator Support	9.206
Air Cond. Dehydrator to Expan. Valve Pipe	9.235
Air Cond. Evaporator-Core-Gasket	9.210
Air Cond. Evaporator Hose-Sleeve	9.220
Air Cond. Evaporator Inlet	9.216
Air Cond. Evaporator Inlet Filter Gasket	9.216
Air Cond. Distributor Outlet Hose	9.260
Air Cond. Distributor Parts	9.262
Air Cond. Leak Detector	9.282
Air Cond. Liquid Indicator	9.202
Air Cond. Liquid Indicator Gasket	9.202
Air Cond. Master Switch	9.275
Air Cond. Refrigerant	9.282
Air Cond. Refrigerant Receiver	9.195
Air Cond. Refrigerant Receiver to Ind. Pipe-Supt.	9.231
Air Cond. Refrigerant Receiver to Ind. Pipe Bracket-Support	9.242
Air Cond. Switch-Resistors	9.276
Air Cond. Thermostatic Expan. Valve	9.213
Air Cond. Thermostatic Expan. Valve Screen	9.214
Air Cond. Wire Harness	9.276

Air Cleaner (Carburetor)	3.402
Air Cleaner-Crankcase	1.762
Air Cleaner Brace	3.405
Air Cleaner Element	3.410
Air Cleaner Gasket	3.406
Air Intake Cover	9.785
Air Intake Duct Assy.	9.802
Air Intake Hose-Deflector-Tube	9.786
Air Intake Screen	9.802
Air Intake Valve Cont. Assy.	9.787
Air Meter (See Fuel Inj. Air Meter)	
Air Susp. Air Reservoir Tank	7.465
Air Susp. Comp. Adapter-Brkt.	7.452
Air Susp. Comp. Belt-Pulley	7.450
Air Susp. Comp. Cap-Cover-Seal	7.453
Air Susp. Comp. Check Valve	7.465
Air Susp. Comp. Crankshaft	7.462
Air Susp. Comp. Crankshaft Front Oil Seal	7.457
Air Susp. Comp. Crankshaft Housing	7.453
Air Susp. Comp. Cyl. Head	7.455
Air Susp. Comp. Cyl. Hsg. and Brg.	7.455
Air Susp. Comp. Fluid	7.454
Air Susp. Comp. Hose	7.465
Air Susp. Comp. Ins.-Supt.	7.452
Air Susp. Comp. Oil Pump Eccentric-Shield	7.453
Air Susp. Comp. Piston-Ring	7.460
Air Susp. Comp. Plate and Brg.	7.453
Air Susp. Comp. Seal	7.453
Air Susp. Comp. Sump Cover Gasket	7.457
Air Susp. Comp. Sump Pump Plate	7.455
Air Susp. Cyl. and Bellows-Piston	7.470
Air Susp. Height Control Valve	7.475
Air Susp. Height Control Valve Adapter-Core-Screen-Valve	7.476
Air Susp. Height Control Valve Brkt.	7.477
Air Susp. Height Control Valve Lever-Link	7.477
Air Susp. Height Control Valve Rod	7.477
Air Susp. Manual Valve-Control	7.445
Air Susp. Manual Valve Cover-Diaphragm-Lever-Ring	7.446
Air Vent. Valve and Body Assy.	9.789
Ammeter Assy.	2.515
Antenna Parts	9.647
Armature, Generator	2.279
Armature, Starter Motor	2.043
Automatic Choke Parts	3.603
Axle Gear Lubricant	5.535
Axle Housing	5.387
Axle Housing Filler Plug	5.400
Axle Housing Oil Deflector	5.815
Axle Shaft	5.420

B

Back-Up Lamp Parts	2.697-2.698
Ball Sleeve	8.963
Balls (Steel)	8.899
Battery Clamp Bolt	2.334
Battery Cover-Retainer	2.335
Battery Ground Strap	2.341
Battery Ground Strap Brkt.	2.343
Battery Positive Lead	2.342

Battery Support	2.333
Battery Support to Fender Bumper	2.335
Battery Terminal Clamp Bolt-Nut	2.343
Bearing Clearance Checking Material Pkg.	0.093
Body Bolt Cushion	9.023
Body Bolt Nut	9.011
Body Bolt Shim	9.023
Body Bolt Washer	9.011
Body to Frame Bracket	7.330-7.334
Body Rocker Panel Ext.	8.228
Body Rocker Panel Ext. Plate-Seal	8.229
Body Rocker Panel Mldg.	8.231
Body Rocker Panel Mldg. Clip	8.231
Bolts (Std. Parts)	8.900-8.913
Brake Adj. Hole Cover	5.117
Brake to Axle Housing Bolt	5.024
Brake to Axle Housing Gasket	5.022
Brake Cable Anchor	4.785
Brake Cable Anchor Felt	4.784
Brake Cable Assy.	4.779
Brake Cable Clamp	4.785
Brake Clevis Pin	4.823
Brake Drum (Rear)	5.809
Brake Drum Bolt-Washer	5.812
Brake Drum Gasket	5.811
Brake Drum & Hub (Front)	6.306
Brake Drum Oil Deflector	5.815-6.037
Brake Drum Oil Deflector Gasket	5.819
Brake Drum Silencer Spring Pkg.	5.810
Brake Drum Weight	6.306
Brake Equalizer	4.765
Brake Fluid	4.683
Brake Hose	4.680
Brake Hose Conn. Brkt.	4.681
Brake Hose Conn. Breather Screw	4.687
Brake Hose Ret. Yoke	4.681
Brake Lever to Shoe Strut	5.150
Brake Lever to Shoe Strut Spring	5.151
Brake Lines	4.685
Brake Lining	5.018
Brake Lining Rivet	5.019
Brake Master Cyl.	4.650
Brake Master Cyl. Body	4.650
Brake Master Cyl. Boot	4.659
Brake Master Cyl. Conn. Adapter-Gasket	4.661
Brake Master Cyl. Filler Cap-Gasket	4.651
Brake Master Cyl. Head Nut-Gasket	4.652
Brake Master Cyl. Pipe	4.685
Brake Master Cyl. Piston Cup	4.654
Brake Master Cyl. Piston Lock Ring	4.656
Brake Master Cyl. Piston Spring	4.655
Brake Master Cyl. Reinforcement	4.648
Brake Master Cyl. Repair Kit	4.649
Brake Master Cyl. Rod	4.658
Brake Master Cyl. Rod Clevis-Pin	4.662
Brake Master Cyl. Rod Stop Plate	4.656
Brake Master Cyl. Check Valve Assy.	4.657
Brake Oil Drain	5.815-6.037
Brake Pedal	4.625
Brake Pedal Brkt.	4.634
Brake Pedal Bushing	4.626
Brake Pedal Pad	4.630
Brake Pedal Pivot Parts-P.B.	4.634
Brake Pedal Plate	9.038
Brake Pedal Ret. Spring	4.625

Brake Pedal Return Spring	4.639
Brake Pedal Shaft	4.625
Brake Pedal Shaft Pin	4.625
Brake Pipe Conn.	4.686
Brake Pipe Conn. Washer	4.671
Brake Pipes	4.685
Brake Shoe Adj. Screw	5.110
Brake Shoe Adj. Screw Nut	5.111
Brake Shoe Adj. Screw Socket	5.111
Brake Shoe Anchor Pin	5.055
Brake Shoe Anchor Pin Guide	5.045
Brake Shoe Anchor Pin Nut	5.057
Brake Shoe Anchor Pin Washer	5.056
Brake Shoe Equalizer Spring	5.026
Brake Shoe Hold Down Spring	5.043
Brake Shoe Hold Down Spring Cup	5.042
Brake Shoe Hold Down Spring Pin	5.041
Brake Shoe Lining	5.018
Brake Shoe & Lining Pkg.	5.017
Brake Shoe Rivet	5.019
Brake Shoe Spring	5.026-5.043
Brake Support	5.001
Brake Support Bolt	5.002
Brake Support to Knuckle Spacer (Front)	5.002
Brake Wheel Cyl. Assy.	4.665
Brake Wheel Cyl. Bleeder Valve	4.666
Brake Wheel Cyl. Boot	4.670
Brake Wheel Cyl. Conn. Adapter	4.686
Brake Wheel Cyl. Conn. Link	4.675
Brake Wheel Cyl. Cup	4.667
Brake Wheel Cyl. Piston	4.668
Brake Wheel Cyl. Repair Kit	4.667
Brake Wheel Cyl. Spring	4.669
Bulbs, Light	8.991
Bumper Apron	7.870
Bumper Apron Ext. Assy. (Rear)	7.871
Bumper Apron-Bumper	7.868
Bumper Bar	7.831-7.836
Bumper Bracket	7.836
Bumper End Bolt	7.859
Bumper Frame Brkt. (Rear)	7.836
Bumper Guard Assy.	7.828
Bumper Guard Bolt	7.828
Bumper Guard Brace-Brkt.-Ret.	7.829
Bumper Guard Spacer	7.828
Bumper Master Guard Clamp	7.829
Bumper Seal-Spacer-Ret.	7.865
Bumper Step Support-Pad	7.875

C

Cable Clip	8.950
Cable, Electrical-100 ft. roll	2.530
Camshaft Assy.	0.519
Camshaft Bearing (Ctr. & Frt. Ctr.)	0.543
Camshaft Bearing (Front)	0.539
Camshaft Bearing (Rear)	0.549
Camshaft Bearing (Rear Ctr.)	0.546
Camshaft Fuel & Vac. Pump Eccentric	0.737
Camshaft Sprocket	0.736
Camshaft Sprocket Key-Lock Nut	0.738

CHASSIS ALPHABETICAL INDEX—Continued

Camshaft Sprocket Washer	0.738
Camshaft Thrust Plate	0.533
Carb. Air Cleaner	3.402
Carb. Air Horn	3.730
Carb. Air Horn to Bowl Cover Gasket	3.731
Carb. Anti-Perc. Arm - Cap - Spring	3.852
Carb. Assy.	3.725
Carb. Bowl Cover Assy.	3.737
Carb. Bowl Cover Gasket-Nut-Screen	3.740
Carb. Choke Housing	3.750
Carb. Choke Lever	3.752
Carb. Choke Lever & Collar	3.752
Carb. Choke Piston	3.752
Carb. Choke Shaft	3.752
Carb. Choke Shaft Lever & Link Assy.	3.752
Carb. Choke Suction Packing	3.750
Carb. Choke Suction Tube & Seal	3.750
Carb. Choke Valve	3.751
Carb. Dust Cover	3.732
Carb. Dust Cover Gasket	3.732
Carb. Fast Idle Arm-Spring-Screw	3.767
Carb. Fast Idle Cam-Lever	3.766
Carb. Fast Idle Conn.-Link-Rod-Ret.	3.768
Carb. Float	3.745
Carb. Float Bowl	3.734
Carb. Float Lever Pin	3.747
Carb. Gasket Pkg.	3.724
Carb. Idle Adj. Screw	3.822
Carb. Idle Adj. Screw Spring	3.823
Carb. Idle Compensator Kit-Gasket-Screw	3.820
Carb. Idle Port Rivet Plug	3.775
Carb. Intake Check Ball	3.862
Carb. Intake Needle Pull Clip	3.814
Carb. Intake Needle & Seat	3.814
Carb. Low Speed Jet Assy.	3.798
Carb. to Manifold Gasket	3.726
Carb. to Manifold Stud	3.288
Carb. Metering Rod	3.806
Carb. Metering Rod Arm	3.807
Carb. Metering Rod Disc	3.811
Carb. Metering Rod, Jet & Gasket	3.792
Carb. Metering Rod Spring	3.810
Carb. Nozzle	3.774
Carb. Power Valve Piston	3.858
Carb. Power Valve Piston Spring	3.859
Carb. Pump Arm & Collar	3.845
Carb. Pump Check Ball	3.826
Carb. Pump Conn. Link	3.843
Carb. Pump Discharge Ball-Spring-Guide	3.825
Carb. Pump Discharge Check Needle-Plug	3.832
Carb. Pump Jet	3.844
Carb. Pump Operating Lever & Ctr/Shaft	3.842
Carb. Pump Lever Spring	3.845
Carb. Pump Plunger & Rod	3.838
Carb. Pump Relief Valve Plug Assy.	3.844
Carb. Pump Ret.-Spring-Strainer	3.841
Carb. Repair Kit	3.725
Carb. Rod Anti-Rattle Spring	3.524
Carb. Rod Trunnion	3.425
Carb. Therm. Cover & Coil Assy.	3.750
Carb. Therm. Housing & Coil Assy.	3.750
Carb. Therm. Valve-Gasket-Screw	3.820
Carb. Throttle Arm-Rod-Spring	3.762
Carb. Throttle Body	3.729

Carb. Throttle Body Gasket	3.735
Carb. Throttle Body Screw & Washer	3.741
Carb. Throttle Rod	3.430
Carb. Throttle Rod Idler Lever	3.450
Carb. Throttle Rod Spring	3.459
Carb. Throttle Shaft & Lever	3.759
Carb. Throttle Valve	3.758
Carb. Throttle Valve-Lever Adj. Screw	3.761
Carb. Vacuum Piston Assy.	3.858
Carb. Vacuum Piston Spring	3.859
Carb. Venturi-Gasket	3.786
Chassis Wire Harness	2.480
Cigar Lighter Assy.	9.709-9.712
Cigar Lighter Bracket	9.709
Clamp, Fuel Tank Pipe Hose	3.004
Clevis or End Yoke	8.946
Clevis Pin	8.942
Clip	8.950
Clock Parts (Electric)	9.772
Clutch Ctr/Shaft	0.852
Clutch Ctr/Shaft Bracket	0.852
Clutch Ctr/Shaft Felt	0.851
Clutch Ctr/Shaft Spacer	0.852
Clutch Cover	0.861
Clutch Cover to Fly Wheel Bolt	0.862
Clutch Cover & Pressure Plate	0.859
Clutch Driven Plate	0.886
Clutch Driven Plate Facings	0.885
Clutch Driven Plate Facings Rivet	0.884
Clutch Fork to Ctr/Shaft Rod	0.787
Clutch Fork Guide Cover-Spring	0.797
Clutch Fork Return Spring	0.844
Clutch Housing	0.683
Clutch Housing Bottom Cover	0.679
Clutch Housing Cover Shield	0.679
Clutch Housing Dowel Pin	0.685
Clutch Housing Gasket	4.005
Clutch Inspection Cover	0.686
Clutch Pedal	0.830
Clutch Pedal Adj. Link-Rod	0.854
Clutch Pedal Adj. Screw	0.841
Clutch Pedal Bracket	4.634
Clutch Pedal Bushing	0.831
Clutch Pedal to Ctr/Shaft Rod	0.854
Clutch Pedal Floor Hole Cover Plate	9.038
Clutch Pedal Over Center Link	0.846
Clutch Pedal Over Center Link Pin	0.846
Clutch Pedal Over Center Push Rod	0.846
Clutch Pedal Over Center Spring	0.846
Clutch Pedal Pad	4.630
Clutch Pedal Return Spring	0.844
Clutch Pedal Return Spring Anchor	0.846
Clutch Pedal Return Spring Pin	0.849
Clutch Pedal Shaft	0.833
Clutch Pedal Shaft to Brkt. Bolt	0.834
Clutch Pedal Shaft Washer	0.837
Clutch Pilot Bearing	0.649
Clutch Press. Plate	0.863
Clutch Press. Plate Ret. Sprg.	0.864
Clutch Release Bearing	0.799
Clutch Release Bearing Spring	0.805
Clutch Release Bearing Support	0.821
Clutch Release Bearing Support Washer	0.803
Clutch Release Fork	0.795

CHASSIS ALPHABETICAL INDEX—Continued

Clutch Release Fork Ball	0.796
Clutch Release Fork Ball Sprg.	0.796
Clutch Release Fork Guide Plate	0.797
Cock (Drain)	8.951
Coil to Dist. Wire Nipple	2.258
Coil, Ignition	2.170
Coil Mounting Bracket	2.183
Coil Wire Rubber Nipple	2.258
Connecting Rod	0.603
Connecting Rod Bearing	0.616
Connecting Rod Bolt	0.623
Connecting Rod Bolt Nut	0.626
Cotter Pin	8.938
Cover, Battery	2.335
Cowl Ledge Anti-Squeak	9.127
Crankcase Breather Cap	1.758
Crankcase Oil Filler	1.745
Crankcase Oil Filler Cap	1.758
Crankcase Outlet Air Cleaner	1.762
Crankcase Outlet Vent.	1.762
Crankcase Outlet Vent. Pipe Clip	1.773
Crankcase Vent. Outlet Pipe Bracket	1.763
Crankcase Vent. Outlet Gasket	1.773
Ck/Shaft Assy.	0.646
Ck/Shaft Balancer	0.659
Ck/Shaft Bearing (Front)	0.096
Ck/Shaft Bearing (Front Center)	0.099
Ck/Shaft Bearing (Center)	0.101
Ck/Shaft Bearing (Rear)	0.106
Ck/Shaft Bearing (Rear Center)	0.103
Ck/Shaft Bearing Cap Bolt	0.056
Ck/Shaft Bearing Cap Oil Seal	0.137
Ck/Shaft Bearing Oil Seal Packing	0.137
Ck/Shaft Clutch Pilot Bearing	0.649
Ck/Shaft Oil Hole Plug	0.647
Ck/Shaft Pulley	0.659
Ck/Shaft Rear Bearing Oil Drain	1.565
Ck/Shaft Sprocket	0.728
Ck/Shaft Sprocket Key	0.729
Cyl. Block Hole Plug	0.034
Cyl. Block Water Inlet Tube	1.135
Cyl. Block Valve Chamber Baffle	0.033
Cyl. Front End Plate Gasket	0.005
Cyl. Front End Plate	0.004
Cyl. Head	0.269
Cyl. Head Bolt	0.293
Cyl. Head Gasket	0.289
Cyl. Head Plug	0.034

D

Dash to Instrument Panel Brace	9.131
Defroster Parts	9.779
Diff. Carrier	5.504-5.505
Diff. Carrier Bumper-Bracket	5.394
Diff. Carrier to Housing Bolt	5.506
Diff. Carrier to Housing Gasket	5.508
Diff. Case	5.510
Diff. Gear Lubricant	5.535
Diff. Gear Package	5.527
Diff. Pinion Bearing Adj. Shim	5.460
Diff. Pinion Bearing Lock Ring	5.489
Diff. Pinion Bearing Lock Screw	5.452
Diff. Pinion Bearing Lock Sleeve	5.453

Diff. Pinion Bearing Splash Shield	5.468
Diff. Pinion Bearings	5.447-5.484
Diff. Pinion Shaft	5.517
Diff. Pinion Shaft Lock Screw	5.518
Diff. Pinion Shaft Packing	5.469
Diff. Pinion Thrust Washer	5.542
Diff. Ring Gear Bolt	5.531
Diff. Ring Gear & Pinion Set	5.529
Diff. Side Bearing	5.536
Diff. Side Bearing Adj. Nut	5.537
Diff. Side Bearing Nut Lock	5.539
Diff. Side Gear	5.528
Diff. Side Gear Thrust Washer	5.543
Dimmer Switch-Plate-Shield	2.459
Direction Sig. Bracket	2.902
Direction Sig. Cam	2.896
Direction Sig. Cont. Assy.	2.895
Direction Sig. Flasher	2.892
Direction Sig. Lever Assy.	2.897
Direction Sig. Loom Cover	2.901
Direction Sig. Socket & Wire	2.899
Direction Sig. Switch Actuator	2.895
Direction Sig. Switch Actuator Brg.-Lever-Rod	2.895
Direction Sig. Switch Base & Wire Assy.	2.895
Direction Sig. Switch Housing	2.906
Direction Sig. Switch Ruby Jewel	2.895
Dist. Assy. & Parts	2.360 thru 2.421
Dist. to Block Gasket	2.363
Dist. Breaker Plate	2.385
Dist. to Carb. Fitting	1.720-8.963
Dist. to Carb. Pipe	8.964
Dist. Clamp	2.414
Dist. Drive Gear	2.374-1.643
Dist. Drive Spring	1.644
Door Fender Cap (See Fender Cap)	8.131
Drain Cock	8.951
Duct Assy. Air Intake	9.802

E

Engine Assy.	0.033
Engine Conversion Package	0.033
Engine Fan	1.064
Engine Insulator	0.027
Engine Oil Pressure Switch	1.800
Engine Overhaul Gasket Set	0.040
Engine Rear Supt. Cross Member	7.011
Engine Side Apron	8.112
Engine Support Bolt-Shim-Spacer	0.002
Engine Support Plate	0.029
Engine Support Rear Bracket	7.229
Engine Support Rebound Clamp	0.029
Engine Thermogage Unit	1.150
Exhaust Manifold	3.601
Exhaust Manifold Cover	3.602
Exhaust Manifold Riser Outlet Gaskets	3.270
Exhaust Pipe-Adapter	3.609
Exhaust Pipe Brace	3.616
Exhaust Pipe Flange	3.610
Exhaust Pipe Gasket	3.611
Exhaust Valve	0.297
Expansion Plug	8.970

CHASSIS ALPHABETICAL INDEX—Continued

F

Fan Assy.	1.064
Fan Belt	1.066
Fan Hub	1.062
Fan Pulley	1.062
Fender Anti-Squeak (Front)	8.154
Fender Anti-Squeak (Rear)	8.205
Fender Assy. (Front)	8.130
Fender Assy. (Rear)	8.203
Fender to Body Washer	8.143-8.206
Fender Brace (Front)	8.155
Fender Cap (On Door)	8.131
Fender Cap Clip	8.133
Fender Cap to Fender Rubber Bumper	8.133
Fender Cap Molding	8.132
Fender Door (Rear)	8.208
Fender Door Spring	8.209
Fender Gravel Deflector (Rear)	8.217
Fender Gravel Deflector Plate Assy.	8.217
Fender Lamp Bulb	8.991
Fender Lamp Gasket-Seal	2.590-2.594
Fender Lamp Lens	2.589
Fender Lamp Ornament	8.147
Fender Molding Bolt-Clip	8.148
Fender Moldings-Ornament	8.204-8.147
Fender Ornament-Conn.-Insert	8.147
Fender Ornament Wire	8.147
Fender Shield (Rear)	8.175
Fender Shield Bracket	8.179
Fender Shield Mldg.	8.176
Fender Shield Seal (Rear)	8.177
Fender Shield Seal Bolt (Rear)	8.177
Fender Shield Seal Ret. (Rear)	8.177
Fender Shield Seal Screw (Rear)	8.177
Fender to Shroud Baffle Assy.	8.155
Fender to Shroud Shim (Front)	8.143
Fender Side Emblem (Front)	8.147
Fender Skirt (Front)	8.153
Fender Skirt Baffle to Cowl Seal	8.154
Fender Skirt Battery Bumper	2.335
Fender Stone Shield (Rear)	8.214
Fender Support	8.144
Fender Support Screw (Front)	8.143
Floor Board Plate	9.038
Flywheel Assy.	0.666
Flywheel to Ck/Shaft Bolt	0.669
Flywheel to Ck/Shaft Sealer	0.665
Flywheel Housing	0.683
Flywheel Housing Cover	0.679
Flywheel Housing Dowel Pin	0.685
Flywheel Plate and Ring Gear	0.666
Flywheel Repair Pkg.	0.666
Flywheel Ring Gear	0.673
Fog Light Parts	9.774
Frame Assy.	7.003
Frame Body Bracket	7.330-7.334
Frame Cross Member (Front)	7.010
Frame Cross Member (Front Center)	7.011
Frame Cross Member (Rear)	7.014
Frame Cross Member (Rear Center)	7.013
Front Axle King Pin	6.203
Front Bumper Grille Guard	7.831
Front Bumper Master Guard Clamp	7.829

Front Spring	7.412
Front Suspension Arm & Bush Pkg.	6.168
Front Suspension Fluid	6.386
Front Wheel	5.803
Front Wheel Bearing	6.319
Front Wheel Hub Oil Seal	6.326
Front Wheel Tie Rod	6.230
Fuel Filter Assy.	3.110-3.890
Fuel Gauge, Inst. Panel	3.108
Fuel Gauge Gasket	3.112
Fuel Gauge, Tank Unit	3.107
Fuel Gauge Wire & Grommet	2.525
Fuel Gauge Wire Connector	2.525
Fuel Inj. Air Meter Adjustment Cover-Gasket	3.417
Fuel Inj. Air Meter Body-Cone-Gasket	3.335
Fuel Inj. Air Meter Ring-Spacer-Valve	3.335
Fuel Inj. Air Meter Solenoid Switch- Bracket-Bolt	3.314
Fuel Inj. Intake Air Heater-Brace-Duct	3.417
Fuel Inj. Intake Air Heater Hose-Housing	3.417
Fuel Inj. Fuel Meter and Nozzles	3.310
Fuel Inj. Fuel Meter Body-Spacer	3.312
Fuel Inj. Fuel Meter Control Diaphragm- Cover-Gasket	3.318
Fuel Inj. Fuel Meter Coasting Shutoff Diaphragm- Cover-Plate-Valve	3.328
Fuel Inj. Fuel Meter Enrichment Diaphragm- Cover-Lever-Rod-Spring	3.320
Fuel Inj. Fuel Meter Fuel Line-Ferrule-Fitting	3.330
Fuel Inj. Fuel Meter Fuel Line Restriction- Tee-Tube	3.330
Fuel Inj. Fuel Meter Fuel Pump-Drive- Cable-Seal	3.340
Fuel Inj. Fuel Meter Fuel Pump-Gasket	3.308
Fuel Inj. Fuel Meter Fuel Valve-Cover- Kit-Plunger	3.322
Fuel Inj. Fuel Meter Fuel Valve Screen- Spring-Valve	3.322
Fuel Inj. Fuel Meter Nozzle and Line- Block-Gasket	3.332
Fuel Inj. Fuel Meter Nozzle and Line Retainer-Sleeve	3.332
Fuel Inj. Fuel Meter Solenoid-Bracket- Lead-Spacer	3.314
Fuel Inj. Fuel Meter Solenoid Lever-Rod-Shaft	3.316
Fuel Inj. Gasket Kit	3.304
Fuel Inj. Housing Unit-Bolt-Gasket	3.417
Fuel Line Clip	3.162
Fuel Line Connections	3.900
Fuel Meter (See Fuel Inj. Fuel Meter)	
Fuel Pump Assy.	3.900
Fuel Pump Bail	3.906
Fuel Pump Bolt	3.936
Fuel Pump Bowl	3.903
Fuel Pump Bowl Gasket	3.904
Fuel Pump to Carb. Pipe	3.201
Fuel Pump Connection-Tubing	8.964
Fuel Pump Diaphragm Kit	3.910-3.925
Fuel Pump Gasket	3.932
Fuel Pump Hose	3.163
Fuel Pump Oil Seal & Gasket Pkg.	3.925
Fuel Pump Repair Kit	3.901
Fuel Pump Pipe to Carb.	3.201
Fuel Tank	3.001
Fuel Tank Drain Plug	3.006

CHASSIS ALPHABETICAL INDEX—Continued

Fuel Tank Fender Barrel & Cap	8,209
Fuel Tank Fender Door	8,208-12,944
Fuel Tank Fender Door Bumper	8,210-12,944
Fuel Tank Fender Door Lock	8,209-8,211
Fuel Tank Fender Door Lock Cyl.	8,211
Fuel Tank Fender Door Spring	8,209-12,944
Fuel Tank Filler Cap	3,028
Fuel Tank Filler Grommet	3,008
Fuel Tank Filler Pipe	3,003
Fuel Tank Filler Pipe Hose	3,003
Fuel Tank Filler Pipe Hose Clamp	3,004
Fuel Tank Filler Pipe Supt. Brkt.	3,010
Fuel Tank to Pump Pipe	3,158
Fuel Tank Strap Bolt	3,023
Fuel Tank Strap-Bracket	3,022
Fuse	8,965
Fuse Block-Cover	2,483

G

Gearshift	(See Trans. Gearshift)
Generator Adj. Strap	2,317
Generator Adj. Strap Spacer	2,317
Generator Cooler Pkg. & Parts	2,274
Generator Mounting Bolt	2,275
Generator Mounting Bracket	2,277
Generator & Parts	2,274 thru 2,317
Grease Fittings	8,984
Grommet (Rubber)	9,775

H

Hand Brake Actuating Lever	5,149
Hand Brake Actuating Lever Pivot	5,158
Hand Brake Cable	4,779
Hand Brake Cable Anchor	4,785
Hand Brake Cable Anchor Felt	4,784
Hand Brake Cable Return Sprg.	4,597
Hand Brake Cable to Support Anchor	4,786
Hand Brake Cross Lever	4,764
Hand Brake Equalizer Parts	4,765
Hand Brake Lever-Dash	4,700
Hand Brake Lever	4,591
Hand Brake Lever Pawl	4,595
Hand Brake Lever Pawl Rivet	4,596
Hand Brake Lever Pawl Rod Sprg.	4,597
Hand Brake Lever Pawl Sleeve	4,595
Hand Brake Lever Sector	4,603
Hand Brake Pull Rod Assy.	4,591
Hand Brake Pull Rod Brkt. Assy.	4,603
Hand Brake Return Spring	4,597
Hand Brake Rod Clevis	4,781
Hand Brake Warning Lamp Flasher	4,589
Hand Brake Warning Lamp Housing	4,589
Hand Brake Warning Lamp Switch	4,589
Harmonic Balancer	0,659
Harmonic Balancer Bolt-Washer	0,662
Headlamp Assy.	2,725
Headlamp Beam Adj. Screw	2,737
Headlamp Body	2,726
Headlamp Body to Fender Gasket	2,722
Headlamp Body Tension Spring	2,721

Headlamp Bulb	8,991
Headlamp Door-Bezel-Rim	2,728
Headlamp Door Screw	2,729
Headlamp Door Seal Ret. Spring	2,746
Headlamp Lens Gasket	2,735
Headlamp Mounting Ring Screw	2,736
Headlamp Sealed Beam Unit	2,727
Headlamp Sealed Beam Unit Ring	2,731
Headlamp Wire Junction Block	2,560
Headlamp Wire & Socket	2,750
Heat Control Valve (Manifold)	3,647
Heater Air Inlet Cont. Assy.	9,787
Heater Air Intake Baffle-Clamp	9,784
Heater Air Intake Elbow	9,782
Heater Air Intake Hose	9,786
Heater Air Intake Screen	9,784
Heater Assy. (Hot Water)	8,845 thru 8,866
Heater Blower	8,857
Heater Blower Case	8,845
Heater Blower Impeller	8,857
Heater Blower Screw	8,857
Heater Cont. Panel	8,866
Heater Cont. Panel Elbow	8,866
Heater Cont. Panel Knob	8,866
Heater Cont. Panel Plate	8,866
Heater Cont. Panel Socket & Wire	8,866
Heater Cont. Panel Switch	8,852-8,866
Heater Cont. Panel Wire	8,866
Heater Core Assy.	8,854
Heater Diaphragm Assy.	8,850
Heater Hose	8,846
Heater Hose-Clamp	8,948
Heater Motor Assy.	8,855
Heater Motor Spacer	8,856
Heater Shutoff Valve	8,866
Heater Shutoff Valve Cable	8,866
Heater Shutoff Valve Cam	8,866
Heater Shutoff Valve Elbow	8,866
Heater Shutoff Valve Nipple	8,866
Hood Bumper	8,024
Hood Catch Cont. Trunnion	8,077
Hood Catch Hook Assy.	8,036
Hood Catch Lock Plate Spring	8,081
Hood Catch Pilot Bolt	8,085
Hood Catch Pilot to Hood Brkt. Assy.	8,035
Hood Catch Plate Assy.	8,080-8,083
Hood Center Grille Finish Plate	8,049
Hood Cross Brace Assy.	8,000
Hood Emblem	8,030
Hood Front Gusset	8,022
Hood Front Name Plate	1,303
Hood Front Name Plate Bar	1,303
Hood Front Name Plate Bezel	1,303
Hood Grille	8,049
Hood Guide Assy.-Brkt- (Rear)	8,013
Hood Hinge	8,015
Hood Hinge Link	8,015
Hood Hinge Rivet	8,015
Hood Hinge Spring	8,013
Hood Hinge Washer	8,015
Hood Latch Spring	8,084
Hood Latch Striker Brace	8,080
Hood Latch and Fender Supt.-Brace	8,155
Hood Lock Control	8,075
Hood Lock Pilot	8,035

CHASSIS ALPHABETICAL INDEX—Continued

Hood Lock Pilot Spring	8.035
Hood Lock Pilot Spring Ret.	8.035
Hood Lock Safety Catch Spring	8.036
Hood Ornament	8.030
Hood Ornament Insert	8.030
Hood Panel	8.000
Hood Panel Bumper	8.024
Hood Panel Mldg.	8.054
Hood to Shroud Water Baffle	9.127
Hood Side Ornament	8.039
Hood Side Panel Name Plate	8.039
Hood Top Panel Side Mldg.	8.054
Hood Upper Panel Mldg. Bolt	8.054
Hood Upper Panel Mldg. Fastener	8.054
Horn Assy.	2.810
Horn Blowing Key Ret.	2.829
Horn Blowing Ring	2.830
Horn Blowing Key	2.830
Horn Bracket	2.845
Horn Button	2.817
Horn Button Cable	2.859
Horn Button Cap	2.817
Horn Button Cap Ret.	2.821
Horn Button Cap Ret. Ins.	2.821
Horn Button Contact	2.822
Horn Button Contact Cup	2.821
Horn Button Contact Cup Ring	2.822
Horn Button Contact Ret. Plate	2.822
Horn Button Contact Separator	2.822
Horn Button Contact Spring	2.822
Horn Button Cushion	2.816
Horn Button Ground Plate	2.823
Horn Button Lock Ring	2.829
Horn Button Operating Key	2.830
Horn Button Operating Ring	2.830
Horn Button Ring Spacer	2.831
Horn Button Ring Spacer Ins.	2.831
Horn Button Wire Separator	2.822
Horn Cable Conn.	2.819
Horn Cable Contact Sleeve	2.819
Horn Ground Strip	2.859
Horn Relay	2.815
Horn Ring Adapter	2.821
Horn Ring Cover	2.830
Horn Ring Emblem-Plate	2.817
Horn Wire Clamp	2.859
Horn Wire Conn. Grommet	9.775
Hose (Radiator)	1.159
Hose Clamp	1.168-8.948
Hub (Front)	6.306
Hub Cap	5.858
Hydraulic Brake Parts	(See Brakes)

I

Ignition Coil (Also See Coil)	2.170
Ignition Coil Bracket	2.183
Ignition Coil Resistance Unit	2.173
Ignition Key	2.187
Ignition Lock Cyl.	2.188

Ignition Switch	2.188
Ignition Switch Bracket	2.189
Ignition Switch Ferrule	2.192
Ignition Timing Indicator	0.219
Ignition Wire Nipple	2.258
Ignition Wire Set	2.239
Instrument Lamp Bulb	8.991
Instrument Panel Brace	9.131
Instrument Panel Gauge Case	9.743
Instrument Panel Radio Speaker Grille	9.655
Intake Manifold	3.265
Intake Manifold Choke Heat Tube-Baffle	3.603
Intake Manifold Riser Tube	3.264
Intake Valve	0.296

J

Jack (Wheel)	8.820
Jack Base	8.820
Jack Handle	8.820
Jack Repair Kit	8.820

K

Key (Woodruff)	8.960
Key, Lock	2.187
King Pin	6.203
King Pin Bearing Plug & Ring	6.223
King Pin Bushing	6.021
King Pin Lock Pin	6.216
King Pin Repair Kit	6.203
King Pin Thrust Bearing	6.210
King Pin Thrust Bearing Shim	6.214

L

Licence Brkt. to Body Sealing Wshr.	7.800
License and Lamp Bracket (Rear)	2.705
License Lamp (Rear)	2.700
License Lamp Cover (Rear)	2.706
License Lamp Gasket (Rear)	2.707
License Lamp Lens (Rear)	2.709
License Lamp Pad (Rear)	2.702
License Lamp Screw (Rear)	2.708
License Lamp Wire (Rear)	2.714
License Plate Brkt. (Rear)	7.800
License Plate Bumper	7.800
License Plate Stabilizer	7.800
License Plate Support	7.800
License Support Brkt. (Front)	7.800
Light Bulbs	8.991
Light Switch	2.485
Light Switch Fuse	8.965
Light Switch Knob	2.486
Light Switch Knob Bushing-Ferrule	2.487
Light Switch Mounting Bracket	2.487
Lower Control Arm	6.168
Lower Control Arm Ball Stud-Seal	6.174
Lower Control Arm Bumper	6.176

CHASSIS ALPHABETICAL INDEX—Continued

Lower Control Arm Bushing Seal	6.166
Lower Control Arm Pivot Pin Pkg.	6.174
Lower Control Arm Shaft Bushing Ret.	6.169
Lower Control Arm Shaft Pkg.	6.170
Lubrication Fittings	8.984

M

Main Bearing Drain Pipe (Rear)	1.565
Main Bearings	0.096-0.106
Main Wire Clamp & Fuse Holder	2.482
Manifold Bolt	3.288
Manifold Clamp Washer	3.273
Manifold Cover (Exhaust)	3.602
Manifold Gasket Set	3.270
Manifold Gaskets	3.270
Manifold Heat Valve Bushing	3.646
Manifold Heat Valve Stud	3.656
Manifold Heat Valve Spring	3.641
Manifold Heat Valve Therm.	3.640
Manifold Heat Valve Therm. Deflector	3.641
Manifold Intake-Exhaust	3.265-3.601
Manifold Stud	3.275
Master Cyl.	4.650
Master Cyl. Conn. Rod Clevis	4.662
Muffler Assy.	3.701
Muffler Bracket	3.704
Muffler Clamp	3.708
Muffler Support Strap	3.704
Muffler Tail Pipe	3.705
Muffler Tail Pipe Brkt.-Supt.	3.706
Muffler to Tail Pipe Clamp	3.708

N

Nuts	8.915 thru 8.925
----------------	------------------

O

Oil Cleaner Assy.	1.657
Oil Cleaner Cover	1.657
Oil Cleaner Cup	1.657
Oil Cleaner Screen	1.656
Oil Cleaner Screen Cover	1.657
Oil Cleaner Screen Ret.	1.657
Oil Filler Cap	1.758
Oil Filler Tube Extension	1.745
Oil Filler & Ventilator Inlet	1.745
Oil Filter Assy.	1.835
Oil Filter Element	1.836
Oil Filter Gasket	1.844
Oil Filter Parts	1.837
Oil Gauge Pipe Clip	8.950
Oil Level Indicator Rod-Tube-Clamp	1.516
Oil Pan	1.426
Oil Pan Drain Screw	1.453
Oil Pan Drain Screw Gasket	1.456
Oil Pan Gasket	1.429
Oil Pan Screen	1.656
Oil Press. Gauge	1.803
Oil Press. Reg. Ball-Gasket-Retainer-Spring	1.609
Oil Pump Assy.	1.652
Oil Pump Body	1.653

Oil Pump-Cover	1.723
Oil Pump Drive Gear	1.639
Oil Pump Drive Gear & Shaft	1.639
Oil Pump Drive Shaft	1.639
Oil Pump Driven Gear	1.639
Oil Pump Driven Gear Shaft	1.639
Oil Pump Gasket	1.655-1.724
Oil Screen Cover	1.657
Oil Screen Ret.	1.657
Ornament, Hood Top Illum.	8.030

P

Parking Lamp	2.585
Parking Lamp Parts	2.587 thru 2.599
Pedal Felt	9.039
Pedal Plate	9.038
Pedals	0.830-4.625
Pinion Bearings & Parts	5.447-5.484
Pins	8.938 thru 8.942
Pipe Clip	8.950
Pipe Fittings	8.963
Pipe Plug	8.971
Piston Pin	0.636
Piston & Pin Assy.	0.629
Piston Pin Bushing	0.613
Piston Pin Set Screw-Lockwasher	0.639
Piston Ring	0.643
Pitman Arm	(See Steering Gear)
Planet Carrier Assy., Rear H.T.	4.177
Plug	8.970-8.971-8.973
Power Brakes	(See Vac. Power Brakes)
Power Steering Gear Parts	6.518-6.856
Prop. Shaft	5.544
Prop. Shaft Center Brg. and Bracket	5.600
Prop. Shaft Center Brg. Shim	5.598
Prop. Shaft Center Brg. Packing-Shield	5.601
Prop. Shaft Splash Shield	5.556

R

Rad. Baffle-Upper	1.272
Rad. Cap	1.203
Rad. Cap Sealing Washer	1.206
Rad. Center Panel	1.266
Rad. Core	1.219
Rad. Drain Cock	1.229
Rad. Drain Hose-Pipe	1.240
Rad. & Eng. Supt. Frame X Member	7.061
Rad. to Fan Shroud	1.277
Rad. Grille	1.266
Rad. Grille Bar-Blade	1.266
Rad. Grille Emblem	1.303
Rad. Grille Emblem Bezel	1.303
Rad. Grille to Front Fender Support	1.268
Rad. Grille Molding	1.268
Rad. Grille Name Plate	1.303
Rad. Grille Ornament	1.303
Rad. Grille Plate	1.266
Rad. Grille Ret.	1.266
Rad. Grille Screw	1.269
Rad. Grille Spinner	1.303

CHASSIS ALPHABETICAL INDEX—Continued

Rad. Hose	1.159
Rad. Hose Clamp	1.166
Rad. Hose Brace-Spring	1.160
Rad. Mounting Bracket	1.274
Rad. Overflow Tube	1.240
Rad. Splash Apron	1.274
Rad. Support	1.270
Rad. Support to Fender Baffle	1.272
Rad. Support to Frame Spacer	1.270
Rad. Support Frame Brkt.	7.061
Radio Antenna Parts	9.620 thru 9.647
Radio Parts	9.649 thru 9.667
Radio Fuse	8.965-9.654
Rear Axle	(See Axle)
Rear Axle Control Arm	5.382
Rear Axle Control Arm Bushing	5.381
Rear Fender	8.203
Rear Fender Door Parts	8.209
Rear Fender Panel Shield	8.175
Rear Fender Shield Seal (See Fender)	8.177
Rear License Lamp	2.700
Rear License Supt. Bracket	2.670
Rear Spring Seat	5.403
Rear Wheel	5.803
Repair Kit-Safety Jack	8.820
Rivets	8.967
Round Closed Gasket	8.955
Rubber Hose Tubing	8.962
Running Board Mldg. Ret.	8.309

S

Safety Light Parts	9.773
Set Screw	8.975
Sheet Metal Plug	8.973
Sheet Metal Screw	8.977
Shock Absorber	7.345
Shk/Abs. Bolt-Nut	7.395
Shk/Abs. Bracket Assy.	7.364
Shk/Abs. Bushing	7.377
Shk/Abs. Fluid	6.386
Shk/Abs. Frame Bracket	7.395
Shk/Abs. Frame Spacer-Washer	7.397
Shk/Abs. Shield	7.371
Shroud Hood Ledge Lacing Clip	9.128
Sleeve, Ball	8.963
Spare Wheel Clamp	7.629
Spare Wheel Clamp Bolt	7.632
Spare Wheel Clamp Bolt Nut	7.633
Spare Wheel Lock Cyl. (Rear)	7.680
Spare Wheel Lock Plunger (Rear)	7.680
Spark Plug	2.270
Spark Plug Gasket	2.271
Spark Plug Terminal Nipple	2.258
Spark Plug Wire	2.239
Spark Plug Wire Clamp	2.251
Spark Plug Wire Clamp Brkt.	2.251
Spark Plug Wire Grommet	2.251
Spark Plug Wire Manifold	2.251
Spark Plug Wire Manifold Cover	2.251
Speedo. Cable	4.342
Speedo. Drive Gear	4.343
Speedo. Drive Gear Spacer	4.345
Speedo. Driven Gear & Shaft	4.337

Speedo. Head Assy.	4.339
Spring Assy. (Front)	7.412
Spring Assy. (Rear)	7.503
Spring Brkt. Bushing (Rear)	7.524
Spring Bumper (Rear)	5.395
Spring Bumper Ret. (Rear)	5.394
Spring Bushing (Rear)	7.504
Spring Center Bolt	7.506
Spring Clip (Rear)	7.516
Spring Clip Plate (Rear)	7.518
Spring Cover Pkg.	7.495
Spring Front Bracket (Rear)	7.112
Spring Leaf Liner (Wood) (Rear)	7.502
Spring Rear Bracket (Rear)	7.118
Spring Retainers	8.934
Spring Seat Ins. Bushing (Front)	7.422
Spring Seat Ins. Pad (Rear)	7.545
Spring Seat Ins. Pad Bushing	7.547
Spring Seat Ins. Ret. (Rear)	7.552
Spring Shackle (Rear)	7.523
Spring Shackle Bolt (Front)	7.428
Spring Shackle Bolt (Rear)	7.529
Spring Shackle Bshg. Pkg. (Rear)	7.504
Spring Shackle Cork Washer (Front)	7.443
Spring Shackle Pin (Front)	7.427
Spring Spacer (Front Coil)	7.420
Stab. Bar Insulator	7.243
Stab. Bushing	5.417-7.244
Stab. Frame Bracket (Front)	7.242
Stab. Ins.-Bushing (Front)	7.244
Stab. Link Bolt Grommet Ret.	7.245
Stab. Link Nut	7.238
Stab. Link Pkg.-Spacer	7.240
Stab. Shaft	7.241
Standard Parts	8.899 thru 8.991
Starter to G/Shift Neutralizer Lever	4.054
Starter Mounting Bolt	2.041
Starter Pedal	2.004
Starting Motor & Parts	2.041 thru 2.113
Starting Switch	2.100
Static Collector Parts	9.650
Strg. Arms	6.103-6.179
Strg. Col. Bracket-Plate	6.750
Strg. Col. Bracket Bolt	6.751
Strg. Col. Bracket Insulator	6.758
Strg. Col. Jacket	6.518
Strg. Col. Housing Plug	6.519
Strg. Col. & Pedal Plate Felt-Seal	9.039
Strg. Col. Plate	9.038
Strg. Col. & Toe Board Grommet	9.045
Strg. Conn. Rod Ball Seat	6.874
Strg. Conn. Rod Ball Seat Spacer	6.883
Strg. Conn. Rod Ball Seat Spacer Cover	6.883
Strg. Conn. Rod Dust Cover	6.886
Strg. Conn. Rod Dust Cover Spring	6.888
Strg. Conn. Rod End Plug	6.881
Strg. Conn. Rod Idler Arm Assy.	6.895
Strg. Conn. Rod Idler Lever Brkt.	6.896
Strg. Conn. Rod Idler Lever Bshg.	6.897
Strg. Conn. Rod Idler Lever Bshg. Oil Seal	6.898
Strg. Conn. Rod Safety Plug	6.882
Strg. Conn. Rod Spring	6.876
Strg. Conn. Rod or Tube	6.870
Strg. Conn. Rod Washer	6.885
Strg. Gear Adj.	6.830

CHASSIS ALPHABETICAL INDEX—Continued

Strg. Gear Bolt	6.509
Strg. Gear Elbow	6.679
Strg. Gear Elbow Bolt	6.679
Strg. Gear Elbow Seal	6.674
Strg. Gear End Cover Brg.	6.826
Strg. Gear Hose to Valve Union	6.673
Strg. Gear Hsg.	6.803
Strg. Gear Hsg. Brg. Adapter (Upper)	6.519
Strg. Gear Hsg. End Plate-Cover	6.824
Strg. Gear Hsg. End Plate Gasket-Packing	6.825
Strg. Gear Hsg. Side Plate	6.807
Strg. Gear Hsg. Side Plate Gasket	6.809
Strg. Gear Lash Adj. Shim	6.828
Strg. Gear Oil Hose Clip	6.671
Strg. Gear Oil Pressure Hose	6.670
Strg. Gear Oil Pump Assy.	6.605
Strg. Gear Oil Pump Belt	6.660
Strg. Gear Oil Pump Body	6.608
Strg. Gear Oil Pump Body Cover	6.609
Strg. Gear Oil Pump Bracket	6.606
Strg. Gear Oil Pump Brg. Ret. Ring	6.616
Strg. Gear Oil Pump Control Valve	6.624
Strg. Gear Oil Pump Drive Shaft	6.614
Strg. Gear Oil Pump Plate	6.612
Strg. Gear Oil Pump Pulley	6.655
Strg. Gear Oil Pump Relief Valve	6.622
Strg. Gear Oil Pump Reservoir	6.635
Strg. Gear Oil Pump Rotor	6.610
Strg. Gear Oil Pump Rotor Ring	6.611
Strg. Gear Oil Pump Rotor Seal	6.611
Strg. Gear Oil Pump Shaft Brg.	6.615
Strg. Gear Oil Pump Shaft Seal	6.617
Strg. Gear Oil Pump Spring	6.612
Strg. Gear Oil Return Hose	6.671
Strg. Gear Pitman Arm	6.859
Strg. Gear Pitman Arm Nut	6.861
Strg. Gear Pitman Arm Pack. Ret.	6.856
Strg. Gear Pitman Shaft	6.850
Strg. Gear Pitman Shaft Bushing	6.786
Strg. Gear Pitman Shaft Packing	6.855
Strg. Gear Power Cyl.	6.576
Strg. Gear Power Cyl. Adapter	6.584
Strg. Gear Power Cyl. Gasket	6.577
Strg. Gear Power Cyl. Piston	6.578
Strg. Gear Power Cyl. Piston Ring	6.579
Strg. Gear Power Cyl. Piston Rod	6.580
Strg. Gear Power Cyl. Rack	6.586
Strg. Gear Power Cyl. Rack Pin	6.587
Strg. Gear Power Cyl. Rod-Nut-Washer	6.581
Strg. Gear Power Rack Cover Shim	6.591
Strg. Gear Power Rack Guide	6.590
Strg. Gear Power Rack Guide Cover	6.592
Strg. Gear Sector Adj. Screw	6.822
Strg. Gear Sector Adj. Screw Nut	6.823
Strg. Gear Sector & Shaft	6.850
Strg. Gear Shaft & Worm	6.524
Strg. Gear Thrust Bearing	6.530
Strg. Gear Thrust Bearing Race	6.527
Strg. Gear Valve	6.550
Strg. Gear Valve Bleed Pipe	6.681
Strg. Gear Valve Centering Plunger	6.551
Strg. Gear Valve Centering Spring	6.552
Strg. Gear Valve Check Valve	6.553
Strg. Gear Valve Cover	6.554
Strg. Gear Valve Cover Oil Seal	6.555

Strg. Gear Valve Housing Seal	6.556
Strg. Gear Valve Oil Pipe	6.677-6.678
Strg. Gear Worm Ball	6.844
Strg. Gear Worm Ball Clamp	6.843
Strg. Gear Worm Ball Guide	6.842
Strg. Gear Worm Ball Nut	6.841
Strg. Gear Worm Screw	6.830
Strg. Gear Worm Seal	6.806
Strg. Inter. Arm Pivot Bolt	6.187
Strg. Knuckle	6.020
Strg. Knuckle Bushing	6.021-6.024
Strg. Knuckle Expansion Plug	6.223
Strg. Knuckle Nut	6.022
Strg. Knuckle Spindle Washer	6.321
Strg. Knuckle Support	6.023
Strg. Knuckle Support Arm	6.178
Strg. Knuckle Supt. Arm Bumper-Upper	6.176
Strg. Knuckle Supt. Arm Bumper-Lower	7.422
Strg. Knuckle to Support Bolt	5.002
Strg. Knuckle Support Bushing	6.024
Strg. Knuckle Supt. Bushing Seal	6.166
Strg. Knuckle Supt. Clamp Bolt	6.018
Strg. Knuckle Supt. Lower Arm	6.168
Strg. Knuckle Supt. Pivot Pin Pkg.	6.178
Strg. Knuckle Supt. Upper Bshg. Seal	6.178
Strg. Knuckle Thrust Bearing	6.210
Strg. Lash Adj. Sleeve	6.830
Strg. Shaft Upper Brg.	6.521
Strg. Shaft Upper Brg. Spring-Seal	6.526
Strg. Wheel-Deluxe-Std.	6.513
Strg. Wheel Hub Cover	6.512
Strg. Wheel Nut	6.515
Strg. Wheel Shaft Washer	6.515
Stop Light Switch	2.447
Stop Light Switch Mtg. Bracket	2.447
Stop Light Wire Connector	2.649
Stud	8.981
Suspension Fluid (Front)	6.386

T

Tail Lamp Assy.	2.679
Tail Lamp Brkt.	2.662
Tail Lamp Bulb	8.991
Tail Lamp Door-Housing	2.681
Tail Lamp Door Gasket	2.684
Tail Lamp Door Screw	2.688
Tail Lamp Lens	2.682-2.685
Tail Lamp Lens Gasket	2.686
Tail Lamp Mtg. Parts	2.664
Tail Lamp Ornament-Gasket	2.680
Tail Lamp Ornament Ret.	2.680
Tail Lamp Pad	2.660
Tail Lamp Spring	2.664
Tail Lamp Socket	2.694
Tail Lamp Support	12.944
Tail Lamp Wire	2.694
Tail Lamp Wire Clip	3.950
Tail Lamp Wire Connector	2.649
Tail Pipe	3.705
Tail Pipe Outlet-Bezel	3.706

CHASSIS ALPHABETICAL INDEX—Continued

Temperature, Water Gauge	1.148
Thermogauge Engine Unit	1.150
Thermostat	1.246
Threaded Sleeve Elbow	8.963
Threaded Sleeve Nipple	8.963
Throttle Cont. Assy.	3.480
Throttle Cont. Idler Lever	3.450
Throttle Cont. Inter. Lever Bracket	3.585
Throttle Cont. Lever	3.450
Throttle Cont. Lever Assy. H.T.	3.454
Throttle Control Lever Over Center Return Spring	3.585
Throttle Cont. Return Spring Clip	3.459
Throttle Cross Shaft w/Bracket	3.585
Throttle Holding Control Assy.	3.481
Throttle Holding Control Knob	3.481
Throttle Holding Control Bracket-Cover- Lever-Spring	3.483
Throttle Return Check Diaphragm	3.440
Tie Rod Adj. Sleeve	6.232
Tie Rod Assy.	6.230
Tie Rod Ball Seat	6.243
Tie Rod Bolt	6.234
Tie Rod Dust Cover	6.111
Tie Rod Dust Cover Seal	6.111
Tie Rod Dust Cover Spring	6.112
Tie Rod End	6.233
Tie Rod End Clamp	6.234
Timing Chain	0.724
Timing Hole Cover	0.714
Timing Indicator	0.219
Timing Sprocket Cover	0.206
Timing Sprocket Cover Bar	0.219
Timing Sprocket Cover Gasket	0.207
Timing Sprocket Cover Oil Seal	0.213
Tire Valve Dust Cap	8.988
Tire Valve Extension	5.875
Toe Board Cover Plate	9.038
Tool Kit	8.821
Tool Ret. - Hold Tools to Floor Pan	8.821
Torus Assy. H.T.	4.121
Torus Check Valve - Ret. - Sprg.	4.121
Torus Cover Assy.	4.118
Torus Cover to Flywheel Gasket	4.118
Trans. Assy.	4.003
Trans. Brake Drum Assy. H.T.	4.169
Trans. Breather Screw	4.104
Trans. Carrier Assy., Rr. Planet H.T.	4.177
Trans. Case	4.103
Trans. Case Bushing	4.104
Trans. Case Center Brg. Cap Lock Plate H.T.	4.131
Trans. Case Chip Collector	4.105
Trans. Case Cover	4.105
Trans. Case Oil Filler Sleeve	4.132
Trans. Case Plug	4.103
Trans. Case Side Cover Gasket	4.109
Trans. Clutch Annular Expander & Seal Pkg.	4.166
Trans. Clutch Cont. Annular Piston H.T.	4.166
Trans. to Clutch Hsg. Gasket	4.005
Trans. Clutch Plate H.T.	4.163-4.165
Trans. Clutch Release Spring H.T.	4.164
Trans. Cont. Valve Lever Assy. H.T.	4.279
Trans. Converter Cover Hub Bshg.	4.115

Trans. Counter Gear Brg. Ret. Washer	4.423
Trans. Ctr/Shaft	4.428
Trans. Ctr/Shaft Brg. Roller	4.422
Trans. Ctr/Shaft Gear Assy.	4.421
Trans. Ctr/Shaft Ball	4.429
Trans. Ctr/Shaft Gear Spacer	4.426
Trans. Ctr/Shaft Washer	4.442
Trans. Cover Gasket	4.109
Trans. Floor Hole Cover Assy.	9.106
Trans. Fluid-Hydraulic	4.101
Trans. Frt. Bearing	4.355
Trans. Frt. Brg. Washer	4.376
Trans. Frt. Brg. Oil Sling	4.374
Trans. Frt. Brg. Ret.	4.356
Trans. Frt. Brg. Ret. Gasket	4.358
Trans. Frt. Brg. Snap Ring	4.376
Trans. Frt. Clutch Drum Assy. H.T.	4.162
Trans. Frt. Clutch Drum Bushing	4.162
Trans. Frt. Drive Gear H.T.	4.158
Trans. Frt. Drive Gear Bushing-Spacer-Washer	4.158
Trans. Frt. Drum Oil Delivery Sleeve Assy. H.T.-Bushings	4.179
Trans. Frt. Oil Pump & Cover Assy. H.T.	4.226
Trans. Frt. Oil Pump Cover Gasket H.T.	4.124
Trans. Frt. Oil Pump Cover Seal Assy. H.T.	4.125
Trans. Frt. Oil Pump Drive Gear Key H.T.	4.126
Trans. Frt. Oil Pump Parts	4.226
Trans. Frt. Planet Carrier Assy. H.T.	4.161
Trans. Frt. Pump Oil Inlet Pipe Assy. H.T.	4.222
Trans. Frt. Servo H.T.	4.255 thru 4.234
Trans. Frt. Servo Exh. Body	4.265
Trans. Gasket Set	4.005
Trans. G/Shift Cont. Indicator Assy. H.T.	4.038
Trans. G/Shift Cont. Indicator Cover & Lens	4.038
Trans. G/Shift Cont. Lever H.T.	4.006
Trans. G/Shift Cont. Lever Shaft Parts H.T.	4.039
Trans. G/Shift Cont. Lower Lever Bracket	4.018
Trans. G/Shift Cont. Lower Relay Lever	4.040
Trans. G/Shift Cont. Lower Suppt. Bshg.-Cap	4.018
Trans. G/Shift Cont. Rear Rod Parts	4.040
Trans. G/Shift Cont. Rod Assy.	4.019
Trans. G/Shift Control Rod Clevis	4.019
Trans. G/Shift Cont. Shaft Collar	4.021
Trans. G/Shift Cont. Shaft & Hsg. Assy.	4.039
Trans. G/Shift Cont. Shaft Lower Lever Bshg.	4.042
Trans. G/Shift Cont. Shaft Parts	4.017
Trans. G/Shift Cont. Shaft Upper Brkt. H.T.	4.038
Trans. G/Shift Cont. Splash Shield	4.044
Trans. G/Shift Cont. Suppt.	4.018
Trans. G/Shift Cont. Upper Lever Cover	4.015
Trans. G/Shift Cont. Upper Lever Knob	4.009
Trans. G/Shift Cont. Upper Lever Parts	4.036
Trans. G/Shift Cont. Upper Suppt. Brg.	4.018
Trans. G/Shift Fork-Yoke	4.303-4.304
Trans. G/Shift Lever Assy.	4.006
Trans. G/Shift Lever Knob Washer	4.009
Trans. G/Shift Lever Pivot Pin	4.036
Trans. G/Shift Lever Spring	4.047
Trans. G/Shift Lever Support Housing Assy.	4.038
Trans. G/Shift Low & Reverse Shift Fork-Yoke	4.304
Trans. G/Shift Low and Rev. Shift Shaft	4.309
Trans. G/Shift Lower Control Lever	4.041
Trans. G/Shift Second & High Shift Fork	4.303
Trans. G/Shift Second and High Shift Shaft	4.309

CHASSIS ALPHABETICAL INDEX—Continued

Trans. G/Shift Selector Cont. Cable Assy.	4.020
Trans. G/Shift Selector Cont. Rod Assy.	4.020
Trans. G/Shift Selector Control Lever	4.045
Trans. G/Shift Selector Lever Pivot Pin	4.045
Trans. G/Shift Selector Rod-Cable Parts	4.021
Trans. G/Shift Selector Rod Insulator	4.019
Trans. G/Shift Shaft Assy.	4.039
Trans. G/Shift Strg. Col. Tube Assy.	4.039
Trans. Gear Thrust Washer	4.398
Trans. Gov. Assy. H.T.	4.256
Trans. Gov. Oil Delivery Sleeve H.T.	4.255
Trans. Gov. Oil Delivery Sleeve Plug H.T.	4.255
Trans. Gov. Plunger & Bshg. Assy. and Parts	4.256
Trans. Hydraulic Modulator Parts	4.208
Trans. Inner Cont. Lever Pin, Seal & Washer Pkg. H.T.	4.282
Trans. Input Shaft-Ring	4.123
Trans. Line Exhaust Valve-Retainer	4.106
Trans. Low & Reverse Gear	4.417
Trans. Low Sun Gear and Clutch Parts	4.162-4.164
Trans. Low Servo Parts	4.228
Trans. Main Drive Gear	4.351
Trans. Main Drive Gear Bearing Ret.-Bolt	4.356
Trans. Main Drive Gear Bearing Ret. Gasket	4.358
Trans. Main Drive Gear Oil Seal	4.354
Trans. Main Shaft	4.403
Trans. Main Shaft Coupling Washer	4.404
Trans. Main Shaft Ext.-Washer	4.403
Trans. Main Shaft Ext. Bolt	4.405
Trans. Main Shaft & Gear H.T.	4.172
Trans. Main Shaft Parts	4.173
Trans. Main Shaft Pilot Brg.	4.352
Trans. Main Shaft Pilot Brg. Spacer	4.353
Trans. Main Shaft Pilot Bushing	4.172
Trans. Main Shaft Rear Brg.	4.408
Trans. Main Shaft 2nd Speed Gear	4.395
Trans. Main Shaft 2nd Speed Gear Bushing	4.396
Trans. Main Shaft Snap Ring	4.397
Trans. Main Shaft Washer	4.404-4.406
Trans. Manual Cont. Shaft Seal H.T.	4.282
Trans. Manual Valve Lever-Seal-Spacer	4.218
Trans. Name Plate	4.003
Trans. Neutralizer Rod Bracket	4.054
Trans. Neutralizer Sw. Rod Return Spring	4.054
Trans. Neutralizer Switch	4.054
Trans. Oil Cont. Valve Body H.T.	4.265
Trans. Oil Cooler and Parts	4.128
Trans. Oil Supply Pump Parts	4.203
Trans. Oil Delivery Sleeve	4.179
Trans. Oil Level Indicator Assy. H.T.	4.133
Trans. Oil Pan Assy. H.T.	4.195
Trans. Oil Pan Gasket H.T.	4.196
Trans. Oil Pipes H.T.	4.248
Trans. Oil Press. Reg. Valve H.T.	4.216
Trans. Oil Pump & Gov. Drive Gear H.T.	4.210
Trans. Oil Pump & Gov. Driven Gear H.T.	4.211
Trans. Oil Pump Inlet Pipe H.T.	4.222
Trans. Oil Pump Inlet Pipe Gasket H.T.	4.223
Trans. Oil Screen Assy. H.T.	4.224
Trans. Oil Seal Ring H.T.	4.127
Trans. Outer Shift Lever	4.152
Trans. Parking Brake Parts	4.290
Trans. Parking Lock Lever Parts	4.220
Trans. Planet Carrier and Parts	4.175-4.176

Trans. Planet Reverse Drum	4.190
Trans. Primary Pump	4.115
Trans. Rear Brg. Oil Seal	4.318
Trans. Rear Brg. Ret.-Seal-Supt.	4.317
Trans. Rear Brg. Ret. Bushing	4.408
Trans. Rear Brg. Ret. Gasket	4.318
Trans. Rear Brg. Shield	4.335
Trans. Rear Brg. Snap Ring	4.412
Trans. Rear Clutch Drum Assy. H.T.	4.184
Trans. Rear Clutch Drum Bushing-Cylinder- Plate	4.184
Trans. Rear Clutch Hub H.T.	4.186
Trans. Rear Drum H.T.	4.187
Trans. Rear Drum Rear Band Spring H.T.	4.252
Trans. Rear Oil Pump Assy. H.T.	4.200
Trans. Rear Oil Pump Check Valve Ball- Spring H.T.	4.213
Trans. Rear Oil Pump Cover H.T.	4.203
Trans. Rear Oil Pump Gov. Drive Flange H.T.	4.259
Trans. Rear Servo H.T.	4.236 thru 4.250
Trans. Rear Supt.-Shim	4.081
Trans. Rear Supt. Ret.	4.083
Trans. Reverse Anchor H.T.	4.294
Trans. Reverse Anchor Retracting Spring H.T.	4.295
Trans. Reverse Band and Parts	4.246-4.251
Trans. Reverse Blocker Piston H.T.	4.290
Trans. Reverse Clutch housing	4.188
Trans. Reverse Idler Gear	4.430
Trans. Reverse Idler Gear Bushing	4.431
Trans. Reverse Idler Gear Shaft	4.433
Trans. Reverse Idler Gear Thrust Washer	4.437
Trans. Reverse Idler Shaft Lock Screw-Pin	4.435
Trans. Reverse Internal Gear H.T.	4.193
Trans. Reverse Internal Gear Bushing	4.193
Trans. Reverse Internal Gear Suppt. H.T.	4.194
Trans. Reverse Servo Parts	4.241
Trans. Reverse Shifter Crank Roller H.T.	4.293
Trans. Reverse Unit Center Gear H.T.	4.190
Trans. Reverse Unit Parts H.T.	4.189-4.190
Trans. Reverse Unit Planet Carrier Assy. H.T.	4.192
Trans. Second & High Sleeve	4.414
Trans. Second Speed Gear Thrust Washer	4.398
Trans. Selector Lever Shaft Oil Seal	4.302
Trans. Selector Lever Shaft Oil Seal Washer	4.302
Trans. Selector Shaft Lever	4.050
Trans. Selector Shaft Lever Spring	4.047
Trans. Selector Shaft Lever Spring Yoke	4.048
Trans. Selector Shaft Outer Lever	4.050
Trans. Selector Shaft Seal	4.313
Trans. Selector Shaft Shift Lever	4.314-4.315
Trans. Selector Shaft Retainer	4.096
Trans. Selector Shift Shaft	4.301
Trans. Servo Band Adj. Screw	4.253
Trans. Servo Band & Lining H.T.	4.251
Trans. Servo Cover Assy. and Parts	4.212
Trans. Servo Release Cyl.	4.225
Trans. Shift Fork Poppet Spring-Ball	4.311
Trans. Shift Fork Screw	4.312
Trans. Shift Interlock Plate-Pin	4.095
Trans. Shift Lever H.T.	4.152
Trans. Shift Lever Spring	4.047
Trans. Shift Lever Spring Ext.	4.047
Trans. Shift Lever Spring Yoke Suppt.	4.048
Trans. Shift Lever to Trans. Screw	4.046

CHASSIS ALPHABETICAL INDEX—Continued

Trans. Shift Selector Cable	4.020
Trans. Shift Selector Cont. Rod	4.020
Trans. Shift Selector Inner Lever	4.302
Trans. Shift Shaft	4.309
Trans. Shift Shaft Return Spring	4.017
Trans. Shift Shaft Return Spring Clip	4.017
Trans. Shift Shaft Return Spring Cup	4.017
Trans. Shifter Interlock	4.097
Trans. Shifter Interlock Ret.-Seal-Stud	4.107
Trans. Shifter Lever	4.046
Trans. Sliding Sleeve	4.414
Trans. Snap & Retaining Rings H.T.	4.128
Trans. Stator Parts	4.117
Trans. Strg. Col. Shift Shaft	4.039
Trans. Synchro. Clutch	4.380
Trans. Synchro. Detent Spring	4.413
Trans. Synchro. Drum	4.384
Trans. Synchro. Drum Ret.	4.383
Trans. Throttle Cont. Lever H.T.	4.286
Trans. Throttle Rod Assy. H.T.	4.040
Trans. Throttle Rod Idler Lever Brkt. H.T.	3.589
Trans. Throttle Valve Inside Lever & Shaft H.T.	4.278
Trans. Thrust Washer H.T.	4.129
Trans. Torque Converter Stator Race	4.119
Trans. Torque Converter Stator Assy.	4.119
Trans. Turbine	4.115
Trans. Vacuum Modulator Parts	4.205
Trans. Valve Body Gasket	4.217
Trouble Light Assy., Underhood	8.890
Tubing, Copper-Steel	8.964
Tubing, Rubber	8.962

U

Underhood & Trouble Light Assy.	8.890
Underhood & Trouble Light Fuse	8.890
Underhood & Trouble Light Wire & Fuse Holder	8.890
U/J Assy.	5.548
U/J Bearing	5.566
U/J Bearing Lock-Bolt	5.586
U/J Bearing Ret. Ring-Plate	5.586
U/J Cork Washer Packing	5.560
U/J Dust Plug	5.557
U/J Dust Shield	5.560
U/J Flange	5.545
U/J Flange Bolt	5.586
U/J Flange Bolt Lock Plate	5.586
U/J Flange to Pinion Nut	5.595
U/J Flange Spacer (Rear)	5.549
U/J Repair Kit	5.548
U/J Spider Journal	5.578
U/J Yoke Pkg.	5.555
U/J Yokes	5.555
Upper Control Arm Ball Stud	6.178
Upper Cont. Arm Bshg.	6.178
Upper Control Arm Bushing Ret.	6.163
Upper Cont. Arm Pivot Pin	6.178
Upper Control Arm Shaft Bracket	6.178

V

Vac. Brake Cylinder Assy.	4.901
Vac. Brake Cyl. Air Cleaner Parts	4.913

Vac. Brake Cyl. Air Valve Parts	4.918
Vac. Brake Cyl. Check Valve	4.955
Vac. Brake Cyl. Check Valve Seal	4.944
Vac. Brake Cyl. Elbow-Hose-Clamp	4.931
Vac. Brake Cyl. End Cover-Plate	4.904
Vac. Brake Cyl. Floating Control Valve Parts	4.935
Vac. Brake Cyl. Housing-Shell	4.906
Vac. Brake Cyl. Housing Gasket	4.910
Vac. Brake Cyl. Mtg. Bracket-Plate	4.898
Vac. Brake Cyl. Piston Air Valve Reaction Plate	4.934
Vac. Brake Cyl. Piston Parts	4.922-4.924
Vac. Brake Cyl. Piston Plate Reaction Lever	4.934
Vac. Brake Cyl. Piston Plunger Reaction Plate	4.934
Vac. Brake Cyl. Plate and Tube-Gasket	4.931
Vac. Brake Cyl. Poppet Valve Parts	4.928
Vac. Brake Cyl. Push Rod	4.658
Vac. Brake Cyl. Push Rod Pin	4.926
Vac. Brake Cyl. Vac. Cup	4.910
Vac. Brake Hyd. Cyl. Fittings	4.930
Vac. Brake Hyd. Cyl. Parts	4.910-4.911
Vac. Brake Hyd. Cyl. Plunger	4.915
Vac. Brake Hyd. Cyl. Valve	4.930
Vac. Brake Vac. Reserve Tank	4.902
Valve & Body Assy. Air Vent	9.789
Valve Cover	0.439
Valve Cover Gasket	0.443
Valve Cover Screw	0.446
Valve Grind Gasket Set	0.289
Valve Guide	0.283
Valve Lifter	0.459
Valve Lifter Adj. Screw	0.476
Valve Rocker Arm Cover	0.386
Valve Rocker Arm Cover Gasket	0.423
Valve Rocker Arm Cover Plate	0.386
Valve Rocker Arm Pkg.	0.333
Valve Rocker Arm Stud	0.349
Valve Spring	0.303
Valve Spring Cage	0.308
Valve Spring Cup	0.309
Valve Spring Cup Lock	0.310
Valve Spring Damper	0.308
Valve Spring Seat	0.309
Valve Spring Shield	0.308
Valve Stem Oil Seal	0.308
Valves	0.296-0.297
Voltage Regulator	2.500

W

Water Inlet Elbow	1.153
Water Inlet Elbow Gasket	1.154
Water Inlet Tube	1.135
Water Manifold Thermostat	1.246
Water Manifold Thermostat Ret.	1.251
Water Outlet Cover	1.153
Water Outlet Elbow	1.153
Water Outlet Elbow Gasket	1.154
Water Outlet Manifold	1.251
Water Pump Assy.	1.069
Water Pump Body Plate	1.113
Water Pump Gasket	1.079-1.114
Water Pump Hub	1.062
Water Pump Impeller	1.109
Water Pump Pulley	1.062

Water Pump Repair Kit	1.123
Water Pump Seal Pkg.	1.123
Water Pump Seal Ret. Ring	1.121
Water Temp. Dash Thermogage	1.148
Washers	8.927 thru 8.932
Waste Receptacle-Bag	8.891
Wheel Front or (Rear)	5.803
Wheel Balance Weight	6.367
Wheel Brg. (Front)	6.319
Wheel Brg. (Rear)	5.855
Wheel Brg. Balls (Front)	6.318-6.319
Wheel Brg. Cone (Front)	6.314-6.315
Wheel Brg. Cup (Front)	6.316-6.317
Wheel Brg. Oil Deflector (Front)	6.037
Wheel Brg. Oil Seal (Front)	6.326
Wheel Brg. Oil Seal (Rear)	5.822
Wheel Brg. Pkg. (Inner) (Frt.)	6.311
Wheel Brg. Pkg. (Outer) (Frt.)	6.313
Wheel Brg. Ret. (Outer) (Frt.)	6.321
Wheel Brg. Ret. (Rear)	5.816
Wheel Brg. Washer (Front)	6.321
Wheel Bumper Frame Stop (Front)	6.177
Wheel Disc	5.858
Wheel Drum (Rear)	5.809
Wheel Hub Bolt	5.812-6.335
Wheel Hub Bolt Nut	5.813
Wheel Hub Bolt Wrench	5.842
Wheel Hub Cap	5.858
Wheel Hub Cap (Inner)	6.330
Wheel Hub Cap Ret. Clip	5.864
Wheel Hub & Drum	6.306
Wheel Hub Oil Deflector	6.037
Wheel Hub Oil Seal Assy.	6.326
Wheel Jack	8.820
Wheel Jack Handle	8.823
Wheel King Pin	(See King Pin)
Wheel Oil Deflector	5.815
Wheel Static Collector	9.650
Wheel Tie Rod (Front)	(See Tie Rod)
Wheel Weights	6.367
Wheel Wrench	8.820
W/S Defroster Parts	9.779
W/S Washer Cont. Assy.	8.798
W/S Washer Jar Nozzle	8.798
W/S Wiper Pipe	8.964
Wire Clip	8.950
Wire Connector	2.649
Wire Harness	2.480

Y

Yoke, End	8.946
---------------------	-------

Z

Zip Clip Kit	9.030
------------------------	-------