

YEAR	MODEL	PART NAME	PART NO.	PER CAR	PART NO.
Group 4.003 TRANSMISSION ASSEMBLY					
1940-48	All L.H.D., S.T.	use 1314655 main drive gear Group 4.351 with this trans. for 1940 thru 42	1	1332890	
1949-54	All L.H.D., S.T.	1950 speedometer driven gear-Group 4.337 must be used on 1949 jobs	1	1341223	
1956-57	All L.H.D., S.T.		1	1175491	
1958	All S.T. exc. taxi, police & H.D.C.		1	530296	
1958	All S.T. taxi, police & H.D.C.		1	531244	
1959	All S.T. exc. H.D.		1	533579	
1959	All S.T.-H.D.		1	533413	
1960	All 3 SPD.-S.T. exc. H.D.		1	536914	
1960	All 3 SPD.-S.T. taxi, police & H.D.C.		1	535088	
1960	All 4 SPD.-S.T.	exc. 39:10 axle ratio or power front seat	1	536995	
1960	All 4 SPD.-S.T.	w/39:10 axle ratio	1	540177	
1957	All H.T.-F.I.	TRANSMISSION PKG., consists of trans., throttle control lever, shield, spacer and bolt-PA57 trans.	1	528681	
1958	All H.T. exc. F.I.	P58 trans.	1	530859	
1958	All H.T.-F.I.	PA58 trans.	1	530860	
1959	All H.T. exc. T420E	P59 trans.	1	534059	
1959	All H.T.-T420E	PE59 trans.	1	534512	
1960	All H.T. exc. 3/2 B.C.-T425A-T425E	P60 trans.	1	535002	
1960	All H.T.-T425E	PE60 trans.	1	535003	
1960	All H.T.-3/2 B.C.-T425A & Police (spec. eqpt.)	PA60 trans.	1	535546	
1950-51	P/8 H.T.	NAME PLATE, transmission-green	1	8611896	
1952-54	All H.T.	green	1	8611896	
1955-57	All H.T. exc. F.I.	green	1	8617017	
1957	All H.T.-F.I.	PA57 trans.-green	1	8618095	
1958	All H.T. exc. F.I.	P58 trans.-black (2-11/16"x7/8")	1	8617036	
1958	All H.T.-F.I.	PA58 trans.-white (2-11/16"x7/8")	1	8617029	
1958	All H.T.	P58 trans.-black (1-15/16"x1-1/8")	1	8618815	
1958	All H.T.	PA58 trans.-white (1-15/16"x1-1/8")	1	8618816	
1959-60	All H.T.	P59-P60 trans.-orange	1	8618811	
1959-60	All H.T.-T420E	PE59-PE60 trans.-light blue	1	8618814	
1960	All H.T.	PA60 trans.-red	1	8618812	

NOTE: There are three types of Hydra-Matic Transmissions used on 1950 production. For identification purposes the P9 Transmission has a name plate attached having a black background, and is stamped P9 preceding the serial number. This transmission is also used on 1948-49 models.

The P50-P51 Transmission has a name plate attached having a black background, and is stamped P50 or P51 preceding the serial number.

The D50-D51 transmission has a name plate attached having a light green background, and is stamped D50 or D51 preceding the serial number.

Group 4.004 KIT, TRANS. THRUST WASHER AND NEEDLE BRG.

1958	All S.T. exc. taxi, police & H.D.C.		1	3749241	
------	---	-----------	---	---------	--

Group 4.004 CONTROL ASSY., TRANSMISSION

1960	All 4 SPD.-S.T.	w/lever and bracket-w/full front seat	1	3772560	
1960	All 4 SPD.-S.T.	w/lever and bracket-w/bucket front seat	1	3760702	

Group 4.005 GASKET, TRANSMISSION TO CLUTCH HOUSING

1939-55	All S.T.		1	411714
1956-57	All S.T.		1	521830
1960	All H.T.	w/seals and oil rings	1	8619949
1960	All 4 SPD.-S.T.	w/seal and oil rings	1	3764872
1939-54	All S.T.	GASKET SET, transmission	1	1393205
1948-50	All H.T.		1	511577
1951	All H.T.		1	515742
1952-54	All H.T.		1	519194
1955	All H.T.		1	520819
1956	All H.D. exc. C.C.		1	520819
1956-58	All C.C.-H.T.	w/seal	1	8616917
1959	All H.T.	w/seals and oil rings	1	8619901
1953	All P.G.	SEAL UNIT, trans. (A)	1	3776875

▲NOTE: Contains "O" rings for converter cover, front oil pump body and rear brg. supt.

Group 4.006 KNOB-LEVER ASSEMBLY, TRANSMISSION GEAR SHIFT

1939-52	All S.T.	LEVER, painted	1	502489
1952	All H.T.		1	516665
1953-54	All	chrome	1	516917
1953-54	All	painted	1	516500
1955-56	All S.T.	painted	1	519153
1955-56	All H.T.	chrome	1	519264
1957-58	All S.T.	chrome	1	528350
1957	All H.T.	chrome	1	528378
1958	All H.T.	chrome	1	529365
1959-60	All 3 SPD.-S.T.	chrome	1	536061
1959-60	All H.T.	Upper	1	532328
1939-48	All S.T.	KNOB, trans. gear shift lever	1	507167
1939-48	All S.T.		1	507167
1948-52	All H.T.		1	511986
1949-52	All S.T.	black	1	512921
1950	2537 SD, S.T.	sierra rust	1	513977
1950	2537 SD, H.T.	sierra rust	1	513976
1953-55	All	black	1	516913
1953-55	All S.T.	black	1	515190
1956	27 S.T.	white	1	522294
1956	All H.T., 2 S.T.	white	1	522295
1960	All 4 SPD.-S.T.	w/full front seat	1	3789168
1960	All 4 SPD.-S.T.	w/bucket front seat	1	3789167
1939-52	All S.T.	WASHER, gear shift lever knob	1	502487

Group 4.015 COVER, GEAR SHIFT CONTROL UPPER LEVER

1949-51	All H.T.	black	1	516321
1949-51	All H.T.	beige	1	516280
1950	2537 SD H.T.	ivory	1	513974
1951	2537 SD H.T.	ivory	1	516281
1952	All H.T.	gray	1	516473
1952	2537 SD H.T.	green	1	516474
1953-56	All	black	1	515126
1953	All	blue	1	517180

1953	All	spruce green	1	517181
1953-54	All	palm green	1	517182
1954	All	blue	1	517970
1954	All	green	1	517971
1954	All	beige	1	517972
1954	All	yellow	1	517973
1954	All	coral red	1	517974
1955	All	blue	1	520515
1955	All	turquoise blue	1	520519
1955	All	green	1	520516
1955	All	brown	1	520517
1955	All	firegold brown	1	520518
1956	All	red	1	522463
1956	All	empress blue	1	522310
1956	All	green	1	522311
1956	All	tan	1	522312
1956	All	catalina blue	1	522313

Group 4.015 SEAL-RETAINER, TRANS. CONTROL LEVER

1960	All 4 SPD.-S.T.	SEAL, control lever to floor-w/full front seat	1	3770368
1960	All 4 SPD.-S.T.	control lever to floor-w/bucket front seat	1	3757866
1960	All 4 SPD.-S.T.	RETAINER, control lever seal-w/full front seat	1	3770369

Group 4.017 GEARSHIFT CONTROL SHAFT PARTS

1958	All S.T.	BEARING, strg. col. lower shift lever w/534957 pkg.	1	535047
1959-60	All S.T. exc. 4 SPD.-S.T.	w/534943 tube & lever pkg. on 1959 models	1	535047
1959-60	All S.T.	BOLT, gearshift lower lever bearing to jacket w/534943 tube & lever pkg. on 1959 models (1/4"-28x5/8")	4	535080
1958	All S.T. taxi, police & H.D.C.	CLAMP, trans. control rod to trans. levers (11/32" I.D.)	1	3725298
1939-52	All L.H.D., S.T.	CLIP, gearshift shaft return spring	1	502483
1953-56	All	PIN, gearshift tube yoke	1	515140
1953-55	All S.S.	RETAINER, steering column lower seal	1	515129
1953-55	All P.S.		1	517345
1956-57	All	steering column lower seal	1	515129
1953-60	All	INSULATOR, steering column Upper	2	515141
1953-55	All S.S.	SEAL, steering column (2-1/4" O.D.) Lower	1	515128
1953-55	All P.S.	(2-1/8" O.D.) Lower	1	517419
1956	All	(2-1/4" O.D.) Lower	1	515128
1957-60	All	(2-1/4" O.D.) Lower		524671
1958-59	All S.T.	SEAT, gearshift tube return spring-see note group 4.039	1	534986
1959-60	All S.T. exc. 4 SPD.-S.T.	SPACER, gearshift lower lever-w/534943 tube & lever pkg. on 1959 models	1	535050
1940-52	All L.H.D., S.T.	SPRING, gearshift shaft return	1	504241
1953-57	All H.T. & P.G.	gearshift tube return	1	516401
1953-56	All S.T.	gearshift tube return	1	516387
1957	All L.H.D., S.T.	gearshift tube return	1	523623
1958-60	All S.T.	gearshift tube return	1	530001
1958	All S.T. taxi, police & H.D.C.	SLEEVE, trans. control rod swivel to trans. levers	2	3712388
1959-60	All S.T.	gearshift control rod to trans. levers	4	534007
1960	All S.T.	gearshift cont. rod to strg. column	4	534007
1958	All S.T. taxi, police & H.D.C.	SWIVEL, trans. control rod to trans. levers (1-7/16" O.L.)	2	3712384

Group 4.017 GEARSHIFT CONTROL SHAFT ANTI-RATTLE PARTS

1939-52	All S.T.	CUP, gearshift shaft anti-rattle spring	1	502484
1939-52	All	SPRING, steer. column shift shaft-anti-rattle, coil Upper	1	3655726

Group 4.018 SUPPORT, GEAR SHIFT CONTROL

1939-48	All S.T.	Upper	1	502509
1939	All	Lower	1	502511
1940-48	All L.H.D., S.T.	Lower	1	508660
1949-52	All S.T.	Upper	1	511333
1949-52	All L.H.D., S.T.	Lower	1	511334
1939-52	All S.T.	BEARING, gearshift upper support	1	502501
1958-59	All H.T.	BRACKET, gearshift tube locating	1	529343
1946-52	All S.T.	BUSHING, gearshift control lower support	1	508661
1939-48	All S.T.	CAP, gearshift control lower support	1	507453
1953-56	All H.T. exc. C.C.	PLATE, steering column gearshift interlock	1	516400
1953	All P.G.		1	518488
1956	All C.C.-H.T.		1	521826
1957	All H.T.		1	528327
1957-60	All	bearing support and direction signal lock	1	523617
1958-60	All H.T.	steering column gearshift interlock	1	529304
1953-56	All	SUPPORT, gearshift lever bearing	1	515131
1957	All	gearshift shaft upper bearing	1	523624
1958	All	gearshift shaft upper bearing	1	529357
1959	All	gearshift shaft upper bearing-use w/529345 Hsg.	1	533381
1959-60	All	gearshift shaft upper bearing-use w/531865 Hsg.	1	531864
1939-48	All S.T.	SUPPORT AND BEARING PKG., gearshift Upper	1	510328
1949-52	All L.H.D., S.T.		1	513407
1960	All H.T.	PIN, gearshift tube locating	1	535249
1939-52	All S.T.	SCREW, gearshift control support Upper (Cl. Hd. 1/4"-28x7/16")	2	516444
1953-56	All	gearshift lever bearing support (Hex. Hd. 5/16"-18x13/32")	4	516235
1953-56	All	WASHER, gearshift lever bearing support-special	4	516250

Group 4.018 BRACKET, GEAR SHIFT CONTROL SHAFT

1948	25 H.T.	BRACKET, lower control lever	1	510901
1948	26 H.T.		1	510904
1953-54	All L.H.D., S.T.	gearshift selector lever support	1	516375
1955-57	All L.H.D., S.T.		1	519148
1949-52	All	"U" BOLT, lower bracket	1	511410

Group 4.019 ROD ASSY., GEARSHIFT CONTROL

1941-48	25-27 L.H.D., S.T.		1	505803
1941-48	26-29 L.H.D., S.T.	with one piece control rod	1	506712
1949-52	All L.H.D., S.T.		1	514142
1949-51	All H.T.		1	511420
1952	All H.T.		1	515971
1953	All H.T.		1	515528
1953	All L.H.D., S.T.		1	517347
1953	All P.G.	(20" long)	1	518487
1953	All P.G.	(3-1/2" long)	1	3772802
1954	All S.T.		1	518341

1954	All H.T.	1	518343
1955	All L.H.D., S.T.	1	519167
1955-56	All H.T. exc. C.C.	1	519297
1956	All S.T.	1	521777
1956-57	All C.C.-H.T.	1	521361
1957	All L.H.D., S.T.	1	523620
1958	All H.T.	1	529307
1958	All S.T. exc. taxi, police & H.D.C.	1	531462
1958	27 S.T. taxi, police & H.D.C.	1	531370
1958	All S.T. exc. taxi, police & H.D.C.	1	531463
1958	27 S.T. taxi, police & H.D.C.	1	531371
1959	All H.T.	1	532484
1959	All S.T. exc. H.D.	1	534356
1959	All S.T. exc. H.D.	1	534952
1959	All S.T.-H.D.	1	534665
1959	All S.T. exc. H.D.	1	533191
1959	All S.T.-H.D.	1	533267
1959-60	All S.T. exc. 4 SPD.-S.T.	1	536527
1960	All S.T. exc. 4 SPD.-S.T. & H.D.	1	536535
1960	All S.T.-taxi-police & H.D.C.	1	536624
1960	All H.T.	1	536310
1959	All S.T.	1	534980
1960	All S.T. exc. 4 SPD.-S.T.	1	535195
1960	All 3 SPD.-S.T. (3.425)	2	529878
1953-54	All L.H.D., S.T.	1	517326
1955-57	All L.H.D., S.T.	1	519169
1958	All S.T. exc. taxi, police & H.D.C.	2	531457
1939-52	All S.T.	1	510327
1939-52	All S.T.	2	502488
1953-56	All	1	515156
1957	All L.H.D., S.T.	1	523611
1957-59	All H.T.	1	515156
1958	All S.T. taxi, police & H.D.C.	2	529998
1959-60	All S.T.	4	534060
1959	All S.T.	6	534060
1960	All S.T.	2	534060
1960	All H.T.	2	534060
1959	All S.T. exc. H.D.	1	534950
1959	All S.T.	1	536206
1960	All S.T. exc. 4 SPD.-S.T. & H.D.	1	535201
1960	All S.T.-taxi-police & H.D.C.	1	535206
1953-57	All S.T. (8.916)	2	124925
1953-54	All S.T. (4.040)	1	408162
1960	All S.T. (4.017)	2	534007
1958	All S.T. exc. taxi, police & H.D.C.	2	531458
1948-52	All H.T.	1	510934
1953-57	All H.T. & P.G.	1	515155
1953-57	All S.T.	1	515162
1958	All H.T.	1	529308
1959-60	All H.T.	1	532485
1959	All S.T.	2	515155
1959	All S.T.	1	535077
1960	All S.T.	2	535077
1960	All S.T. (0.854)	2	535076
	first and reverse	1	531462
	first and reverse	1	531370
	second and third	1	531463
	second and third	1	531371
	first and reverse-orig. eqpt.	1	534356
	used w/534944 linkage pkg.	1	534952
	first and reverse-use w/534663 lever	1	534665
	second and third-orig. eqpt.	1	533191
	second and third-orig. eqpt.	1	533267
	second and third-w/534943 tube & lever pkg. on 1959 models	1	536527
	first and reverse	1	536535
	first and reverse	1	536624
	BRACKET ASSY., gear shift idler lever frame	1	534980
	gearshift idler lever frame	1	535195
	BUSHING, gearshift idler lever	2	529878
	CLEVIS ASSY., gearshift control rod	1	517326
	EXTENSION, trans. control rod	2	531457
	INSULATOR PACKAGE, gearshift control	1	510327
	INSULATOR, gearshift control rod	2	502488
	gearshift control rod	1	515156
	control rod to trans. lever	2	529998
	gearshift control rod to levers-orig. eqpt.	4	534060
	gearshift control rod to levers-used w/534943 Tube & Lever Pkg.	6	534060
	idler lever link to shifter and idler lever	2	534060
	gearshift control rod	2	534060
	LINK, gearshift idler lever-second & third-use w/534944 Linkage Pkg.	1	534950
	second and third-used w/534945 Linkage Pkg.	1	536206
	gearshift idler lever-second and third	1	535201
	NUT, gearshift control and selector rod trunnion ret.	2	124925
	PIN, gearshift control rod clevis (3/8" x 31/32")	1	408162
	SLEEVE, idler lever link to idler and shifter lever	2	534007
	STUD, trans. control rod extension	2	531458
	TRUNNION, gearshift control front rod	1	510934
	gearshift control rod	1	515155
	gearshift selector rod	1	515162
	gearshift control rod	1	529308
	gearshift control rod	1	532485
	orig. eqpt.	2	515155
	used w/534943 Tube & Lever Pkg.	1	535077
	gearshift control rod	2	535077
	gearshift control idler lever link (13/32" I.D. x 53/64" O.D. x 1/16" thick)	2	535076

1939-52	All S.T.	WASHER, control rod insulator fabric (25/64" I.D. x 13/16" O.D.)	2	502499
1939-58	All S.T.	control rod anti-rattle spring	AR	501253
1953	All P.G.	throttle rod anti-rattle (1/2" O.D.)	AR	3750683
1959-60	All H.T.	throttle rod anti-rattle (1/2" O.D.)	1	3750683
1960	All S.T. (0.854)	gearshift control rod to lever	2	535076
1960	All 3 SPD.-S.T. (8.928)	gearshift control rod to lever (25/64" I.D. x 3/4" O.D.)	2	402547

Group 4.019 ROD, TRANS. CONTROL

1960	All 4 SPD.-S.T.	first and second	1	3771964
1960	All 4 SPD.-S.T.	third and fourth	1	540516
1960	All 4 SPD.-S.T.	reverse	1	3771966
1960	All 4 SPD.-S.T.	CLEVIS, trans. control rod	3	3771963

Group 4.020 CABLE ASSY.-ROD, SHIFT SELECTOR CONTROL

1939	All L.H.D.	CABLE	1	502481
1942-48	25 L.H.D., S.T.	ROD ASSEMBLY, shift selector control	1	507143
1942-48	26 L.H.D., S.T.		1	507144
1949-52	All L.H.D., S.T.		1	511332
1953	All L.H.D., S.T.		1	517350
1954	All S.T.		1	518345
1955	All L.H.D., S.T.		1	519175
1956	All S.T.		1	521779
1957	All L.H.D., S.T.		1	523622
1940-57	All S.T.	INSULATOR, gearshift selector rod	1	503873
1958	All S.T. exc. taxi, police & H.D.C.	shifter lever	1	503873
1938-39	All (3.459)	SPRING, selector cable anti-rattle	1	499997

Group 4.020 CLIP, TRANS. CONTROL ROD

1960	All 4 SPD.-S.T.	rod to shift levers	3	3749084
------	-------------------------	-------------------------------	---	---------

Group 4.021 ROD AND CABLE PARTS, GEARSHIFT SELECTOR AND CONTROL

1938	All steer. col. shift	NUT, selector rod end plunger	1	413298
1940-52	All S.T.	COLLAR, gearshift control shaft, lower	1	503871
1940-52	All S.T. (4.046)	LOCKWASHER, shaft collar (Ext. tooth 3/8")	1	502482

Group 4.036 GEARSHIFT CONTROL UPPER LEVER PARTS

1953-56	All H.T. & P.G.	PAD, gearshift lever friction	1	517061
1939-52	All S.T.	PIN, gearshift lever pivot	2	502495
1953-56	All	gearshift lever fulcrum (11/32"x1-1/16")	1	515148
1957-60	All exc. 4 SPD.-S.T.	gearshift lever fulcrum (3/16"x27/32")	1	523616
1939-53	All S.T.	SHIM, gearshift control lever	AR	501301
1954-56	All		AR	501301
1938	All with steer. col. shift	SPRING, gearshift lever tension	1	501597
1939-52	All S.T.	fulcrum cup pivot pin	2	502505
1948-52	All H.T.		1	413431

1953-56	All	gearshift lever anti-rattle	1	515147
1953-56	All H.T. & P.G.	gearshift lever friction pad	1	517062
1957-58	All	gearshift lever	1	523643
1959	All S.T.	gearshift lever-orig. eqpt.	1	523643
1959-60	All S.T.	gearshift lever-w/534943 tube & lever pkg. on 1959 models	1	535056
1959-60	All H.T.	gearshift lever	1	5668424
1948-52	All H.T.	RETAINER, spring	1	413432
1948-52	All H.T.	gearshift control upper lever pin	1	413301
1957-58	All	gearshift lever housing	1	523618
1959	All	gearshift lever housing-orig. eqpt.	1	534281
1959-60	All 3 SPD.-S.T.	gear shift lever housing-w/534943 tube & lever pkg. on 1959 models	1	535202
1960	All 4 SPD.-S.T.	strg. col. housing	1	535202
1953-56	All	RING, gearshift lever fulcrum pin-retaining	1	515149
1939-52	All S.T.	WASHER, gearshift lever anti-rattle (23/64" I.D.x19/32" O.D.)	1	501315

Group 4.038 BRACKET, GEARSHIFT CONTROL SHAFT UPPER

1949-51	All H.T.		1	511408
1952	All H.T.		1	516664
1949-52	All H.T.		1	511421
1959-60	All	BEARING, gearshift lever housing-use w/531865		
		Housing on 1959 models	1	531866
1953-54	All H.T.	HOUSING ASSY., gearshift lever support (▲)	1	518275
1953-56	All S.T.		1	515142
1955-56	All H.T.		1	519269
1957	All S.T.		1	523610
1957	All H.T.		1	523630
1958-59	All	use w/533381 Support on 1959 models	1	529345
1959-60	All exc. 4 SPD.-S.T.	use w/531864 Support on 1959 models	1	531865
1960	All 4 SPD.-S.T.	steering column	1	535406
1957-59	All	WASHER, gearshift lever housing-thrust	2	5667525
1957-59	All	gearshift lever housing-wave	1	5667524
1959-60	All	gearshift lever-thrust (1-13/64" I.D.)	1	531867
1959-60	All	gearshift lever housing-wave (1-13/64" I.D.)	1	531868

▲NOTE: Also use 1-2960560 socket and wire on 1953 models.

Group 4.038 COVER AND LENS, GEARSHIFT UPPER CONTROL INDICATOR

1952	All H.T.		1	515983
1952	All H.T.	LENS, one piece	1	515984
1953-55	All H.T.		1	515515
1953	All P.G.		1	518457
1956	All H.T. exc. C.C.		1	522303
1956-57	All C.C.-H.T.		1	521358
1958	All H.T.		1	1585745
1959	All H.T.		1	533239
1960	All H.T.	indicator	1	535117
1959-60	All H.T.	PAD, gearshift indicator lens ret.	2	534334
1952	All H.T.	RETAINER, lens	1	515967
1953-56	All H.T. exc. C.C.		1	516919
1953	All P.G.		1	518458
1956	All C.C.-H.T.		1	521359
1957	All H.T.		1	523634
1959-60	All H.T.		1	533231
1952	All H.T.	SCREEN, lens	1	516191
1953-55	All H.T. & P.G.		1	515521
1956	All H.T.		1	522301
1957	All H.T.		1	515521

Group 4.038 INDICATOR ASSEMBLY, GEARSHIFT CONTROL

1948	All H.T.		1	417584
1949-52	All H.T.		1	511412
1958	All H.T.	BEZEL, gearshift indicator	1	1585843
1959-60	All H.T.		1	532906
1960	All 4 SPD.-S.T.	COVER, gearshift control, w/manual full front seat	1	535441
1960	All 4 SPD.-S.T.	gearshift control, w/bucket seats	1	535439
1953-54	All H.T. & P.G.	GASKET, indicator lamp housing	1	515518
1955-57	All H.T.		1	519261
1953-54	All H.T. & P.G.	HOUSING ASSY., indicator lamp	1	516915
1955	All H.T.		1	519262
1956	All H.T.		1	522300
1957	All H.T.		1	519262
1958	All H.T.	gearshift indicator	1	1586115
1959-60	All H.T.	gearshift indicator	1	533228
1959-60	All H.T.	gearshift indicator lens	1	533238
1960	All H.T.	INSULATOR, indicator rod	1	535089
1948	All H.T.	INDICATOR AND LAMP ASSEMBLY	1	511517
1949-52	All H.T.		1	515776
1948-52	All H.T.	CONTACT AND WIRE ASSY., indicator light	1	5291664
1953-54	All H.T. & P.G.		1	2960560
1955-56	All H.T.		1	2961690
1957	All H.T.		1	2967416
1949-52	All H.T.	FELT, indicator hold down	1	512494
1960	All H.T.	LEVER, trans. gearshift indicator-w/15/64" hole	1	535058
1958	All H.T.	LEVER ASSY., gearshift indicator	1	1585749
1959-60	All H.T.	trans. gearshift indicator	1	533240
1959-60	All H.T.	gearshift hsg. indicator	1	533232
1959-60	All H.T. (8.938)	PIN, gearshift indicator rod (3/64"x5/16")	1	225845
1958	All H.T.	PIVOT, gearshift indicator rod	1	531449
1960	All 4 SPD.-S.T.	PLATE, trans. control lever and ash tray trim-w/bucket seats	1	3757865
1960	All 4 SPD.-S.T.	trans. control selector-w/bucket seats	1	3742510
1958	All	RETAINER, gearshift housing to inst. panel	1	528662
1958-60	All H.T. (8.866)	gearshift indicator lever	1	1583933
1958	All H.T.	gearshift indicator control rod	1	531775
1958	All H.T.	ROD, gearshift indicator control	1	529381
1959-60	All H.T.		1	533241
1960	All H.T.		1	535090
1948-52	All H.T.	SHIELD, gearshift indicator lamp	1	514153
1948-52	All H.T.	SHIELD AND LAMP ASSEMBLY, gearshift indicator	1	514152
1957	C.C.-H.T.	SCREW, gearshift housing assy. to support (6-32 x 7/16")	1	9405813
1958	All H.T.	gearshift indicator bezel to housing (Fil. hd. No. 6-32 x 1/2")	3	1586080
1959-60	All H.T. (8.977)	indicator lens hsg. (No. 6-32x1/2")	4	448905
1959-60	All H.T.	gearshift indicator housing to reinf.	2	440403
1959-60	All H.T.	SPACER, gearshift indicator lever	1	533236
1958	All H.T.	SPRING, gearshift indicator lever	1	1585750
1959-60	All H.T.		1	533237
1959-60	All H.T.	STUD, gearshift indicator rod	1	533242
1958	All H.T.	WASHER, gearshift indicator lever-fibre	1	1585751

Group 4.039 SHAFT AND HOUSING ASSEMBLY, GEARSHIFT CONTROL

1940-52	All exc. 1940 25-26, S.T.	SHAFT	1	504052
1948-52	All H.T.	SHAFT AND HOUSING	1	5664347
1953-54	All H.T. & P.G.	TUBE ASSY., steering column gearshift	1	517353
1953-54	All L.H.D., S.T.		1	517352
1955-56	All L.H.D., S.T.		1	519180
1955-56	All H.T.		1	519181
1957	All L.H.D., S.T.		1	523625

1957	All H.T.		1	523626
1958	All H.T.		1	529297
1958	All S.T.	use with 531821 Tube and Lever Pkg.	1	531811
1959	All S.T.	orig. eqpt.	1	532413
1959	All S.T.	used w/534943 Tube and Lever Pkg.	1	535127
1959	All H.T.		1	532415
1960	All S.T.		1	535365
1960	All H.T.		1	535366
1958	All S.T.	TUBE AND LEVER PKG., steering column gearshift (▲)	1	531821
1957-60	All P.S.	BEARING, gearshift tube	1	5685285

▲NOTE: Consists of: 1-531811 Tube, 1-531819 Lever, 1-531820 Lever, 1-531824 Guide, 1-531825 Guide, 1-534986 Seat, 2-531692 Support and 4-134551 Nut. For use when replacing the 1958 early production Syncro-Mesh Steering Column Tube Assy. Refer to the August 1958 issue of the Pontiac Service Craftsman News.

Group 4.039 SHAFT PARTS, GEARSHIFT CONTROL LEVER

1948	All H.T.	BLOCK, gearshift indicator link	1	418529
1949-52	All H.T.		1	511406
1949-52	All H.T.	BRACKET, gearshift control shaft lower	1	511409
1948-52	All H.T.	SPRING, gearshift control shaft to lower		
		bracket anti-rattle	1	413320
1959-60	All H.T.	gearshift tube anti-rattle	1	534936

Group 4.040 ROD ASSEMBLY, TRANSMISSION THROTTLE

1948-49	P/6 H.T.	Front	1	510861
1948-49	P/8 H.T.	Front	1	510862
1950-54	All H.T. & P.G.	Front	1	513955
1948	All H.T.	Rear	1	510866
1949-54	All H.T.	Rear	1	511448
1953	All P.G.	Rear	1	518453
1955-56	All H.T.-2 B.C.-4 B.C. exc. C.C.		1	519483
1956	All C.C.-H.T.-2 B.C.-4 B.C.		1	521520
1956	All C.C.-H.T.-2/4 B.C.		1	522789
1957	All H.T. exc. F.I.		1	524100
1957	All H.T.-F.I.		1	528192
1958	All H.T. exc. F.I.		1	529792
1958	All H.T.-F.I.		1	530528
1959	All H.T.		1	533627
1960	All H.T.		1	536308
1948-49	All H.T.	BALL JOINT, transmission throttle front rod (1/4")	1	511067
1959	All H.T.	PIN, trans. outer shift lever clevis	1	529309
1949-55	All H.T.	TRUNNION, trans. throttle rear rod	1	512397
1953	All P.G.		1	518454
1959-60	All H.T. (3.425)	throttle control trans. rod assy.	1	522288
1953	All P.G.	STUD, outer shift lever pivot to trans.	1	3689974
		LOCK (see Group 4.152 for use)		3685801

Group 4.040 ROD PARTS, GEARSHIFT CONTROL REAR

1948	All H.T.	CLEVIS, rod	1	411368
1948	All H.T.	PIN, clevis (3/8" x 31/32")	1	408162
1958	All H.T.	(3/8" x 1")	1	529309
1960	All H.T.		1	536612
1959-60	All H.T. (8.928)	WASHER, throttle control rod to gearshift lower lever. (25/64" I.D. x 3/4" O.D. x 1/64" thick)	1	402547

Group 4.041 LEVER, GEARSHIFT LOWER CONTROL

1939-48	All exc. 1940 25-29 L.H.D., S.T.	1	502493
1940	25-29 L.H.D.	1	504050
1948	All H.T.	1	510908
1949-51	All H.T.	1	511416
1949-52	All L.H.D., S.T.	1	511326
1952	All H.T.	1	515968
1953-54	All H.T.	1	517383
1953-54	All L.H.D., S.T.	1	516383
1953	All P.G.	1	518484
1955	All L.H.D., S.T.	1	519154
1955-56	All H.T. exc. C.C.	1	519265
1956	All L.H.D., S.T.	1	521809
1956	All C.C.-H.T.	1	521354
1957	All L.H.D., S.T.	1	523613
1957	All H.T.	1	523632
1958	All S.T.	1	531819
1958	All S.T. taxi, police & H.D.C.	1	531691
1958	All S.T. exc. taxi, police & H.D.C.	1	531820
1958	All H.T.	1	529299
1959	All S.T.	1	534008
1959-60	All S.T. exc. 4 SPD.-S.T.	1	535048
1959	All S.T.	1	534009
1959-60	All H.T.	1	535414
1960	All 4 SPD.-S.T.	1	3771960
1960	All 4 SPD.-S.T.	1	3771961
1960	All 4 SPD.-S.T.	1	3771962
1941	26-29 L.H.D.	1	505760
1941-48	All L.H.D., S.T.	1	505760
1949-52	All L.H.D., S.T.	1	511327
1953	All P.G.	1	3709015
1953	All P.G.	1	3703892
1958-59	All S.T.	1	531824
1958-59	All S.T.	1	531825
1959-60	All exc. 4 SPD.-S.T. . . (8.934)	AR	9413183
1958-59	All S.T.	2	531692
1959-60	All exc. 4 SPD.-S.T.	AR	535412

Group 4.042 BUSHING, GEARSHIFT CONTROL SHAFT LOWER LEVER

1948-52	All H.T.	1	411975
---------	------------------	---	--------

Group 4.044 SHIELD, SHIFT CONTROL SPLASH

1959	All H.T.	1	532827
1960	All H.T.	1	536464

Group 4.045 LEVER, GEARSHIFT SELECTOR CONTROL

1940-48	All L.H.D., S.T.	1	503876
1949-52	All L.H.D., S.T.	1	511328

1953	All L.H.D., S.T.		1	516377
1954	All L.H.D., S.T.		1	518413
1955-56	All L.H.D., S.T.		1	519149
1957	All L.H.D., S.T.		1	523614
1940-48	All L.H.D., S.T.	LEVER, gearshift selector idler	1	503877
1949-52	All L.H.D., S.T.		1	511329
1940-48	All L.H.D., S.T.	PIN, gearshift selector lever pivot (5/16"x15/16")	1	503878
1949-52	All L.H.D., S.T.	(5/16"x17/16")	1	511330
1953-54	All L.H.D., S.T.	(5/16"x17/16")	1	516385
1955-57	All L.H.D., S.T.	(5/16"x1-5/16")	1	519160

Group 4.046 LEVER, TRANSMISSION SHIFTER

1941-54	25 L.H.D., S.T.		1	505808
1941-48	26-29 L.H.D., S.T.	w/1 rod control on 1941 model	1	506713
1955	All L.H.D., S.T.		1	519155
1956-57	All L.H.D., S.T.		1	521773
1958	All S.T. exc. taxi, police & H.D.C.	first and reverse	1	531460
1958	All S.T. taxi, police & H.D.C.	first and reverse	1	530729
1958	All S.T. exc. taxi, police & H.D.C.	second and third	1	531461
1958	All S.T. taxi, police & H.D.C.	second and third	1	530730
1959	All S.T. exc. H.D.	first and reverse-orig. eqpt.	1	534354
1959	All S.T. exc. H.D.	first and reverse-used w/534944 Linkage Pkg.	1	534948
1959-60	All S.T. taxi, police & H.D.	first and reverse-use w/534665 rod on 1959 models	1	534663
1959	All S.T. exc. H.D.	second and third-orig. eqpt.	1	533185
1959	All S.T.	second and third-used w/534945 Linkage Pkg.	1	535205
1959	All S.T.-H.D.	second and third-orig. eqpt.	1	533261
1959	All S.T. exc. H.D.	second and third-used w/534944 Linkage Pkg.	1	534949
1960	All S.T. exc. 4 SPD.-S.T. & H.D.	first and reverse	1	536621
1960	All S.T. exc. 4 SPD.-S.T. & H.D.	second and third	1	536622
1960	All S.T.-taxi-police & H.D.C.	second and third	1	535205
1953-54	All S.T.	RETAINER, transmission shifter lever	1	515512
1940-52	All S.T.	BOLT, transmission shifter, lever to transmission (Hex. 3/8"-24x1/2")	1	503875
1955	All L.H.D., S.T.	(3/8"-24x1")	1	519158
1956-57	All S.T.	(3/8"-24x15/16")	1	521775
1939-52	All S.T.	WASHER, transmission shifter lever to transmission	1	502482
1955-57	All S.T.	(3/8" I.D. x 7/8" O.D. ext. tooth)	1	502482
1960	All S.T. (0.854)	control rod to shifter levers (13/32" I.D. x 53/64" O.D. x 1/16" thk.)	4	535076

Group 4.047 SPRING, TRANSMISSION SHIFT LEVER

1940-54	All S.T.		1	504224
1955-57	All L.H.D., S.T.		1	519178
1940-54	All L.H.D., S.T.	EXTENSION, transmission shift lever spring	1	503872

Group 4.048 SUPPORT, SHIFT LEVER SPRING YOKE

1940-54	All L.H.D., S.T.		1	504202
1955	All S.T.		1	1166462
1956-57	All L.H.D., S.T.		1	1170503
1940-54	All S.T.	YOKE, selector shaft shift lever spring	1	504225
1955	All L.H.D., S.T.		1	519185
1956-57	All S.T.		1	521781

Group 4.050 LEVER, TRANSMISSION SELECTOR SHAFT OUTER

1946-55	All L.H.D., S.T.	1	509097
1956-57	All L.H.D., S.T.	1	521724

Group 4.054 SWITCH ASSY., TRANS. AND BACK UP LAMP

1949-52	All H.T.	1	1997846
1953-56	All H.T. exc. C.C.	1	1998039
1953	All P.G.	1	1998071
1956-57	All C.C.-H.T.	1	1998129
1958	All H.T.	1	1998664
1959-60	All H.T.	1	1998705
1960	All H.T.	1	535068
1948	All H.T.	1	510911
1958	All H.T.	1	530171
1959-60	All H.T.	1	533640
1949-52	All H.T.	1	512522
1953-54	All H.T.	1	515504
1953	All P.G.	1	518483
1955-56	All H.T. exc. C.C.	1	519504
1956-57	All C.C.-H.T.	1	521373
1960	All 4 SPD.-S.T.	1	3706355
1953	All P.G.	1	518485
1949-54	All H.T. & P.G. (3.430)	2	510851
1949-54	All H.T. & P.G.	1	5289294
1953	All P.G.	1	518670
1958-60	All H.T.	1	529150
	2nd type (2 1/16" long)		
	LEVER, starter to gearshift neutralizer	1	510911
	trans. neutralizer and back-up lamp switch	1	530171
	ROD, trans. neutralizer switch	1	512522
	SHIELD, back up lamp switch	1	3706355
	BRACKET, trans. neutralizer rod	1	518485
	WASHER, trans. neutralizer switch rod	2	510851
	WIRE ASSY., switch to solenoid	1	5289294
	SPRING, trans. neutralizer switch rod return	1	518670
	SCREW, trans. neutralizer and back-up lamp switch lever (Spec. No. 10-32x9/32")	1	529150
	CLIP (see Group 3.425 for use)		2294788

Group 4.081 SHIM-SUPPORT, TRANSMISSION REAR

1953	All P.G.	2	518609
1953	All P.G.	1	3704551

Group 4.083 RETAINER, TRANSMISSION REAR SUPPORT

1953	All P.G.	1	3704555
------	------------------	---	---------

Group 4.095 PLATE, TRANSMISSION SHIFT INTERLOCK

1956-57	All S.T.	1	1320939
1956-57	All S.T.	1	1308154
1958-60	All S.T. taxi, police & H.D.C.	1	3709315
1960	All 4 SPD.-S.T.	1	3709315
1960	All 4 SPD.-S.T. (8.940)	1	103565
1958-60	All S.T. taxi, police & H.D.C.	1	3709313
1958-60	All S.T. taxi, police & H.D.C.	1	3709312
1958-60	All S.T. taxi, police & H.D.C.	1	3709311
1958-60	All S.T. taxi, police & H.D.C.	1	3709314
1960	All 4 SPD.-S.T.	1	3709313
1960	All 4 SPD.-S.T.	1	3709312
1960	All 4 SPD.-S.T.	1	3709311
1960	All 4 SPD.-S.T.	1	3709314

Group 4.096 RETAINER, TRANSMISSION SELECTOR SHAFT

1956-57	All S.T.	1	1307547
---------	------------------	---	---------

Group 4.097 INTERLOCK, TRANSMISSION SHIFTER

1958-60	All S.T. exc. taxi, police & H.D.C.	(31/32"x7/32" x 4-5/64")	1	3686833
---------	---	--------------------------	---	---------

Group 4.101 FLUID, HYDRA-MATIC TRANSMISSION

1948-60	All H.T.	(1 qt. can)	AR	576401
1948-60	All H.T.	(5 qt. can)	AR	576402
1948-60	All H.T.	(55 gal. drum)	AR	576403

Group 4.103 CASE, TRANSMISSION

1940-47	All L.H.D.		1	1317853
1948-54	All L.H.D., S.T.		1	1335514
1950	All H.T.		1	8611854
1951	All H.T.		1	8613171
1952	All H.T.		1	8613984
1953-54	All H.T.	also use 1-8615318 Seal on 1953 models	1	8615429
1955	All L.H.D., S.T.		1	1195305
1955-56	All H.T. exc. C.C.		1	8615444
1956	All L.H.D., S.T.		1	1317854
1957	All L.H.D., S.T.		1	1175493
1956-57	All C.C.-H.T.		1	8617544
1958-60	All S.T. exc. taxi, police & H.D.C.		1	3743368
1958-60	All S.T. taxi, police & H.D.C.		1	531421
1958	All H.T.		1	8618299
1959	All H.T.		1	8618717
1960	All 4 SPD.-S.T.		1	3772339
1960	All H.T.	(see note)	1	8619915
1953	All P.G.	CASE AND BELL HOUSING ASSY., trans.	1	518456
1948-49	All H.T. (4.003)	NAME PLATE, transmission	1	8609324
1950-51	P/6 (4.003)	black	1	8609324
1950-51	P/8 (4.003)	green	1	8611896
1952-54	All H.T. (4.003)	green	1	8611896
1955-57	All H.T. (4.003)	green	1	8617017
1937-60	All S.T. (8.971)	PLUG, trans. case, filler and drain . . . (1/2" sq. hd.)	AR	103868
1948-60	All H.T. (8.971)	Hex. hd. 1/8"	1	444613
1960	All H.T. (0.683)	BOLT, trans. to flywheel housing . (7/16"-14x25/64")	6	536847

NOTE: When replacement of the 1960 model P trans. aluminum case is necessary, this case must be used. The original pump and seal ring from the aluminum case can be re-used, but it is necessary to use a center support to case retaining ring, part 8616152 in place of part 8619312.

Group 4.104 TRANSMISSION BREATHER PARTS

1955-56	All H.T. exc. C.C.	BREATHER ASSY., transmission	1	8615014
1953	All P.G.	BUSHING, trans. case rear	1	3780084
1938-57	All S.T. (4.687)	CAP, transmission cover breather screw	1	498373
1956-57	All C.C.-H.T.	PIPE AND CLIP, trans. breather	1	8616751
1958	All H.T.	PIPE ASSY., trans. breather	1	8618586
1959	All H.T.		1	534262
1960	All H.T.		1	536300
1958	All H.T.	CLIP, trans. breather pipe	1	8618587

1959-60	All H.T.	trans. breather pipe Front	1	534268
1959	All H.T.	trans. breather pipe	1	8619028
1960	All H.T.		1	8619274
1938-57	All with steer. col. shift, S.T.	SCREW, trans. breather	1	501330

Group 4.105 COVER-HOUSING, TRANSMISSION CASE

1939	L.H.D.	COVER	1	1313679
1940-55	All S.T.		1	1313679
1953	All P.G.	 3689912 RH		3702647 LH
1956-57	All S.T.		1	1308105
1958-60	All S.T. exc. taxi, police & H.D.C.		1	3741357
1960	All 4 SPD.-S.T.	trans. side	1	3772403
1958-60	All S.T. taxi, police & H.D.C.	HOUSING, transmission control	1	3709340
1958-60	All S.T. exc. taxi, police & H.D.C.	COLLECTOR, trans. case chip . . (3-1/16"x4-1/16")	1	3845067

Group 4.105 COVER, TRANSMISSION CASE SIDE

1951	All H.T.		1	8611924
1952-56	All H.T. exc. C.C.		1	8614093
1948-56	All H.T. exc. C.C.	BOLT & WASHER, side cover (1/4"-20x1/2")	12	8609489
1948-56	All H.T. (4.195)	GASKET, screw	1	1307237
1943-56	All H.T. (4.195)	SCREW, with gasket	1	1307238

Group 4.106 VALVE-PIN-RETAINER-SPRING, TRANS. LINE EXHAUST

1952	All H.T.	VALVE, 1st type (1-37/64" long)	1	8614051
1952	All H.T.	(2nd type) (1" long)	1	8614353
1953-56	All H.T. exc. C.C.	front servo line exhaust	1	8614794
1955-56	All H.T. exc. C.C.	PIN (5/64" dia. x 5/8")	2	8615247
1952	All H.T.	RETAINER	1	8614041
1953-54	All H.T.	front servo line exhaust valve spring	1	8614174
1952	All H.T.	SPRING, 1st type (2-27/64" long)	1	8614050
1952-56	All H.T. exc. C.C.	(2nd type on 1952). (1-49/64" long)	1	8614352

Group 4.107 LOCK-RETAINER-STUD-SEAL, TRANS. SHIFTER INTERLOCK

1958-60	All S.T. exc. taxi, police & H.D.C.	LOCK, trans. shifter interlock retainer	2	591539
1958-60	All S.T. exc. taxi, police & H.D.C.	RETAINER, trans. shifter interlock	1	591538
1958-60	All S.T. exc. taxi, police & H.D.C.	STUD, trans. shifter interlock retainer	2	591537
1958-60	All S.T.	SEAL, trans. shifter shaft "O" ring (7/16" I.D. x 17/32" O.D.)	2	3845164
1960	All 4 SPD.-S.T.		3	3845164

Group 4.109 GASKET, TRANSMISSION CASE SIDE COVER

1948-50	All H.T.		1	8608556
1951	All H.T.		1	8611923
1952-56	All H.T. exc. C.C.		1	8614176
1953	All P.G.	 3689910 RH		3702649 LH
1958-60	All S.T. taxi, police & H.D.C.	trans. control housing (5-11/16" x 7-5/8")	1	3709316

Group 4.109 GASKET, TRANSMISSION COVER

1939-55	All S.T.	1	1312441
1956-57	All S.T.	1	1308106
1958-60	All S.T. exc. taxi, police & H.D.C.	1	591513
1960	All 4 SPD.-S.T. trans. side cover	1	3709316

Group 4.115 PUMP-TURBINE, TORQUE CONVERTER

1953	All P.G.	PUMP, primary-w/housing and cover	1	3719595
1953	All P.G.	TURBINE, w/hub	1	3702724
1953	All P.G.	BOLT, converter cover to housing . (5/16"-24x13/16")	18	3717166
1953	All P.G.	BUSHING, converter cover hub (1-3/8" O.D. x7/16" wide)	1	3702079
1953	All P.G.	NUT, converter to flywheel-anchor (3/8"-24 "U" type)	3	3703277
1953	All P.G.	w/retainer (3/8"-24)	3	3713686
1953	All P.G.	SCREW AND LOCKWASHER, converter to flywheel (3/8"-24x11/16")	3	3708352
1953	All P.G.	SEAL, cover ("O" ring)	1	3775610
1953	All P.G.	WASHER, turbine thrust . . (1-1/4" I.D. x2-3/4" O.D.)	1	3719262
1953	All P.G.	pump thrust-w/3 tabs . . (1-1/2" I.D. x2-7/8" O.D.)	1	3709044

Group 4.117 ROLLER-CAM-RETAINER-WASHER-RING, STATOR

1953	All P.G.	ROLLER UNIT, over run	1	3703804
1953	All P.G.	CAM, stator over run (3-1/4" O.D.)	1	3716412
1953	All P.G.	RETAINER, stator cam roller spring . . (3-1/4" O.D.)	1	3702100
1953	All P.G.	WASHER, stator race thrust Front	1	3709094
1953	All P.G.	WASHER UNIT Rear	1	3709886
1953	All P.G.	RING, over run cam ret. . . . (3-1/32" I.D. x3-11/32" O.D. x1/16" thick)	2	3702104

Group 4.118 COVER ASSY., TORUS

1948-54	All H.T.			1	8614249
1955	All H.T.			1	8615164
1956	All H.T. exc. C.C.			1	8617341
1956-57	All C.C.-H.T.			1	8616954
1958-60	All H.T.			1	8618985
1948-54	All H.T.	GASKET, torus cover to flywheel		1	8611284
1955-56	All H.T. exc. C.C.			1	8615237
1956-60	All C.C.-H.T.	SEAL, torus cover to flywheel		1	8616338
1956-57	All C.C.-H.T.	SHIM, flywheel plate (.011" thick)	AR	523087	
1956-57	All C.C.-H.T.				
1957-60	All H.T.	SPRING, torus cover damper-red	AR	8619099	
1959-60	All H.T.	black	3	8617969	
1948-54	All H.T.	BOLT, cover to flywheel (service in complete sets) (No. 15-24x5/8")	30	511849	
1955-56	All H.T. exc. C.C. . . . (8.900)			30	181356
1956-60	All C.C.-H.T.			24	8616889

Group 4.119 RACE-STATOR, TORQUE CONVERTER

1953	All P.G.	RACE, stator (5/16"x2-3/16")	1	3702102
1953	All P.G.	STATOR ASSY. (2-3/4"x7")	1	3702688

Group 4.121 TORUS ASSY., FLUID COUPLING

1948-54	All H.T.	driven	Front	1	8610183
1948-54	All H.T.	drive	Rear	1	8610201
1955-56	All H.T. exc. C.C.	driven	Front	1	8615001
1955-56	All H.T. exc. C.C.	drive	Rear	1	8615002
1956	All C.C.-H.T.	drive	Rear	1	8616088
1956	All C.C.-H.T.	driven	Front	1	8616089
1957-60	All H.T.	driven		1	8618712
1957-60	All H.T.	drive		1	8618713
1956-60	All C.C.-H.T.	BUSHING, driven torus hub		1	8619932
1956-58	All C.C.-H.T. (8.938)	PIN, driven torus check valve ret. (1/16"x3/4")		1	103362
1948-53	All H.T.	RETAINER, driven torus check valve		1	8610018
1948-56	All H.T. exc. C.C. (4.128)	RING, driven torus retainer snap		1	8613260
1956-60	All C.C.-H.T. (4.128)	driving torus to intermediate shaft (1-5/32" I.D.)		1	8618830
1956-60	All C.C.-H.T. (4.128)	driven torus ret. snap		2	8616503
1948-56	All H.T. exc. C.C.	SPRING, driven torus check valve		1	8609508
1956-60	All C.C.-H.T.			1	8616020
1948-56	All H.T. exc. C.C.	VALVE, driven torus check (use w/8613260 snap ring)		1	8613150
1956-60	All C.C.-H.T.			1	8616062

Group 4.123 RING-SHAFT, TRANSMISSION INPUT

1953	All P.G.	RING, input shaft oil seal (1" O.D.)	1	3689838
1953	All P.G.	SHAFT, input (13" O.L.-19 splines)	1	3740041

Group 4.124 GASKET-SEAL, TRANS. FRONT OIL PUMP COVER

1948-53	All H.T.	GASKET-paper	1	8609437
1954-56	All H.T. exc. C.C.	SEAL-"O" ring type	1	8615318
1956-60	All C.C.-H.T.	flywheel housing to case (8" I.D.)	1	8616480

Group 4.125 SEAL ASSY., TRANS. FRONT OIL PUMP COVER

1948-56	All H.T. exc. C.C.	(spring loaded type)	1	8618697
1956-57	All C.C.-H.T.	rear flywheel housing oil-spring loaded	1	8618181
1958-60	All H.T.	rear flywheel housing oil-spring loaded	1	8618479
1956-60	All C.C.-H.T. (4.127)	RING, front oil pump cover		
		oil seal (3/32"x3" O.D.)	1	8616030

Group 4.126 KEY, TRANS. FRONT OIL PUMP DRIVE GEAR

1948-56	All H.T. exc. C.C.		2	8609496
---------	----------------------------	--	---	---------

Group 4.127 RING, TRANS. OIL SEAL

1948-51	All H.T.	front oil pump covdr oil seal (3/32"x2-3/8")	2	8609472
1948-60	All H.T.	governor sleeve oil seal (special gap) (1-3/16"x3/32")	4	8609440
1948-54	All H.T.	special gap (2"x3/32")	4	8617567
1948-56	All H.T. exc. C.C.	special gap (2-3/8"x3/32")	1	8611581
1952-56	All H.T. exc. C.C.	front oil pump cover oil seal (1/8" x 2-3/8")	1	8613202
1952	All H.T.	front servo apply piston (1-3/8"x3/32")	1	8614062

1953-56	All H.T. exc. C.C.	front servo apply piston	(1-7/16"x3/32")	1	8614122
1956-60	All C.C.-H.T.	front unit driven torus shaft	(3/32"x1-19/32")	1	8616481
1956-60	All C.C.-H.T.	front unit torus hub	(3/32"x2")	1	8618847
1956-60	All C.C.-H.T.	front pump and torus	(3/32"x2-1/8")	2	8616034
1956-60	All C.C.-H.T.	front pump cover	(3/32"x3")	1	8616030
1956-60	All C.C.-H.T.	inter. shaft to frt. torus hub	(3/32"x1-19/64")	1	8616052
1956	All C.C.-H.T.	reverse piston-outer	(6-5/8" O.D.)	1	8616014
1956-58	All C.C.-H.T.	reverse piston-inner	(3/32"x2-3/4")	1	8616048
1956-59	All C.C.-H.T.	front servo piston	(3/32"x2-3/4")	1	8616048
1956-60	All C.C.-H.T.	center support	(3/32" x 2")	AR	8617567
1956	All C.C.-H.T.	neutral clutch-outer	(1/8"x6-61/64")	1	8616701
1956-60	All C.C.-H.T.	accumulator piston-outer	(3/32"x2-1/4")	1	8616031
1956	All C.C.-H.T.	overrun clutch-inner	(1/4"x3-47/64")	1	8616043
1956	All C.C.-H.T.	overrun clutch-outer	(5-55/64" O.D.)	1	8616009
		RING (see Group 4.229 for use)			8611851

Group 4.128 RING, TRANS. RETAINING AND SNAP

1948-56	All H.T. exc. C.C.	clutch drum retainer-			
		front and rear	(3/32"x6-3/8" O.D.)	2	8609501
1948-56	All H.T. exc. C.C.	driven torus retainer snap		1	8613260
1948-56	All H.T. exc. C.C.	driving torus retainer snap	(3/32"x1-7/32" I.D.)	1	8609434
1948-56	All H.T. exc. C.C.	front clutch drum locating snap		1	8609434
1948-56	All H.T. exc. C.C.	front drive gear retainer		1	8609434
1948-56	All H.T. exc. C.C.	front drum rear clutch hub retainer snap		1	8609434
1948-50	All H.T.	rear bearing retainer snap			
		(horse shoe type washer)	(3/32"x1-3/16" I.D.)	1	8607299
1950-55	All H.T.	rear bearing to retainer snap	(1/16"x2-9/32")	1	8612215
1948-56	All H.T. exc. C.C.	rear clutch drum rear hub rear retainer snap		1	8609434
1948-50	All H.T.	reverse internal gear snap	(3/32"x2-7/8" I.D.)	1	8609602
1951-55	All H.T.	rear bearing to shaft snap	(1/16"x1-1/16")	1	8612243
1948-60	All H.T.	reverse planet carrier			
		retainer	(3/32"x1-11/32" I.D.)	AR	8606763
1948-56	All H.T. exc. C.C.	reverse unit oil pump and governor			
		driven gear snap	(3/64"x2-13/32" I.D.)	1	8609422
1951-56	All H.T. exc. C.C.	reverse unit piston to			
		retainer snap	(1/16"x2-7/8")	1	8611980
1956-60	All C.C.-H.T.	reverse inter. shaft	(1-5/32")	1	8618830
1956-60	All C.C.-H.T.	drive torus and inter. shaft	(1-5/32" I.D.)	1	8618830
1956-60	All C.C.-H.T.	front unit torus cover to			
		drive torus	(7-21/32" O.D.)	1	8616190
1956-60	All C.C.-H.T.	driven torus to main shaft	(3/4" I.D.)	2	8616503
1956-60	All C.C.-H.T.	center supt. to case	(7-39/64" O.D.)	1	8616152
1956	All C.C.-H.T.	rear bearing to retainer	(1/16"x2-9/16")	1	8614188
1956-57	All C.C.-H.T.	rear bearing to cover	(1/16"x2-9/16")	1	8614188
1956-60	All C.C.-H.T.	rear unit reverse flange to rear			
		drum	(6-23/32" O.D.)	2	8616015
1956-60	All C.C.-H.T.	rear clutch spring	(2-3/4" I.D.)	1	8616060
1956-60	All H.T. exc. C.C.	rear bearing to shift snap	(3/32"x1.240")	1	8614096
1956-60	All H.T.	center gear to main shaft (Tru-Arc)		1	8616503
1958-60	All H.T.	center gear to main shaft Spirolox	(.788 I.D.)	1	8617953
1958-60	All H.T.	front sun gear to intermediate shaft		1	8618282
1959-60	All (8.934)	accumulator piston pin retainer		1	9412979
1959-60	All H.T.	rear bearing to reverse clutch cover		1	8614188
1960	All H.T.	governor drive gear snap		1	8614096
1960	All H.T.	center support to case retaining-w/aluminum case		1	8619312
1948-50	All H.T.	SNAP RING PKG., transmission		1	519449
1951-55	All H.T.			1	519450
1956	All H.T. exc. C.C.			1	522673
1956-58	All C.C.-H.T.			1	8616916
1959-60	All H.T.			1	8618998

Group 4.128 COOLER AND PARTS, TRANSMISSION OIL

1953-55	All P.G.-H.T.	COOLER ASSY.	1	8520972
1956	All H.T. exc. heavy duty		1	8523401
1956	All C.C.-H.T. heavy duty		1	8525249
1953	All P.G.	CLIP, oil cooler pipe to trans.	1	5841303
1953	All P.G.	oil cooler pipe to cyl. block	1	5841304
1957-58	All H.T.	oil cooler pipe to frame	1	568066
1956	All H.T.	CONNECTOR, hose-tee (7/8" O.D.-5/8" O.D.x4-1/2")	1	522175
1956	All H.T.	(7/8" O.D.-5/8" O.D.x4-1/2")	1	522524
1957-58	All H.T. exc. A.C. (8.963)	oil cooler pipe to cooler (3/8" I.D.x1-1/64")	2	442323
1957	All H.T.-A.C. (8.963)	oil cooler pipe to cooler (3/8" I.D.)	2	442330
1958	All H.T.	oil cooler pipe to cooler (3/8" I.D.x2-3/16")	2	529963
1959	All H.T. (8.963)	pipes to cooler (3/8" I.D.)	2	442330
1953	All P.G.-P.S.	BRACKET, oil cooler mounting	1	518437
1953	P/6 P.G.-S.S.		1	5841508
1953	All P.G.-P.S.	oil cooler water pipe support	1	518720
1960	All H.T.	oil cooler inlet pipe	1	536848
1960	All H.T.	oil cooler outlet pipe	1	536849
1960	All H.T.	oil cooler pipes	1	536850
1960	All H.T. (1.166)	CLAMP, oil cooler hose (11/16")	4	111603
1953	All P.G.-S.S.	ELBOW, oil cooler water outlet to water pump	1	5841589
1956	All H.T. exc. A.C.	oil cooler hose to rad. (7/8" O.D.x3")	1	522316
1960	All H.T.	FITTING, oil cooler pipe to radiator	2	535382
1956-60	All C.C.-H.T.	GASKET, oil cooler adapter plate	1	8616496
1956-60	All C.C.-H.T.	copper	1	8616498
1953	All P.G. (8.846)	HOSE, oil cooler (100 ft. roll)	AR	506531
1956	All	oil cooler (7/8" I.D.x34-1/2")	AR	522331
1956	All	tube to radiator-curved (6-1/2" long)	1	522707
1960	All H.T.	oil cooler pipe to fitting (3/8" I.D. x 6")	2	536927
1956	All H.T.	INSULATOR, water tube (7/8"x1-3/16"x2-3/8")	1	522319
1953	All P.G.	NIPPLE, oil cooler water hose to water pump	2	3121016
1956	All H.T.-A.C.	to radiator	1	522345
1957	All H.T.-A.C. (8.963)	oil cooler pipe to cooler (1/4"x3")	2	192055
1957	All H.T.-A.C. (8.963)	oil cooler pipe to cooler (1/4"x4")	2	192057
1959	All H.T.-A.C. (8.963)	oil cooler pipe to cooler (1/4"x4")	2	192057
1953	All P.G.-S.S.	PIPE, oil cooler water Inlet	1	518553
1953	All P.G.-S.S.	Outlet	1	5841509
1953	All P.G.-P.S.	Inlet	1	518608
1953	All P.G.-P.S.	Outlet	1	518607
1956	All C.C.-H.T.	oil outlet (3/8" O.D.x30-3/8" dev. length)	1	522920
1956	All C.C.-H.T.	oil inlet (3/8" O.D.x20" dev. length)	1	521368
1956	All H.T.	cooler to radiator-		
		Front (7/8" O.D.x29-7/8" dev. length)	1	522349
1956	All C.C.-H.T.	water inlet (5/8" O.D.x23-3/4" dev. length)	1	521372
1956	All H.T.	water outlet (5/8" O.D. x 9-1/4" dev. length)	1	521890
1957	All H.T. exc. A.C.	oil inlet (3/8" O.D.x53-1/8" dev. length)	1	524108
1957	All H.T.-A.C.	oil inlet (3/8" O.D.x56-1/8" dev. length)	1	524110
1957	All H.T. exc. A.C.	oil outlet (3/8" O.D.x64-7/8" dev. length)	1	524112
1957	All H.T.-A.C.	oil outlet (3/8" O.D.x66" dev. length)	1	524114
1958	All H.T.	oil inlet (3/8" O.D.x14-7/8" dev. length) Front	1	530976
1958	All H.T. exc. A.S.	oil outlet (3/8" O.D.x24-3/4" dev. length) Front	1	530978
1958	All H.T.-A.S.	oil outlet (3/8" O.D.x32-5/8" dev. length) Front	1	530980
1958	All H.T.	oil inlet (3/8" O.D.x38" dev. length) Rear	1	529212
1958	All H.T.	oil outlet (3/8" O.D.x38-1/2" dev. length) Rear	1	529214
1959	All H.T.	oil inlet	1	532926
1959	All H.T.	oil outlet	1	532928
1960	All H.T.	oil cooler oil inlet	1	536853
1960	All H.T.	oil outlet	1	536854
1954-56	All H.T.	VALVE ASSY., oil cooler pressure relief	1	520838
1956-60	All C.C.-H.T.	PLATE, oil cooler adapter	1	8616495
1956-60	All C.C.-H.T.	SEAL, oil cooler sleeve	2	8616494
1956-60	All C.C.-H.T.	SLEEVE, oil cooler adapter to front pump	2	8616497

Group 4.129 WASHERS, TRANS. THRUST

1948-56	All H.T. exc. C.C.	front unit drive gear rear thrust-bronze	1	8609511
1948-56	All H.T. exc. C.C.	front unit drive gear thrust backing-steel	1	8609487
1948-56	All H.T. exc. C.C.	front unit drive gear front thrust-bronze	1	8609512
1948-56	All H.T. exc. C.C.	front clutch drum rear backing-steel	1	8609455
1948-56	All H.T. exc. C.C.	rear clutch hub-bronze	2	8617342
1948-56	All H.T. exc. C.C.	main shaft selective, rear (.055"-.059" ident. No. 1)	1	8609191
1948-56	All H.T. exc. C.C.	main shaft selective, rear (.062"-.067" ident. No. 2)	1	8609192
1948-56	All H.T. exc. C.C.	main shaft selective, rear (.071"-.076" ident. No. 3)	1	8609193
1948-56	All H.T. exc. C.C.	main shaft selective, rear (.079"-.083" ident. No. 4)	1	8609194
1948-56	All H.T. exc. C.C.	main shaft selective, rear (.087"-.091" ident. No. 5)	1	8609195
1948-56	All H.T. exc. C.C.	main shaft selective, rear (.095"-.099" ident. No. 6)	1	8609196
1950-56	All H.T. exc. C.C.	main shaft selective thrust, rear (.103"-.107" ident. No. 7)	1	8609197
1950-56	All H.T. exc. C.C.	main shaft selective thrust, rear (.111"-.115" ident. No. 8)	1	8609198
1948-56	All H.T. exc. C.C.	reverse unit center gear backing-steel	1	8617148
1948-56	All H.T. exc. C.C.	reverse unit center gear thrust-bronze	1	8608658
1948-54	All H.T.	front planet carrier backing-steel	1	8609421
1951-55	All H.T.	reverse internal gear thrust-bronze . . (3-1/4" O.D.)	1	8613114
1956-57	All C.C.-H.T.	front internal gear backing	1	8616087
1956-57	All C.C.-H.T.	front internal gear backing-steel	1	8616540
1956-57	All C.C.-H.T.	sun gear to internal gear-bronze	1	8616189
1956-60	All C.C.-H.T.	sun gear to carrier-bronze	1	8616091
1956-60	All C.C.-H.T.	front sprag inner race to case supt.	1	8616097
1956-60	All C.C.-H.T.	front unit torus backing-steel	1	8616646
1956-57	All C.C.-H.T.	front unit drive torus spacer-steel	1	8617938
1956-60	All C.C.-H.T.	front unit drive torus thrust-bronze	1	8616107
1956-60	All C.C.-H.T.	rear unit clutch cyl. to clutch hub	1	8616173
1956-60	All C.C.-H.T.	rear unit center gear thrust	2	8616433
1956	All C.C.-H.T.	rear unit flange and center gear (.055"-.059" ident. No. 1)	1	8616570
1956	All C.C.-H.T.	 (.060"-.064" ident. No. 2)	1	8616571
1956	All C.C.-H.T.	 (.065"-.069" ident. No. 3)	1	8616572
1956	All C.C.-H.T.	 (.070"-.074" ident. No. 4)	1	8616573
1956	All C.C.-H.T.	 (.075"-.079" ident. No. 5)	1	8616574
1956	All C.C.-H.T.	 (.080"-.084" ident. No. 6)	1	8616575
1956	All C.C.-H.T.	 (.085"-.089" ident. No. 7)	1	8616576
1956	All C.C.-H.T.	 (.090"-.094" ident. No. 8)	1	8616577
1956	All C.C.-H.T.	 (.095"-.099" ident. No. 9)	1	8616578
1956-60	All C.C.-H.T.	reverse internal gear to rear pump body-bronze	1	8618398
1957-60	All H.T.	rear unit and reverse output shaft (.055"-.059" ident. no. 1)	1	8617821
1957-60	All H.T.	 (.060"-.064" ident. no. 2)	1	8617822
1957-60	All H.T.	 (.065"-.069" ident. no. 3)	1	8617823
1957-60	All H.T.	 (.070"-.074" ident. no. 4)	1	8617824
1957-60	All H.T.	 (.075"-.079" ident. no. 5)	1	8617825
1957-60	All H.T.	 (.080"-.084" ident. no. 6)	1	8617826
1957-60	All H.T.	 (.085"-.089" ident. no. 7)	1	8617827
1957-60	All H.T.	 (.090"-.094" ident. no. 8)	1	8617828
1957-60	All H.T.	 (.095"-.099" ident. no. 9)	1	8617829
1958-60	All H.T.	front internal gear backing Front	1	8618524
1958-60	All H.T.	front internal gear backing Rear	1	8618523

Group 4.131 LOCK PLATE, TRANS. CASE CENTER BEARING CAP BOLT

1948-56	All H.T. exc. C.C.	1	8609426
1948-54	All (8.900) BOLT, center bearing cap to case (7/16"-14x2-1/2")	2	454948

Group 4.132 SLEEVE, TRANS. CASE OIL FILLER

1948-54	All H.T.	1	8611007
1956-58	All C.C.-H.T. SLEEVE AND SEAL PKG., trans. oil filler tube	1	8616956

Group 4.133 INDICATOR ASSY., TRANS. OIL LEVEL

1948-54	All H.T.	1	8605800
1955-56	All H.T. exc. C.C.	1	519657
1956-57	All C.C.-H.T.	1	521362
1958	All H.T. exc. F.I.-A.C.	1	521362
1958	All H.T.-F.I.-A.C.	1	530823
1959	All H.T.	1	521362
1960	All H.T.	1	536298
1955	All H.T. PIPE ASSY., trans. oil filler	1	519418
1956	All H.T. exc. C.C.	1	522582
1956-57	All C.C.-H.T.	1	521363
1958	All H.T. exc. F.I.-A.C.	1	529045
1958	All H.T.-F.I.-A.C.	1	530824
1959	All H.T.	1	533018
1960	All H.T.	1	536312
1955	All H.T. SUPPORT, trans. oil filler pipe	1	519651
1956	All H.T. exc. C.C.	1	522085
1956-57	All C.C.-H.T.	1	521409
1958	All H.T. exc. F.I.-A.C.	1	529047
1958	All H.T.-F.I.-A.C.	1	530826
1959-60	All H.T.	1	532999
1953	All P.G. GAUGE, oil filler level w/breather	1	3697699
1953	All P.G. SEAL, oil filler "O" ring (1" I.D.)	1	3689940
1956-57	All C.C.-H.T. (.725")	1	8617747
1958-60	All H.T.	1	531917
1953	All P.G. TUBE, oil filler	1	3689937

Group 4.152 LEVER, TRANSMISSION OUTER SHIFT

1948-50	All H.T.	1	8600271
1951-54	All H.T.	1	8613181
1953	All P.G.	1	518498
1955-56	All H.T. exc. C.C.	1	520693
1956-57	All C.C.-H.T.	1	521355
1958-59	All H.T.	1	529302
1960	All H.T.	1	8620539
1953	All P.G. (4.006) LOCK, trans. outer shift lever	1	3685801

Group 4.155 COVER-VALVE-SEAL-SPRING-RING, TRANS. FRONT UNIT TORUS COUPLING

1956-57	All C.C. H.T.	COVER ASSY. (Casting No. 8618338)	1	8619972
1958-60	All C.C.-H.T.	(Casting No. 8619314)	1	8618949
1956-60	All C.C.-H.T.	BUSHING, front unit torus cover	1	8619939
1956-60	All C.C.-H.T.	VALVE, exhaust	2	8616407
1956-60	All C.C.-H.T.	SEAL, oil (6-9/16" I.D.)	2	8616479
1956-60	All C.C.-H.T.	SPRING, exhaust valve	2	8616406
1956-60	All C.C.-H.T. (4.128)	RING, cover to driving torus snap (7-21/32" O.D.)	1	8616190

Group 4.156 TORUS ASSY., TRANS. FRONT UNIT

1956-57	All C.C.-H.T.	drive	1	8618968
1956-57	All C.C.-H.T.	driven	1	8618037
1958-60	All H.T.	drive	1	8618649
1958-60	All H.T.	driven	1	8619039
1956-60	All C.C.-H.T.	BUSHING, driven torus	1	8619930
1956-60	All C.C.-H.T. (4.127)	RING, torus hub oil seal (3/32"x2")	1	8618847
1956-60	All C.C.-H.T. (4.127)	front unit driven torus shaft oil seal (3/32"x1-19/32" O.D.)	1	8616481
1956-60	All C.C.-H.T. (4.127)	front pump and torus oil seal (3/32"x2-1/8" O.D.)	2	8616034
1956-57	All C.C.-H.T. (4.129)	WASHER, front unit drive torus spacing-steel	1	8617938
1956-60	All C.C.-H.T. (4.129)	thrust-bronze	1	8616107
1956-60	All C.C.-H.T. (4.129)	backing-steel	1	8616646

Group 4.158 GEAR ASSY., TRANS. FRONT UNIT INTERNAL DRIVE

1948-49	All H.T.		1	8607339
1950-51	All H.T.		1	8611736
1952-54	All H.T.		1	8613184
1955-56	All H.T. exc. C.C.		1	8614443
1956-57	All C.C.-H.T.		1	8616040
1958-60	All H.T.		1	8618271
1958-60	All H.T.	BEARING ASSY., frt. internal gear to center gear thrust	1	8619946
1948-49	All H.T.	BUSHING, front unit drive gear. Front	2	8618131
1950-56	All H.T. exc. C.C.	Rear	3	8618131
1956-60	All C.C., H.T.	front internal gear	1	8619931
1956-57	All C.C.-H.T.	SPACER, front internal gear (.0695"-.0705" ident. No. 1)	1	8616703
1956-57	All C.C.-H.T.	(.077"-.079" ident. No. 2)	1	8616704
1956-57	All C.C.-H.T.	(.085"-.087" ident. No. 3)	1	8616705
1956-57	All C.C.-H.T.	(.093"-.095" ident. No. 4)	1	8616706
1956-57	All C.C.-H.T.	(.101"-.103" ident. No. 5)	1	8616707
1956-57	All C.C.-H.T.	(.109"-.111" ident. No. 6)	1	8616708
1956-57	All C.C.-H.T.	(.117"-.119" ident. No. 7)	1	8616709
1956-57	All C.C.-H.T.	(.125"-.127" ident. No. 8)	1	8616710
1956-57	All C.C.-H.T.	(.133"-.135" ident. No. 9)	1	8616711
1956-57	All C.C.-H.T.	(.141"-.143" ident. No. 10)	1	8616712
1956-57	All C.C.-H.T.	(.149"-.151" ident. No. 11)	1	8616713
1956-57	All C.C.-H.T.	(.157"-.159" ident. No. 12)	1	8616714
1956-57	All C.C.-H.T.	(.165"-.167" ident. No. 13)	1	8616715
1956-57	All C.C.-H.T.	(.173"-.175" ident. No. 14)	1	8616716
1958-60	All H.T.	(.045"-.047" ident. no. 1)	1	8618319
1958-60	All H.T.	(.058"-.060" ident. no. 2)	1	8618320
1958-60	All H.T.	(.071"-.073" ident. no. 3)	1	8618321
1958-60	All H.T.	(.084"-.086" ident. no. 4)	1	8618322
1958-60	All H.T.	(.097"-.099" ident. no. 5)	1	8618323
1958-60	All H.T.	(.110"-.112" ident. no. 6)	1	8618324
1958-60	All H.T.	(.123"-.125" ident. no. 7)	1	8618325
1958-60	All H.T.	(.136"-.138" ident. no. 8)	1	8618326
1958-60	All H.T.	(.149"-.151" ident. no. 9)	1	8618327
1958-60	All H.T.	(.162"-.164" ident. no. 10)	1	8618328
1958-60	All H.T.	(.175"-.177" ident. no. 11)	1	8618329
1948-56	All H.T. exc. C.C. (4.129)	WASHER, front thrust backing-steel	1	8609487
1948-56	All H.T. exc. C.C. (4.129)	rear thrust-bronze	1	8609511
1948-56	All H.T. exc. C.C. (4.129)	front thrust-bronze	1	8609512
1956-57	All C.C.-H.T. (4.129)	front internal gear backing	1	8616087
1958-60	All H.T. (4.129)	front internal gear backing Front	1	8618524
1958-60	All H.T. (4.129)	front internal gear backing Rear	1	8618523

Group 4.159 GEAR-RING-WASHER, TRANS. FRONT SUN

1956-60	All C.C.-H.T.	GEAR	1	8618277
1958-60	All H.T. (4.128)	RING, front sun gear to intermediate shaft	1	8618282
1956-57	All C.C.-H.T. (4.129)	WASHER, internal gear backing-steel	1	8616540
1956-60	All C.C.-H.T. (4.129)	sun gear to carrier-bronze	1	8616091
1956-57	All C.C.-H.T. (4.129)	sun gear to internal gear-bronze	1	8616189

Group 4.161 CARRIER ASSY., TRANS. FRONT PLANET

1948-54	All H.T.		1	8611858
1955-56	All H.T. exc. C.C.		1	8615277
1948-54	All H.T.	PINION PKG., trans. front planet	1	8610737
1955-56	All H.T. exc. C.C.		1	8618006
1956-60	All C.C.-H.T.	SHAFT, rear unit and reverse inter.-less hub	1	8616095
1948-56	All H.T. exc. C.C. . . . (4.129)	WASHER, bronze thrust	1	8609511
1956-60	All C.C.-H.T. (4.127)	RING, inter. shaft to front torus hub oil seal	1	8616052

Group 4.162 DRUM, TRANS. FRONT CLUTCH

1948-51	All H.T.		1	8611456
1952-54	All H.T.		1	8613976
1955-56	All H.T. exc. C.C.		1	8615549
1956	All C.C.-H.T.	neutral clutch (▲)	1	8616463
1956-60	All C.C.-H.T.	neutral clutch-2nd type on 1956 (▲▲)	1	8617478
1948-56	All H.T. exc. C.C.	BUSHING, front clutch drum Front	1	8618132
1948-56	All H.T. exc. C.C. . . . (4.158)	 Rear	1	8618131
1956-60	All C.C.-H.T.	neutral clutch case center supt.	1	8619934
1956-60	All C.C.-H.T. (4.189)	KEY, neutral clutch drum	1	8616605
1948-56	All H.T. exc. C.C. . . . (4.129)	WASHER, rear bronze thrust	1	8609511
1956-60	All C.C.-H.T. (4.128)	RING, center supt. to case snap	1	8616152
1956-60	All H.T. (4.127)	center support oil seal AR	1	8617567
1960	All H.T. (4.128)	center support to case-w/AL-60-P trans.	1	8619312
1956-60	All C.C.-H.T.	SUPPORT, neutral clutch case center-with step in oil groove (■)	1	8616897
1956-59	All C.C.-H.T.	BOLT, neutral clutch support locking (1/2"-20x51/64" special)	1	8616432

▲NOTE: 1st type used with piston without step in oil groove.

▲▲NOTE: 2nd type used with piston with step in oil groove.

■NOTE: Also use 1-8616899 Piston, 1-8617478 Drum and 1-8616919 Seal Pkg. when replacing the early 1956 transmission neutral clutch case center support.

Group 4.162 FLANGE ASSY., LOW SUN GEAR AND CLUTCH

1953	All P.G.	FLANGE ASSY.	1	3741026
1953	All P.G.	RETAINER, flange (5-1/2" O.D.)	1	3692094
1953	All P.G.	RING, flange retainer (.055"-5-3/4")	AR	3689706
1953	All P.G.	 (.073"-5-3/4")	AR	3692316
1953	All P.G.	 (.064"-5-3/4")	AR	3692317
1953	All P.G.	WASHER, low sun gear thrust (.095"-1-11/32")	AR	3694467
1953	All P.G.	 (.120"-1-11/32")	AR	3694468
1953	All P.G.	 (.145"-1-11/32")	AR	3694469

Group 4.163 PLATE, TRANS. CLUTCH

1948-55	All H.T. exc. C.C.	driven-steel-front or rear	AR	8603954
1948-55	All H.T. exc. C.C.	drive-steel w/facing-front or rear	AR	8609115

1953	All P.G.	drive	(8 internal splines)	4	3713694
1953	All P.G.	driven	(6 internal splines)	5	3703210
1956-57	All C.C.-H.T.	neutral clutch drive		5	8617931
1956-60	All C.C.-H.T.	neutral clutch driven		4	8616475
1956-57	All C.C.-H.T.	rear unit and reverse clutch drive		7	8616059
1956-60	All C.C.-H.T.	rear unit clutch driven		7	8618819
1956	All H.T. exc. C.C.	drive-steel w/facing-front or rear		12	8609115
1956	All H.T. exc. C.C.	driven-steel-front or rear		12	8603954
1958-60	All H.T.	neutral clutch drive		5	8618366
1958	All H.T.	rear unit and reverse clutch drive-w/P58 trans. (▲)		7	8616059
1958	All H.T.	rear unit and reverse clutch drive-w/P58 trans. (▲▲)		7	8618835
1959-60	All H.T.	rear unit and reverse clutch drive		7	8618835
▲NOTE: Used thru trans. No. P58-192269.					
▲▲NOTE: Used wih trans. No. P58-192270 and up.					

Group 4.164 SPRING, CLUTCH RELEASE

1948-56	All H.T. exc. C.C.	front and rear unit	Inner	12	8609071
1948-56	All H.T. exc. C.C.	front and rear unit	Outer	12	8609072
1956-60	All C.C.-H.T.	neutral clutch release-valve		5	8616476
1956-60	All C.C.-H.T.	rear clutch release	(14 coils, 1-1/2" long)	8	8616132
1948-56	All H.T. exc. C.C.	PIN, rear clutch spring guide		6	8609070
1956-60	All C.C.-H.T.	RETAINER, rear clutch drum release spring		1	8616054
1956-60	All C.C.-H.T. (4.128)	RING, rear clutch spring ret. snap		1	8616060

Group 4.164 CLUTCH-HUB, TRANSMISSION

1953	All P.G.	CLUTCH ASSY.		1	3767721
1953	All P.G.	HUB, trans. clutch drive		1	3689749
1953	All P.G.	RING, trans. clutch snap		1	3692700
1953	All P.G.	SEAT, trans. clutch spring		1	3692699
1953	All P.G.	SPRING, trans. clutch.	(2-3/4" I.D.x3-3/4" O.L.)	1	3703248
1953	All P.G.	WASHER, trans. clutch hub thrust	(1-5/16" I.D.x3" O.D.)	1	3737901

Group 4.165 PLATE-SPRING, TRANS. OVERRUN CLUTCH

1956-60	All C.C.-H.T.	PLATE		1	8618704
1956-60	All C.C.-H.T.	SPRING, release-wave		1	8616209

Group 4.166 PISTON, TRANS. CLUTCH ANNULAR

1948-49	All H.T.		Front	1	8611261
1948-49	All H.T.		Rear	1	8611258
1950-51	P/8 H.T.	w/D50, D51 trans. (see Note Group 4.003)	Front	1	8611259
1950-51	P/8 H.T.	w/D50, D51 trans. (see Note Group 4.003)	Rear	1	8611520
1950-51	P/6 H.T.	w/P50, P51 trans. (see Note Group 4.003)	Front	1	8611261
1950-51	P/6 H.T.	w/P50, P51 trans. (see Note Group 4.003)	Rear	1	8611258
1952-54	All H.T.		Rear	1	8613967
1952-54	All H.T.		Front	1	8613968
1951-56	All H.T. exc. C.C.		Reverse	1	8611934

1953	All P.G.	Front	1	3702919
1955-56	All H.T. exc. C.C.		1	8611259
1955	All H.T.	Rear	1	8611520
1956	All H.T. exc. C.C.		1	8611260
1956	All C.C.-H.T.	reverse clutch-with 3/16" chamfer on I.D.	1	8616606
1956-58	All C.C.-H.T.	reverse clutch-with 3/64" chamfer on I.D.	1	8617372
1956-57	All C.C.-H.T.	neutral clutch-without step in oil groove	1	8616464
1956-60	All C.C.-H.T.	neutral clutch-with step in oil groove	1	8616899
1956-57	All C.C.-H.T.	overrun clutch-without step in oil groove	1	8616146
1956-60	All C.C.-H.T.	overrun clutch-with step in oil groove	1	8616896
1956	All C.C.-H.T.	rear clutch drum	1	8616149
1957-60	All H.T.	rear clutch drum	1	8617416
1959-60	All H.T.	reverse clutch	1	8619239
1953	All P.G. (3.825)	BALL, pressure relief valve	1	7002117
1956	All C.C.-H.T. (4.127)	RING, reverse piston oil seal outer	1	8616014
1956-58	All C.C.-H.T. (4.127)	reverse piston oil seal inner	1	8616048
1956	All C.C.-H.T. (4.127)	overrun clutch oil seal inner	1	8616043
1956	All C.C.-H.T. (4.127)	overrun clutch oil seal outer	1	8616009
1956	All C.C.-H.T. (4.127)	neutral clutch oil seal outer	1	8616701

Group 4.166 EXPANDER AND SEAL PKG., CLUTCH ANNULAR PISTON

1948-51	All H.T.	(▲) Front and rear	2	8619305
1952-54	All H.T.	(▲) Front and rear	2	8619317
1955-56	All H.T. exc. C.C.	(▲) Front and rear	2	8619305
1951-56	All H.T. exc. C.C.	SEAL PKG., reverse	1	8613275
1956-60	All C.C.-H.T.	rear clutch piston Inner and outer	1	8616909
1956-60	All C.C.-H.T.	overrun clutch piston	1	8616918
1956-58	All C.C.-H.T.	reverse clutch piston	1	8616925
1956-60	All C.C.-H.T.	neutral clutch piston	1	8616919
1959-60	All H.T.	reverse clutch piston	1	8618997
1953	All P.G.	SEAL, trans. clutch piston ring Inner (2-1/32" I.D.)	1	3783456
1953	All P.G.	Outer (4-5/32" I.D.)	1	3774057

▲NOTE: Package consists of 2 seals, inner and outer expanders for 1 piston.

Group 4.167 SPRAG ASSY., TRANS. FRONT OVERRUN CLUTCH

1956-60	All C.C.-H.T.		1	8618363
1956-60	All C.C.-H.T.	RING, front sprag ret. snap	1	8616057

Group 4.168 RACE-WASHER, FRONT SPRAG

1956-60	All H.T.	RACE, trans. frt. sprag, splined, use w/8618037		
		torus on 1956-57 models	Inner	1 8618033
1956-60	All C.C.-H.T. (4.129)	WASHER, inner race to case supt.-bronze thrust		1 8616097

Group 4.169 DRUM ASSY., TRANS. FRONT BRAKE

1948-56	All H.T. exc. C.C.	with 3 pins	1	8611446
1953	All P.G.	trans. clutch-w/bushing	1	3742455
1953	All P.G.	RING, clutch drum oil seal	2	3689808
1953	All P.G. (4.190)	WASHER, clutch drum thrust-bronze	1	3697501

Group 4.172 SHAFT-BEARING-BUSHING-GEAR-RING, TRANS. MAIN

1948-54	All H.T.	SHAFT, trans. main-w/gear	1	8610712
---------	----------	---------------------------	---	---------

1955-56	All H.T. exc. C.C.	w/gear (17-13/16" O.L.-22 splines-41 teeth)	1	8614289
1956-60	All C.C.-H.T.	less center gear	1	8618376
1958-60	All H.T.	BEARING, center gear thrust-roller type	1	457209
1948-56	All H.T. exc. C.C.	BUSHING, main shaft pilot	1	8618129
1956-60	All C.C.-H.T.	GEAR, rear unit center (▲)	1	8617948
1958-60	All H.T.	RETAINER, reverse thrust backing washer	1	8617949
1956-60	All C.C.-H.T. (4.128)	RING, center gear to main shaft snap (Tru-Arc)	1	8616503
1958-60	All H.T. (4.128)	center gear to main shaft (Spirolox)	1	8617953

▲NOTE: Use 1-457209 bearing assy., 1-8617953 ring and 1-8617949 retainer when used on 1956-57.

Group 4.173 NUT-WASHER, TRANS. MAIN SHAFT

1948-56	All H.T. exc. C.C.	NUT, driven torus to main shaft (7/8"-16 hex.)	1	8609425
1948-56	All H.T. exc. C.C.	WASHER, main shaft nut lock (29/32" I.D., x 1-3/4" O.D.)	1	8613734

Group 4.175 CARRIER ASSY., TRANSMISSION PLANET

1953	All P.G.	CARRIER ASSY.	1	3702061
1953	All P.G.	GEAR, reverse sun	1	3747381
1953	All P.G.	PINION UNIT, planet carrier	3	3764366

Group 4.176 PLANET CARRIER SMALL PARTS

1953	All P.G.	BEARING, pinion needle	240	7450410
1953	All P.G.	PLATE, pinion shaft lock	1	3694428
1953	All P.G.	SCREW, lock plate (12-24 x 1/4")	3	3694432
1953	All P.G.	SPACER, pinion needle brg.	6	3689732
1953	All P.G.	WASHER, pinion thrust (1/2" I.D.)	6	3689719
1953	All P.G.	reverse sun gear thrust (1/2 I.D. x 1-1/2 O.D.)	1	3689834

Group 4.177 CARRIER ASSY., REAR PLANET-WITH DRIVEN SHAFT

1948-50	All H.T.		1	8610716
1951-54	All H.T.		1	8611933
1955	All H.T.		1	8615158
1956	All H.T. exc. C.C.		1	8617236
1956-57	All C.C.-H.T.	SHAFT ASSY., rear unit and reverse output	1	8616362
1958	All H.T.		1	8618381
1959-60	All H.T.		1	8618728

Group 4.179 SLEEVE ASSY., OIL DELIVERY

1948-56	All H.T. exc. C.C.		1	8611654
1948-56	All H.T. exc. C.C.	BUSHING, oil delivery sleeve	1	8618162
1948-56	All H.T. exc. C.C. (4.127)	RING, oil seal (3/32"x2")	4	8617567

Group 4.180 SPRAG ASSY., TRANS. REAR UNIT

1956-60	All H.T.		1	8618372
1956-60	All C.C.-H.T.	RACE, rear unit sprag Outer	1	8616103
1956-60	All C.C.-H.T.	RETAINER, rear unit sprag	1	8617627
1956-60	All C.C.-H.T. (4.167)	RING, rear sprag ret.	1	8616057

Group 4.184 CYLINDER-DRUM-PLATE, TRANS. REAR CLUTCH

1956-60	All C.C.-H.T.	CYLINDER ASSY., rear clutch-w/bushing	1	8617624
1948-51	All H.T.	DRUM ASSY.	1	8618233
1952-54	All H.T.		1	8613975
1955-56	All H.T. exc. C.C.		1	8618233
1956-60	All C.C.-H.T.		1	8616119
1948-56	All H.T. exc. C.C.	BUSHING, rear clutch drum	1	8618133
1956-60	All C.C.-H.T.	rear clutch drum case center supt.	1	8619935
1956-60	All C.C.-H.T.	PLATE, rear clutch backing	1	8616118

Group 4.186 HUB, TRANS. REAR CLUTCH

1948-56	All H.T. exc. C.C.		1	8615451
1956-60	All C.C.-H.T.		1	8616112
1956-60	All C.C.-H.T. (4.128)	RING, rear unit inter. shaft snap (Spiralox)	1	8618830
1953-56	All H.T. exc. C.C.	WASHER, rear clutch hub-after trans.		
		No. P53-271454 (1.300"-1.514")	1	8615568
1956-60	All C.C.-H.T. (4.129)	rear clutch cyl. to hub (2.115"-2.94")	1	8616173

Group 4.187 DRUM, TRANS. REAR

1948-51	All H.T.	with pin-w/three drive pins (▲)	1	8611445
1951	All H.T.	with pin-less dowel pin (▲▲)	1	8613826
1952-56	All H.T. exc. C.C.	w/three drive pins	1	8613990
1951-56	All H.T. exc. C.C.	GEAR, rear internal-less dowel pin holes (▲▲)	1	8613824
1956-60	All C.C.-H.T.	rear internal	1	8616110

▲NOTE: Used on 1951 models thru trans. No. D51-121219 and P51-6939.

▲▲NOTE: Used with trans. Nos. D51-121220 & P51-6940 and up.

Group 4.188 HOUSING AND PLUG PKG., TRANS. REVERSE CLUTCH

1959-60	All H.T.		1	8619947
1959-60	All H.T.	GASKET, reverse clutch housing to case	1	8618751
1960	All H.T.	SCREEN ASSY., governor feed	1	8620556

Group 4.189 REVERSE UNIT PARTS, TRANS.

1951-56	All H.T. exc. C.C.	CONE, stationary	1	8611937
1956-58	All C.C.-H.T.		1	8618568
1959-60	All H.T.		1	8618736
1951-56	All H.T. exc. C.C.	KEY, stationary cone	1	8611936
1956-60	All C.C.-H.T.		1	8616605
1951-56	All H.T. exc. C.C.	RETAINER, reverse piston release		
		spring (4-1/16" O.D.)	1	8611985
1951-53	All H.T.	clutch release spring (3-7/8" O.D.)	1	8611973
1954-56	All H.T. exc. C.C.	clutch release spring (4 tangs)	1	8615316
1959-60	All H.T.	reverse piston release spring	1	8618746
1951-56	All H.T. exc. C.C. (4.128)	RING, snap, reverse unit piston to ret.	1	8611980
1959-60	All H.T.	reverse piston retainer	1	8618747
1951-53	All H.T.	SPRING, clutch release (3-1/8" I.D.)	1	8611972
1951-56	All H.T. exc. C.C.	piston release-coil type	6	8611958
1954-56	All H.T. exc. C.C.	clutch release (3-1/8" I.D.)	1	8615314
1956-58	All C.C.-H.T.	piston release-wave type	1	8616221
1956-60	All C.C.-H.T.	clutch release	1	8618886
1959-60	All H.T.	piston release	1	8619278

Group 4.190 GEAR, REVERSE UNIT CENTER

1948-56	All H.T. exc. C.C.	includes flange, retainer and bushings	1	8608765
1956	All C.C.-H.T.	w/flange	1	8616220
1957-60	All H.T.	w/flange	1	8617817
1948-56	All H.T. exc. C.C.	BUSHING, reverse center gear	1	8618136
1960	All H.T.	reverse center gear	1	8618136
1953	All P.G.	DRUM ASSY., planet reverse-w/ring gear	1	3721564
1956-60	All C.C.-H.T. (4.128)	RING, flange to rear drum	2	8616015
1953	All P.G.	WASHER, reverse drum thrust	1	3697501
1948-56	All H.T. exc. C.C. (4.129)	center gear backing	1	8617148
1956	All C.C.-H.T. (4.129)	rear unit flange thrust . . (.055"-.059" ident. No. 1)	1	8616570
1956	All C.C.-H.T. (4.129)	 (.060"-.064" ident. No. 2)	1	8616571
1956	All C.C.-H.T. (4.129)	 (.065"-.069" ident. No. 3)	1	8616572
1956	All C.C.-H.T. (4.129)	 (.070"-.074" ident. No. 4)	1	8616573
1956	All C.C.-H.T. (4.129)	 (.075"-.079" ident. No. 5)	1	8616574
1956	All C.C.-H.T. (4.129)	 (.080"-.084" ident. No. 6)	1	8616575
1956	All C.C.-H.T. (4.129)	 (.085"-.089" ident. No. 7)	1	8616576
1956	All C.C.-H.T. (4.129)	 (.090"-.094" ident. No. 8)	1	8616577
1956	All C.C.-H.T. (4.129)	 (.095"-.099" ident. No. 9)	1	8616578

Group 4.192 CARRIER ASSY., TRANS. REVERSE PLANET

1948-50	All H.T.		1	8608186
1951-56	All H.T. exc. C.C.		1	8611960
1956	All C.C.-H.T.		1	8616845
1957-60	All H.T.		1	8618733
1948-60	All H.T. (4.128)	RING, retainer	AR	8606763

Group 4.193 GEAR, TRANS. REVERSE INTERNAL

1948-50	All H.T.		1	8608597
1956-58	All C.C.-H.T.		1	8616843
1959-60	All H.T.		1	8618737
1951-56	All H.T. exc. C.C.	GEAR AND SPRING PKG., reverse internal	1	8615449
1951-56	All H.T. exc. C.C.	BUSHING, reverse internal gear	1	8618128
1956-60	All C.C.-H.T.	reverse internal gear	1	8619938
1948-50	All H.T. (4.128)	RING, gear retaining snap	1	8609602
1956-60	All H.T. (4.129)	WASHER, reverse internal gear to rear pump	1	8618398

Group 4.194 SUPPORT, TRANS. REVERSE INTERNAL GEAR

1948-49	All H.T.		1	8608745
1950	All H.T.		1	8611758

Group 4.195 PAN, TRANS. OIL

1948-54	All H.T.		1	8608630
1955-56	All H.T. exc. C.C.		1	8615416
1956-57	All C.C.-H.T.		1	8617571
1958-59	All H.T.		1	8618792
1960	All H.T.		1	8619210
1948-58	All H.T.	GASKET, drain screw	1	1307237
1948-58	All H.T.	SCREW, with gasket	1	1307238

Group 4.196 GASKET, TRANS. OIL PAN

1948-56	All H.T. exc. C.C.	(10-3/16" x 13-13/32") (12 holes 11/32" dia.)	1	8608910
1956-59	All C.C.-H.T.		1	8616182
1960	All H.T.		1	8619209

Group 4.197 PIPE ASSY., OIL SUPPLY PUMP SUCTION

1953	All P.G.	w/seal and screen	1	3697574
1953	All P.G.	SEAL, pipe (53/64" O.D.)	1	3689919

Group 4.200 PUMP ASSY., TRANS. OIL

1948-54	All H.T.		Rear	1	8615624
1953	All P.G.		Rear	1	3711668
1953	All P.G.		Front	1	3703256
1955-56	All H.T. exc. C.C.		Rear	1	8615329
1956	All C.C.-H.T.	without step in oil groove	Rear	1	8616354
1956-58	All C.C.-H.T.	with step in oil groove		1	8617922
		WASHER (see Group 4.211 for use)			8617452

Group 4.203 COVER-VALVE, TRANS. REAR OIL PUMP

1948-50	All H.T.	COVER, with external tooth type pump	1	8609556
1948-52	All H.T.	with internal tooth type pump	1	8611355
1953-56	All H.T. exc. C.C.		1	8614704
1957-58	All H.T.	VALVE, rear oil pump check	2	8617991
1948-56	All H.T. exc. C.C.	BOLT, rear oil pump cover (1/4"-20x9/16")	4	8614824

Group 4.203 OIL SUPPLY PUMP PARTS

1953	All P.G. (4.408)	BEARING, rear oil pump	1	903205
1953	All P.G.	COVER, front pump-w/shaft	1	3703255
1953	All P.G.	rear pump	1	3719289
1953	All P.G.	GASKET, rear pump (2-1/2" I.D. x 4-7/16" O.D.-7 holes)	1	3719267
1956-58	All C.C.-H.T.	rear pump body to case	1	8618751
1953	All P.G.	PLATE, rear pump bearing lock (1-13/16" I.D.)	1	3694475
1953	All P.G.	SEAL, front pump body oil (2" I.D.)	1	3772748
1953	All P.G.	front pump body "O" ring (4-23/64" I.D.)	1	3689826

Group 4.205 COVER-DIAPHRAGM-SPRING, VACUUM MODULATOR

1953	All P.G.	COVER, diaphragm	1	3692971
1953	All P.G.	DIAPHRAGM, vacuum modulator	1	3709049
1953	All P.G.	SPRING, diaphragm	1	3691669

Group 4.208 HOUSING-GASKET-LEVER-PISTON-PIN, HYD. MODULATOR

1953	All P.G.	HOUSING, modulator	1	3697577
1953	All P.G.	GASKET, modulator housing	1	3692975

1953	All P.G.	LEVER ASSY., modulator control	1	3692968
1953	All P.G.	PISTON, modulator (5/8" O.D. x 5/8" O.L.)	2	3697578
1953	All P.G.	PIN, control lever guide (1/4" x 1-11/32")	1	3692970
1953	All P.G.	control lever fulcrum (3/16" x 2-1/4")	1	424286

Group 4.210 GEAR, TRANS. OIL PUMP AND GOVERNOR DRIVE

1948-56	All H.T. exc. C.C.	reverse unit-bronze	1	8609428
1959-60	All H.T.	trans. governor drive	1	8618752
1959-60	All H.T. (4.128)	RING, governor drive gear	1	8614096

Group 4.211 GEAR PKG., TRANS. OIL PUMP AND GOVERNOR DRIVEN

1948-56	All H.T. exc. C.C.	GEAR AND PIN PKG., rear oil pump	1	8610744
1959-60	All H.T.	GEAR, trans. governor driven	1	8618759
1956-57	All C.C.-H.T. (4.200)	WASHER, rear pump dowel pin retainer	1	8617452

Group 4.212 COVER ASSY., SERVO

1953	All P.G.	COVER	1	3697554
1953	All P.G.	GASKET, servo cover	1	3697556
1953	All P.G.	SLEEVE, servo cover locating (.840 x 5/16")	1	3697516

Group 4.213 BALL-SPRING, REAR OIL PUMP CHECK VALVE

1955-56	All H.T. exc. C.C. . . . (8.899)	BALL (7/16" Dia.)	1	147491
1955-56	All H.T. exc. C.C.	SPRING	1	8615071

Group 4.216 VALVE, TRANS. OIL PRESSURE REGULATOR

1948-51	All H.T.		1	8608611
1952-56	All H.T. exc. C.C.		1	8614378
1956-60	All C.C.-H.T.		1	8616202
1948-49	All H.T.	GASKET, pressure regulator plug	1	8609515
1950	P/8 H.T.	used with D50 trans. (see Note Group 4.003)	1	8611827
1950	P/6 H.T.	used with P50 trans. (see Note Group 4.003)	1	8609515
1951-56	All H.T. exc. C.C.		1	8611827
1950	P/6 H.T.	PLUG ASSY., transmission pressure regulator valve used w/P50 trans. (see Note Group 4.003)	1	8611811
1950	P/8 H.T.	oil pump pressure reg. used with D50 trans. (see Note Group 4.003)	1	8611798
1948-50	All H.T.	PLUGS AND GASKET PKG., use w/8614994 pump pkg. on P9 trans.	1	8614982
1950	All H.T.	use w/8614994 pump pkg. on P50 trans.	1	8614986
1950	P/8 H.T.	use w/8614994 pump pkg. on D50 trans.	1	8614984
1951	P/6 H.T.	consists of 1 press. reg. plug and gasket and 1 rev. booster plug	1	8613692
1951	P/8 H.T.	consists of 1 each-press. reg. plug, gasket and seal- rev. booster plug-throttle valve press. plug	1	8613604
1951	P/8 H.T.	use w/8614996 pump pkg. on D51 trans.	1	8614989
1951	P/6 H.T.	use w/8614996 pump pkg. on P51 trans.	1	8614992
1952-54	All H.T.		1	8614133
1955-56	All H.T. exc. C.C.		1	8614977
1956-60	All C.C.-H.T.		1	8616904

1950	P/8 H.T.	PLUG, oil pump throttle valve pressure used with D50 trans. (see Note Group 4.003)	1	8611802
1950-51	P/8 H.T.	SEAL, pressure reg. plug used with D50, D51 trans. (see Note Group 4.003)	1	8611804
1952-60	All H.T.		1	8611804
1948-49	All H.T.	SPRING, pressure regulator valve	1	8609052
1950	P/6 H.T.	used with P50 trans. (see Note Group 4.003)	1	8609052
1950	P/8 H.T.	used with D50 trans. (see Note Group 4.003) . . Front	1	8611860
1951	P/6 H.T.		1	8613036
1951	P/8 H.T.		1	8611942
1952-56	All H.T. exc. C.C.		1	8615263
1956-60	All C.C.-H.T.	w/P57-P58-P59-PE59-P60 & PE60 trans.	1	8616204
1957-58	All H.T.	w/PA57-PA58 trans.	1	8617968
1957-58	All H.T.	rear pump check valve	2	8617992
1960	All H.T.	pressure regulator-w/PA60 trans.	1	8617968

Group 4.216 BODY ASSY.-VALVE-VALVE PARTS, TRANSMISSION

1953	All P.G.	BODY ASSY., trans. main valve	1	3703298
1953	All P.G.	GASKET, valve spring plug . (11/16" I.D. x 15/16" O.D.)	1	3694419
1953	All P.G.	PLUG, by-pass valve spring (11/16" -16)	1	3692266
1953	All P.G.	RING, clutch low servo valve ret. . . . (11/16" O.D.)	1	3697570
1953	All P.G.	SPRING, lubrication by-pass	1	3691684
1953	All P.G.	pressure regulator valve (5/16" x 1-1/32")	1	3703242
1953	All P.G.	pressure regulator governor valve (3/8" O.D. x 7/8" O.L.)	1	3702609
1953	All P.G.	SPRING UNIT, pressure reg. valve (1 inner, 1 outer)	1	3704240
1953	All P.G.	low and drive valve (1 inner, 1 outer)	1	3704242
1953	All P.G.	THERMOSTAT, lubricating by-pass valve (3-11/16" O.L. w/1 hole 3/16" dia.)	1	3709006
1953	All P.G.	VALVE, pressure regulator (1-1/8" O.L.)	1	3703243
1953	All P.G.	pressure regulator governor (1-1/2" O.L.)	1	3702809
1953	All P.G.	lubrication pressure relief . . (1/8" Pipe hd., 3/4" hex. w/cap 1" O.L.)	1	3702106
1953	All P.G.	front and rear pump check	1	3745376
1953	All P.G.	clutch low servo	1	3751214
1953	All P.G.	manual (6-7/8" O.L.)	1	3693075
1953	All P.G.	VALVE UNIT, pressure reg.-w/plunger	1	3705486

Group 4.217 GASKET, TRANSMISSION VALVE BODY

1953	All P.G.	valve body and case to housing	1	3703282
1953	All P.G.	valve body to case	1	3694448
1953	All P.G.	BOLT, front oil pump to valve body (Hex. hd. 1/4"-20x1-13/16")	5	9409201

Group 4.218 LEVER-SEAL-SPACER, MANUAL VALVE

1953	All P.G.	LEVER ASSY., manual valve inner	1	3697508
1953	All P.G.	SEAL, parking lock lever shaft oil (7/8" O.D.)	1	3689866
1953	All P.G.	SPACER, manual valve lever . . (1/4" thick x 1" O.D.)	1	3689941

Group 4.220 PAWL-SHAFT-SPRING, PARKING LOCK LEVER

1953	All P.G.	PAWL, parking lock	1	3743880
1953	All P.G.	SHAFT, parking lock pawl (5-1/4")	1	3689882
1953	All P.G.	SHAFT ASSY., parking lock-w/lever	1	3709016
1953	All P.G.	SPRING, parking lock lever (3-3/4" long)	1	3694488

Group 4.222 PIPE, TRANS. OIL PUMP INLET (SUCTION)

1948-51	All H.T.	front pump to screen	1	8608738
1952-54	All H.T.	front oil pump inlet suction	1	8613234
1955-56	All H.T. exc. C.C.		1	8615017
1956-57	All C.C.-H.T.	front pump inlet	1	8618208
1956	All C.C.-H.T.	rear pump inlet	1	8616281
1958-59	All H.T.	front pump inlet	1	8619259
1957-58	All C.C.-H.T.	rear pump inlet	1	8618223
1960	All H.T.	front pump inlet	1	8619280
1956	All C.C.-H.T.	PIPE KIT, rear pump inlet	1	8616978
1948-51	All H.T.	PLATE, inlet pipe bolt lock	2	8609531

Group 4.223 GASKET-SEAL, TRANS. OIL PUMP INLET PIPE

1948-51	All H.T.	GASKET, front pump	1	8609490
1952-56	All H.T. exc. C.C.	SEAL, front pump	1	8613199
1956-60	All C.C.-H.T.	front pump-"O" ring (7/8" I.D.)	1	8616279
1956-58	All C.C.-H.T.	rear pump-"O" ring (9/16" I.D.)	1	8616280
1960	All H.T.	rear pump "O" ring (9/16" I.D.)	1	8616280

Group 4.224 SCREEN, TRANS. OIL

1948-51	All H.T.		1	8608654
1952-54	All H.T.		1	8613216
1955-56	All H.T. exc. C.C.		1	8615082
1956-58	All C.C.-H.T.		1	8618209
1959	All H.T.		1	8618773
1960	All H.T.		1	8619214
1959	All H.T.	CLIP, control valve oil screen ret.	1	8618771
1960	All H.T.	oil strainer retaining	1	8619281

Group 4.225 CYLINDER, TRANS. FRONT SERVO BAND RELEASE

1948-51	All H.T.		1	8609492
1952	All H.T.		1	8614073
1953-54	All H.T.		1	8614777
1955-56	All H.T. exc. C.C.		1	8615031
1956	All C.C.-H.T.	COVER, front servo	1	8616638
1957-59	All H.T.	first type 1959 (see note)	1	8617893
1959-60	All H.T.	second type 1959 (see note)	1	8619126
1952	All H.T.	GASKET, front servo	1	8614377
1956-59	All C.C.-H.T.	accumulator-first type 1959 (see note)	1	8617894
1959-60	All H.T.	second type 1959 (see note)	1	8619127

NOTE: Refer to illustration for proper identification of first and second type servo parts.

Group 4.226 BODY, FRONT SERVO

1950-51	All H.T.		1	8611742
1952	All H.T.		1	8614398
1953-54	All H.T.		1	8614833
1955-56	All H.T. exc. C.C.		1	8615019

1956	All C.C.-H.T.		1	8616906
1957	All H.T.		1	8616983
1958	All H.T.	w/P58 trans. (see note 1)	1	8616983
1958	All H.T.	w/P58 trans. (see note 2)	1	8618980
1958	All H.T.	w/PA58 trans.	1	8616983
1959	All H.T.	w/P59 trans.-first type (see note 3)	1	8618980
1959	All H.T.	w/P59 trans.-second type (see note 3)	1	8619910
1959	All H.T.-T420E	w/PE59 trans.-first type (see note 3)	1	8618990
1959	All H.T.	w/PE59 trans.-second type (see note 3)	1	8619909
1960	All H.T.	w/P60 and PE60 trans.	1	8619123
1960	All H.T.	w/PA 60 trans.	1	8619122
1950-54	H.T. (8.899)	BALL, front servo rear pump check	1	453578
1948-60	All H.T. (8.971)	PLUG, front servo body (Hex. Hd. 1/8")	1	444613
1950-51	All H.T.	SEAT, front servo rear pump check valve	1	8611743
1952	All H.T.		1	8614125
1955-56	All H.T. exc. C.C.	SPACER, front servo	1	8615605
1950-54	All H.T.	SPRING, front servo check valve	1	8611744
1956-58	All C.C.-H.T. (4.317)	WASHER, servo body to case . (13/32" I.D.x3/4" O.D.)	3	8616883

NOTE 1: Used thru trans. No. P58-192269.

NOTE 2: Used with trans. No. P58-192270 and up.

NOTE 3: Refer to illustration for proper identification of first and second type servo parts.

Group 4.226 OIL PUMP AND COVER ASSY., TRANS. FRONT

1948-50	All H.T.	PUMP ASSY., trans. front oil (see Note)	1	8614994
1951	All H.T.	(see Note)	1	8614996
1952-56	All H.T. exc. C.C.		1	8613262
1956-60	All C.C.-H.T.		1	8618945
1960	All H.T.	w/AL-60-P trans.-w/aluminum case	1	8619961
1959-60	All H.T. (8.899)	BALL, front pump check valve (1/4" dia.)	1	104918
1956-58	All C.C.-H.T.	BOLT, cover to pump body (Special 5/16"-18x1")	1	8617629
1956-60	All C.C.-H.T.	cover to pump body (3/8"-16x2-7/8")	3	8617658
1960	All H.T.	front pump to body (5/16"-18x1")	1	8617629
1948-51	All H.T.	BUSHING, front oil pump	1	8618161
1952-56	All H.T. exc. C.C.		1	8618137
1956-59	All C.C., H.T.	front pump body	1	8617596
1956-60	All C.C., H.T.	front pump rotor	1	8619933
1956-60	All C.C., H.T.	front pump	1	8619959
1952-56	All H.T. exc. C.C.	GUIDE, front oil pump relief valve	1	8613899
1956-60	All C.C.-H.T.	PIN, torus feed and check valve spring	2	8616539
1948-51	All H.T. (4.127)	RING, cover oil seal	2	8609472
1952-56	All H.T. exc. C.C. (4.127)		1	8613202
1960	All H.T.	oil pump seal-w/AL-60-P trans. (5/16" I.D. x 7/16" O.D.)	1	8619374
1956-60	All C.C.-H.T.	RETAINER, torus feed valve spring	1	8616465
1948-50	All H.T.	SPRING, front oil pump by-pass valve	1	8609517
1951	All H.T.		1	8611822
1952-56	All H.T. exc. C.C.	front oil pump priming Outer	1	8616199
1952-56	All H.T. exc. C.C.	front oil pump priming Inner	1	8616198
1952-54	All H.T.	front oil pump relief valve	1	8613898
1955-56	All H.T. exc. C.C.	front oil pump relief-use w/8614897 valve	1	8614896
1956-60	All C.C.-H.T.	cooler by-pass check valve	1	8616466
1956-60	All C.C.-H.T.	front pump torus feed valve	1	8616467
1956-60	All C.C.-H.T.	SPRING PKG., front oil pump priming	1	8616928
1951	All H.T.	VALVE, front oil pump by-pass	1	8611823
1952-54	All H.T.	front oil pump relief	1	8613900
1955-56	All H.T. exc. C.C.	front oil pump relief-use w/8614896 spg.	1	8614897
1956-60	All C.C.-H.T.	front oil pump torus feed	1	8616468

1948-56	All H.T. exc. C.C.	WASHER, front oil pump locating	1	8609486
1948-51	All H.T.	cover to pump body (1/4")	3	8609514
1951	All H.T.	SCREW AND WASHER PKG., front oil pump	1	8611878
1952-56	All H.T. exc. C.C.		1	8614360

NOTE: See Group 4.216 for pressure regulator pkg. to be used with this pump.

Group 4.227 VALVE, FRONT SERVO OVERRUN CONTROL

1952	All H.T.		1	8614053
1953-54	All H.T.		1	8614793
1955-56	All H.T. exc. C.C.		1	8615026
1953-54	All H.T.	BODY, valve	1	8614884
1955-56	All H.T. exc. C.C.		1	8617026
1952	All H.T.	PIN, control valve	1	8614186
1953-54	All H.T. (4.265)		1	8614136
1955-56	All H.T. exc. C.C.	PLATE, front servo valve body cover	1	8615028
1952	All H.T.	SPRING, control valve	1	8614054
1953-56	All H.T. exc. C.C.		1	8614791

Group 4.228 PISTON, TRANS. FRONT SERVO

1948-51	All H.T.	front band release	1	8609458
1948-51	All H.T.	front band apply	1	8609539
1952	All H.T.		1	8614406
1953-56	All H.T. exc. C.C.	front band release	1	8611849
1953-54	All H.T.	front band apply	1	8614851
1955	All H.T.	front band apply	1	8615032
1956	All H.T. exc. C.C.	front band apply	1	8615570
1956-59	All C.C.-H.T.	front servo-first type 1959 (see note)	1	8616140
1959	All H.T.	front servo-second type (see note)	1	8619235
1956	All C.C.-H.T.	accumulator	1	8616643
1957	All H.T.	accumulator	1	8616836
1958-59	All H.T.	accumulator-first type 1959 (see note)	1	8618521
1959-60	All H.T.	accumulator-second type (see note)	1	8619131
1960	All H.T.	servo	1	8619132

NOTE: Refer to illustration for proper identification of first and second type servo parts.

Group 4.228 PISTON-ROD-RET.-RING-SPRING-WASHER, LOW SERVO

1953	All P.G.	PISTON, trans. low servo (3-15/64" O.D., x15/16" high)	1	3702801
1953	All P.G.	ROD, low servo piston (3-5/8" O.L.)	1	3702802
1953	All P.G.	RETAINER, low servo piston rod	1	3713624
1953	All P.G.	RING, low servo piston (3-1/4" O.D.)	1	3719237
1953	All P.G.	SPRING, low servo piston apply (9/16" I.D., x15/16" O.D., x1-1/4" O.L.)	1	3702805
1953	All P.G.	low servo piston return (31/32" I.D., x17/32" O.D., x2" O.L.)	1	3702804
1953	All P.G.	WASHER, piston apply spring seat (7/8" O.D.)	1	3702807

Group 4.229 RING, TRANS. FRONT SERVO PISTON

1948-51	All H.T.	front band apply-Special gap (3/32" x1-5/16")	1	8611055
1948-52	All H.T.	front band release-special gap (3/32" x1-5/8")	1	8609464
1952	All H.T. (4.127)	front band apply (3/32" x1-3/8")	1	8614062

1953-56	All H.T. exc. C.C. . . . (4.127)	front band apply. (1-7/16"x3/32")	1	8614122
1953-56	All H.T. exc. C.C. . . . (4.127)	front band release (3/32"x1-3/4")	1	8611851
1956-59	All C.C.-H.T. (4.127)	servo piston (3/32"x2-3/4")	1	8616048
1956-60	All C.C.-H.T. (4.127)	accumulator piston (3/32"x2-1/4")	1	8616031
1956	All C.C.-H.T.	SEAL, accumulator piston-rubber Inner	1	8616636

Group 4.230 VALVE-PIN-PLUG-RING-SPRING, TRANS. ACCUMULATOR TRIMMER

1956	All C.C.-H.T.	VALVE, trimmer	1	8616644
1957	All H.T.		1	8617983
1958	All H.T.	w/P58 trans. (see note 1)	1	8617983
1958	All H.T.	w/P58 trans. (see note 2)	1	8618899
1958	All H.T.	w/PA58 trans.	1	8617983
1959	All H.T. exc. T420E	w/P59 trans.	1	8618899
1959-60	All H.T.-T420E	w/PE59 trans.	1	8618896
1960	All H.T.	w/PA 60 trans.	1	8617983
1957	All H.T.	VALVE, throttle valve accumulator	1	8617984
1958	All H.T.	w/P58 trans. (see note 1)	1	8617984
1958	All H.T.	w/P58 trans. (see note 2)	1	8618831
1958	All H.T.	w/PA58 trans.	1	8617984
1959	All H.T. exc. T420E	w/P59 trans.	1	8618831
1959-60	All H.T.-T420E	w/PE59 trans.	1	8618895
1960	All H.T.	throttle valve accumulator-w/PA 60 trans.	1	8617984
1956-59	All H.T.	PIN, trimmer valve retaining spring-first type 1959 (see note 3)	1	8617527
1959-60	All H.T.	accumulator piston-second type (see note 3)	1	8619128
1957	All H.T.	PIN, accumulator plug stop (3/32"x47/64")	1	8617898
1958	All H.T.	w/P58 trans. (see note 1) (3/32"x13/16")	1	8617898
1958	All H.T.	w/P58 trans. (see note 2) (3/32"x13/16")	1	8618877
1958	All H.T.	w/PA58 trans.	1	8617898
1959-60	All H.T.		1	8618877
1956-59	All C.C.-H.T.	PLUG, trimmer valve-first type 1959 (see note 3) . . .	1	8616645
1959-60	All H.T.	trimmer valve-second type (see note 3)	1	8619137
1959-60	All H.T.	RETAINER, accumulator valve plug-second type (see note 3)	1	8619234
1959-60	All H.T. (8.934)	RING, accumulator piston pin retainer . (7/32" type C)	1	9412979
1956	All C.C.-H.T.	SPRING, trimmer valve	1	8616650
1957	All H.T.	accumulator valve-w/PA57 trans. (1/4" O.D.x23/32" long)	1	8618050
1957	All H.T.	accumulator valve-w/P57 trans.	1	8617988
1958	All H.T.	accumulator valve-w/P58 trans. (see note 2)	1	8618832
1958	All H.T.	accumulator valve-w/PA58 trans. (1/4" O.D.x11/16" long)	1	8617985
1959	All H.T.	accumulator valve-w/P59 trans. (21/64" O.D.-8 coils)	1	8618832
1959-60	All H.T.	accumulator valve-w/PE59-PE60 trans.	1	8618897
1960	All H.T.	accumulator valve-w/PA 60 trans.	1	8619041
1960	All H.T.	accumulator valve-w/P 60 trans.	1	8619057

NOTE 1: Used thru trans. No. P58-192269.

NOTE 2: Used with trans. No. P58-192270 and up.

NOTE 3: Refer to illustration for proper identification of first and second type servo parts.

Group 4.233 SPRING, TRANS. FRONT SERVO

1948-51	All H.T.	retracting	1	8609449
1948-51	All H.T.	booster	1	8609474
1952	All H.T.	release	1	8614412
1953-56	All H.T. exc. C.C.	booster	1	8609474
1953	All P.G.	low brake band apply strut guide	1	3694451

1953-56	All H.T. exc. C.C.	retracting	1	8609449
1956-60	All C.C.-H.T.	retracting	1	8618659
1956	All C.C.-H.T.	accumulator. Outer	1	8616649
1956	All C.C.-H.T.	accumulator. Middle	1	8616648
1956	All C.C.-H.T.	accumulator. Inner	1	8616657
1957	All H.T.	servo and accumulator-		
		1st type (1-1/8" O.D.x3-3/4" long)	1	8616851
1957	All H.T.	servo and accumulator-w/PA57 trans.-2nd type-use		
		w/8618596 spacer (1-1/8" O.D.x2-7/8" long)	1	8618598
1958	All H.T.	servo and accumulator-w/P58 trans. (see note 1) . .	1	8618588
1958	All H.T.	servo and accumulator-w/P58 trans.		
		(see note 1) (1-1/8" O.D. x2-7/16" long)	1	8618597
1958	All H.T.	servo and accumulator-w/P58 trans.		
		(see note 2) (1-1/8" O.D.x2-7/8" long)	1	8618598
1958	All H.T.	servo and accumulator-w/PA58		
		trans. (1-1/8" O.D. x2-7/16" long)	1	8618597
1959-60	All H.T.	retracting	1	8618659
1959-60	All H.T.	servo and accumulator (1-1/8" O.D.)	1	8618598
1959	All H.T.-T420E	servo and accumulator-w/PE59 trans.-first type (see		
		note 3)	1	8618598
1959-60	All H.T.	accumulator-w/PE59 trans.-second type (see note 3)	1	8619136
1957	All H.T.	SPACER, servo and accumulator spring (7/8")	1	8618596
1958	All H.T.	w/P58 trans. (see note 1)	1	8618596
1958	All H.T.	w/P58 trans. (see note 2) (41/64")	1	8618857
1958	All H.T.	w/PA58 trans.	1	8618596
1959	All H.T.	w/P59 trans.-first type (see note 3)	1	8618596
1959	All H.T.-T420E	w/PE59 trans.-first type (see note 3)	1	8618857
1953	All P.G.	STRUT ASSY., low brake band apply . . (1-5/8"x1-7/8")	1	3702910
1953	All P.G.	low brake band anchor (1-11/16"x2-1/4")	1	3702911
1959-60	All H.T.	WASHER, accumulator spring retainer-second type (see		
		note 3)	1	8619260

NOTE 1: Used thru trans. No. P58-192269.

NOTE 2: Used with trans. No. P58-192270 and up.

NOTE 3: Refer to illustration for proper identification of first and second type servo parts.

Group 4.234 VALVE, TRANS. FRONT UNIT SERVO DOWNSHIFT

1948-51	All H.T.	4th to 3rd	1	8609116
1952	All H.T.	4th to 3rd	1	8614126
1953-54	All H.T.	4th to 3rd	1	8614792
1955-56	All H.T. exc. C.C.	4th to 3rd	1	8615665
1948-52	All H.T.	RETAINER, front servo 4-3 downshift valve spring . .	1	8613733
1948-51	All H.T.	front servo retracting spring	1	8609545
1953-56	All H.T. exc. C.C.	front servo release spring	1	8619071
1955-56	All H.T. exc. C.C.	SPRING, 4-3 downshift valve	1	8617212
1958	All H.T.	control valve 3-4 shift-w/PA58 trans.	1	8617537

Group 4.236 LEVER, TRANS. SERVO BAND ACTUATING

1948-56	All H.T. exc. C.C.	Rear	1	8609600
---------	----------------------------	------	---	---------

Group 4.237 BEARING PKG., REAR SERVO BAND ACTUATING LEVER

1948-56	All H.T. exc. C.C.	package contains 20 needle roller brgs.	1	7450049
1948-56	All H.T. exc. C.C.	PIN, servo band actuating lever	1	8613172

Group 4.239 BODY, REAR SERVO

1948-59	All H.T.		1	8610748
1951	All H.T.		1	8613269
1952-54	All H.T.		1	8613142
1955-56	All H.T. exc. C.C.		1	8615057
1952-56	All H.T. exc. C.C.	GASKET, servo body to accumulator body	1	8613159

Group 4.241 PISTON AND STEM ASSY., REAR SERVO

1948-56	All H.T. exc. C.C.	accumulator	1	8610751
1948-56	All H.T. exc. C.C.	booster	1	8610752

Group 4.241 PISTON, REVERSE SERVO

1953	All P.G.	PISTON, reverse servo (3-1/4" O.D.)	1	3694462
1953	All P.G. (4.228)	RING, reverse servo piston (3-1/4" O.D.)	1	3719237
1953	All P.G.	ROD, reverse servo piston (3-15/16" long)	1	3691676
1953	All P.G.	RETAINER, piston apply spring (1-5/8" O.D.)	1	3691679
1953	All P.G.	SPRING, piston return (2-5/32" O.D.)	1	3691677
1953	All P.G.	piston apply (1-5/32" I.D.)	1	3691678
1953	All P.G.	KEY, piston spring (1/8" thick)	2	3691680

Group 4.242 RING, TRANS. REAR SERVO PISTON

1948-56	All H.T. exc. C.C. (4.127)	accumulator-special gap (3/32"x2-3/8")	1	8611581
1948-56	All H.T. exc. C.C.	booster, small-special gap (3/32"x1-11/16")	1	8609446
1948-56	All H.T. exc. C.C.	booster, large-special gap (3/32"x2-1/4")	1	8609445
1948-51	All H.T.	compensator-special gap (3/32"x1-1/4")	1	8609452
1956	All H.T. exc. C.C.	compensator-special gap (3/32"x1-1/4")	1	8609452

Group 4.244 PISTON AND SPRING PKG., REAR SERVO COMPENSATOR

1948-56	All H.T. exc. C.C.		1	8613764
---------	----------------------------	--	---	---------

Group 4.246 SPRING, TRANS. REAR SERVO

1948-56	All H.T. exc. C.C.	accumulator piston apply (5/8" dia.)	1	8609061
1948-56	All H.T. exc. C.C.	servo main (1-29/32" dia.)	1	8611794
1948-51	All H.T.	servo inner (5/8" dia.)	1	8609479
1948-51	All H.T.	servo outer	1	8610339
1948-56	All H.T. exc. C.C.	servo booster piston (1-5/16" dia.)	1	8609480
1952	All H.T.	rear servo compensator Inner	1	8614184

Group 4.246 ANCHOR-LEVER-LINK-LOCK-PIN, REVERSE BRAKE BAND

1953	All P.G.	ANCHOR, reverse band	1	3691027
1953	All P.G.	LEVER, reverse band	1	3769625
1953	All P.G.	LINK, reverse band	1	3756726
1953	All P.G. (5.030)	LOCK, reverse band	2	475508
1953	All P.G.	PIN, reverse band lever (1-61/64" long)	1	3754795

Group 4.247 RETAINER, TRANS. REAR SERVO SPRING

1948-56	All H.T. exc. C.C.	1	8609470
---------	--------------------	---	---------

Group 4.248 OIL PIPES, TRANSMISSION

1950-51	All H.T.	rear oil pump discharge	1	8611770
1948-54	All H.T.	front oil pump to front servo	1	8609507
1948-54	All H.T.	oil transfer, front to rear servo	1	8609459
1948-51	All H.T.	governor oil delivery (3-1/2")	3	8609435
1951-56	All H.T. exc. C.C.	reverse clutch	1	8611963
1951	All H.T.	pressure regulator reverse	1	8611922
1952	All H.T.	pressure regulator reverse	1	8614175
1952-56	All H.T. exc. C.C.	governor oil delivery	2	8609435
1952	All H.T.	governor oil delivery	1	8614038
1952-54	All H.T.	rear oil pump discharge	1	8614128
1953-54	All H.T.	governor oil delivery	1	8614789
1953-56	All H.T. exc. C.C.	pressure reg. reverse	1	8614817
1955-56	All H.T. exc. C.C.	front oil pump delivery	1	8615016
1955-56	All H.T. exc. C.C.	rear servo compensating	1	8615059
1955-56	All H.T. exc. C.C.	rear oil pump discharge	1	8615077
1955-56	All H.T. exc. C.C.	CLIP, rear oil pump discharge pipe ret.-spring type	1	8617023
1956-59	All C.C.-H.T.	front pump intake pipe-for use w/8618465 pipe (1" long tab)	1	8616561
1959	All H.T.	front pump intake pipe-for use w/8619259 pipe (5/8" long tab)	1	8619261
1960	All H.T.	front pump intake pipe	1	8619095
1955-56	All H.T. exc. C.C.	RETAINER, front servo intake pipe	1	8615556
1948-60	All H.T. (8.971)	PLUG, torus cover (Hex. Hd. 1/8")	1	444613

Group 4.250 ACCUMULATOR BODY, TRANS. REAR SERVO UNIT

1948-50	All H.T.		1	8610749
1951	All H.T.		1	8613158
1952	All H.T.		1	8614044
1953-56	All H.T. exc. C.C.		1	8614856
1948-51	All H.T.	CHECK VALVE PKG., includes rivet	1	8610745
1952	All H.T.		1	8613949
1953-56	All H.T. exc. C.C.		1	8614877
1948-52	All H.T.	PLUNGER, check valve	1	8609619
1953-56	All H.T. exc. C.C.		1	8614859
1952	All H.T.	SPRING, rear servo exhaust valve	1	8611715
1953-56	All H.T. exc. C.C.		1	8614858
1952	All H.T.	VALVE, rear servo exhaust	1	8611842
1953-56	All H.T. exc. C.C.		1	8614886

Group 4.251 BAND AND LINING, TRANS.

1948-54	All H.T.		Front	1	8615224
1948-51	All H.T.	also use 8615089 spring	Rear	1	8607477
1952-56	All H.T. exc. C.C.		Rear	1	8619032
1953	All P.G.	low and reverse brake		1	5459234
1955-56	All H.T. exc. C.C.		Front	1	8615039
1956-60	All C.C.-H.T.		Rear	1	8616092

Group 4.252 SPRING, TRANS. REAR DRUM BAND

1948-56	All H.T. exc. C.C.	rear band release	1	8615089
1955-56	All H.T. exc. C.C.	front band adj. stop screw lock	1	8615239

Group 4.253 COVER-NUT-SCREW, TRANS. BAND ADJUSTING

1953	All P.G.	COVER, low band adj. screw (1-3/16" O.D. x 3/4" deep)	1	3689839
1953	All P.G.	NUT, low and reverse band adj. screw . . . (1/2"-16)	2	3689846
1955-56	All H.T. exc. C.C.	front band adj. stop screw . (7/16"-20x57/64" spec.)	1	8615034
1948-54	All H.T.	SCREW, band adj. stop . . . (1/2"-20x2-29/64" spec.)	2	8609584
1953	All P.G.	low and reverse band adj. . (1/2"-16x2-7/32" long)	2	3697509
1955-56	All H.T. exc. C.C.	front band adj. stop . . . (7/16"-20x1-45/64" spec.)	1	8615037
1955-56	All H.T. exc. C.C.	rear band adj. stop (1/2"-20x2-29/64" Spec.)	1	8609584

Group 4.255 SLEEVE, TRANS. GOVERNOR OIL DELIVERY

1948-50	All H.T.	PLUG	1	8609436
1948-50	All H.T.	PLUG	1	8608657

Group 4.256 GOVERNOR ASSY., TRANSMISSION

1948-51	All H.T.	COVER, trans. governor	1	8614425
1952-56	All H.T. exc. C.C.	COVER, trans. governor	1	8615062
1953	All P.G.	COVER, trans. governor	1	3717077
1956-57	All C.C.-H.T.	COVER, trans. governor	1	8618400
1958	All H.T.	w/P58 trans.	1	8618400
1958	All H.T.	w/PA58 trans.	1	8618401
1959	All H.T.	COVER, trans. governor	1	8619950
1960	All H.T.	w/P60 & AL-P trans.	1	8619950
1960	All H.T.	w/PA60 trans.-less driven gear	1	8619958
1960	All H.T.	w/PE 60 trans.	1	8619968
1953	All P.G.	COVER, trans. governor	1	3713600
1956-58	All C.C.-H.T.	COVER, trans. governor	1	8616352
1959-60	All H.T.	COVER, trans. governor	1	8618758
1953	All P.G.	GASKET, governor cover	1	3702696
1953	All P.G.	GEAR UNIT, w/3 pins	1	3705357
1956-58	All C.C.-H.T.	KEY, rear pump governor drive	1	8616501
1959-60	All H.T.	governor drive	1	8618839
1953	All P.G.	PIN, governor weight (.090" dia. x 1-5/8")	2	3702148
1953	All P.G. (4.256)	governor driven gear ret. (5/32"x3/4")	1	455346
1959-60	All H.T.	governor bushing set	1	8618808
1948-51	All H.T.	PLUNGER AND BUSHING ASSY., G-2 governor	1	8610740
1948-60	All H.T. (4.127)	RING, governor sleeve oil sleeve . . (3/32"x1-3/4")	4	8609440
1953	All P.G. (4.123)	STOP, governor plunger (1" O.D.)	3	3689838
1948-51	All H.T.	STOP, governor plunger	2	8609441
1952	All H.T.	STOP, governor plunger	1	8609441
1952	All H.T.	STOP, governor plunger	1	8614048
1959-60	All H.T.	WASHER, trans. G-2 bushing	1	8618761

Group 4.259 FLANGE, REAR OIL PUMP GOVERNOR DRIVE

1948-54	All H.T.	FLANGE AND PIN PKG.	1	8607755
---------	------------------	-----------------------------	---	---------

Group 4.265 VALVE BODY, TRANS. OIL CONTROL

1948-49	All H.T.	Inner	1	8610750
1948-49	All H.T.	Outer	1	8611598
1950	P/6 H.T.	VALVE ASSY., control used w/P50 trans. (see note Group 4.003)	1	8611832
1950	P/8 H.T.	used with D50 trans. (see Note Group 4.003)	1	8611672
1951	P/6 H.T.		1	8613066
1951	P/8 H.T.		1	8611927
1952	All H.T.		1	8614129
1953-54	All H.T.		1	8615354
1955	All H.T.		1	8615661
1956	All H.T. exc. C.C.		1	8617333
1956-57	All C.C.-H.T. (8.899)	BALL, control valve (1/8")	1	169064
1951	All H.T.	BODY ASSY., front servo exhaust	1	8613914
1953	All P.G.	low and drive valve	1	3704238
1956-59	All C.C.-H.T.	control valve reverse blocker	1	8616984
1956	All C.C.-H.T.	manual valve	1	8616921
1956	All C.C.-H.T.	overrun clutch valve (see Note 4)	1	8616901
1956	All C.C.-H.T.	overrun clutch valve	1	8616955
1956	All C.C.-H.T.	shift valve (see Note 4)	1	8616920
1956	All C.C.-H.T.	shift valve (see Note 5)	1	8616965
1957-58	All H.T.	manual valve-less TV adj. screw and element	1	8618914
1957	All H.T.	overrun clutch valve-w/P57 trans.-use w/8618224 channel plate	1	8618910
1957	All H.T.	overrun clutch valve-w/P57 trans.-use w/8618195 channel plate	1	8618934
1957	All H.T.	overrun clutch valve-w/PA57 trans.-use w/8618224 channel plate	1	8618907
1957	All H.T.	overrun clutch valve-w/PA57 trans.-use w/8618195 channel plate	1	8618932
1957	All H.T.	shift valve-less 1/4" ball check-w/P57 trans.	1	8618928
1957	All H.T.	shift valve-w/PA57 trans.	1	8618930
1958	All H.T.	manual valve-w/TV adj. screw and element	1	8618961
1958	All H.T.	shift valve-w/P58 trans. (see Note 10)	1	8618952
1958	All H.T.	shift valve-w/P58 trans. (see Note 11)	1	8618983
1958	All H.T.	shift valve-w/PA58 trans.	1	8618951
1958	All H.T.	overrun clutch valve-w/P58 trans. (see Note 6)	1	8618957
1958	All H.T.	overrun clutch valve-w/P58 trans. (see Note 7)	1	8618965
1958	All H.T.	overrun clutch valve-w/P58 trans. (see Note 11)	1	8618984
1958	All H.T.	overrun clutch valve-w/PA58 trans. (see Note 8)	1	8618955
1958	All H.T.	overrun clutch valve-w/PA58 trans. (see Note 9)	1	8618966
1959	All H.T.	clutch valve	1	8618986
1959	All H.T.	manual valve	1	8618988
1959	All H.T.	shift valve-w/P59 trans.	1	8618995
1959	All H.T.-T420E	shift valve-w/PE59 trans.	1	8619900
1960	All H.T.	clutch control-w/P60 and PE60 trans.	1	8619929
1960	All H.T.	clutch control-w/PA 60 trans.	1	8619955
1960	All H.T.	manual control-w/P60 and PA60 trans.	1	8619926
1960	All H.T.	manual control-w/PE60 trans.	1	8619960
1960	All H.T.	shift control-w/PA60 trans.	1	8619957
1960	All H.T. exc. T425E	shift control-w/P60 trans.	1	8619922
1960	All H.T.-T425E	shift control-w/PE60 trans.	1	8619923
1960	All H.T.	BOLT, detent spring to case	1	8619377
1953	All P.G.	CAP, low and drive regulator valve (31/32" O.D.)	1	3702118
1958-60	All H.T.	CLIP, control valve thermo, TV element	1	8618564
1960	All H.T.-3/2 B.C.	CONVERSION PKG., trans. (see note 12)	1	8619490
1956	All C.C.-H.T.	COVER, control valve regulator body	1	8616415
1957-59	All H.T.		1	8617912
1960	All H.T.	control valve regulator valve body	1	8619181
1959	All H.T.	MODIFICATION KIT, control valve	1	8619905
1952-56	All H.T. exc. C.C.	PIN, timing valve plug retainer	1	8614136

1953	All P.G.	detent valve stop (3/16"x1/2")	1	455160
1956-58	All C.C.-H.T.	throttle valve plug retainer	1	8617501
1948-49	All H.T.	PLATE, valve body spacer	1	8609423
1953	All P.G.	clutch exhaust cover (2-1/4" O.L.)	1	3697597
1953	All P.G.	low and drive valve body end	1	3703052
1956	All C.C.-H.T.	control valve channel	1	8616368
1956-58	All C.C.-H.T.	clutch valve body (long-4 holes) Front	1	8616419
1956-57	All C.C.-H.T.	clutch valve body Rear	1	8616420
1956	All C.C.-H.T.	regulator valve body	1	8616277
1956-59	All C.C.-H.T.	shift valve body	1	8616273
1957	All H.T.	control valve channel-use w/8618907 and 8618910 valve body	1	8618224
1957	All H.T.	control valve channel-use w/8618932 and 8618934 valve body	1	8618195
1957-59	All H.T.	regulator valve body	1	8617911
1958-60	All H.T.	clutch valve body (short-3 holes) Front	1	8618880
1958-59	All H.T.	clutch valve body Rear	1	8618487
1958	All H.T.	control valve channel	1	8618566
1959	All H.T.	control valve channel	1	8618786
1960	All H.T.	control valve channel	1	8619183
1960	All H.T.	clutch valve body Rear	1	8619184
1960	All H.T.	regulator valve body	1	8619185
1960	All H.T.	shift valve body	1	8619186
1951-56	All H.T. exc. C.C.	PLUNGER, manual control valve detent	1	8611995
1956-59	All C.C.-H.T.		1	8616417
1956-57	All C.C.-H.T.	REPAIR KIT, control valve body	1	8616949
1948-49	All H.T.	RETAINER, manual valve detent ball	1	8611595
1951	All H.T.	manual valve detent plunger	1	8614426
1955-56	All H.T. exc. C.C.	control valve detent plunger	1	8617151
1956-59	All C.C.-H.T.	detent plunger shaft spring	1	8616557
1952-56	All H.T. exc. C.C.	RETAINER AND LEVER PKG., detent	1	8617136
1953	All P.G.	RING, low and drive reg. valve cap ret.	1	274400
1960	All H.T.	ROLLER AND SPRING ASSY., manual valve	1	8619104
1953	All P.G.	SCREW, low and drive valve end plate- w/washer (10-24x1/2")	3	3702868
1956-57	All C.C.-H.T. (8.907)	shift valve body to channel plate- w/washer (No. 10-24x2")	1	274073
1956-58	All C.C.-H.T.	manual valve body (No. 10-24 x 15/32")	1	8617373
1959	All H.T.	manual control valve body	1	8618853
1953	All P.G.	SLEEVE, low and drive reg. valve (1" x 1-5/16")	1	3702607
1956	All C.C.-H.T.	SPACER, channel plate to body	1	8617754
1956	All C.C.-H.T.	channel plate to case	1	8616683
1957	All H.T.	channel plate to body-w/square notch in corner	1	8617954
1957	All H.T.	channel plate to body-w/V notch in corner	1	8618190
1957	All H.T.	channel plate to case	1	8618170
1958	All H.T.	channel plate to body-w/P58 trans. (see Note 10)	1	8618573
1958	All H.T.	channel plate to body-w/P58 trans. (see Note 11)	1	8618879
1958	All H.T.	channel plate to body-w/PA58 trans.	1	8618573
1958	All H.T.	channel plate to case	1	8618561
1959	All H.T.	channel plate to case	1	8618789
1959	All H.T.	channel plate to valve body	1	8618879
1960	All H.T.	channel plate to case	1	8619188
1960	All H.T.	channel plate to valve body	1	8619190
1948-50	All H.T.	SPRING, manual valve detent	1	8611662
1951-56	All H.T. exc. C.C.		1	8611991
1951	All H.T.	reverse exhaust valve	1	8613839
1956-58	All C.C.-H.T.	detent plunger	1	8616558
1956	All C.C.-H.T.	3-4 coupling check valve	1	8613839
1958	All H.T.	3-4 TV valve-w/P58 trans.	1	8618845
1959	All H.T.	control valve detent plunger	1	8619054
1959	All H.T.	3-4 TV valve	1	8618845
1956	All C.C.-H.T.	SPRING KIT, valve body	1	8616966
1953	All P.G.	SPRING UNIT, throttle control valve (see Note 1)	1	3704360

1956-59	All C.C.H.T.	STOP, control valve throttle valve	1	8617651
1958	All H.T.	THERMOSTAT ASSY., trans. coupling fill	1	8618551
1959-60	All H.T.		1	8618790
1948-50	All H.T.	VALVE, manual control	1	8609593
1951	All H.T.		1	8611974
1952-56	All H.T. exc. C.C.		1	8614164
1956-60	All C.C.-H.T.		1	8616258
1953-56	All H.T. exc. C.C.	by-pass	1	8614814
1956-58	All C.C.-H.T.	by-pass	1	8616542
1957-60	All H.T.	neutral regulator by-pass	1	8617913
1953	All P.G.	low and drive regulator	1	3702606
1953	All P.G.	low and drive (identified by raised ring)	1	3703285
1953	All P.B.	low and drive (+6 on end of valve) (0.006" O.S.)	1	3703269
1959-60	All H.T.	VALVE, governor boost-G-5	1	8618192
1953	All P.G.	VALVE UNIT, clutch exhaust primary and secondary control (▲■)	1	3704361
1953	All P.G.	throttle and detent (▲★)	1	3704359
▲NOTE: Consists of 2 pins, 1 each of following valve springs: clutch exhaust, primary and secondary control, throttle and detent.				
▲■NOTE: Consists of 1 primary valve, 1 secondary valve, 2 springs and 2 pins.				
▲★NOTE: Consists of 1 throttle valve, 1 detent valve, 2 springs, 1 regulator and 1 washer.				
■NOTE: Used on 1956 models thru trans. No. P56-170202.				
■▲NOTE: Used with trans. No. P56-170203 and up.				
■★NOTE: Used thru trans. No. 30275				
★NOTE: Used with trans. No. 30276 thru 192269.				
★▲NOTE: Used thru trans. No. 1501.				
★■NOTE: Used with trans. No. 1502 and up.				
▲■NOTE: Used thru trans. No. P58-192269.				
■★NOTE: Used with trans. No. P58-192270 and up.				
★▲NOTE: Use for converting a model P trans. to a model PA trans.				

Group 4.278 LEVER AND SHAFT, THROTTLE VALVE

1948-54	All H.T.	Inside	1	8609591
1955-56	All H.T. exc. C.C.	Inside	1	8617071
1956-59	All C.C.-H.T.	Inside	1	8617585
1953	All P.G.	LEVER ASSY., throttle control Outer	1	5844424
1953	All P.G.	throttle valve	1	3709012
1960	All H.T.	Inside	1	8619159
1948-56	All H.T. exc. C.C. (8.940)	PIN, manual control valve shaft (Grooved 1/16"x1/2")	AR	455478
1953	All P.G.	SEAL, lever shaft (3/8" I.D.x9/16"x3/32" thk.)	1	3702648
1953	All P.G.	SHIELD, lever shaft seal	1	3702701

Group 4.279 LEVER ASSY., TRANS. CONTROL VALVE

1948-50	All H.T.	inside detent	1	8611266
1951	All H.T.	inside detent	1	8611999
1952-56	All H.T. exc. C.C.	inside detent	1	8614134
1956-59	All C.C.-H.T.	inside detent	1	8616240
1960	All H.T.	Inside	1	8619153

Group 4.282 PIN-SEAL AND WASHER PKG., INNER CONTROL LEVER

1948-56	All H.T. exc. C.C.		1	8615193
1960	All H.T.	SCREW, inside detent control lever	1	8619376

1956-60	All C.C.-H.T. (4.223)	SEAL, manual shaft (9/16" I.D.)	1	8616280
1960	All H.T.	throttle shaft	1	8615481
1948-56	All H.T. exc. C.C.	SEAL AND WASHER PKG., manual control shaft-		
		consists of seal, inner and outer washer	1	8610731
1956-59	All C.C.-H.T.	inner control levers	1	8616907
1956-59	All C.C.-H.T.	WASHER, case to detent plate-special	1	8616450
1958	All H.T.	inner control lever-flat	1	8609585
1960	All H.T.	manual lever seal	1	8619320

Group 4.286 LEVER, TRANS. THROTTLE CONTROL

1948-54	All H.T.	Outer	1	8611315
1955-56	All H.T.-2 B.C.-4 B.C. exc. C.C.	Outer	1	520694
1956-57	All C.C.-H.T. exc. 2/4 B.C. & F.I.	Outer	1	524496
1956	All H.T.-2/4 B.C. exc. C.C.	Outer	1	522229
1956	All C.C.-H.T.-2/4 B.C.	Outer	1	521523
1957	All H.T.-F.I.	Outer	1	528593
1958	All H.T.-F.I.	Outer	1	530495
1958	All H.T. exc. F.I.	Outer	1	529785
1959	All H.T.	Outer	1	533624
1960	All H.T.	Outer	1	8619467
1955-57	All	SCREW, trans. throttle control outer lever clamp (Spec. 1/4"-28x1-1/8")	1	521151

Group 4.290 TRANS. REVERSE BLOCKER PARTS

1948-50	All H.T.	PISTON	1	8611768
1951-56	All H.T. exc. C.C.		1	8613177
1956-59	All C.C.-H.T.		1	8616272
1960	All H.T.	reverse blocker	1	8619237
1948-51	All H.T.	BRACKET AND CRANK	1	8611760
1951-56	All H.T. exc. C.C.	PIN, reverse blocker piston stop	1	8613173
1956-59	All C.C.-H.T.	retaining	1	8616421
1960	All H.T.	reverse blocker retaining	1	8619442
1951-56	All H.T. exc. C.C.	SPRING, trans. reverse blocker piston	1	8613086
1956-59	All C.C.-H.T.	control valve reverse blocker	1	8616191
1960	All H.T.	reverse blocker	1	8619382

Group 4.290 TRANS. PARKING BRAKE PARTS

1951	All H.T.	BRACKET ASSY.	1	8613506
1952-56	All H.T. exc. C.C.		1	8614077
1956	All C.C.-H.T.		1	8616184
1957-59	All H.T.		1	8618967
1960	All H.T.		1	8619286
1956-57	All C.C.-H.T.	LEVER ASSY., trans. parking brake	1	8616183
1958-59	All H.T.		1	8618422
1960	All H.T.		1	8619142
1956-57	All C.C.-H.T.	LINK, trans. parking brake	2	8616888
1958-60	All H.T.		2	8618425
1952-56	All H.T. exc. C.C. . . . (8.939)	PIN, parking blocker piston	1	103679
1956-57	All C.C.-H.T.	parking brake clevis (3/8" x 3/4")	3	8616136
1958-59	All H.T.	parking brake link clevis (9/32" x 21/32")	1	8618428
1958-59	All H.T.	parking brake pawl clevis (9/32" x 1")	1	8618427

1960	All H.T.	parking brake link clevis	1	8619147
1960	All H.T.	parking brake pawl clevis	1	8619146
1951	All H.T.	PISTON, parking blocker	1	8611982
1952-56	All H.T. exc. C.C.	RETAINER, parking blocker piston pin	1	8614080
1952-56	All H.T. exc. C.C.	parking brake bracket	1	8614082
1956-59	All C.C.-H.T.	SPACER, parking brake bracket	1	8616885
1956-57	All C.C.-H.T.	SPRING, parking blocker piston release	1	8616185
1951	All H.T.	SPRING, parking blocker piston release	1	8613811
1952-56	All H.T. exc. C.C.	SPRING, parking blocker piston release	1	8614081

Group 4.293 ROLLER, TRANS. REVERSE SHIFTER CRANK

1948-56	All H.T. exc. C.C.	ROLLER, trans. reverse shifter crank	1	8609594
---------	----------------------------	--	---	---------

Group 4.294 ANCHOR, TRANS. REVERSE

1948-50	All H.T.	ANCHOR, trans. reverse	1	8609761
1951-56	All H.T. exc. C.C.	trans. parking brake	1	8611929
1956-57	All C.C.-H.T.	trans. parking brake	1	8616143
1958-60	All H.T.	PAWL, trans. parking brake	1	8619144
1948-50	All H.T.	BOLT, reverse anchor support	1	8608996
1951-56	All H.T. exc. C.C.	trans. parking brake pawl support	1	8611961
1948-56	All H.T. exc. C.C.	LOCK, reverse anchor support bolt	1	8609022
1960	All H.T.	PIN, parking brake pawl	1	8619149
1956-59	All C.C.-H.T.	SHAFT, parking brake anchor pivot	1	8616171
1956-59	All C.C.-H.T.	SPACER, parking brake anchor pivot shaft	1	8616164
1960	All H.T.	parking brake pawl	1	8619151

Group 4.295 SPRING, TRANS. REVERSE ANCHOR RETRACTING

1948-50	All H.T.	SPRING, trans. reverse anchor retracting	1	8609130
1951-56	All H.T. exc. C.C.	trans. parking brake anchor return	1	8613179
1956	All C.C.-H.T.	trans. parking brake lever	1	8616186
1957-59	All H.T.	trans. parking brake lever	1	8617881
1960	All H.T.	trans. parking brake lever	1	8619152

Group 4.301 SHAFT, TRANSMISSION SELECTOR SHIFT

1940-54	All S.T.	SHAFT, transmission selector shift	1	1312989
1955	All L.H.D., S.T.	SHAFT, transmission selector shift	1	1166449
1956-57	All L.H.D., S.T.	SHAFT, transmission selector shift	1	1308494

Group 4.302 LEVER, TRANSMISSION SHIFT SELECTOR INNER

1940-55	All S.T.	shaft and lever	1	1330676
1956-57	All S.T.	shaft and lever	1	1312622
1958-60	All S.T. taxi, police & H.D.C.	second and third	1	3709343
1958-60	All S.T. taxi, police & H.D.C.	first and reverse	1	3709344
1960	All 4 SPD.-S.T.	first and second shifter	1	3744962
1960	All 4 SPD.-S.T.	third and fourth shifter	1	3744963
1960	All 4 SPD.-S.T.	reverse shifter	1	3772568
1940-57	All S.T.	SEAL, selector lever shaft oil	1	1166286
1940-57	All S.T.	WASHER, selector lever shaft oil seal, plain (Spec. 25/64" I.D. x 9/16" O.D.)	1	1312581
1940-57	All S.T. (8.928)	spring type (25/64" I.D. x 3/4" O.D.)	1	402547

Group 4.303 FORK-YOKE, GEARSHIFT SECOND AND HIGH SHIFT

1939-55	All S.T.	FORK	1	1307865
1958-60	All S.T. exc. taxi, police & H.D.C.		1	3785217
1958-60	All S.T. taxi, police & H.D.C.		1	3709307
1960	All 4 SPD.-S.T.	first and second-third and fourth	2	3746272
1960	All 4 SPD.-S.T.	reverse	1	3743478
1956-57	All S.T.	YOKE, second and third shifter	1	1162293
		FORK (see Group 4.304 for use)		3709308

Group 4.304 FORK-YOKE, GEARSHIFT LOW AND REVERSE SHIFT

1939-55	All S.T.	FORK	1	1307864
1958-60	All S.T. exc. taxi, police & H.D.C.		1	3731918
1958-60	All S.T. exc. taxi, police & H.D.C. (4.303)		1	3709308
1956-57	All S.T.	YOKE, first and reverse shifter	1	1317457

Group 4.309 SHAFT, TRANSMISSION LOW AND REVERSE SHIFT

1940-55	All S.T.	 (7-3/16" long)	1	1312407
1956-57	All S.T.	 (8-13/16" long)	1	1314508
1958	All S.T. exc. taxi, police & H.D.C.	with plate and 15/16" long sleeve	1	3741350
1959	All S.T. exc. H.D.		1	3755879
1940-55	All S.T.	SHAFT, transmission second and high shift (6-17/32" long)	1	1334187
1956-57	All S.T.	 (6-5/32" long)	1	1334188
1958	All S.T. exc. taxi, police & H.D.C.	with plate and 1-1/2" long sleeve	1	3741354
1960	All S.T. exc. taxi-police & H.D.C.	first and reverse	1	3741350
1959-60	23, 25, 27 All S.T. exc. H.D.	second and third-w/plate	1	3780653

Group 4.311 SPRING, TRANSMISSION SHIFT FORK POPPET

1939-40	All		2	1314658
1941-55	All S.T.		2	1320299
1956-57	All S.T.		2	1314658
1958-60	All S.T. taxi, police & H.D.C.	shift lever poppet ball (13/16" O.L.-7 active coils)	1	3709310
1958-60	All S.T. exc. taxi, police & H.D.C.	trans. cam detent (1-1/8" long-14 coils)	1	3737068
1960	All 4 SPD.-S.T.	detent ball	AR	3709310
1960	All 4 SPD.-S.T.	reverse detent ball	1	3773017
1932-57	All S.T. (8.899)	BALL transmission shift shaft, steel (3/8" dia.)	2	453593
1958-60	All 3 SPD.-S.T. taxi, police & H.D.C. (8.899)		2	453593
1960	All 4 SPD.-S.T. (8.899)	trans. detent	3	453593
1958-60	All S.T. exc. taxi, police & H.D.C.	CAM trans, first and reverse detent (one 1/4" hole)	1	3731914
1958-60	All S.T. exc. taxi, police & H.D.C.	trans. second and third detent	1	3750558
1958-60	All S.T. exc. taxi, police & H.D.C. (8.934)	RING, trans. cam detent retainer	1	274612
1958-60	All S.T. exc. taxi, police & H.D.C.	SHAFT, trans. cam detent (5/8" O.L.)	1	3731912

Group 4.312 RING-ROLLER-SCREW-WASHER, TRANSMISSION SHIFT FORK

1935-57	All exc. 1935 Type A, S.T. . .	SCREW, headless cone point . . (Spec. 3/8"-24 x 3/4")	4	1301275
1958-60	All S.T. exc. taxi, police & H.D.C. (8.934)	RING, shift fork retaining	2	274611
1958-60	All S.T. exc. taxi, police & H.D.C.	ROLLER, shift fork	2	3731920
1958-60	All S.T. exc. taxi, police & H.D.C.	WASHER, shift fork shaft . . (3/16" I.D. x 5/8" O.D. x 1/32" thick)	2	3731921

Group 4.313 SEAL, SELECTOR SHAFT

1939-57	All S.T.	transmission end	1	1310194
---------	--------------------	----------------------------	---	---------

Group 4.314 LEVER, TRANSMISSION SELECTOR SHAFT SHIFT

1939-55	All S.T.	second and high	1	1308074
1956-57	All S.T.	second and high	1	1313280

Group 4.315 LEVER, TRANSMISSION SELECTOR SHAFT SHIFT

1939-55	All S.T.	low and reverse	1	1308073
1956	All S.T.	low and reverse	1	1312615
1957	All L.H.D., S.T.		1	1312615

Group 4.317 RETAINER, TRANSMISSION REAR BEARING

1948-49	All H.T.		1	8608768
1950	All H.T.		1	8611756
1949-54	All S.T.		1	1336377
1951-55	All H.T.		1	8611994
1955	All S.T.		1	1166528
1956-57	All S.T.		1	1170639
1956	All H.T. exc. C.C.		1	8617234
1956-58	All C.C.-H.T.		1	8616307
1958	All S.T. exc. taxi, police & H.D.C.		1	3741455
1958-60	All S.T. taxi, police & H.D.C.		1	3719075
1959-60	All S.T. exc. taxi, police & H.D.		1	3741455
1959	All H.T.		1	8618764
1960	All 4 SPD.-S.T.		1	3771770
1960	All 4 SPD.-S.T.	EXTENSION ASSY., trans.	1	3771958
1960	All H.T.	RETAINER AND PLUG PKG.	1	8619916
1953	All P.G. (4.203)	SEAL, rear brg. supt. to case	1	3689826
1953	All P.G.	SUPPORT ASSY., rear bearing	1	3706147
1960	All 4 SPD.-S.T.	BOLT, rear bearing retainer	1	3774911
1948-50	All H.T.	WASHER, trans. rear brg. ret. to support (3/8")	4	1456254
1956-57	All C.C.-H.T.	rear bearing retainer to case (13/32" I.D. x 3/4" O.D.)	8	8616883

Group 4.318 GASKET-SEAL, TRANSMISSION REAR BEARING RETAINER

1939-54	All S.T.	GASKET	1	1316970
1948-50	All H.T.		1	8608488

1951-56	All H.T. exc. C.C.	rear extension housing to pump body	1	8611998
1955	All S.T.		1	1166445
1956-57	All S.T.		1	1170719
1956	All C.C.-H.T.		1	8616348
1958-60	All S.T. exc. taxi, police & H.D.C.	rear extension (5 holes 15/32" I.D.)	1	3707172
1958-60	All S.T. taxi, police & H.D.C.	(5 holes 9/16" I.D.)	1	3709321
1957-60	All H.T.	rear bearing ret. to reverse clutch	1	8618769
1960	All 4 SPD.-S.T.	Front	1	3787721
1960	All 4 SPD.-S.T.	Rear	1	3787720
1939-54	All S.T.	SEAL, transmission rear bearing retainer oil	1	502568
1948-50	All H.T.	trans. rev. unit rear brg. oil	1	1314707
1951-55	All H.T.		1	3746212
1953	All P.G.	rear bearing oil	1	3706126
1955-57	All S.T.		1	520282
1956-60	All H.T.		1	8618702
1958-60	All S.T. exc. taxi, police &		1	3769588
1958-60	All S.T. taxi, police & H.D.C.		1	3746212
1960	All 4 SPD.-S.T.		1	3746212

Group 4.335 SHIELD, TRANSMISSION REAR BEARING SPLASH

1940-54	All S.T.	Inner	1	509500
1955	All S.T.	Outer	1	519819
1955-57	All S.T.	Inner	1	519820
1956-57	All S.T.	Inner	1	521831

Group 4.337 GEAR, SHAFT AND SLEEVE ASSY., SPEEDOMETER DRIVEN

1940-49	All S.T.	20-7 ratio, 39-10 axle	1	503932
1940-49	All S.T.	23-7 ratio, 41-9 axle	1	503935
1940-49	All S.T.	21-7 ratio, 41-10 axle	1	503933
1940-49	All S.T.	22-7 ratio, 43-10 axle	1	503934
1948-50	25 H.T.	19-7 ratio, 40-11 axle	1	510955
1948	26 H.T.	18-7 ratio, 40-11 axle	1	510956
1950-51	All S.T.	20-7 ratio, 39-10 axle	1	513802
1950-51	All S.T.	21-7 ratio, 41-10 axle	1	513803
1950-51	All S.T.	22-7 ratio, 43-10 axle	1	513804
1950-51	All S.T.	19-7 ratio, 40-11 axle	1	510955
1951-54	All exc. export H.T.	21-8 ratio, 40-11 axle	1	514866
1952-54	All S.T.	20-7 ratio, 39-10 axle	1	516364
1952-54	All S.T.	21-7 ratio, 41-10 axle	1	516363
1952-54	All S.T.	22-7 ratio, 43-10 axle	1	516365
1952-54	All S.T.	19-7 ratio, 40-11 axle	1	516366
1952-54	All H.T.	18-8 ratio, 40-13 axle	1	515383
1952-54	All H.T.	18-8 ratio, 40-13 axle, o.s. gear	1	517321
1953-54	All H.T.	20-8 ratio, 41-12 axle	1	517764
1953	All P.G.		1	3704230
1954	All H.T.	19-8 ratio, 42-13 axle	1	518433
1955	All S.T.	20-7 ratio, 39-10 axle	1	519374
1955	All S.T.	19-7 ratio, 40-11 axle	1	519373
1955-57	All H.T.	18-8 ratio, 40-13 axle	1	519390
1955-57	All H.T.	19-8 ratio, 42-13 axle	1	520737
1956	All S.T.	20-7 ratio, 39-10 axle	1	522035
1957	All S.T.	20-7 ratio, 39-10 axle-8:00-8:50 tires	1	522035
1956-57	All S.T.	19-7 ratio, 40-11 axle	1	522036
1956-57	All H.T.	20-8 ratio, 41-12 axle	1	519391

1957	All S.T.	17-7 ratio, 41-12 axle-8:50 tires	1	524314
1957	All S.T.-3/2 B.C.	17-7 ratio, 40-13 & 42-13 axle	1	524314
1957	All S.T.	18-7 ratio, 41-12 axle	1	524315
1958-60	All H.T.	18-8 ratio, 40-13 axle	1	529021
1958-60	All H.T.	19-8 ratio, 42-13 axle	1	529022
1958-60	All S.T. taxi, police & H.D.	20-8 ratio, 41-12 axle	1	2368548
1958	All S.T. taxi, police & H.D.C.	21-8 ratio, 40-11 axle	1	2368546
1958-60	All S.T.-H.D.C.	22-8 ratio, 39-10 axle-7.60 x 15 tires	1	2358151
1959-60	All S.T.-police	17-8 ratio, 40-13 axle-special calibrated	1	2358149
1959-60	All H.T.-police	17-8 ratio, 40-13 axle-special calibrated	1	531709
1959-60	All H.T.	17-8 ratio, 43-15 axle	1	531709
1959-60	All S.T. taxi, police & H.D.	18-8 ratio, 40-13 axle	1	2358150
1959-60	All S.T.-police	18-8 ratio, 42-13 axle-special calibrated	1	2358150
1959-60	All H.T.-police	18-8 ratio, 42-13 axle-special calibrated	1	529021
1959-60	All S.T. taxi, police & H.D.	19-8 ratio, 42-13 axle	1	2380431
1959-60	All S.T.-police	19-8 ratio, 41-12 axle-special calibrated	1	2380431
1959-60	All S.T.-T420A	21-8 ratio, 40-11 axle	1	2368546
1960	All H.T.	16-8 ratio, 43-16 axle	1	536634
1960	4 SPD.-S.T.	21:8 ratio, 40:11 axle	1	3708142
1960	B/W S.T. spec. order	22:8 ratio, 39:10 axle	1	2358151
1958-60	All S.T. exc. taxi, police & H.D.C.	GEAR, speedometer driven-20-8 ratio, 41-12 axle	1	3708246
1958	All S.T. exc. taxi, police & H.D.C.	21-8 ratio, 40-11 axle	1	3708142
1959-60	All S.T. taxi, police & H.D.	18-8 ratio, 40-13 axle	1	3756762
1959-60	All S.T. taxi, police & H.D.	19-8 ratio, 42-13 axle	1	534117
1960	All 4 SPD.-S.T.	RETAINER, speedometer driver gear sleeve	1	535544

Group 4.338 SEAL, SPEEDOMETER DRIVEN GEAR OIL

1955-57	All	"O" Ring type (15/34" I.D.)	1	565673
1958-60	All S.T. exc. taxi, police & H.D.	"O" Ring type (11/16" I.D.)	1	3708146
1958-60	All S.T. exc. taxi, police & H.D.	FITTING, speedometer driven gear (2-5/8" long)	1	3748533
1958-60	All S.T. exc. taxi, police & H.D.	RETAINER, speedometer driven gear sleeve (9/32" I.D.)	1	3708148
1958-60	All H.T.	RING, speedometer driven gear retainer-nylon	1	529019

Group 4.339 HEAD ASSEMBLY, SPEEDOMETER (MILES)

1949-50	All		1	1569877
1951-52	All		1	1580822
1953-54	All		1	1581326
1956	All		1	1584223
1957	All		1	1584487
1958	All	exc. safeguard speedometer	1	1585453
1958	All	safeguard speedometer	1	1585905
1958	All police	w/7.10-7.60 x 15 tires exc. 40-11 axle ratio	1	1586138
1959	All	exc. safeguard speedometer	1	1586407
1959	All	w/safeguard speedometer	1	1586409
1959	All police	w/special calibrated police speedometer	1	1587477
1960	All	exc. safeguard and spec. eqpt. police speedometer	1	1589333
1960	All	w/safeguard speedometer	1	1589346
1960	All police	w/special calibrated police speedometer	1	1589347

Group 4.342 CABLE KIT, SPEEDOMETER

1937-60	All L.H.D.	(AC-615) consists of: cable, tip & staking tool	1	846890
1937-38	All	CABLE AND CASING ASSY., speedometer		
		(AC-CC-17) (cable 58-5/8"-casing 57-1/4")	1	1582863
1939-48	All S.T.	(AC-CC-1) (cable 68-5/8"-casing 67-1/2")	1	1588291
1949-54	All L.H.D., S.T.-P.G.	(AC-CC-17) (cable 58-5/8"-casing 57-1/4")	1	1582863
1949-54	All H.T.	(AC-CC-1) (cable 68-5/8"-casing 67-1/2")	1	1588291
1955-56	All L.H.D.	(AC-CC-91) (cable 61-1/8"-casing 60-13/13")	1	1589343
1957	All L.H.D.	(AC-CC-34) (cable 71-3/8"-casing 61-3/8")	1	1584813
1958	All S.T. exc. taxi, police & H.D.C.	(AC-CC-44) (cable 53-1/4"-casing 52-3/16")	1	1585948
1958	All S.T. taxi, police & H.D.C.	(cable 61-1/2"-casing 51-1/2")	1	1585945
1958	All H.T.	(AC-CC-45) (cable 61-1/2"-casing 60-3/8")	1	1585949
1959	All S.T. exc. H.D.	(AC-CC-61) (cable 48-3/4"-casing 47-3/4")	1	1587331
1959	All S.T.-H.D.	(AC-CC-63) (cable 51"-casing 49-7/8")	1	1587333
1959-60	All H.T.	(AC-CC-62) (cable 46"-casing 44-13/16")	1	1587332
1960	All S.T. exc. 4 SPD.-S.T. & H.D.	(AC-CC-71) (cable 48-1/4"-casing 47")	1	1588278
1960	All S.T.-taxi-police & H.D.C.	(AC-CC-72) (cable 49"-casing 48")	1	1588279
1960	All 4 SPD.-S.T.	(AC-CC-89) (cable 52-1/8"-casing 51")	1	1589620
1960	All	SUPPORT, speedometer cable	1	536726
ALL	All	LUBRICANT PKG., speedometer cable	AR	1568173

Group 4.343 GEAR, SPEEDOMETER DRIVE

1940-49	All S.T.	with all axle ratios	1	503936
1948-50	All H.T.	7 teeth (2" O.D. x 3/8" thick)	1	1315449
1950-57	All S.T.	7 teeth (2" O.D. x 3/8" thick)	1	1315449
1958-60	All S.T. exc. taxi, police & H.D.	8 teeth (1-3/4" O.D. x 39/64" thk.)	1	3708144
1958-60	All S.T. taxi, police & H.D.C.	8 teeth (2-13/64" O.D. x 23/32" thk.)	1	2357808
1960	All 4 SPD.-S.T.	(1-3/4" O.D. x 39/64" thick)	1	3708144
1960	4 SPD.-S.T.	w/39:10 & 40:11 axle ratio	1	3708145

Group 4.345 SPACER, SPEEDOMETER DRIVE GEAR

1939-54	All S.T.		1	1308272
1955	All S.T.		1	1166454
1956-57	All S.T.	(1-3/16" I.D. x 1-27/64" thick)	1	1170502
1958-60	All S.T. taxi, police & H.D.C.	(1-25/64" I.D. x 59/64" thick)	1	3719074

Group 4.351 GEAR, TRANSMISSION MAIN DRIVE

1940-42	P/6 taxi		1	1332892
1946-54	All S.T.		1	1332892
1955	All S.T.		1	1166444
1956	All S.T.		1	1170472
1957	All S.T.		1	1174860
1958-60	All S.T. exc. taxi, police & H.D.C.	w/synchronizer spring	1	3751420
1958-60	All S.T. taxi, police & H.D.C.		1	2358433
1960	All 4 SPD.-S.T.		1	3743447

Group 4.352 BEARING PACKAGE, TRANSMISSION MAIN SHAFT PILOT

1939-57	All S.T.	roller type	1	7450059
1937-38	All	BEARING-roller type (3/16" dia.x33/64")	14	435844
1958-60	All S.T. exc. taxi, police & H.D.C.	roller type Front (3/16" dia.x33/64")	14	435844
1958-60	All S.T. exc. taxi, police & H.D.C.	roller type Rear (1/8" x 1/2")	24	7450247
1958-60	All S.T. taxi, police & H.D.C.	roller type	14	2358434
1960	All 4 SPD.-S.T.	main shaft front roller bearing	14	3743449
1958-60	All S.T. exc. taxi, police & H.D.C.	SPACER, main shaft front roller bearing (11/16" I.D. x 1" O.D.)	1	591851
1958-60	All S.T. exc. taxi, police & H.D.C.	main shaft rear roller bearing Front (7/8" I.D.x1-1/16" O.D.)	1	591852
1958-60	All S.T. exc. taxi, police & H.D.C.	main shaft rear roller bearing Rear (27/32" I.D.x1-3/64" O.D.)	1	3750555

Group 4.353 SPACER, MAIN SHAFT PILOT BEARING

1948-54	All H.T.		1	511102
1955-56	All H.T. exc. C.C.		1	518683
1958-60	All S.T. taxi, police & H.D.C.		1	2358435
1939-57	All S.T.	RING, transmission pilot bearing snap	1	1298456
1939-57	All S.T.	WASHER, main shaft pilot bearing retainer	1	1299317

Group 4.354 SEAL, TRANSMISSION MAIN DRIVE GEAR OIL

1939-42	P/6 taxi	 (1" I.D. x 1-7/16" O.D.)	1	509217
1946-57	All S.T.	 (1" I.D. x1-7/16" O.D.)	1	509217

Group 4.355 BEARING, TRANSMISSION FRONT

1936-57	All	ball type	1	954379
1958-60	All 3 SPD.-S.T. exc. taxi, police & H.D.C.	trans. main drive gear-ball type	1	954998
1958-60	All 3 SPD.-S.T. taxi, police & H.D.C.	trans. main drive gear-ball type	1	954127
1960	All 4 SPD.-S.T.	trans. main drive gear clutch-ball type	1	907247

Group 4.356 BOLT-RETAINER, TRANSMISSION MAIN DRIVE GEAR BEARING

1958-60	All S.T. exc. taxi, police & H.D.C.	BOLT, bearing retainer (5/16"-18 x 3/4")	4	591135
1958-60	All S.T. exc. taxi, police & H.D.C.	RETAINER, bearing	1	3741458
1958-60	All S.T. taxi, police & H.D.C.	 (4-11/16" O.D.x3-3/16" O.L.)	1	3709331
1960	All 4 SPD.-S.T.	clutch gear	1	3709331

Group 4.357 NUT, TRANSMISSION MAIN DRIVE GEAR BEARING RETAINER

1958-60	All S.T. exc. taxi, police & H.D.C.	 (1-3/8"-12)	1	591150
---------	---	-----------------------	---	--------

Group 4.358 GASKET, TRANSMISSION MAIN DRIVE GEAR BEARING RETAINER

1958-60	All S.T. exc. taxi, police & H.D.C.		1	591022
1958-60	All S.T. taxi, police & H.D.C.	(.010")	AR	3709317
1958-60	All S.T. taxi, police & H.D.C.	(.015")	AR	3709318
1960	All 4 SPD.-S.T.	clutch gear bearing ret.	1	3743481

Group 4.374 SLINGER-WASHER, TRANSMISSION FRONT BEARING OIL

1939-42	P/6 taxi	SLINGER	1	1302020
1946-57	All S.T.		1	1302020
1958-60	All S.T. taxi, police & H.D.C.	WASHER (1-3/8" I.D. x 2-5/8" O.D.)	1	3709322

Group 4.376 RETAINER-RING-WASHER, TRANSMISSION FRONT BEARING

1937-57	All S.T.	RETAINER, front bearing washer	1	1321312
1936-57	All S.T.		1	2830049
1958-60	All S.T. exc. taxi, police & H.D.C.	front bearing locating	1	590849
1958-60	All S.T. taxi, police & H.D.C.	main drive gear bearing washer snap (.087")	1	3709351
1958-60	All S.T. taxi, police & H.D.C.		1	3709352
1958-60	All S.T. taxi, police & H.D.C.		1	3709353
1958-60	All S.T. taxi, police & H.D.C.		1	3709354
1958-60	All S.T. taxi, police & H.D.C.		1	3709355
1958-60	All S.T. taxi, police & H.D.C.		1	3709356
1960	All 4 SPD.-S.T.		1	3709351
1960	All 4 SPD.-S.T.		1	3709352
1960	All 4 SPD.-S.T.		1	3709353
1960	All 4 SPD.-S.T.		1	3709354
1960	All 4 SPD.-S.T.		1	3709355
1960	All 4 SPD.-S.T.		1	3709356
1960	All 4 SPD.-S.T.	clutch gear ret. (.087")	1	3709351
1960	All 4 SPD.-S.T.	clutch gear ret. (.090")	1	3709355
1960	All 4 SPD.-S.T.	clutch gear ret. (.102")	1	3709356
1960	All 4 SPD.-S.T. (4.412)	clutch gear bearing locating	1	954261
1939-54	All S.T.	RING PACKAGE, transmission snap	1	509517
1937-57	All S.T.	WASHER, front bearing retainer spring	1	1295397
1958-60	All S.T. taxi, police & H.D.C.		1	3709350
1960	All 4 SPD.-S.T.	trans. clutch (1-25/64" I.D. x 1-13/16" O.D.)	1	3709350

Group 4.380 CLUTCH ASSY., TRANSMISSION SYNCHRONIZER

1956-57	All S.T.		1	1314644
1958-60	All S.T. exc. taxi, police & H.D.C.	second and third speed	1	3774720
1958-60	All S.T. taxi, police & H.D.C.		1	3709345
1960	All 4 SPD.-S.T.	first and second speed	1	3743456
1960	All 4 SPD.-S.T.	third and fourth speed	1	3709345

Group 4.383 RETAINER, TRANSMISSION SYNCHRONIZER DRUM

1938-55	All S.T.	second and third speed	2	1310248
1958-60	All S.T. exc. taxi, police & H.D.C.	synchronizer ring (2-3/32" I.D.)	2	3845202

1958-60	All S.T. exc. taxi, police & H.D.C.	RING, trans. synchronizer clutch (2-3/32" O.D. at small end)	2	3845039
1958-60	All S.T. taxi, police & H.D.C.	synchronizer blocking (2-13/16" I.D. x 3-7/32" O.D. w/3 inside slots)	1	3709348
1960	All 4 SPD.-S.T.	synchronizer blocking	4	3709348
1960	All 4 SPD.-S.T. (4.376)	third and fourth synchronizer	1	3709351

Group 4.384 DRUM-PLATE-RING, TRANSMISSION SYNCHRONIZER

1940-55	All S.T.	second and third speed	2	1314659
1959-60	All S.T.-taxi, police & H.D.C.	PLATE, trans. shifting	3	3709306
1960	All 4 SPD.-S.T.	trans. shifting	6	3709306
1958-60	All S.T.-taxi-police & H.D.C. (4.376)	RING, clutch hub retainer	1	3709351

Group 4.395 GEAR, TRANSMISSION MAIN SHAFT SECOND SPEED

1941-54	All S.T.		1	1319471
1955	All S.T.		1	1166485
1956	All S.T.		1	1314645
1957	All S.T.		1	1193094
1958-60	All S.T. exc. taxi, police & H.D.C.	w/energizing spring	1	3737447
1958-60	All S.T. taxi, police & H.D.C.	w/bushing	1	2358437
1960	All 4 SPD.-S.T.	 (32 teeth-4-1/2" O.D.)	1	3743455

Group 4.396 BUSHING, TRANS. MAIN SHAFT SECOND SPEED GEAR

1956	All S.T.		1	1298873
1957	All S.T.		1	1174850

Group 4.397 RING, MAIN SHAFT SECOND SPEED SLEEVE SNAP

1936-53	All		1	1287260
1954	All S.T. (4.376)	use w/1166418 shaft	1	1321312
1955	All S.T. (4.376)		1	1321312
1956	All S.T.		1	1298945
1956	All S.T.	main shaft spacer	1	1309249
1957	All S.T.	second speed gear thrust washer retainer	1	1174814
1957	All S.T.	SPACER, thrust washer retainer ring	1	1174841

Group 4.398 WASHER-BEARING, TRANS. SECOND SPEED GEAR THRUST

1936-55	All		1	1287808
1956	All S.T.		1	1298913
1957	All S.T.		2	1174810
1958-60	All S.T. exc. taxi, police & H.D.C.	 (1-3/16" I.D. x 1-25/32" O.D. x 3/16" thick)	1	3736753
1960	All 4 SPD.-S.T.	BEARING, trans. second speed (1-27/32" I.D. x 2-1/2" O.D.)	1	457096

Group 4.403 SHAFT, TRANSMISSION MAIN

1939-48	All exc. 1939 26 S.T.	(12-9/16" over-all)	1	1308377
1949-54	All S.T.	use w/1321312 ring	1	1166418
1955	All S.T.		1	1166443
1956	All S.T.		1	1170539
1957	All S.T.		1	1174843
1958-60	All S.T. exc. taxi, police & H.D.C.		1	3751499
1958-60	All S.T. taxi, police & H.D.C.		1	2358438
1960	All 4 SPD.-S.T.		1	3743450
1953	All P.G.	EXTENSION ASSY., main shaft-w/speedo. gear	1	3703246
1953	All P.G.	WASHER, main shaft extension-special (13/32" I.D.x1" O.D.)	1	3706113
1953	All P.G.	rear brg. to main shaft ext. . (1" I.D. x 1-3/8" O.D.)	1	518922
1953	All P.G. (8.931)	LOCK WASHER, main shaft extension-special (3/8 lock)	1	120382

Group 4.404 RING-WASHER, TRANSMISSION MAIN SHAFT TO UNIVERSAL JOINT

1949-55	All S.T.	RING, trans. frt. U/J stop snap	1	1333886
1939-54	All S.T.	WASHER PKG., main shaft	1	509518
1958-60	All S.T. taxi, police & H.D.C.	companion flange	1	591472

Group 4.405 BOLT, TRANS. MAIN SHAFT EXTENSION

1953	All P.G.	ext. to main shaft (3/8"-24 x 1-1/4")	1	3690869
------	------------------	---	---	---------

Group 4.406 WASHER, TRANSMISSION MAIN SHAFT THRUST

1939-55	All S.T.	(1-3/16" I.D.x1-3/4" O.D.)	1	1308347
---------	------------------	----------------------------	---	---------

Group 4.408 BEARING, TRANSMISSION REAR

1932-55	All S.T.	main shaft-ball type	1	954387
1948-50	All H.T.	output shaft-ball type	1	906883
1951-55	All H.T.	output shaft-ball type	1	903006
1956-57	All S.T.	main shaft-ball type	1	954382
1956-60	All H.T.	output shaft-ball type	1	906883
1958-60	All S.T. exc. taxi, police & H.D.C.	main shaft-ball type	1	954997
1958-60	All S.T. taxi, police & H.D.C.	main shaft-ball type	1	903307
1960	All 4 SPD.-S.T. (4.355)	main shaft-ball type	1	907247
1948-50	All H.T.	BUSHING, rear bearing retainer	1	8618166
1951-55	All H.T.		1	8618160
1955-57	All S.T.		1	522976
1956	All H.T. exc. C.C.		1	8618134
1956-60	All C.C.-H.T.		1	8619943
1958-60	All 3 SPD.-S.T. exc. taxi, police & H.D.C.	(1-1/2" I.D.x1-5/8" O.D.)	1	3786292
1960	All 4 SPD.-S.T.	BEARING (see Group 4.203 for use)	1	3786292
				903205

Group 4.409 WASHER, TRANSMISSION BEARING SUPPORT TO CASE

1953	All P.G. (8.931)	6	120382
------	--------------------------	---	--------

Group 4.412 RING, TRANSMISSION REAR BEARING SNAP

1936-55	All	Front	1	1258832
1939-57	All S.T.	Rear	1	1308271
1948-50	All H.T. (4.128)	retainer ring-horseshoe type	1	8607299
1950-55	All H.T. (4.128)	rear bearing to retainer (1/16" x 2-9/32")	1	8612215
1951-55	All H.T. (4.128)	rear bearing to shaft (1/16"x1-1/16")	1	8612243
1956	All H.T. (4.128)	rear bearing to retainer (1/16"x2-9/16")	1	8614188
1956-60	All H.T. (4.128)	rear bearing to shaft (3/32"x1-9/32")	1	8614096
1956-58	All C.C.-H.T. (4.128)	rear bearing to cover	1	8614188
1958-60	All S.T. exc. taxi, police & H.D.C.	rear bearing to case (2-11/16" I.D.)	1	3707174
1958-60	All S.T. exc. taxi, police & H.D.C.	rear bearing to shaft (.087" thick)	1	3707188
1958-60	All S.T. exc. taxi, police & H.D.C.	rear bearing to shaft (.090" thick)	1	3707189
1958-60	All S.T. exc. taxi, police & H.D.C.	rear bearing to shaft (.093" thick)	1	3707190
1958-60	All S.T. exc. taxi, police & H.D.C.	rear bearing to shaft (.096" thick)	1	3707191
1958-60	All S.T. taxi, police & H.D.C.	rear bearing to shaft (.088" thick)	1	3709301
1958-60	All S.T. taxi, police & H.D.C.	rear bearing to shaft (.091" thick)	1	3709302
1958-60	All S.T. taxi, police & H.D.C.	rear bearing to shaft (.094" thick)	1	3709303
1958-60	All S.T. taxi, police & H.D.C.	rear bearing to shaft (.097" thick)	1	3709304
1958-60	All S.T. taxi, police & H.D.C.	rear bearing to shaft (.100" thick)	1	3709305
1958-60	All S.T. taxi, police & H.D.C.	rear bearing to retainer	1	531772
1959-60	All H.T. (4.128)	rear bearing to reverse clutch housing	1	8614188
1960	All 4 SPD.-S.T.	rear bearing locating	1	3725439
		RING (See Group 4.376 for use)		954261

group 4.413 SPRING, TRANSMISSION SYNCHRONIZER DETENT

1956-57	All S.T.	3	1314727	
1958-60	All S.T. exc. taxi, police & H.D.C.	synchronizer energizing	2	3737448
1959-60	All S.T.-taxi, police & H.D.C.		2	3709349
1960	All 4 SPD.-S.T.		4	3709349

Group 4.414 SLEEVE, SECOND AND HIGH SLIDING

1939-55	All S.T.	1	1307805
---------	------------------	---	---------

Group 4.415 GEAR, TRANS. HIGH SPEED SLIDING

1960	All 4 SPD.-S.T.	third speed-w/bushing	1	3743452
------	-------------------------	---------------------------------	---	---------

Group 4.416 RETAINER, LOW AND REVERSE SLIDING GEAR

1956-57	All S.T.	(1-1/2" I.D. x1-13/16" O.D.)	1	1298915
---------	------------------	------------------------------	---	---------

Group 4.417 GEAR, LOW AND REVERSE SLIDING

1939-54	All S.T.		1	1307764
1956	All S.T.		1	1319384
1955	All S.T.		1	1166484
1957	All S.T.		1	1179182
1958	All S.T. exc. taxi, police & H.D.C.		1	3725646
1958-60	All S.T. taxi, police & H.D.C.		1	2358439
1959-60	All S.T. exc. taxi, police & H.D.		1	3760845
1960	All 4 SPD.-S.T.	first speed	1	3743458
1960	All 4 SPD.-S.T.	reverse	1	3774912

Group 4.419 SLEEVE-WASHER, TRANS. FIRST GEAR

1960	All 4 SPD.-S.T.		1	3743459
1960	All 4 SPD.-S.T.	WASHER, first speed gear-thrust	1	3743460

Group 4.421 GEAR PKG., TRANSMISSION COUNTERSHAFT

1939	All		1	510848
1940-54	All S.T.	consists of 1-1310985 gear and 2-1309089 washer	1	510849
1955	All S.T.	GEAR, trans. countershaft	1	1166425
1956	All S.T.		1	1319382
1957	All S.T.		1	1189189
1958-60	All S.T. exc. taxi, police & H.D.C.		1	3729696
1958-60	All S.T. taxi, police & H.D.C.		1	2358436
1960	All 4 SPD.-S.T.		1	3746271

Group 4.422 BEARING PKG., TRANSMISSION COUNTERSHAFT GEAR

1940-55	All S.T.	consists of 50 rollers	Front and rear	1	1394874
1956-57	All S.T.	consists of 52 rollers	Front and rear	1	1394873
1958-60	All S.T. exc. taxi, police & H.D.C.	BEARING, trans. countershaft-roller		50	435847
1958-60	All S.T. taxi, police & H.D.C.	countershaft-roller	(3/4" O.L.)	80	3709328
1960	All 4 SPD.-S.T.	roller type		80	3709328
		WASHER (see Group 4.423 for use)			3737814
		WASHER (see Group 4.423 for use)			3709324
		SPACER (see Group 4.426 for use)			3709323

Group 4.423 WASHER, COUNTER GEAR BEARING RETAINER

1940-55	All S.T.		Outer	2	1315274
1941-55	All S.T.		Inner	2	1319014
1956-57	All S.T.		Outer	2	1298451
1958-60	All S.T. exc. taxi, police & H.D.C. (4.422)				
1958-60	All S.T. taxi, police & H.D.C. (4.422)				
1960	All 4 SPD.-S.T. (4.422)				
1960	All 4 SPD.-S.T.				
		counter gear bearing		6	3709324
		WASHER (see Group 4.442 for use)		2	3740819
		WASHER (see Group 4.442 for use)			3740819
		WASHER (see Group 4.442 for use)			3709325
		WASHER (see Group 4.442 for use)			3709326
		WASHER (see Group 4.442 for use)			3709327

Group 4.426 SPACER, TRANSMISSION COUNTERSHAFT BEARING

1941-55	All S.T.	inside gear (4-7/8" long)	1	1319013
1956-57	All S.T.	inside gear (4-31/32" long)	1	1331664
1958-60	All S.T. taxi, police & H.D.C. (4.422)	 (4-5/8" long)	1	3709323
1960	All 4 SPD.-S.T. (4.422)		1	3709323
1956-57	All S.T.	WASHER, countershaft bearing spacer (61/64" I.D. x 1-1/8" O.D.)	2	1331663

Group 4.428 COUNTERSHAFT, TRANSMISSION

1939-55	All S.T.	 (8-1/16" long)	1	1307848
1956-57	All S.T.	 (9-23/64" long)	1	1298459
1958-60	All S.T. exc. taxi, police & H.D.C.	 (7-1/8" long)	1	3707179
1958-60	All S.T. taxi, police & H.D.C.	 (7/8" dia. x 9-7/16" O.L.)	1	3709300
1960	All 4 SPD.-S.T.		1	3709300

Group 4.429 PIN, TRANSMISSION COUNTERSHAFT GEAR

1956-57	All S.T. exc. taxi & police (4.435)	 (1/4" x 3/4")	1	590832
1960	All S.T.-taxi-police & H.D.C. (8.960)	 (1/8" x 5/8")	1	103905
1960	All 4 SPD.-S.T. (8.960)		1	103905

Group 4.430 GEAR, REVERSE IDLER

1939-55	All S.T.		1	1307851
1956-57	All S.T.		1	1189187
1958-60	All S.T. exc. taxi, police & H.D.		1	3759842
1958-60	All S.T. taxi, police & H.D.C.		1	2358431
1959	All S.T. exc. H.D.		1	3759842
1960	All 4 SPD.-S.T.	 Front	1	3774904
1960	All 4 SPD.-S.T.	 Rear	1	3774905

Group 4.431 BUSHING, REVERSE IDLER GEAR

1939-55	All S.T.		2	1307898
1956-57	All S.T.		2	553119
1958-60	All S.T. exc. taxi, police & H.D.C.	BEARING, reverse idler gear	1	457202

Group 4.433 SHAFT, REVERSE IDLER GEAR

1939-55	All S.T.	 (4-17/32" long)	1	1307847
1956-57	All S.T.	 (5-7/32" long)	1	1308185
1958-60	All S.T. exc. taxi, police & H.D.C.	 (3/4" dia. x 4-7/32" long)	1	590831
1958-60	All S.T. taxi, police & H.D.C.	 (7/8" dia. x 2-1/2" O.L.)	1	3709309
1960	All 4 SPD.-S.T.		1	3746277

Group 4.435 PIN-KEY-RING, REVERSE IDLER SHAFT LOCK

1940-54	All S.T.		1	590832
1956-57	All S.T.		1	590832
1958-60	All S.T. exc. taxi, police & H.D.C.		1	590832
1960	All S.T.-taxi-police & H.D.C. (8.960)	KEY, reverse idler shaft (1/8"x5/8")	1	103905
1960	All 4 SPD.-S.T. (8.960)		1	103905
1960	All 4 SPD.-S.T.	RING, reverse idler front gear ret.	1	3774910

Group 4.437 WASHER, REVERSE IDLER GEAR THRUST

1939-55	All S.T.		2	1307850
1956-57	All S.T.		2	1409103
1958-60	All S.T. exc. taxi, police & H.D.C.	Front	1	591091
1958-60	All S.T. exc. taxi, police & H.D.C.	Rear	1	3746442
1960	All 4 SPD.-S.T.	Front	1	3774909
1960	All 4 SPD.-S.T. (4.423)		2	3740819

Group 4.442 WASHER, TRANSMISSION COUNTERSHAFT THRUST

1939	All (4.437)		2	1307850
1940-55	All St.		2	1309089
1956-57	All S.T.	Front	1	1298444
1956	All S.T.	Rear-inner	1	1298439
1956	All S.T.	Rear-outer	1	1298440
1957	All S.T.	Rear-inner	1	1178267
1957	All S.T.	Rear-outer	1	1178268
1957	All S.T.	Rear	1	1180482
1958-60	All S.T. exc. taxi, police & H.D.C. (4.423)	(15/16" I.D. x 1-5/8" O.D. x 1/32" thick)	2	3740819
1958-60	All S.T. taxi, police & H.D.C. (4.423)	Front (7/8" I.D. x 2-5/8" O.D.)	1	3709325
1958-60	All S.T. taxi, police & H.D.C. (4.423)	w/oil grooves . . . Rear (7/8" I.D. x 2-1/8" O.D.)	1	3709326
1958-60	All S.T. taxi, police & H.D.C. (4.423)	less oil grooves . . . Rear (7/8" I.D. x 2-1/8" O.D.)	1	3709327
1960	All 4 SPD.-S.T. (4.423)		2	3740819

Group 4.589 PARKING BRAKE WARNING LAMP PARTS

1952-54	All	FLASHER	1	516592
1955-60	All		1	562728
1952	All (10.275)	SWITCH ASSY.	1	510963
1953-54	All		1	1998010
1955-56	All		1	1998091
1957	All		1	524451
1958	All		1	530479
1959-60	All	SWITCH AND WIRE ASSY.	1	533210
1959-60	All	SOCKET AND WIRE ASSY.	1	533128
1953-54	All	HOUSING ASSY., w/lens	1	517975
1955-57	All	LENS	1	563762
1958-60	All	with bezel	1	529798
1958-60	All	RETAINER, warning lamp lens and bezel	1	529799
1958-60	All	SPRING, warning lamp lens and bezel retaining	1	529759

Group 4.591 LEVER-ROD ASSEMBLY, PARKING BRAKE L.H.D.

1939-40	26	LEVER	1	504465
1941-47	All		1	505343
1948	All		1	511033
1957	All L.H.D.	foot operated	1	524372
1958	All		1	529512
1959	All		1	536833
1960	All		1	536833
1955-56	All	HANDLE, parking brake pull rod-plastic	1	522696
1955-56	All (8.939)	PIN, hand brake pull rod (5/32"x7/16")	1	456636
1949-52	All	ROD ASSY., hand brake pull	1	516594
1953-54	All	w/black handle	1	516996
1953	All	w/chrome handle-less cable	1	516193
1954	All S.D.	w/beige handle	1	517961
1954	All SD	w/red handle	1	517962
1954	All SD	w/yellow handle	1	517963
1955-56	All	black-w/white handle	1	522565
1955	All	brown-w/chrome handle	1	520404
1953-56	All	SCREW, hand brake pull rod to instl. panel-special (5/16"-24x5/8")	2	516214

Group 4.595 PAWL, HAND BRAKE LEVER

1940-48	All	for Types G, I and K levers	1	504544
1941-47	All	for Type L lever	1	506605
1949-52	All	pull rod-w/Type A rod	2	3687878
1952	All L.H.D.	pull rod-w/Type C rod	2	516197
1953-56	All L.H.D.	pull rod-w/Type D rod	1	516196
1953-56	All L.H.D.	pull rod-w/Type E rod	2	516197
1940-48	All	SLEEVE, brake lever pawl, for Type G and I lever	1	504545

Group 4.596 RIVET, HAND BRAKE LEVER PAWL

1952	All L.H.D.	for Type C rod	2	516237
1953-56	All L.H.D.	for Type E rod	2	516237

Group 4.597 SPRING, HAND BRAKE LEVER PAWL

1949-52	All	pull rod pawl-w/Type A rod (5/16" O.D.-2-1/2" coils)	2	3687883
1952-56	All L.H.D.	pull rod pawl-w/Type C and E rod	2	516226
1953-56	All	pull rod pawl-w/Type D rod	1	516228
1937-38	All	SPRING, hand brake cable return	1	500021
1939-40	25-26 All		1	502738
1940-58	All exc. 1940 25-26		1	504661
1959-60	All		1	534258
1949-52	All L.H.D.	SPRING, hand brake pull rod handle return-w/Type A rod	1	512556
1949-52	All L.H.D.	w/Type B and C rod	1	516597
1953-56	All	w/Type D rod	1	516200
1953-56	All	w/Type E rod	1	516199

Group 4.600 LEVER ASSY., PARKING BRAKE RELEASE

1957	All L.H.D.		1	524256
1958	All	(7" long)	1	530264
1958	All	(9-1/4" long)	1	530943

Group 4.603 SECTOR, HAND BRAKE LEVER

1941-48	All L.H.D.	for Type K lever	1	505345
1941-47	All L.H.D.	for Type L lever	1	506606
1949-51	All exc. 2537-67 L.H.D.	BRACKET ASSEMBLY, hand brake pull rod (Type B) painted	1	515945
1949-51	2537 & conv. All	(Type B)	1	514141

Group 4.625 PEDAL, BRAKE (L.H.D.)

1942-48	26		1	507534
1942-48	25		1	507533
1949-53	All S.B.		1	507533
1953-54	All P.B.		1	518315
1954	All S.B.		1	518684
1955-57	All S.B.		1	518845
1955	All P.B.		1	519352
1956-57	All L.H.D., P.B.		1	522142
1958	All S.B.		1	529171
1958	All P.B.		1	529172
1959-60	All		1	532329
1958	All S.B.	LEVER, brake pedal	1	529319
1958	All P.B.		1	530012
1939-57	All L.H.D., S.B. (0.833)	SHAFT, brake pedal	1	505310
1958-60	All	SPACER, brake pedal	1	529323
1940-57	All exc. 1940 25-26 S.B. (8.934)	RETAINER, brake pedal-spring type . (3/4" dia. shaft)	1	142590
1958	All	BOLT, brake pedal lever (3/8"-16x1")	1	531768

Group 4.626 BUSHING, BRAKE PEDAL

1953-57	All P.B.		2	518322
1958	All S.B. (0.831)		2	529316
1958	All P.B. (0.831)	pedal idler lever	2	529316
1959-60	All (0.831)	nylon	2	529316

Group 4.630 PAD, BRAKE AND CLUTCH PEDAL RUBBER

1935-58	All S.B.		2	494832
1953-56	All P.B.		1	518318
1957	All P.B.		1	523948
1957-60	All L.H.D.	parking brake lever	1	524262
1958	All H.T.-P.B.		1	529492
1959-60	All S.T.		2	494832
1959-60	All H.T.-S.B.		1	533193
1959-60	All H.T.-P.B.		1	532573

Group 4.634 CLIP-BRACKET-RETAINER-WASHER, BRAKE PEDAL PIVOT

1953-57	All P.B.	CLIP, pivot brkt. to strg. col.	1	518324
1949-57	All L.H.D.	BRACKET, brake and clutch pedal shaft	1	511207
1958	All	brake pedal stop	1	529315
1958	All exc. P.B.	brake and clutch pedal mounting	1	529313
1958	All P.B.	brake and clutch pedal mounting	1	530018
1959-60	All	brake and clutch pedal mounting	1	532452

1953-54	All P.B.	BRACKET AND SHAFT	1	518319
1955-56	All P.B.		1	519348
1957	All P.B.		1	523951
1959-60	All P.B.	BRACE, brake and clutch pedal mtg. bracket	1	534487
1959-60	All S.B.-P.S.		1	534487
1959-60	All Bendix P.B.	HUB AND LEVERS ASSY., push rod linkage	1	533035
1959-60	All Moraine P.B.	LEVER, vacuum cyl. push rod linkage	1	5459060
1958	All P.B.	LEVER ASSY., brake pedal idler	1	530008
1959-60	All Moraine P.B.	vacuum cyl. push rod linkage	1	5459059
1958	All P.B.	LINK, brake pedal idler lever	1	530013
1958	All S.B. (0.829)	PAD, brake pedal stop screw	1	529320
1958	All P.B.	PIN, brake pedal idler lever link	2	530014
1959-60	All P.B.	cyl. push rod lever fulcrum	1	5456697
1959-60	All Moraine P.B.	cyl. push rod to lever clevis	2	138084
1959-60	All Bendix P.B.	brake lever to push rod	2	533036
1959-60	All Bendix P.B.	ROD, brake pedal to cyl. lever aux. push	1	533033
1959-60	All Moraine P.B.	brake pedal to cyl. lever aux. push	1	5459058
1953-57	All P.B. (8.934)	RETAINER, pedal retaining	1	148150
1960	All P.B.-P.S. (6.758)	SILENCER, brake and clutch pedal mtg. brkt.	1	4572237
1958	All P.B. (4.625)	SPACER, brake pedal idler lever	1	529323
1958	All S.B. (0.829)	SCREW, brake pedal stop . . (Spec. 5/16"-24x1-1/2")	1	529322
1959-60	All (8.977)	brake and clutch pedal mtg. brkt. to inst. panel (Hex. Hd. 5/16"-18x1-1/8")	2	9413229
1953-57	All P.B.	WASHER, pedal retaining . . . (33/64" I.D.x3/4" O.D.)	1	518323

Group 4.639 SPRING, BRAKE PEDAL RETURN

1939-40	All exc. 1940 25 (4.597)		1	500021
1941	All L.H.D. (4.597)		1	500021
1942-55	All S.B. (4.597)		1	500021
1956-57	All L.H.D., S.B.		1	522372
1953-57	All P.B.	anti-rattle	1	518510
1958	All S.B.		1	529324
1959-60	All S.B.		1	533359

Group 4.648 REINFORCEMENT, BRAKE MASTER CYLINDER

1959-60	All P.B.	to dash	1	533067
1959-60	All S.B.-P.S.	to dash	1	533067

Group 4.649 REPAIR KIT, BRAKE MASTER CYLINDER

NOTE: The kit consists of valve, spring, cup, piston, boot, ring, washers and gaskets.

1936-57	All S.B.		1	5453950
1958	All S.B.		1	5456353
1959-60	All S.B.		1	5456967

Group 4.650 CYLINDER ASSEMBLY, BRAKE MASTER

1937-54	All S.B.		1	5450208
1953-56	All P.B.	cylinder only	1	563733
1955-57	All L.H.D., S.B.		1	5454556
1957-58	All Bendix P.B.		1	524278
1958	All S.B.		1	5456118

1959	All S.B.		1	5456806
1959-60	All Bendix P.B.		1	3764144
1960	All S.B.		1	5459640
1938-57	All S.B.	BODY, brake master cylinder	1	5450162
1955-57	All Moraine P.B.	w/vent pin	1	5455037
1958	All Moraine P.B.		1	5455991
1959-60	All Moraine P.B.		1	5459092

Group 4.651 CAP ASSY., MASTER CYLINDER FILLER

1935-60	All S.B.		1	5455826
1953-60	All Bendix P.B.		1	1464056
1955-60	All Moraine P.B.		1	5455826
1935-60	All S.B.	GASKET, master cylinder filler cap	1	080445
1953-60	All Bendix P.B.	use w/cast iron cap	1	519282
1955-60	All Moraine P.B.		1	080445
		see Group 14.482 for use		043234

Group 4.652 NUT, MASTER CYLINDER HEAD

1938-54	All S.B.	with valve washer	1	5450615
1955-57	All L.H.D., S.B.		1	5450607
1955-58	All Moraine P.B.		1	5454970
1938-57	All S.B.	GASKET, master cylinder head nut	1	5450212
1955-58	All Moraine P.B.		1	5454151
1953-58	All Bendix P.B.	SEAL, residual check valve fitting	1	563705

Group 4.654 CUP, MASTER CYLINDER PISTON

1935-60	All S.B.	primary	1	5450617
1935-60	All S.B.	secondary	1	231432
1959-60	All Moraine P.B.	primary	1	5450617

Group 4.655 SPRING, MASTER CYLINDER PISTON

1935-60	All S.B.		1	5451121
1953-58	All Bendix P.B.	check valve	1	563735
1955-58	All Moraine P.B.	check valve	1	5454833
1959-60	All Moraine P.B.		1	5451121
1959-60	All Bendix P.B.	SPRING AND RETAINER ASSY., piston return	1	534080

Group 4.656 RING, MASTER CYLINDER PISTON LOCK

1935-60	All S.B.		1	231435
1959	All Bendix P.B.		1	9413532
1960	All Bendix P.B. (8.934)		1	9413524
1938-57	All S.B.	PLATE, master cylinder push rod stop	1	1074927
1958	All S.B.		1	231434
1959-60	All S.B.		1	5456528

Group 4.657 VALVE ASSEMBLY, MASTER CYLINDER CHECK

1935-60	All S.B.		1	5453711
1955-58	All Moraine P.B.		1	5454145
1959-60	All Bendix P.B.		1	534082
1959-60	All Moraine P.B.		1	5453711
1935-57	All S.B.	WASHER, master cylinder valve seat	1	5450150
1955-58	All Moraine P.B.	master cylinder head nut	1	5454200
1958-60	All S.B.	master cylinder valve seat (9/16" LD.x31/32" O.D.x3/16" thk.)	1	5456123
1959-60	All Moraine P.B.		1	5456123

Group 4.658 ROD, MASTER CYLINDER PUSH

1936-57	All S.B.	ROD, use 1-1074927 when using on 1936 & 37 models	1	5450077
1955-56	All Bendix P.B.	vacuum cyl. push	1	520668
1958	All S.B.		1	5456432
1958	All Moraine P.B.		1	5455902
1959-60	All S.B.		1	5456920
1959-60	All Bendix P.B.	linkage lever to vacuum cyl. push . . . (3-5/8" O.L.)	2	3760635
1953-54	All P.B.	ROD ASSY., w/valve, screen and gasket	1	519278
1955-56	All Bendix P.B.	w/valve, screen and gasket	1	519903
1955-57	All Moraine P.B.		1	5454902
1957	All Bendix P.B.		1	524302
1958	All Bendix P.B.	vac. cyl. valve operating	1	531235
1959-60	All Moraine P.B.	ROD AND AIR VALVE ASSY., vacuum cyl. push	1	5459093
1959-60	All Moraine P.B.	BOOT, power piston	1	5459088
1955-56	All Bendix P.B.	GROMMET, vac. cyl. push rod	1	520644
1955-58	All Moraine P.B.	PLATE, master cyl. push rod stop	1	5454905
1955-56	All Bendix P.B.	RETAINER, vac. cyl. push rod grommet	1	520647
1953-54	All P.B.	RING, vac. cyl. piston push rod stop washer snap	1	2158836
1955-56	All Bendix P.B.	vac. cyl. piston push rod stop washer snap	1	1464605
1955-58	All Moraine P.B.	vac. cyl. push rod to air valve lock	1	5454934
1955-58	All Moraine P.B.	vac. cyl. push rod stop plate lock	1	5454906
1955-56	All Bendix P.B.	SEAL, vac. cyl. push rod	1	1464444
1957-58	All Bendix P.B.	vac. cyl. valve rod	1	524303
1957-58	All Bendix P.B.	SPRING, vac. cyl. plunger valve return	1	524298
1959-60	All Bendix P.B.	vacuum cyl. valve return	1	533889
1955-56	All Bendix P.B.	VALVE, vac. cyl. push rod	1	520646
1957-58	All Bendix P.B.	vac. cyl. plunger	1	524285
1955-58	All Moraine P.B.	BUMPER, vac. cyl. push rod	1	5454933
1957-58	All Bendix P.B.	vac. cyl. reaction plunger valve	1	524286

Group 4.659 BOOT, MASTER CYLINDER END

1936-59	All S.B.		1	5456779
1953-58	All P.B.	vac. cyl. push rod	1	563717
1955-57	All Moraine P.B.	vac. cyl. push rod	1	5454935
1958	All Moraine P.B.	vac. cyl. push rod	1	5455950
1936-60	All S.B.		1	5456779
1959-60	All Bendix P.B.	vacuum cyl. push rod	1	534095
1959-60	All Moraine P.B.	vacuum cyl. push rod	1	5456672
1959-60	All P.B.	BELLOWS, brake pedal push rod	1	533363
1953-58	All Bendix P.B.	WASHER, vac. cyl. push rod-felt	1	569509
1955-58	All Moraine P.B.		1	5454972

Group 4.661 ADAPTER-BOLT-CONNECTOR, MASTER CYLINDER PIPE

1935-48	All	ADAPTER, master cylinder outlet connector	1	497751
1949-54	All	BOLT, connector (Spec. 1/2"-20x1-5/32")	1	512270
1935-41	All exc. 1940 29	CONNECTOR, master cylinder outlet	1	497753
1940	All exc. 25-26		1	476745
1942-48	All		1	476745
1949-53	All L.H.D.		1	512570
1954	All L.H.D.		1	518393
1958-60	All		1	530450
1954-57	All L.H.D.	CONNECTOR BLOCK AND BRACKET, brake pipe	1	518406
1935-57	All	GASKET, master cylinder pipe connector Large	1	799390
1935-57	All	Small	1	799303

Group 4.662 CLEVIS, MASTER CYLINDER CONNECTING ROD

1942-57	All S.B.	pedal to push rod	1	507535
1958	All S.B.		1	529317
1958	All	PIN, master cylinder conn. rod clevis	1	529318
1959-60	All	TRUNNION, master cyl. push rod	1	533360

Group 4.663 COVER-GASKET, MASTER CYLINDER

1953-55	All P.B.	COVER, cylinder	1	519271
1955-57	All Moraine P.B.		1	5454914
1956-58	All Bendix P.B.		1	3731011
1953-57	All P.B.	GASKET, cylinder cover	1	519272
1955-57	All Moraine P.B.		1	5454945
1958	All Bendix P.B.		1	563704
1953-55	All P.B.	SCREW, cylinder cover (No. 10-24x7/16")	6	9404148

Group 4.665 CYLINDER ASSEMBLY, WHEEL BRAKE

1937-41	All	(1" bore) Front	5450406 RH	5450407 LH
1942-57	All	(1-1/16" bore) Front	5450662 RH	5450663 LH
1935-48	All	(15/16" bore) Rear	5450400 RH	5450401 LH
1949-54	All	(7/8" bore) Rear	5450994 RH	5450995 LH
1955-57	All	(15/16" bore) Rear	5450400 RH	5450401 LH
1958	All	(1-1/8" bore) Front	5456584 RH	5456585 LH
1958-60	All	(1" bore) Rear	5456586 RH	5456587 LH
1959-60	All	(1-3/16" bore) Front	5456976 RH	5456977 LH

Group 4.666 VALVE, WHEEL CYLINDER BLEEDER

1935-60	All		4	1074893
1958	All H.D.C.	PLATE, front wheel cyl. mtg.	2	5456485
1954-57	All	SCREW, wheel cylinder valve bleeder (No. 10-32x1/4")	4	5454780
1958-60	All	(No. 10-32x1/4")	4	5454315

Group 4.667 CUP, WHEEL CYLINDER RUBBER

1935-48	All	use w/1074914 spring (15/16" dia.) Rear	4	1409133
1937-41	All	(1" dia.) Front	4	5455299
1942-57	All	use w/1074946 spring (1-1/16" dia.) Front	4	1409123

1949-54	All	(7/8" dia.) Rear	4	5453701
1955-57	All	use w/1074914 spring. (15/16" dia.) Rear	4	1409133
1958	All	(1-1/8" dia.) Front	4	5455298
1958-60	All	(1" dia.) Rear	4	5455299
1959-60	All	Front	4	5456981

Group 4.667 REPAIR KIT, WHEEL CYLINDER

NOTE: The following repair kits consist of 2 cups and 2 boots.

1935-48	All	Rear	2	5456302
1937-41	All	Front	2	5455855
1942-57	All	Front	2	5456301
1949-54	All	Rear	2	5453710
1955-57	All	Rear	2	5456302
1958	All	Front	2	5455856
1958-60	All	Rear	2	5455855
1959-60	All	Front	2	5456566

Group 4.668 PISTON, WHEEL CYLINDER

1936-41	All	(1" dia.) Front	4	231334
1942-57	All	(1-1/16" dia.) Front	4	1409125
1935-48	All	(15/16" dia.) Rear	4	1409124
1949-54	All	(7/8" dia.) Rear	4	5453700
1955-57	All	(15/16" dia.) Rear	4	1409124
1958	All	(1-1/8" dia.) Front	4	5450648
1958-60	All	(1" dia.) Rear	4	231334
1959-60	All	(1-3/16" dia.) Front	4	5456980

Group 4.669 SPRING, WHEEL CYLINDER PISTON

1935-41	All	use w/1409133 cup	Front or rear	AR	1074914
1942-57	All	use w/1409123 cup	Front	2	1074946
1942-48	All	use w/1409133 cup	Rear	2	1074914
1949-54	All		Rear	2	5453702
1955-57	All	use w/1409133 cup	Rear	2	1074914
1958	All	w/expander	Front	2	5455487
1958	All	w/expander	Rear	2	5456327
1959-60	All	w/expander	Front	2	5456982
1959-60	All	w/expander	Rear	2	5455489

Group 4.670 BOOT, WHEEL CYLINDER

1935-41	All	Front	4	231335
1935-60	All	Rear	4	231335
1942-58	All	Front	4	5450031
1959-60	All	Front	4	1074822

Group 4.671 WASHER, FRONT BRAKE PIPE TO CONNECTOR

1935-60	All	pipe connector and front hose, small . (29/64" I.D. x 45/64" O.D. x 21/64" thick)	AR	231343
---------	-----	--	----	--------

Group 4.675 LINK, WHEEL CYLINDER CONNECTING

1935-60	All	8	509233
---------	-----	---	--------

Group 4.680 HOSE, BRAKE

1939-48	All	Front	2	503925
1949-52	All	Front	2	520493
1937-57	All	Rear	1	476719
1953-54	All	Front	2	515314
1955-57	All	Front	2	520493
1958	All exc. A.S.	Front	2	515314
1958-59	All A.S.	Front	2	530795
1958-60	All	Rear	1	762921
1959-60	All exc. A.S.	Front	2	533996

Group 4.681 BRACKET, BRAKE HOSE OR PIPE

1949-54	All	rear hose to frame	1	511636
1949-52	All	front hose to frame	2	511647
1953-54	All	front hose to frame	2	515371
1955-57	All	front hose to frame	2	520280
1955-57	All exc. 2867	rear hose to frame	1	519249
1955-57	2867	rear hose to frame	1	519461
1958-60	All exc. A.S.	front hose to frame	2	519461
1958-59	All A.S.	front hose to frame	530667 RH	530668 LH
1958	All	rear hose to frame	1	530449
1958-60	All	rear hose to axle	1	530473
1958	All A.S.	front hose to upper control arm	2	530794
1959	All A.S.	front hose to upper control arm	2	533986
1959-60	All	rear hose to frame	1	532843
1935-60	All	YOKE, brake hose to frame retainer	3	709818
1958-60	All	brake hose to axle housing bracket	1	709818

Group 4.683 FLUID, HYDRAULIC BRAKE

1935-60	All	pint (super 11)	AR	5453723
1935-60	All	quart (super 11)	AR	5453724
1935-60	All	gallon (super 11)	AR	5451232
1935-60	All	5 gallons (super 11)	AR	5451233
1935-60	All	30 gallon drum (super 11)	AR	5453793
1935-60	All	FLUID, brake flushing-quart (Declene)	AR	5450412

Group 4.685 PIPE, HYDRAULIC BRAKE

1941-48	25 L.H.D.	PIPE, master cylinder to front pipe tee	1	505454
1954	All S.B.	to connector block	1	518338
1955-56	All S.B.	to connector block	1	519413
1955-56	All L.H.D., P.B.	to connector block	1	520208
1957	All L.H.D., S.B.	to connector block	1	524254
1957	All L.H.D., P.B.	to connector block	1	524263
1958	All S.B.	PIPE, to connector block	1	530549
1958	All P.B.	to connector block	1	530551
1959-60	All exc. P.B.	master cyl. to connector block	1	532946
1959-60	All P.B.	master cyl. to connector block	1	533553
1949-52	All L.H.D.	PIPE, front brake	512077 RH	512078 LH

1953	All L.H.D.	connector block to front brake	515619 RH	515620 LH
1954	All	connector block to front brake	518332 RH	518333 LH
1955-56	All	connector block to front brake	519399 RH	519401 LH
1957	All L.H.D.	connector block to front brake	524244 RH	524246 LH
1958	All exc. A.S.	connector block to front brake	530451 RH	530453 LH
1958	All A.S.	connector block to front brake	530796 RH	530797 LH
1959-60	All exc. A.S.	connector block to front brake	532933 RH	532939 LH
1959	All A.S.	connector block to front brake	532935 RH	532937 LH
1942-48	25 L.H.D.	PIPE, master cylinder to rear brake	1	507493
1942-48	26 L.H.D.		1	507494
1949-52	All L.H.D.		1	512085
1953	All L.H.D.		1	515373
1954	28 All	connector block to rear brake pipe	1	517567
1954	25 All L.H.D.	connector block to rear brake pipe	1	518336
1955-56	25-27 All L.H.D.	connector block to rear brake pipe	1	519407
1955-56	2819-37 All	connector block to rear brake pipe	1	519409
1955-56	2867	connector block to rear brake pipe	1	520412
1957	27 All L.H.D.	connector block to rear brake pipe	1	524248
1957	2819-37-39 All	connector block to rear brake pipe	1	524250
1957	2867	connector block to rear brake pipe	1	524252
1958	25-27 All	connector block to rear brake	1	530469
1958	28 All	connector block to rear brake	1	530471
1959	21-27 All	connector block to rear brake hose	1	535581
1959-60	24-28 All	connector block to rear brake hose	1	532944
1941-48	All	connector to wheel cyl.	505430 RH	
1949-55	All	connector to wheel cyl.	512081 RH	512082 LH
1956	All	connector to wheel cyl.	522396 RH	522398 LH
1957	All	connector to wheel cyl.	523985 RH	523987 LH
1958	All	connector to rear wheel cyl.	530455 RH	530457 LH
1958-60	All	hose to rear pipe connector	Center	1 530466
1959-60	All	connector to rear wheel cyl.	532948 RH	532950 LH
1960	21-23-27 All	connector block to rear brake hose	1	535581
1960	21-23-27 All	SLEEVE, brake pipe protector	1	535584
1935-60	All (8.963)	NUT, front and rear brake pipe	(1/4") AR	137397

Group 4.686 CONNECTOR, WHEEL CYLINDER PIPE

1937-48	All	brake hose to axle	Rear	1 709819
1949-55	All	brake hose to axle	Rear	1 512564
1956-57	All	brake hose to axle	Rear	1 522395
1958-60	All (8.963)	three way tee	(1/4")	1 127927

Group 4.687 SCREW, HOSE CONNECTOR BREATHER

1937-57	All	(Spec. 7/16"-20x15/16")	1	231915
		see Group 4.104 and 5.387 for use		498373

Group 4.700 LEVER ASSY., HAND BRAKE DASH

1953-54	All		1	516217
1955-56	All		1	519072
1953-54	All L.H.D.	BRACKET, hand brake dash lever	1	516223
1955-56	All L.H.D.		1	518937
1957-58	All L.H.D.	BUMPER, parking brake lever	1	524146
1953-56	All	CABLE ASSY., hand brake dash lever-w/Type D rod	1	516215
1953-56	All	GROMMET, hand brake pull rod cable-at dash	1	4597177
1957	All L.H.D.	parking brake cable-at dash	1	524260

1953-56	All	PIN, hand brake dash lever to bracket clevis	1	516209
1953-56	All	hand brake dash lever sheave to lever clevis	1	516205
1953-56	All	RING, hand brake cable to pull rod ret.-w/Type D rod	1	516198
1957-58	All L.H.D.	RIVET, parking brake release lever		
		fulcrum	(3/8"x13/16" step)	1 524148
1958	All		(3/8"x3/4" plain)	1 530942
1953-56	All	SHEAVE ASSY., hand brake dash lever	1	516220
1957-58	All L.H.D.	SPRING, parking lever release	(3 coils)	1 524147
1958	All		(15 coils)	1 530941

Group 4.764 LEVER, HAND BRAKE INTERMEDIATE

1940-52	All exc. 1940 25-26		1	505490
1953-57	All		1	515369
1958-60	All		1	529327

Group 4.765 EQUALIZER, HAND BRAKE

1939-60	All	CLEVIS, parking brake rear cable	1	502707
1939-60	All	PIN, parking brake rear cable clevis	1	502725
1940-48	All	cable to lever	1	504411
1949-56	All		1	502725
1941-48	25 All	HOOK, parking brake intermediate lever support	1	505434
1949-54	All		1	511657
1955-57	All		1	518942
1958-60	All		1	529326

Group 4.779 CABLE ASSEMBLY, BRAKE

1941-48	25 All		(63-1/4" long)	1	506440
1941-48	26-29 All		(63-1/4" long)	1	505767
1949-52	All		(62-1/4" long)	1	513644
1953-54	All		(40" long)	1	516210
1955-56	All		(39" long)	1	518938
1957	All L.H.D.	parking brake	Front (59" long)	1	524257
1958	All	parking brake	Front (65" long)	1	529921
1959-60	All	parking brake	Front	1	533706
1959-60	21-23-27 All	parking brake	Rear	1	533427
1959-60	24-28 All	parking brake	Rear	1	533428
1940	29 All	CABLE ASSY., cross lever to rear			
		brake	(159-1/2" long)	1	504105
1941-48	25 All		(150-1/4" long)	1	505428
1941-48	26-29 All		(158-1/2" long)	1	505429
1949-52	All			1	513643
1953-54	25 All		(159-3/4" long)	1	515372
1954	28 All		(164" long)	1	517566
1955-57	25-27 All		(158-1/2" long)	1	519247
1955-57	28 All		(162" long)	1	519248
1958	25-27 All		(149-3/4" long)	1	529884
1958	2831-39-49 All		(153-3/4" long)	1	529885

Group 4.781 CLEVIS, HAND BRAKE ROD OR CABLE

1941-60	All	(8.946)	cable to intermediate lever	(5/16"-24)	1	144242
1958-60	All	(8.942)	PIN, cable to intermediate lever	(5/16"x31/32")	1	121741

Group 4.784 FELT, HAND BRAKE CABLE ANCHOR

1934-60	All	2	496342
---------	-----	---	--------

Group 4.785 CLAMP-CLIP, PARKING BRAKE CABLE

1957-58	All L.H.D.	CLAMP, front cable	Inner	1	1342508
1957-58	All L.H.D.	front cable	Outer	1	524258
1958	All	CLIP, front cable to dash		1	529805

Group 4.785 ANCHOR, BRAKE CABLE TO FRAME

1939-40	All exc. 1940 25 L.H.D.	hand brake	Front	1	502739
1940	25 L.H.D.	hand brake	Front	1	502740
1941-60	All L.H.D.	hand brake	Front	1	502739
1953-54	All L.H.D.	hand brake	Front	1	516211
1955-56	All L.H.D.	hand brake	Front	2	518935
1959-60	All	BRACKET, brake rear cable frame	532841 RH		532842 LH
1953	All P.G.	GUIDE, hand brake cable		1	518660
1958-60	All	parking brake rear cable		2	528774
1953-56	All	RETAINER, hand brake cable to frame front anchor		1	516213
1959-60	All	brake front cable to dash		1	516213
1949-52	All	ANCHOR, rear brake cable to frame	511634 RH		511635 LH
1955-57	2867			2	519144
1956-57	All exc. 2867		522224 RH		522225 LH
1958	All			2	529498
1949-60	All (4.681)	YOKE, rear brake cable to brkt.		2	709818

Group 4.786 ANCHOR, BRAKE CABLE TO SUPPORT

1940	29 All		504086 RH		504087 LH
1941-52	All		504086 RH		504087 LH
1953-54	All	hand brake rear cable to rear brake	516419 RH		516420 LH
1955-57	All		519245 RH		519246 LH
1958	All			2	529642
1959-60	All		Rear 533051 RH		533052 LH

Group 4.898 KIT-BRACKET-PLATE, POWER BRAKE CYLINDER

1953-54	All Bendix P.B.	KIT, vacuum cyl. repair		1	524508
1953-54	All Bendix P.B.	hydraulic cyl. repair		1	524509
1955-56	All Bendix P.B.	vacuum cyl. repair		1	524988
1955-57	All Moraine P.B.	vacuum cyl. repair		1	5455845
1955-56	All Bendix P.B.	hydraulic cyl. repair		1	524513
1955-57	All Moraine P.B.	hydraulic cyl. repair		1	5455844
1957	All Bendix P.B.	vacuum and hydraulic cyl. repair		1	529216
1957-58	All Bendix P.B.	vacuum cyl. piston repair		1	3741364
1958	All Moraine P.B.	hydraulic cyl. repair		1	5455992
1958	All Moraine P.B.	vacuum cyl. repair		1	5455993
1958	All Bendix P.B.	vacuum cyl. repair		1	572795
1959-60	All Bendix P.B.	hydraulic cyl. repair		1	3813912
1959-60	All Bendix P.B.	hydraulic and vacuum cyl. repair		1	531939
1959	All Moraine P.B.	hydraulic and vacuum cyl. repair		1	5459082
1959-60	All Bendix P.B.	vacuum cyl. repair		1	1472987

1960	All Moraine P.B.	vacuum cyl. repair	1	5460838
1953-54	All P.B.	BRACKET, vacuum cyl. mounting	1	517750
1958	All P.B.		1	530006
1953-54	All P.B.	PLATE, vacuum cyl. mounting	1	518294
1955-56	All P.B.		1	519355
1957	All P.B., S.T.		1	523957
1957	All P.B., S.T.		1	523958

Group 4.901 CYLINDER ASSY., VACUUM POWER BRAKE

1953-54	All P.B.		1	517751
1955-56	All Bendix P.B.		1	519351
1955-57	All Moraine P.B.		1	5454950
1957	All Bendix P.B.		1	523953
1958	All Moraine P.B.		1	5455925
1959-60	All Bendix P.B.		1	533032
1959	All Moraine P.B.		1	5456645
1960	All Moraine P.B.		1	5459542

Group 4.902 TANK, VACUUM RESERVE

1953-54	All P.B. exc. A.C.		1	518314
1954	All P.B.-A.C.		1	518795
1955-56	All L.H.D., P.B.		1	520349
1957	All P.B.		1	523959
1958	All P.B.		1	530491
1959	All P.B.		1	532763
1960	All P.B.		1	536715

Group 4.904 COVER-PLATE-GASKET, VACUUM POWER BRAKE CYLINDER

1955-58	All Moraine P.B.	COVER, vac. cyl. housing	1	5454960
1953-54	All Bendix P.B.	PLATE, cylinder end	1	563751
1955-58	All Bendix P.B.	cylinder end	1	520664
1953-58	All Bendix P.B.	GASKET, cylinder end plate	1	563716
1955-58	All Moraine P.B.	cyl. housing cover	1	5454959

Group 4.906 SHELL-HOUSING, POWER BRAKE VACUUM CYLINDER

1953-54	All Bendix P.B.	SHELL ASSY., vacuum cyl.	1	519273
1955-56	All Bendix P.B.		1	563738
1957	All Bendix P.B.		1	524947
1958	All Bendix P.B.		1	531241
1959-60	All Bendix P.B.	 Front	1	1472982
1959-60	All Bendix P.B.	 Rear	1	533029
1955-57	All Moraine P.B.	HOUSING ASSY., vacuum cyl.	1	5454951
1958	All Moraine P.B.		1	5455868
1959-60	All Moraine P.B.	 Front	1	5456649
1959-60	All Moraine P.B.	 Rear	1	5459052
1959-60	All Bendix P.B. (8.977)	SCREW, vac. cyl. rear shell to front shell (No. 12-28x3/8" Rd. Hd.)	8	9412084

Group 4.910 CUP-GASKET-RING-SEAL, HYDRAULIC CYLINDER

1953-58	All Bendix P.B.	CUP, hyd. cyl. plunger	1	563706
1955-58	All Moraine P.B.	primary	1	5454877
1955-57	All Moraine P.B.	secondary	1	5454884
1955-57	All Moraine P.B.	vacuum	1	5454882
1958	All Moraine P.B.	secondary	1	5455878
1958	All Moraine P.B.	vacuum	1	5455876
1959-60	All Bendix P.B.	primary	1	534075
1959-60	All Bendix P.B.	secondary	1	534073
1953-58	All Bendix P.B.	GASKET, vacuum cyl. to hydraulic cyl.	1	563710
1955-57	All Moraine P.B.		1	5454866
1958	All Moraine P.B.		1	5455882
1955-57	All Moraine P.B.	RING, master cyl. plug "O" (1-51/64" I.D.)	2	5454885
1955-58	All Moraine P.B.	master cyl. plunger "O"	1	5454893
1957	All Bendix P.B.	master cyl. reactionary plunger	1	524277
1958	All Moraine P.B.	master cyl. plug "O" (1-51/64" I.D.)	2	5455879
1958	All Bendix P.B.	master cyl. reactionary plunger	1	572797
1959-60	All Moraine P.B.	master cyl. to housing	1	5456683
1959-60	All Bendix P.B.	master cyl. to vacuum cyl.	1	3759031
1959-60	All Moraine P.B.	master cyl. piston secondary	2	5456682
1959-60	All Moraine P.B.	piston to power diaphragm supt. "O" ring	1	5456679
1959-60	All Bendix P.B.	SEAL, vacuum cyl. push rod	1	534096
1953-58	All Bendix P.B.	SEAL, hydraulic cyl. end	1	2250517
1953-58	All Bendix P.B.	hydraulic cyl. plunger oil	1	563709
1957-58	All Bendix P.B.	hyd. cyl. plunger to vac. piston frt. plate	1	524281
1960	All Moraine P.B.	SHIM, master cyl. to front housing	2	5459511

Group 4.911 BEARING-PLUG-RETAINER-SPACER-WASHER, MASTER CYLINDER

1955-57	All Moraine P.B.	BEARING, master cyl. plunger	1	5454879
1958	All Moraine P.B.		1	5455872
1955-57	All Moraine P.B.	EXPANDER, master cyl. secondary cup	1	5455848
1955-58	All Moraine P.B.	PLUG, master cyl. seal & brg. ret.	1	5454881
1955-58	All Moraine P.B.	RETAINER, master cyl. primary cup	1	5454876
1955-57	All Moraine P.B.	secondary cup	1	5454773
1953-58	All Bendix P.B.	cyl. head plunger cup	1	563736
1958	All Moraine P.B.	secondary cup	1	5455873
1958	All Moraine P.B.	vacuum cup	1	5455877
1953-58	All Bendix P.B.	(8.934) RING, hyd. plunger stop washer snap	1	274947
1953-58	All Bendix P.B.	WASHER, hydraulic cyl. plunger stop-steel	1	563737
1953-58	All Bendix P.B.	hyd. cyl. plunger-fiber	1	563707
1955-58	All Moraine P.B.	master cyl. primary cup	1	5454878
1955-58	All Moraine P.B.	master cyl. secondary cup	1	5454883

Group 4.913 AIR CLEANER PARTS, VACUUM POWER BRAKE CYLINDER

1955-57	All Moraine P.B.	COVER, air cleaner	1	5454947
1958	All Moraine P.B.		1	5455899
1959-60	All Moraine P.B.		1	5456647
1953-58	All Bendix P.B.	SHELL, air cleaner	1	3756308
1953-58	All Bendix P.B.	ELEMENT, air cleaner	1	2185938
1955-57	All Moraine P.B.		1	5455835
1958	All Moraine P.B.	FILTER, air cleaner	1	5455900
1959-60	All Bendix P.B.		1	534094
1959-60	All Moraine P.B.		1	5459066
1953-56	All Bendix P.B.	GASKET, air cleaner shell	2	563720
1955-56	All Moraine P.B.	air cleaner cover	1	5454948
1955-56	All Bendix P.B.	air cleaner shell screw	1	520902

1955-57	All Moraine P.B.	air cleaner cover screw	1	5454930
1957-58	All Bendix P.B.	air cleaner cover	1	524304
1955-57	All Bendix P.B. (8.977)	SCREW, air cleaner shell	1	125706
1955-57	All Moraine P.B. (8.906)	air cleaner cover	1	132919
1958	All Moraine P.B. (8.906)	air cleaner cover	1	132915
1959-60	All (8.977)	air filter cover to housing (No. 8-32 x 3/8")	1	172129
1955-56	All Moraine P.B.	SPRING, air cleaner	1	5454927

Group 4.915 PLUNGER, VACUUM POWER BRAKE HYDRAULIC CYLINDER

1953-56	All Bendix P.B.		1	563731
1955-58	All Moraine P.B.		1	5454892
1957	All Bendix P.B.	hydraulic and reactionary	1	524275
1958	All Bendix P.B.	hydraulic and reactionary	1	573023
1957	All Bendix P.B.	MEMBRANE, reactionary plunger	1	524276
1958	All Bendix P.B.		1	572796
1959	All Moraine P.B.	PISTON, master cylinder	1	5456678
1960	All Moraine P.B.		1	5459609

Group 4.917 SCREW, VACUUM POWER BRAKE CYLINDER

1955-56	All Bendix P.B.	stop washer to piston rear plate	2	520651
---------	-------------------------	--	---	--------

Group 4.918 VALVE, VACUUM CYLINDER AIR

1955-57	All Moraine P.B.	VALVE, air	1	5454903
1958	All Moraine P.B.		1	5455896
1959-60	All Moraine P.B.	BUMPER, air valve	1	5456681
1959-60	All Bendix P.B.	PLUNGER ASSY., vacuum cyl. valve	1	533030
1955-58	All Moraine P.B.	RING, air valve "O" (.832 I.D.)	1	5454904
1955-58	All Moraine P.B.	SHIM, air valve	AR	5454943
1955-57	All Moraine P.B.	SPRING, air valve return	1	5454916
1958	All Moraine P.B.		1	5456602
1958	All Moraine P.B.	SNUBBER ASSY., air valve	1	5455093
1959-60	All Moraine P.B.		1	5459061

Group 4.922 BUMPER-DIAPHRAGM-GASKET-PISTON-PLATE-PACKING-RING-SPRING-WICK, POWER BRAKE VACUUM CYLINDER

1955-58	All Moraine P.B.	BUMPER, vac. cyl. piston stop	1	5455132
1953-56	All Bendix P.B.	COVER, vacuum cyl. piston diaphragm	1	563748
1953-54	All P.B.	DIAPHRAGM ASSY., vacuum cyl. piston	1	519277
1955-56	All Bendix P.B.		1	520643
1959-60	All Moraine P.B.	DIAPHRAGM, power piston	1	5456670
1955-58	All Moraine P.B.	EXPANDER, piston packing	1	5454920
1957-58	All Bendix P.B.		1	524294
1959-60	All Bendix P.B.		1	534103
1953-56	All Bendix P.B.	GASKET, vacuum cyl. piston diaphragm	1	563727
1953-54	All P.B.	PISTON, vacuum cyl.	1	519275
1955-56	All Bendix P.B.		1	520639
1955-57	All Moraine P.B.		1	5454896
1958	All Moraine P.B.		1	5455927
1960	All Moraine P.B.		1	5459577
1953-58	All Bendix P.B.	PACKING, vacuum cyl. piston-leather	1	563725
1955-58	All Moraine P.B.		1	5454918

1959-60	All Bendix P.B.	PISTON, power cyl.	1	534110
1959	All Moraine P.B.	FELT, vacuum cyl. piston	1	5456655
1957-58	All Bendix P.B.	vacuum cyl. piston	1	524293
1959-60	All Bendix P.B.	vacuum cyl. piston	1	244553
1957-58	All Bendix P.B.	PLATE, vacuum cyl. piston	Front	524290
1957-58	All Bendix P.B.	vacuum cyl. piston	Rear	524284
1957-58	All Bendix P.B.	vacuum cyl. piston felt retainer	1	524295
1959-60	All Bendix P.B.	vacuum piston	Front	534120
1959-60	All Bendix P.B.	vacuum piston	Rear	534101
1959-60	All Bendix P.B.	cyl. felt & expander retainer	1	534109
1959	All Moraine P.B.	piston diaphragm supt.	1	5456669
1960	All Moraine P.B.	piston diaphragm supt.	1	5459586
1953-56	All Bendix P.B.	RING, vacuum cyl. piston packing	1	563724
1955-57	All Moraine P.B.	guide to vac. piston "O"	(3-1/4" I.D.)	5454917
1958	All Moraine P.B.	SEAL, vacuum piston to guide	1	5455895
1959	All Moraine P.B.	power diaphragm supt. plate to power piston	1	5456671
1960	All Moraine P.B.	power diaphragm supt. plate to power piston	1	5459581
1953-53	All P.B.	SPRING, vacuum cyl. piston reaction	1	519279
1955-56	All Bendix P.B.	vacuum cyl. piston reaction	1	520657
1957	All Bendix P.B.	vacuum counter reaction	1	529659
1958	All Bendix P.B.	vacuum counter reaction	1	531234
1953-56	All Bendix P.B. (8.977)	SCREW, diaphragm cover to		
		piston	(No. 8-32x1/2" Fil. Hd.)	5 172131
1953-56	All Bendix P.B. (8.977)	piston packing ret. plate	(No. 8-32x3/8" Fil. Hd.)	5 172129
1955-56	All P.B. (4.663)	vac. tube to rear plate	(No. 10-24x7/16" Pan Hd.)	1 9404148
1953-56	All Bendix P.B.	WICK, vacuum cyl. piston packing	1	3847672
1955-58	All Moraine P.B.	piston cup lubricating	1	5454919
1957-58	All Bendix P.B.	WASHER, vac. cyl. counter reaction spring	1	524301

Group 4.924 DISC-GUIDE-RETAINER-RING-SPRING, VACUUM POWER BRAKE CYLINDER

1959-60	All Bendix P.B.	DISC, vacuum cyl. piston reaction	1	533709
1955-57	All Moraine P.B.	GUIDE, vac. cyl. piston	1	5454889
1958	All Moraine P.B.		1	5455886
1957-58	All Bendix P.B.	RETAINER, vacuum cyl. piston return spring	1	576441
1959-60	All Bendix P.B.	ROD, vacuum cyl. to master cyl. push	1	534098
1953-56	All Bendix P.B.	SPRING, vacuum cyl. piston return	1	563739
1955-58	All Moraine P.B.		1	5454886
1957-58	All Bendix P.B.		1	524280
1959	All Moraine P.B.		1	5456674
1959-60	All Bendix P.B.		1	534104
1960	All Moraine P.B.	power piston return	1	5459506
1955-58	All Moraine P.B. (8.900)	BOLT, guide to piston	(1/4"-20 x 1/2")	4 180016
1953-54	All P.B.	WASHER, vacuum cyl. piston stop-rubber	1	563713
1955-58	All Moraine P.B. (8.931)	WASHER, guide to piston	(1/4" Zinc)	4 120380

Group 4.926 PIN, VACUUM CYLINDER PUSH ROD

1953-57	All P.B.		1	517752
---------	----------	--	---	--------

Group 4.928 VALVE ASSY., POPPET

1955	All Bendix P.B.	VALVE ASSY., atmospheric poppet	1	520648
1955	All Bendix P.B.	vacuum poppet	1	520649
1956	All Bendix P.B.	atmospheric poppet	1	522069
1956	All Bendix P.B.	vacuum poppet	1	522071

1957-58	All Bendix P.B.	vacuum poppet	1	524287
1959-60	All Bendix P.B.	vacuum poppet	1	1472981
1955-56	All Bendix P.B.	ARM, poppet valve pivot	1	520660
1955-56	All Bendix P.B.	DIAPHRAGM, poppet valve compensator	1	520659
1957-58	All Bendix P.B.	vacuum poppet	1	524288
1959	All Bendix P.B.	vacuum poppet	1	534111
1955-56	All Bendix P.B.	KIT, poppet valve repair	1	3733919
1957-58	All Bendix P.B.	poppet valve repair	1	3741365
1955-56	All Bendix P.B.	NUT, poppet valve	4	522072
1957-58	All Bendix P.B.	PLATE, vac. poppet diaphragm (1-13/32" I.D.)	1	524289
1957-60	All Bendix P.B.	PLATE, vac. poppet diaphragm (1-1/2" I.D.)	1	524299
1957-60	All Bendix P.B.	RETAINER, vac. poppet return spring	1	524297
1955-56	All Bendix P.B.	RING, pivot washer retainer	1	2311549
1955-56	All Bendix P.B.	SPRING, atmospheric poppet valve return	1	520661
1955-56	All Bendix P.B.	vacuum poppet valve return	1	520689
1959-60	All Bendix P.B.	STEM, vacuum poppet valve compensator	1	3764014
1955-56	All Bendix P.B.	WASHER, poppet valve pivot	1	520658
1955-56	All Bendix P.B.	WASHER, poppet valve pivot	1	520652

Group 4.930 PIPE-FITTING-VALVE-SPRING-RETAINER, VACUUM POWER BRAKE

1953-54	All P/6-P.B.	PIPE, manifold to check valve-front . . . (3-7/8" long)	1	518818
1953-54	All P/8-P.B.	manifold to check valve-front (6" long)	1	518817
1953-54	All P.B. exc. A.C.	reserve tank to check valve tee (13-1/2" long)	1	518395
1953-54	All P.B.	vacuum cyl. to connector block (11" long)	1	518394
1953-54	All P.B.	vacuum cyl. to check valve (28" long)	1	518403
1955	All P.B. w/2 B.C.	carburetor to check valve (33" long)	1	520451
1955-56	All P.B.	vacuum cyl. to check valve (27-1/4" long)	1	520452
1955-56	All P.B.	vacuum tank to check valve (16-1/8" long)	1	520453
1955-56	All P.B. w/4 B.C.	(carter) carburetor to check valve	1	521471
1956	All P.B. w/2 B.C.	carburetor to check valve	1	521945
1957	All P.B.	vacuum tank to check valve (10-1/4" long)	1	523956
1957	All P.B.	vacuum cyl. to check valve (22-5/8" long)	1	523955
1953-60	All (8,963)	NUT, threaded sleeve (3/8" tubing)	AR	114965
1953-58	All Bendix P.B.	FITTING, hydraulic cyl. compensating valve	1	563730
1953-54	All P.B.	hydraulic cyl. residual check valve	1	563734
1955-57	All Bendix P.B.	hydraulic cyl. residual check valve	1	520407
1955-58	All P.B. exc. F.I.	vacuum pipes to carb.	1	520012
1959-60	All 2 B.C.-4 B.C. & P.B. (3,278)	vacuum pipes to carb. (4-way)	1	533690
1960	All P.B. (3,278)	vacuum pipes to carb.	1	535247
1953-55	All P.B.	ELBOW, check valve to manifold pipe hose	1	518815
1958	All P.B.-F.I. (3,901)	vacuum pipe to intake manifold	1	528504
1953-58	All Bendix P.B.	VALVE ASSY., hydraulic cyl. compensating	1	563721
1953-58	All Bendix P.B.	CUP, hydraulic cyl. residual check valve	1	519285
1953-58	All Bendix P.B.	SPRING, hydraulic cyl. compensating valve	1	563701
1953-58	All Bendix P.B.	RETAINER, hyd. cyl. compensating valve spring	1	563702
1953-58	All Bendix P.B.	hydraulic cyl. residual check valve cup	1	519286
1959	All P.B.-2 B.C.-4 B.C. (3,765)	BRACKET, carb. fitting to check valve hose	1	533748
1955-57	All P.B.	CLIP, vacuum pipes to rocker arm cover	1	520014

Group 4.931 CLAMP-HOSE, VACUUM POWER BRAKE

1953-60	All P.B. (1,166)	CLAMP (11/16")	AR	111603
1960	All Moraine P.B. (8,948)	power cyl. diaphragm frt. hsg. ext. hose	1	272847
1960	All Moraine P.B.	power cyl. front hsg. exh. hose to tube	1	5460266
1960	All P.B.-2 B.C.- 4 B.C. (3,765)	vacuum hose (3/4" dia.)	1	535158

1960	All P.B.	vacuum hose to vacuum pipes (7/8" dia.)	2	535159
1953-54	All P.B.	HOSE, manifold to check valve pipe (9" long)	1	518816
1953-54	All P.B.	reserve tank to check valve pipe . . . (7-1/2" long)	1	518509
1953-56	All Bendix P.B.	vacuum cyl. to piston	1	521051
1953-54	All P.B.-A.C.	vacuum cyl. to reserve tank . . . (3/8" I.D. 28" long)	1	530783
1955-56	All P.B.	vacuum pipe to check valve	1	530783
1955-56	All P.B.	manifold to check valve pipe	1	530783
1955-57	All Moraine P.B.	vacuum cyl. exhaust	1	5454923
1957-58	All Bendix P.B.	vacuum cyl. to piston	1	524311
1958	All Moraine P.B.	vacuum cyl. exhaust	1	5455034
1958-60	All P.B.	vacuum cyl. to reserve tank	1	532762
1959-60	All Moraine P.B.	diaphragm front housing exhaust	1	5456668
1959-60	All Bendix P.B.	vacuum cyl.	1	534105
1959-60	All P.B.-3/2 B.C.	tee to power brake check valve	AR	530783
1959-60	All P.B.-3/2 B.C.	tee to carb. check valve	AR	530783
1959-60	All P.B.	check valve to vacuum cyl.	AR	530783
1953-54	All P.B.	PLATE AND TUBE, vacuum hose to cyl.	1	519280
1955-56	All Bendix P.B.	vacuum hose to cyl.	1	520667
1955-57	All Moraine P.B.	vacuum cyl. exhaust	1	5454957
1957	All Bendix P.B.	vacuum hose to cyl.	1	524946
1958	All Bendix P.B.	vacuum hose to cyl.	1	531242
1953-54	All P.B.	GASKET, plate and tube to cyl.	1	519283
1955-56	All Bendix P.B.	plate and tube to cyl.	1	3715020
1955-58	All Moraine P.B.	plate and tube to cyl.	1	5454867
1957-58	All Bendix P.B.	plate and tube to cyl.	1	563715
1959-60	All Moraine P.B.	exhaust tube to hsg.	1	5459035
1955-56	All Bendix P.B.	SEAL, plate and tube to piston	1	3718453
1954	All P.B.-A.C.	TEE, vacuum cyl. to reserve tank hose (for 3/8" I.D. hose)	1	518918
1953-54	All P.B. exc. A.C.	vacuum reserve tank to check valve pipe	1	144427
1953-54	All P.B. exc. A.C.	vacuum pump to manifold pipe	1	518819
1955-57	All P.B.	vacuum reserve tank to check valve pipe	1	144427
1959-60	All P.B.-3/2 B.C.	check valve	1	533751
1958	All Moraine P.B.	TUBE ASSY., vacuum cyl. exhaust	1	5455931
1959-60	All Moraine P.B.	vacuum cyl. exhaust	1	5459063
1959-60	All Bendix P.B.	TUBE & COVER ASSY., air inlet & vacuum exh.	1	533031
1953-54	All P.B.-A.C.	ELBOW, vacuum cyl. to check valve pipe (3/8" threaded sleeve)	1	519259
1953-56	All Bendix P.B. (8.977)	SCREW, tube and plate to piston (No. 8-32x3/8" Fil. Hd.)	2	172129
1955-60	All Moraine P.B. (8.907)	tube to shell (No. 8-32x1/4" Fil. Hd.)	2	131954

Group 4.934 LEVER-PLATE-RING-SPRING, VACUUM POWER BRAKE

1955-58	All Moraine P.B.	LEVER, vac. cyl. piston plate reaction	6	5454915
1959-60	All Moraine P.B.		1	5456657
1955-57	All Moraine P.B.	PLATE, hydraulic plunger reaction	1	5454894
1955-58	All Moraine P.B.	air valve reaction	1	5454982
1958	All Moraine P.B.	hydraulic plunger reaction	1	5455995
1959-60	All Moraine P.B.	master cyl. reaction	1	5459057
1959-60	All Moraine P.B.	power piston air valve reaction	1	5456664
1955-58	All Moraine P.B.	RING, piston guide snap	1	5454895
1959-60	All Moraine P.B.	reaction plate retaining	1	5456673
1955-57	All Moraine P.B.	SPRING, vac. cyl. reaction lever	1	5454942
1958	All Moraine P.B.		1	5456603

Group 4.935 FLOATING CONTROL VALVE AND PARTS

1955-58	All Moraine P.B.	DIAPHRAGM, floating control valve	1	5454910
1959-60	All Moraine P.B.	piston valve reaction	1	5459103

1959-60	All Moraine P.B.	piston floating control valve and reaction	1	5459104
1955-57	All Moraine P.B.	VALVE ASSY., floating control	1	5454907
1958	All Moraine P.B.		1	5455891
1955-58	All Moraine P.B.	PLATE, diaphragm retainer	1	5454936
1959-60	All Moraine P.B.	piston reaction diaphragm supt.	1	5456662
1955-57	All Moraine P.B.	RETAINER, floating control valve spring	1	5454937
1958	All Moraine P.B.		1	5455893
1959-60	All Moraine P.B.	piston reaction diaphragm	1	5456661
1959-60	All Moraine P.B.	floating control valve spring	1	5459107
1955-58	All Moraine P.B.	RING, diaphragm retainer	1	5454911
1955-57	All Moraine P.B.	SPRING, diaphragm retainer	1	5454912
1958	All Moraine P.B.		1	5455894
1959-60	All Moraine P.B.	SPRING, floating valve return	1	5459106

Group 4.944 SEAL, VACUUM POWER BRAKE CHECK VALVE

1953-58	All Bendix P.B.	compensating check valve fitting	1	2238386
---------	-----------------	----------------------------------	---	---------

Group 4.955 VALVE ASSY., VACUUM POWER BRAKE CHECK

1953-55	All Bendix P.B.		1	518401
1955	All Moraine P.B.		1	5454944
1956-57	All P.B.		1	5454944
1958-60	All P.B.		1	5455973