

YEAR	MODEL	PART NAME	PART NO.	PER CAR	PART NO.
Group 5.001 SUPPORT ASSEMBLY, FRONT BRAKE					
1949-54	All		513035 RH		513036 LH
1955-56	All			2	5454513
1957	All			2	523926
1958	All		5456423 RH	1	5456422 LH
1959	All		5456959 RH	1	5456958 LH
1960	All		5459737 RH		5459736 LH
1939-41	All	SUPPORT ASSEMBLY, rear brake	509278 RH	1	509279 LH
1942-48	All		509215 RH	1	509216 LH
1949-57	All		509278 RH		509279 LH
1958	All		5456425 RH	1	5456424 LH
1959-60	All		5460023 RH		5460022 LH

Group 5.002 BOLT, FRONT BRAKE SUPPORT TO KNUCKLE

1937-57	All	wheel stop		2	502322
1939-60	All		(Hex. 7/16"-20x2-3/8")	6	502321
1958-60	All		(Hex. 9/16"-18x1")	2	9411285
1959-60	All	GASKET, front brake supt. to knuckle		2	535519
1960	All	KIT, front brake mist shield		1	5461009
1937-57	All	SPACER, front brake support to knuckle		4	556941

Group 5.017 BRAKE SHOE AND LINING PACKAGE
(For Two Wheels)

NOTE: Consists of 2 primary and 2 secondary shoe and lining assemblies.

1939-41	All		Front or rear	2	514475
1942-48	All		Front	1	516552
1942-54	All		Rear	1	514475
1949-54	All		Front	1	514472
1955-58	All exc. H.D.C.		Front	1	519983
1955-58	All		Rear	1	520887
1959-60	All		Front	1	534299
1959-60	All		Rear	1	534301
1941	All	.030 O.S.	Front or rear	1	516535
1942-54	All	.030 O.S.	Rear	1	516535
1949-54	All	.030 O.S.	Front	1	516530
1955-58	All	.030 O.S.	Front	1	519988
1955-58	All	.030 O.S.	Rear	1	520891
1958	All H.D.C.		Front	1	5456497
1959-60	All	.030 O.S.	Front	1	534300
1959-60	All	.030 O.S.	Rear	1	534302

Group 5.018 BRAKE LINING PACKAGE
(For Two Wheels)

1939-41	All		Front or rear	2	516543
1942-54	All		Rear	1	516543
1942-48	All		Front	1	516562
1949-54	All		Front	1	516540
1955-58	All exc. H.D.C.		Front	1	519993
1955-58	All		Rear	1	520889
1959-60	All		Front	1	534295
1959-60	All		Rear	1	534297
1941	All	.030 O.S.	Front or rear	2	516549
1942-48	All	.030 O.S.	Front	1	516565
1942-54	All	.030 O.S.	Rear	1	516549

1949-54	All	.030 O.S.	Front	1	516546
1955-58	All	.030 O.S.	Front	1	519996
1955-58	All	.030 O.S.	Rear	1	520894
1958	All H.D.C.		Front	1	5460251
1959-60	All	.030 O.S.	Front	1	534296
1959-60	All	.030 O.S.	Rear	1	534298

Group 5.019 RIVET, BRAKE SHOE LINING

1934-48	All			80	413901
---------	-----	--	--	----	--------

Group 5.022 GASKET, REAR BRAKE TO AXLE HOUSING

1937-58	All			2	231888
1959-60	All			2	532397

Group 5.024 BOLT, REAR BRAKE PLATE TO AXLE HOUSING

1937-60	All	(Spec. 3/8"-24x1")		8	414999
---------	-----	--------------------	--	---	--------

Group 5.026 SPRING, BRAKE SHOE

1934-60	All	adjusting screw		4	3707417
1935-38	All	anchor pin to shoe		8	497834
1937-38,					
1942-48	All	secondary-red		4	1415663
1939-54	All	shoe to anchor-green	Front	4	508126
1939-51	All	shoe to anchor-green	Rear	4	508126
1951-60	All	shoe to anchor-gray	Rear	4	3694822
1955-58	All	shoe to anchor	Front	4	497834
1959-60	All	shoe to anchor pin-green		4	508126

Group 5.030 LOCK

LOCK (see Group 4.246 for use)	475508
--------------------------------	--------

Group 5.041 PIN, BRAKE SHOE HOLD-DOWN SPRING

1935-41	All		Front	4	5300962
1942-48	All		Front	4	412685
1949-54	All		Front	4	512132
1935-57	All		Rear	4	5300962
1955-60	All exc. H.D.C.		Front	4	1293908
1958	All H.D.C.		Front	4	5300962
1958	All		Rear	4	1293908
1959-60	All		Rear	4	1293958

Group 5.042 CUP, BRAKE SHOE HOLD-DOWN SPRING

1934-57	All			8	493997
1958-60	All	CUP AND SPRING, brake shoe hold-down		8	5456480

Group 5.043 SPRING, BRAKE SHOE HOLD-DOWN

1934-57	All			8	231186
1935-41	All	SPRING PACKAGE, for 1 wheel	Front	2	510329
1935-57	All		Rear	2	510329
1942-48	All		Front	2	510330
1949-54	All		Front	2	513399
1958-60	All			4	530020
1959-60	All		Rear	2	534357

Group 5.045 GUIDE, BRAKE SHOE ANCHOR PIN

1935-60	All exc. H.D.C.		Front	2	497812
1935-60	All		Rear	2	497812
1958	All H.D.C.		Front	2	5454014

Group 5.055 PIN, BRAKE SHOE ANCHOR

1935-58	All exc. H.D.C.	with guide	Front or rear	4	5454791
1958	All H.D.C.		Front	2	5454059
1959-60	All		Front or rear	4	5454791

Group 5.056 WASHER, BRAKE SHOE ANCHOR PIN

1934-60	All		(5/8" heavy)	4	494177
1958	All H.D.C.	spacer	Front	2	5456551

Group 5.057 NUT, BRAKE SHOE ANCHOR PIN

1949-58	All		Front	2	553746
1959-60	All		Front or rear	4	553746

Group 5.110 SCREW, BRAKE SHOE ADJUSTING

1935-58	All			4	496351
1959-60	All		Front or rear 5455768 RH		496351 LH

Group 5.111 NUT-SOCKET, BRAKE SHOE ADJUSTING SCREW

1935-41	All	NUT, brake shoe adjusting	Front	1	509235
1935-58	All		Rear	2	509235
1942-58	All		Front	2	509208
1959-60	All	w/4 grooves	Front and rear 5456962 RH		
1959-60	All	w/3 grooves	Front and rear		509208 LH
1959-60	All	w/1 groove	Rear 5459322 RH		
1959-60	All	w/2 grooves	Rear		509235 LH
1935-41	All	SOCKET, brake shoe adjusting screw	Front	2	509234
1935-58	All		Rear	2	509234
1942-59	All		Front	2	509209
1959-60	All	w/1 groove	Rear	2	509209
1959-60	All	less grooves	Rear	2	509234

Group 5.117 COVER, BRAKE ADJUSTER HOLE

1932-60	All	rubber plug	4	503630
---------	-----	-------------	---	--------

Group 5.149 LEVER, HAND BRAKE ACTUATING

1939-58	All	Rear	509210 RH	509211 LH
1959-60	All		5456974 RH	5456973 LH

Group 5.150 STRUT, REAR BRAKE LEVER TO SHOE

1939-58	All		2	553738
1959-60	All		2	5456975

Group 5.151 SPRING, REAR BRAKE

1939-60	All		2	502327
---------	-----	--	---	--------

Group 5.158 PIVOT, PARKING BRAKE ACTUATING LEVER

1935-60	All		2	502305
1937-60	All	WASHER, parking brake lever pivot spring	2	1300540

Group 5.381 BUSHING ASSY., REAR AXLE CONTROL ARM

1958-59	All	Lower	4	529804
1958-60	All	Upper	2	529804
1958-60	All	upper control arm to axle housing	1	530017
1960	All	Lower	4	532072

Group 5.382 ARM-CLAMP, REAR AXLE CONTROL

1958-60	All	ARM	Upper	1	529803
1958-59	All		Lower	2	533537
1960	All	(1st. type)	Lower (30" long)	2	531690
1960	All	(2nd type)	Lower (29" long)	2	535233
1958-60	All	CLAMP ASSY., upper control arm bushing		1	529731

Group 5.383 BOLT, REAR AXLE CONTROL ARM

1958-60	All	to axle	Upper (9/16"-18x4")	1	529730
1958-60	All	to axle and frame	Upper and lower (9/16"-18x3-9/16")	6	528733
1959-60	All	upper control arm bushing clamp to axle hsg.	Upper (7/16"-20x1-1/8")	1	533675
1960	All	rear bshg. clamp to axle hsg.	Lower (7/16"-20x1")	1	535113
1959-60	All	NUT, to axle and frame	Upper and lower (9/16"-18)	6	451023

Group 5.387 HOUSING ASSY., REAR AXLE

1949	All		1	511248
1950-54	All		1	513615
1955-56	All		1	521667
1957	All		1	523417
1958	All		1	529742
1959-60	All	(1st type on 1960-see note)	1	536275
1960	All	(2nd type-see note)	1	535229
1937-60	All	(4.687) CAP, axle breather screw	1	498373
1937-57	All	(4.687) SCREW, axle breather and hose connector	1	231915
1958-60	All	axle breather (7/16"-20 x 9/16")	1	530301

NOTE: 1st type-used w/30" lower control arms.
2nd type-used w/29" lower control arms.

Group 5.394 RETAINER, REAR SPRING BUMPER

1937-53	All exc. 1940 29		2	502257
1954	All		2	517532
1955-57	All		2	520875
1955-57	25/2711-19-37-39 All	BRACKET, differential carrier bumper-on floor pan	1	519256
1955-57	25/2762-63-64 All		1	519257
1955-57	28 All		1	519258
1958	All	rear axle bumper-on frame 529157 RH		529158 LH
1955-57	All	BUMPER, differential carrier	1	516442
1958	2793-94 All	SPACER, rear axle bumper	2	529049
1959-60	2135-45, 2735		2	532362

Group 5.395 BUMPER, REAR SPRING AXLE

1939-54	All	w/retainer	2	520881
1955-56	All		2	520874
1957	All		2	524519
1958-60	All		2	529937

Group 5.400 PLUG, REAR AXLE HOUSING FILLER

1937-49	All		1	1330801
1949-60	All	(8.971) used on cars with filler plug in diff. carrier (1/2" pipe thd.)	1	444788

Group 5.403 SEAT, REAR SPRING

1958-60	All exc. A.S.	Lower	2	528807
---------	---------------	-------	---	--------

Group 5.417 BUSHING, REAR STABILIZER LINK

1958-60	All	(7.244)	8	1194162
---------	-----	---------	---	---------

Group 5.420 SHAFT, REAR AXLE

1937-40	All	see note (30-5/32" long)	502063 RH	502064 LH
1941-48	All	(30-27/32" long)	505118 RH	505119 LH

1949-56	All	(30-5/32" long)	502063 RH	502064 LH
1957-58	All	(29-21/32" long)	531292 RH	531293 LH
1959-60	All	(31-13/16" long)	532315 RH	532316 LH

NOTE: Use 1-412111 Group 5.822 and 1-567105 Group 5.816 on 1937-38.

Group 5.447 BEARING, DIFFERENTIAL PINION FRONT

1937-47	All	ball type	1	954780
1947-56	All	roller type	1	188963
1957-60	All	roller type	1	7451092

Group 5.452 SCREW, FRONT PINION BEARING LOCK

1933-47	All	with ball type pinion bearing	3	358073
---------	-----	-------------------------------	---	--------

Group 5.453 SLEEVE, PINION BEARING LOCK

1937-47	All	with ball type pinion bearing	Front	1	499532
1947-56	All	SPACER, rear axle drive pinion bearing-			
		with roller type pinion bearing	Front	1	510424
1947-56	All	with roller type pinion bearing	Rear	1	510425
1957-60	All			1	528485

Group 5.460 SHIM, PINION BEARING ADJUSTING

1937-47	All	with ball type pinion bearing, front	(.012" plain)	AR	499528
1937-47	All	with ball type pinion bearing, front	(.018" plain)	AR	499530
1939-47	All	with ball type pinion bearing, front	(.014" blued)	AR	503063
1947-56	All	with roller type pinion bearing	(.002" plain)	AR	509263
1947-56	All	with roller type pinion bearing	(.003" blued)	AR	509264
1947-56	All	with roller type pinion bearing	(.004" copper)	AR	509265
1947-56	All	with roller type pinion bearing	(.005" plain)	AR	509266
1947-56	All	with roller type pinion bearing	(.010" plain)	AR	509267
1957-60	All		(.004" plain)	AR	524014
1957-60	All		(.005" blue)	AR	524015
1957-60	All		(.006" copper)	AR	524016
1957-60	All		(.007" plain)	AR	524017
1957-60	All		(.010" plain)	AR	524020

Group 5.468 SHIELD, FRONT PINION BEARING SPLASH

1947-55	All	with roller type pinion bearing	1	506929
1956	All		1	522131
1957-60	All		1	516749

Group 5.469 SEAL, FRONT PINION BEARING OIL

1937-47	All	with ball type pinion bearing	1	501839
1947-56	All	with roller type pinion bearing	1	506938
1957-60	All		1	565889

Group 5.484 BEARING, DIFFERENTIAL PINION REAR

1937-47	All	ball type	1	107391
1947-56	All	roller type	1	188960
1957-60	All	roller type	1	7450646

Group 5.489 RING, DIFFERENTIAL REAR PINION BEARING LOCK

1935-47	All	except 44-9 axle on 1935-36 with N.D. bearing axle	1	377722
---------	-----	--	---	--------

Group 5.504 CARRIER ASSEMBLY, DIFFERENTIAL

1949-54	All	41-10 ratio (4.10-1)	1	513358
1949-54	All	40-11 ratio (3.63-1)	1	513361
1949-55	All S.T.	39-10 ratio (3.90-1)	1	520936
1949-54	All	43-10 ratio (4.30-1)	1	513567
1952-54	All H.T.	40-13 ratio (3.07-1)	1	516599
1953-54	All H.T.	41-12 ratio (3.42-1)	1	517841
1954	All H.T.	42-13 ratio (3.23-1)	1	518566
1953	All P.G.	40-11 ratio (3.63-1)	1	518638
1955	All S.T.	40-11 ratio (3.63-1)	1	520937
1955	All H.T.	40-13 ratio (3.07-1)	1	520938
1955	All H.T.	42-13 ratio (3.23-1)	1	520939
1956	All S.T.	39-10 ratio (3.90-1)	1	522207
1956	All S.T.	40-11 ratio (3.63-1)	1	522208
1956	All H.T.	40-13 ratio (3.07-1)	1	522209
1956	All H.T.	42-13 ratio (3.23-1)	1	522210
1957-58	All exc. L.D.	39-10 ratio (3.90)	1	531538
1957-58	All exc. L.D.	40-11 ratio (3.64)	1	531539
1957-58	All	40-13 ratio (3.08)	1	531542
1957-58	All exc. L.D.	41-12 ratio (3.42)	1	531540
1957-58	All exc. L.D.	42-13 ratio (3.23)	1	531541
1958	All L.D.	40-11 ratio (3.64)	1	531544
1958	All L.D.	40-13 ratio (3.08)	1	531547
1958	All L.D.	41-12 ratio (3.42)	1	531545
1958	All L.D.	42-13 ratio (3.23)	1	531546
1959-60	All exc. L.D.	39-10 ratio (3.90)	1	533388
1959-60	All exc. L.D.	40-11 ratio (3.64)	1	533387
1959-60	All exc. L.D.	40-13 ratio (3.08)	1	533384
1959-60	All exc. L.D.	41-12 ratio (3.42)	1	533386
1959-60	All exc. L.D.	42-13 ratio (3.23)	1	533385
1959-60	All exc. L.D.	43-15 ratio (2.87)	1	533383
1959-60	All L.D.	39-10 ratio (3.90)	1	535138
1959-60	All L.D.	40-11 ratio (3.64)	1	535137
1959-60	All L.D.	40-13 ratio (3.08)	1	535134
1959-60	All L.D.	41-12 ratio (3.42)	1	535136
1959-60	All L.D.	42-13 ratio (3.23)	1	535135
1959-60	All L.D.	43-15 ratio (2.87)	1	535133
1960	All exc. L.D.	43-16 ratio (2.69)	1	534576
1960	All L.D.	43-16 ratio (2.69)	1	534577

Group 5.505 CARRIER AND CAP, DIFFERENTIAL

1939-47	All	with ball type pinion bearing	1	501825
---------	-----	-------------------------------	---	--------

1947-56	All			1	520761
1957-58	All			1	524792
1959-60	All			1	535271
1947-56	All	PLUG, oil hole	(31/64" dia.)	1	510712
1957-58	All		(19/32" dia.)	1	522497
1959-60	All	(0.034)	(9/16" dia.)	1	518026
		WASHER (see Group 7.242 for use)			564352

Group 5.506 BOLT, DIFFERENTIAL CARRIER

1949-56	All	to housing	(Hex. 7/16"-20x1")	AR	512389
1955-56	All	to housing	(Hex. 7/16"x1-5/8")	2	518243
1957	All	to housing	(Hex. 3/8"-24x1-1/2")	10	570222
1958-60	All	to housing	(Hex. 3/8"-24x1-1/2")	9	570222
1958-60	All	to housing	(Hex. 3/8"-24x1-5/8")	1	530474
1947-56	All	BOLT, differential bearing cap	(Hex. 1/2"-13x2-1/2")	4	499515
1957-60	All		(Hex. 1/2"-13 x 3")	4	516743
1957-60	All	NUT, carrier to housing bolt	(3/8-24)	10	529548

Group 5.508 GASKET, DIFFERENTIAL CARRIER TO HOUSING

1937-48	All			1	501958
1949-56	All			1	512390
1957-60	All			1	569569

Group 5.510 CASE, DIFFERENTIAL

1939-56	All	exc. 40-13, 41-12 and 42-13 ratio		1	523023
1952-56	All	use w/40-13, 41-12 and 42-13 ratio		1	523070
1957-58	All exc. L.D.	use w/39-10, 40-11 and 41-12 ratio		1	522499
1957-58	All exc. L.D.	use w/40-13 and 42-13 ratio		1	522498
1958	All L.D.	w/bolts-use w/39-10, 40-11 and 41-12 ratio		1	533599
1958	All L.D.	w/rings, gears, discs and plates-39-10, 40-11 and 41-12 ratio		1	531085
1958	All L.D.	w/rings, gears, discs and plates-40-13 and 42-13 ratio		1	531086
1958-60	All L.D.	w/bolts-use w/40-13, 42-13, 43-15 and 43-16 ratio		1	533600
1959-60	All H.T. exc. L.D.	use w/40-13, 42-13 and 43-15 ratio		1	532283
1959-60	All S.T. exc. L.D.	use w/41-12, 40-11 and 39-10 ratio		1	532284
1959-60	All L.D.	w/bolts-use w/39-10, 40-11, 41-10, 41-12 and 43-10 ratio		1	533599
1959-60	All L.D.	w/rings, gears, discs and plates-39-10, 40-11, 41-10 41-12 and 43-10 ratio		1	535152
1959-60	All L.D.	w/rings, gears, discs and plates-40-13, 42-13, 43-15 and 43-16 ratio		1	535153
1958-60	All L.D.	BOLT, differential case	(3/8"-16x2-29/32")	8	531307

Group 5.511 DISC-PLATE-RING, DIFFERENTIAL CLUTCH

1958-60	All L.D.	DISC, clutch		4	531308
1958-59	All L.D.	PLATE, clutch	(.063-.058)	6	531405
1958-59	All L.D.		(.093-.088)	6	531404

1958-59	All L.D.		(.101-.096)	6	531403
1958-59	All L.D.	bellville spring		2	534987
1958-60	All L.D.	also use two 534987 plates	(.094)	4	534938
1960	All L.D.		(.096)	4	534939
1958-60	All L.D.	belleville spring		2	534987
1958-60	All L.D.	PACKAGE, clutch plate and disc		2	535595
1958	All L.D.	RING, side gear		2	531311
1959-60	All L.D.			2	533604

Group 5.517 SHAFT, DIFFERENTIAL PINION

1939-60	All exc. L.D.			1	501833
1958-60	All L.D.			2	531312

Group 5.518 PIN-SCREW, DIFFERENTIAL PINION SHAFT LOCK

1956	All	PIN		1	521658
1933-55	All	SCREW	(5/16"-18 x 2")	1	472546
1957-60	All exc. L.D.			1	472546

Group 5.526 GEAR, DIFFERENTIAL PINION

1958-60	All L.D.			4	2370715
---------	----------	--	--	---	---------

Group 5.527 GEAR PACKAGE, DIFFERENTIAL

1937-56	All	consists of 2 side gears and 2 pinion gears		1	509520
1957-58	All exc. L.D.	consists of 2 side gears and 2 pinion gears		1	524573
1959-60	All exc. L.D.	consists of 2 side gears and 2 pinion gears		1	533509

Group 5.528 GEAR, DIFFERENTIAL SIDE

1958	All L.D.			2	531309
1959-60	All L.D.			2	533605

Group 5.529 RING GEAR AND PINION, DIFFERENTIAL

NOTE: When changing gear ratio see Group 4.337 for proper speedometer gear.

1939-47	All	39-10 ratio (3.90-1), with ball type pinion bearing		1	513459
1939-47	All	43-10 ratio (4.30-1), with ball type pinion bearing		1	513457
1947-56	All	39-10 ratio (3.90-1), with roller type pinion bearing		1	516699
1947-54	All	41-10 ratio (4.10-1), with roller type pinion bearing		1	513462
1947-54	All	43-10 ratio (4.30-1), with roller type pinion bearing		1	513461
1948-56	All	40-11 ratio (3.63-1)		1	516700
1952-54	All H.T.	40-13 ratio (3.07-1)		1	516701
1953-54	All H.T.	41-12 ratio (3.42-1)		1	516698
1954	All H.T.	42-13 ratio (3.23-1)		1	518565
1955-56	All H.T.	42-13 ratio (3.23-1)		1	521423

1955-56	All H.T.	40-13 ratio (3.07-1)	1	522144
1957-60	All	39-10 ratio (3.90)	1	531549
1957-60	All	40-13 ratio (3.08)	1	531553
1957-60	All	41-12 ratio (3.42)	1	531551
1957-60	All	42-13 ratio (3.23)	1	531552
1957-60	All	40-11 ratio (3.64)	1	531550
1959-60	All	43-15 ratio (2.87)	1	533412
1960	All	43-16 ratio (2.69)	1	534578

Group 5.531 BOLT, RING GEAR TO CASE

1937-56	All	exc. 40-13, 41-12 and 42-13 ratio axle (3/8"-24x3/4")	12	517082
1952-56	All	w/40-13, 41-12 and 42-13 ratio axle (3/8"-24x11/16")	12	517083
1957-60	All	 (3/8"-24 x 7/8")	12	529147

Group 5.535 LUBRICANT, REAR AXLE GEAR

1939-60	All	ES-52 (1 qt. can)	AR	531536
---------	---------------	-----------------------------	----	--------

Group 5.536 BEARING, DIFFERENTIAL SIDE

1937-56	All	roller type	2	179243
1957-60	All	roller type	2	7450299

Group 5.537 NUT, DIFFERENTIAL SIDE BEARING ADJUSTING

1939-56	All		2	515535
1957-60	All		2	516758

Group 5.539 LOCK, DIFFERENTIAL SIDE BEARING
ADJUSTING NUT

1939-60	All		2	501806
---------	---------------	-----------	---	--------

Group 5.542 WASHER, DIFFERENTIAL PINION THRUST

1937-60	All exc. L.D.		2	513714
---------	-----------------------	-----------	---	--------

Group 5.543 WASHER, DIFFERENTIAL SIDE GEAR THRUST

1937-60	All exc. L.D.	 (11/64" I.D. x 5/16" O.D. x 1/32" thick)	2	531776
---------	-----------------------	--	---	--------

Group 5.544 SHAFT, PROPELLER

1941-48	25 S.T.	green color band	1	506065
1941-48	24-26 S.T.	yellow color band	1	506067

1941-48	27 S.T.	red color band	1	506066
1941-48	28-29 S.T.	blue color band	1	506068
1948	26 H.T.	Saginaw type	1	510782
1949-52	All	Saginaw type	1	511291
1953-54	25-H.T. & S.T.	Saginaw type	1	515502
1953	All P.G.		1	518481
1954	28 H.T.	Saginaw type	1	517527
1954	28 S.T.		1	5667452
1955	25 All		1	5667470
1955	28 All		1	5667475
1956	27 All exc. S.T.-2/4 B.C.		1	5670041
1956	27 All S.T.-2/4 B.C.		1	5671047
1956	28 All		1	5670042
1957	27 All S.T.	SHAFT ASSY., propeller-w/universal joints	1	523819
1957	27 All H.T.		1	523822
1957	28 All S.T.		1	523820
1957	28 All H.T.		1	523823
1958	27 All S.T. taxi, police & H.D.C.		1	5672440
1958	25-27 All S.T. exc. taxi, police & H.D.C.		1	5671804
1958	25-27 All H.T.		1	5671806
1958	28 All S.T. exc. taxi, police & H.D.C.		1	5671805
1958	28 All S.T. taxi, police & H.D.C.		1	5672441
1958	28 All H.T.		1	5671807
1959-60	21-23-27 All H.T.		1	5673263
1959-60	21-23-27 All S.T. exc. taxi, police & H.D.		1	5673261
1959-60	21-23-27 All S.T., taxi, police & H.D.		1	5673265
1959-60	24-28 All H.T.		1	5673264
1959-60	24-28 All S.T. exc. taxi, police & H.D.		1	5673262
1959-60	24-28 All S.T.-taxi, police & H.D.		1	5673266
1960	21-23-27 All 4 SPD.-S.T.		1	5674995
1960	21-23-27 All 4 SPD.-S.T.	for high speed use	1	5674961
1960	24-28 All 4 SPD.-S.T.		1	5675051

Group 5.545 FLANGE, REAR UNIVERSAL JOINT

1940-47	All exc. 1940 1st type	daubed with red paint, with ball type pinion bearing	1	504740
1947-55	All H.T. & S.T.	with roller type pinion bearing	1	506927
1953	All P.G.		1	518500
1956	All		1	522834
1957-60	All		1	523302

Group 5.548 REPAIR KIT, UNIVERSAL JOINT

1937-38	All	 Front or rear	AR	516406
1939-55	All H.T. & S.T.	exc. 1940 w/mechanics type prop. shaft Front	1	516405
1939-55	All H.T. & S.T.	exc. 1940 w/mechanics type prop. shaft Rear	1	516406
1953	All P.G.	 Front or rear	2	518648
1956-57	All	 Front or rear	2	522163
1958-59	All	 Front-center or rear	3	522163
1960	All		3	1463548

Group 5.549 SPACER, REAR UNIVERSAL JOINT FLANGE

1937-47	All	with N.D. bearing axle	1	499551
---------	-----	------------------------	---	--------

Group 5.555 YOKE, FRONT UNIVERSAL JOINT

1953	All P.G.		1	3706135
1956-57	All S.T.		1	5670047
1956-57	All H.T.		1	5670049
1958-60	All S.T. exc. taxi, police & H.D.		1	5671791
1958-60	All H.T.		1	5673335
1939-51	All	YOKE PACKAGE, front universal joint, with bearings, cork washers and attaching parts	1	506414
1952-54	All H.T. & S.T.	front universal joint	1	516601
1955	All S.T.		1	519976
1955	All H.T.		1	519977
1958-60	All S.T. taxi, police & H.D.C.	FLANGE, frt. universal joint companion	1	531246

Group 5.556 SHIELD, TRANS. REAR BEARING SPLASH

1939-54	All exc. 1939-26	(4.335)	1	509500
---------	------------------	---------	---	--------

Group 5.557 PLUG, FRONT UNIVERSAL JOINT DUST

1939-40	All	(Cup type)	1	502237
1941-55	All H.T. & S.T.	with Saginaw yoke (Cup type)	1	502237
1956	All S.T.	(Cup type)	1	502237
1956-57	All H.T.	(Cup type)	1	5670044
1958-60	All H.T.		1	5673337
1958-60	All	front prop. shaft coupling lubrication	1	5668493
1959-60	All H.T.	GASKET, front universal joint sliding yoke	1	5673338

Group 5.560 WASHER, UNIVERSAL JOINT

1937-51	All	cork	8	406813
1952-55	All H.T. & S.T.	cork	8	5663699
1956-57	All	cork	8	1406101
1958-60	All	cork-1st type 1960	12	1406101
1960	All	cork-2nd type (21/32" I.D.)	12	5675272
1937-55	All H.T. & S.T.	SHIELD, universal joint journal dust	8	406805
1956-57	All	(1-1/32" I.D. x 15/16" O.D. x 13/64" thick)	8	1406099
1958-60	All	(1-1/32" I.D. x 15/16" O.D. x 13/64" thick)	12	1406099
1953	All P.G.	RETAINER, universal joint brg. gasket	8	403906

Group 5.566 BEARING, UNIVERSAL JOINT

1937-51	All	round	AR	514270
1937-51	All	flanged type	Rear AR	406829
1940	All	flanged type with Mechanic's joint	Front AR	406829
1952-55	All H.T. & S.T.	round	6	5664303
1952-55	All H.T. & S.T.	flanged type	Rear 2	5663696
1953	All P.G.		8	2223720
1956-59	All		AR	5662717
1960	All	w/.601 dia. journal	12	5662717
1960	All 4 SPD.-S.T.		4	5672574

Group 5.578 JOURNAL ASSY., UNIVERSAL JOINT

1937-51	All			2	406803
1952-55	All H.T. & S.T.			2	5663692
1953	All P.G.			2	518555
1956-59	All			AR	5662652
1960	All		(.601 dia.)	3	5662652
1960	All		(.663 dia.)	3	1463542

Group 5.586 PLATE, UNIVERSAL JOINT BEARING RETAINER

1937-53	All H.T. & S.T.	Saginaw		AR	514393
1954-55	All			AR	1418081
1937-55	All H.T. & S.T.	flange bolt lock-with Saginaw yoke		AR	406822
1956-60	All	flange bolt lock	Rear	2	5670765
1959-60	All S.T. taxi, police & H.D.	flange bolt lock	Front	2	5670765
1937-55	All H.T. & S.T.	BOLT, universal joint round bearing lock	(1/4"-28x1/2")	AR	406808
1937-55	All H.T. & S.T.	prop shaft to rear companion flange	(5/16"-24x3/4")	AR	505653
1937-55	All H.T. & S.T.	LOCK, universal joint round bearing bolt, with Saginaw yoke		AR	1418080
1941-55	All H.T. & S.T.	RING, universal joint bearing retainer, with Mechanic's joint		6	506034
1956-57	All	universal joint bearing snap		8	1456507
1958-60	All S.T. taxi, police & H.D.C.	front prop. shaft front universal joint		2	5672924
1958-60	All	rear prop. shaft rear journal bearing snap		2	5672924
1958-60	All exc. taxi, police & H.D.	front shaft bearing retainer	Front	4	1456507
1958-60	All	rear shaft bearing retainer	Rear	6	1456507
1953	All P.G.	RETAINER, universal joint bearing		6	3721887
1953	All P.G.	U-BOLT, universal joint to rear companion flange		2	2118319
1956-60	All			2	522380
1958-60	All S.T. taxi, police, T420A, T425A & H.D.C.	front companion flange		2	522380

Group 5.595 NUT, UNIVERSAL JOINT FLANGE TO PINION

1937-47	All	with ball type pinion bearing		1	499562
1947-56	All	with roller type pinion bearing-use with 513716		1	513715
1957-60	All	with roller type pinion bearing		1	443348
1947-56	All	WASHER, drive pinion nut-use with 513715		1	513716
1957-60	All	(57/64" I.D.x1-1/16" O.D.x3/16" thick)		1	517900

Group 5.598 BRACKET-SHIM, PROPELLER SHAFT CENTER BEARING

1958-59	All	BRACKET, support to frame		1	528248
1960	All	to frame-w/A.O. Smith frame (▲)		1	528248
1960	All	to frame-w/Parish frame (▲▲)		1	536864
1958-60	All	SHIM		AR	529627
1958	All	BOLT, front prop. supt. bracket to frame	(Hex. 3/8"-16x1-1/4")	2	180124

▲NOTE: Square surface on each end.

▲▲NOTE: Two flanges on each end.

Group 5.600 BRACKET AND BEARING ASSY., PROPELLER SHAFT CENTER

1958-60	All	front shaft		1	5671788
---------	-----	-------------	--	---	---------

Group 5.601 SHIELD-NUT-PACKING-WASHER, PROPELLER SHAFT CENTER BEARING

1958-60	All	SHIELD, prop. shaft center bearing	1	5672762
1958-60	All	chassis frame tunnel Front	1	529474
1958-60	All	NUT, prop. shaft center bearing lock (1-9/16"-18)	1	5670754
1958-60	All	SEAL, prop. shaft splined coupling	1	5671502
1958-60	All	WASHER, prop. shaft coupling packing-split (1-3/16" I.D., x 1-31/64" O.D., x 1/32" thick)	1	5670757
1958-60	All	prop. shaft center bearing-lock	1	5671724
1958-60	All	prop. shaft center bearing-special	1	5671780

Group 5.803 WHEEL, FRONT OR REAR

1939-48	All	(16" dia.)	5	508847
1949-56	All	(15" dia.)	5	531228
1957-60	All exc. police & H.D.C.	(14" dia.)	5	524271
1957-58	All police & H.D.C.	(15" dia.)	5	531228
1959-60	All taxi, police (exc. spec. eqpt. H.D.) & H.D.C.	(15" dia. x 5-1/2" wide)	5	531228
1959-60	All police (spec. eqpt.) H.D.C. & trailer	w/hvy. duty brakes (15" dia. x 6" wide)	5	534592
1960	All exc. police & H.D.C.	w/aluminum hub and drum (14" dia.)	5	535288

Group 5.809 DRUM, REAR WHEEL BRAKE

1939-57	All		2	505300
1958	All exc. taxi, police & H.D.C.		2	528986
1958	All taxi, police & H.D.C.		2	531788
1959-60	All exc. taxi, police & H.D.C.		2	533124
1959-60	All taxi, police, H.D.C. & trailer	exc. aluminum	2	533850
1960	All exc. police & H.D.C.	aluminum 535282 RH		535283 LH

Group 5.810 SPRING PKG., BRAKE DRUM SILENCER

1950-54	All	consists of 6 retainers & 2 springs-for 2 wheels	2	514278
---------	-----	--	---	--------

Group 5.811 GASKET, REAR BRAKE DRUM TO AXLE SHAFT

1937-58	All	(1/32" thick)	AR	499930
---------	-----	---------------	----	--------

Group 5.812 BOLT, WHEEL TO HUB

1937-58	All	R.H. thread	Rear	5	499542
1937-58	All	L.H. thread	Rear	5	499543
1959-60	All	R.H. thread	Rear	5	532318
1959-60	All	L.H. thread	Rear	5	532319
1934-58	All	BOLT, brake drum to axle shaft		4	501503

Group 5.813 NUT, WHEEL HUB BOLT

1937-60	All	LH thread-exc. aluminum hub and drum (1/2"-20)	10	499550
1937-60	All	RH thread-exc. aluminum hub and drum (1/2"-20)	10	516637
1960	All	R.H. thread-w/aluminum hub and drum-chrome	16	535275

1960	All	L.H. thread-w/aluminum hub and drum-chrome	16	535276
1960	All exc. police & H.D.C.	rear brake drum-R.H. thread-w/aluminum hub and drum	5	535277
1960	All exc. police & H.D.C.	rear brake drum-L.H. thread-w/aluminum hub and drum	5	535278

Group 5.815 DEFLECTOR, AXLE HOUSING OIL

1937-58	All		2	499928
1937-58	All	DRAIN, rear brake oil	2	499929

Group 5.816 RETAINER, REAR WHEEL BEARING

1937-58	All	to housing	2	499932
1939-60	All	to shaft	2	567105
1959-60	All	Outer	2	532321

Group 5.819 GASKET, BRAKE DRUM OIL DEFLECTOR

1937-58	All	Rear	2	499933
1959-60	All	rear wheel bearing retainer to rear brake	2	532320

Group 5.822 SEAL, REAR WHEEL BEARING OIL

1939-54	All		2	412111
1955	All		2	1455257
1959-60	All		2	568690
1956-58	All	SEAL PKG., rear wheel bearing oil	2	534954

Group 5.855 BEARING ASSEMBLY, REAR WHEEL

1937-55	All	ball type	2	954848
1956-58	All	ball type	2	955000
1959-60	All	ball type	2	954848

Group 5.858 CAP, WHEEL HUB OUTER

1946	All		4	508607
1947-48	All		4	509418
1949-50	All		4	511541
1951-54	All		4	514588
1955-57	All		4	518947
1958	All		4	529526
1959	21 All & H.D.C.		4	529526
1960	All	exc. aluminum hub and drum	4	9701256
1960	All exc. police & H.D.C.	w/aluminum hub and drum	4	535286
1953	All	CAP, simulated wire wheel hub	4	517702
1954	All		4	517897
1955-56	All		4	520247

1941-48	2507-19-69, 2609 All	CAP, spare wheel hub	1	506080
1953-56	All	COVER, simulated wire wheel	4	517701
1957-59	All		4	524664

Group 5.858 DISC ASSY., WHEEL (ASSEMBLY)

1948	All exc. sta. wag.		5	510690
1949-50	All exc. 2561-62-71		4	512583
1951	All exc. 2562-71		4	514789
1952	All exc. 2562-71		4	516496
1953	All exc. 2562		4	516696
1954	All exc. 2562		4	517869
1955	2511-19-37, 2819D-67 All		4	520941
1955	2564, 2819SD-37SD		4	519843
1956	All		4	521451
1957	All exc. 2867SD	standard	4	523648
1957	All	custom	4	528406
1958	All	standard	4	529376
1958	All	custom	4	529795
1959	All	standard	4	532668
1959	All	custom	4	532669
1959-60	All H.D.C.		4	521451
1960	All exc. police & H.D.C.	standard-exc. aluminum hub and drum	4	536642
1960	All exc. police & H.D.C.	custom-exc. aluminum hub and drum	4	536357
1960	All	RING, wheel trim-w/aluminum drum & integral hub	5	535376

Group 5.864 CLIP, WHEEL HUB CAP RETAINING

1939-60	All		15	521508
1957-59	All	cover retainer-w/simulated wire wheels	25	524663

Group 5.871 PLUG, WHEEL

1949-54	All	w/chrome wheel disc	20	514896
---------	-----	---------------------	----	--------

Group 5.875 EXTENSION, TIRE VALVE

1949-50	All	w/chrome wheel disc	5	513410
1953-56	All	w/simulated wire wheels	5	513410
1957	All	w/custom wheel disc	5	513410
1959	All	w/custom wheel disc	5	534433
1936-60	All	CAP, tire valve (5 per box)	AR	125641
1955-56	All	VALVE ASSY., tubeless tire	5	273232
1957	All		5	274083
1958-60	All exc. taxi, police & H.D.C.		5	274083
1958-60	All taxi, police, H.D.C. & trailer		5	273232