

YEAR	MODEL	PART NAME	PART NO.	PER CAR	PART NO.
Group 6.018 BOLT, STEERING KNUCKLE SUPPORT CLAMP					
1937-57	All			2	504348
Group 6.020 KNUCKLE, STEERING					
1940-54	All	less nut		2	503576
1955	All		518873 RH		518874 LH
1956-57	All		521643 RH		521644 LH
1958	All			2	528204
1959-60	All			2	532288
1960	Police (Spec. order)	(see note)		2	535342
NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.					
Group 6.021 BUSHING, STEERING KNUCKLE KING PIN					
1937-39	All			4	231905
1940-55	All			4	520324
1956-57	All			4	521645
Group 6.022 NUT, STEERING KNUCKLE					
1935-60	All		(3/4"-20)	2	378137
Group 6.023 SUPPORT, STEERING KNUCKLE					
1939-48	All		419668 RH		419669 LH
1949-52	All		511604 RH		511605 LH
1953-54	All		515210 RH		515211 LH
1955-57	All		519242 RH		519243 LH
Group 6.024 BUSHING, STEERING KNUCKLE SUPPORT LOWER					
1939-57	All			2	411147
Group 6.037 DEFLECTOR, FRONT WHEEL BEARING OIL					
1940-54	All	front brake drum oil		2	504336
1955-56	All			2	518933
1937-56	All	DRAIN, front brake oil		2	499879
1957	All			2	523775
Group 6.103 ARM, STEERING KNUCKLE					
1939-48	All		502022 RH		502023 LH
1949-52	All		511338 RH		511339 LH
1953-57	All		515197 RH		515198 LH
1958	All		528965 RH		528966 LH

1959-60	All	532270 RH	532271 LH
1960	All exc. Police (Spec. order)	(2nd type-see note 1) 535241 RH	535242 LH
1960	Police (Spec. Order)	(See note 2) 535340 RH	535341 LH

NOTE 1: 2nd type-used only w/535237 and 535238 lower control arms.
NOTE 2: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 6.111 COVER, TIE ROD DUST

1939-58	All	(6.886) tie rod to steer. conn. rod	2 265765
1959-60	All		2 5672757
1937-60	All	SEAL, tie rod ball dust cover	2 505007

Group 6.112 SPRING, TIE ROD DUST COVER

1939-60	All	(6.888)	2 264949
---------	-----	---------	----------

Group 6.163 RETAINER, UPPER CONTROL ARM BUSHING

1958	All A.S.		4 3710586
------	----------	--	-----------

Group 6.166 SEAL, LOWER CONTROL ARM INNER BUSHING

1938-48	All		4 411146
1949	All	(6.178) steering knuckle support lower arm shaft	4 511452
1937-57	All	SEAL, knuckle support lower bushing	4 411382

Group 6.168 ARM, STEERING KNUCKLE SUPPORT LOWER

1939-48	All	410944 RH	410945 LH
1949-52	All	511601 RH	511602 LH
1953-57	All	522442 RH	522443 LH
1958	All exc. A.S.		2 528754
1958	All A.S.		2 531045
1959-60	All exc. A.S.	532248 RH	532249 LH
1959	All A.S.	532250 RH	532251 LH
1960	All	(2nd type-see note) 535237 RH	535238 LH

2nd type-w/2 holes in frt. wheel strg. stop bracket.

Group 6.169 BUSHING, LOWER CONTROL ARM INNER SHAFT

1939-58	All exc. A.S.		4 518870
1958	All A.S.		4 530400
1959-60	All	(5.381)	4 529804
1958	All A.S.	RETAINER, lower control arm bushing	4 530401
1959	All	RESERVOIR, lower control arm wheel stop grease	2 536200
1958	All A.S.	BOLT, lower control arm shaft bushing	
		retainer (7/16"-20x1-1/8")	4 181667

Group 6.170 SHAFT PACKAGE, LOWER CONTROL ARM

1939-58	All	shaft w/2 bushings and 2 seals (1-7/8" C to C of holes)	2	529175
1956-57	All	shaft w/2 bushings and 2 seals (3-1/4" C to C of holes)	2	522590
1958	All A.S.	SHAFT, steering knuckle support lower arm	2	530402
1949-58	All exc. A.S.	SEAL, steering knuckle support lwr. arm shaft bushing .	4	511452

Group 6.172 BOLT-NUT, LOWER CONTROL ARM SHAFT TO FRAME

1938-58	All	BOLT, (use only w/1435440 nut)	8	1416328
1959-60	All	(use only w/451023 nut) (9/16"-18x3-1/2")	4	528733
1938-58	All	NUT (use only w/1416328 bolt)	8	1435440
1959-60	All	(use only w/528733 bolt) (9/16"-18)	4	451023

Group 6.174 PIN, LOWER CONTROL ARM PIVOT

1939-57	All		2	522462
1939-57	All	NUT, lower control arm pivot pin	2	412108
1958-60	All	SEAL ASSY., lower control arm ball stud dust	2	760985
1939-57	All	WASHER, lower control arm pivot lock	4	412170

Group 6.174 PIN-STUD PACKAGE, LOWER CONTROL ARM PIVOT

1939-57	All	PIN PKG.	2	522468
1959-60	All	lower control arm pivot	2	533015

Group 6.176 BUMPER, STEERING KNUCKLE SUPPORT ARM UPPER

1937-57	All	 (2" high)	2	522629
1957-60	All	 (1-1/2" high)	2	528676

Group 6.177 BRACKET, FRONT WHEEL BUMPER STOP FRAME

1950-52	All		2	513581
1953-54	All	 515067 RH		515068 LH
1955-57	All	 519039 RH		519040 LH
1958	All	 528259 RH		528260 LH
1959-60	All		2	532062

Group 6.178 PIN-STUD PKG., STEERING KNUCKLE SUPPORT UPPER PIVOT

1937-48	All	PIN PKG.	2	506512
1949-52	All		2	513376
1953-57	All		2	517401
1958	All	STUD PKG., control arm ball	2	531353
1959-60	All	upper pivot 533013 RH		533014 LH
1937-48	All	SEAL, knuckle support upper bushing	4	411817
1949-52	All	upper pivot pin	4	511452
1953-58	All exc. A.S.		4	515951

Group 6.178 ARM ASSY., STEERING KNUCKLE SUPPORT UPPER

1949-52	All			2	511598
1953-54	All			2	515200
1955-57	All			2	518291
1958-60	All exc. A.S.		528471 RH		528472 LH
1958	All A.S.		530391 RH		530392 LH
1959	All A.S.		533498 RH		533499 LH
1949-52	All	BOLT, upper arm shaft		4	511454
1953-57	All			4	515196
1958-60	All		(1/2"-20 x 2-5/32")	4	528490
1958	All A.S.	upper control arm shaft bushing ret. to shaft	(Hex. 3/8"-24x7/8")	4	454921
1958	All	BRACKET ASSY., upper control arm shaft to frame	529638 RH		529639 LH
1959-60	All		532068 RH		532069 LH
1949-52	All	BUSHING, upper eccentric		2	511450
1953-57	All			2	515194
1949-52	All	BUSHING ASSY., upper arm shaft		4	511451
1953-54	All			4	517488
1955-60	All exc. A.S.			4	533484
1958	All A.S.			4	530393
1958	All	FITTING, upper control arm lube	(1/4"-28x65° Elbow)	2	763170
1949-57	All	PIN, upper control arm pivot		2	522462
1949-57	All	NUT, upper cont. arm pivot pin		2	412108
1953-57	All	upper arm shaft		4	451127
1949-52	All	SEAL, upper arm shaft bushing		4	411146
1953-57	All			4	515951
1958-60	All	upper control arm ball stud dust		2	3742248
1959-60	All	upper arm shaft bushing		4	515951
1949-52	All	SHAFT, strg., knuckle supt. upper arm		2	511453
1953-54	All			2	515195
1955-57	All			2	518862
1958-60	All exc. A.S.			2	528473
1958	All A.S.			2	530394
1949-52	All	SHAFT PKG., steering knuckle support upper arm		2	513375
1953-54	All			2	517402
1955-57	All			2	520872
1958-60	All exc. A.S.			2	530147
1958-60	All	SHIM, upper control arm to frame bracket	(.030")	AR	529491
1958-60	All		(.060")	AR	529490
1950-57	All		(.164")	AR	531527
1958-60	All	WASHER, upper control arm upper control arm frame bracket	(17/32" I.D. x 1-1/8" O.D. x 9/64" thick)	4	529735

Group 6.203 PIN, STEERING KNUCKLE KING

1937-57	All		2	521647
---------	-----	--	---	--------

Group 6.203 REPAIR KIT, KING PIN

1937-39	All	consists of pins, bushings, bearings, plugs and lock pins	1	405085
1940-55	All	consists of pins, bushings, bearings, plugs and lock pins	1	504058
1956-57	All	consists of pins, bushings, bearings, plugs and lock pins	1	521726

Group 6.210 BEARING, KING PIN THRUST

1937-57	All	ball type	2	230679
---------	-----	-----------	---	--------

Group 6.214 SHIM, KING PIN THRUST BEARING

1937-57	All	(.005" thick)	AR	373481
---------	-----	---------------	----	--------

Group 6.216 PIN, KING PIN LOCK

1937-57	All	(1-5/8" long)	2	514168
---------	-----	---------------	---	--------

Group 6.223 PLUG, KING PIN BEARING EXPANSION

1937-39	All		4	562237
1940-57	All		4	504688

Group 6.225 SEAL, KING PIN BUSHING

1956-57	All	"O" ring type	2	521648
---------	-----	---------------	---	--------

Group 6.230 ROD AND BALL ASSY., STEERING KNUCKLE TIE

1939-48	All	(13-1/4" overall)	2	264939
1949-52	All		2	5660367
1953-57	All L.H.D.	5663362 RH		5663358 LH
1958	All	5671957 RH		5671954 LH
1959-60	All	5672755 RH		5672752 LH
1960	Police (Spec. Order)	(▲) 5674422 RH		5674415 LH

▲NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 6.232 SLEEVE, TIE ROD ADJUSTER

1939-60	All		2	5668674
1960	Police (Spec. order)	(See note) (▲)	2	5673986

▲NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 6.233 END, TIE ROD

1939-58	All	(3-7/8" overall)	2	5674340
1959-60	All	5672917 RH		5672918 LH
1960	Police (Special Order)	(See note) (▲)	2	5674417

▲NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 6.234 CLAMP, TIE ROD END

1953-60	All		4	5668675
1960	Police (Spec. Order)	(See note) (▲)	4	5673988

▲NOTE: For use only w/Special Order Police jobs equipped w/roller type front wheel bearings.

1949-59	All (8.900)	BOLT, tie rod clamp (Hex. 3/8"-24x1-1/2")	4	181643
1960	All (8.900)	 (3/8"-24 x 1-1/2")	4	186687
1949-59	All (8.917)	NUT, tie rod clamp bolt (3/8"-24)	4	125233
1960	All S.S. Police (Spec. order) .	(▲) (3/8"-24)	4	9414568

▲NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 6.306 HUB AND DRUM, FRONT WHEEL BRAKE

1942-48	All	with bearing cup Kelsey-Hayes	507370 RH	507371 LH
1949-54	All	with bearing cup	512141 RH	512142 LH
1955-56	All		519222 RH	519223 LH
1957	All		523755 RH	523756 LH
1958	All exc. taxi, police & H.D.C. .		528498 RH	528499 LH
1958	All taxi & police	aluminum	531784 RH	
1958	All H.D.C.		531167 RH	531168 LH
1959-60	All exc. taxi, police & H.D.C. .	steel	536941 RH	536942 LH
1959-60	All taxi, police & H.D.C. . . .	aluminum	534378 RH	534379 LH
1960	All exc. police & H.D.C.	aluminum	535279 RH	535280 LH
1960	Police (Spec. Order)	(▲)	535314 RH	535315 LH
1958-60	All taxi, police, H.D.C. & trailer	WEIGHT, front wheel brake drum balance (1 oz.)		
		exc. aluminum hub and drum	AR	531802
1958-60	All taxi, police & H.D.C. & trailer	exc. aluminum hub and drum-(1.5 oz.)	AR	531803
1958-60	All taxi, police, H.D.C. & trailer	exc. aluminum hub and drum (2.5 oz.)	AR	531804
1958	All taxi, police & H.D.C. (8.977)	SCREW, brake drum weight to drum (Hex. Hd. 1/4"-28x5/8")	AR	448657
1959-60	All taxi, police & H.D.C. (8.977)	 (Hex. hd. 1/4"-28x1/2")	AR	448655

▲NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 6.311 BEARING PACKAGE, FRONT WHEEL INNER

1940-54	All	consists of one each, cone, cup and balls	2	909052
1955-57	All	consists of one each, cone, cup and balls	2	909060
1958-60	All	consists of one each, cone, cup and balls	2	909070
1960	Police (Spec. Order)	BEARING ASSY. (▲)	2	7451083

▲NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 6.313 BEARING PACKAGE, FRONT WHEEL OUTER

1933-57	All	consists of one each, cone, cup and balls	2	909001
1958-60	All exc. police, spec. order . .	consists of one each, cone, cup and balls	2	909067
1960	Police (Spec. Order)	BEARING ASSY. (▲)	2	7451085

▲NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 6.314 CONE, FRONT WHEEL BEARING INNER

1940-54	All		2	909552
1955-57	All		2	909560
1958-60	All		2	909570

Group 6.315 CONE, FRONT WHEEL BEARING OUTER

1933-57	All		2	909501
1958-60	All		2	909567

Group 6.316 CUP, FRONT WHEEL BEARING INNER

1933-54	All	2	909602
1955-57	All	2	909660
1958-60	All	2	909670

Group 6.317 CUP, FRONT WHEEL BEARING OUTER

1933-57	All	2	909601
1958-60	All	2	909667

Group 6.318 BALLS AND SEPARATOR, FRONT WHEEL BEARING-INNER

1933-54	All	2	909702
1955-57	All	2	909760
1958-60	All	2	909770

Group 6.319 BALLS AND SEPARATOR, FRONT WHEEL BEARING-OUTER

1933-57	All	2	909701
1958-60	All	2	909767

Group 6.321 WASHER, STEERING KNUCKLE SPINDLE

1933-60	All	2	3663991
1958-60	All	RETAINER, front wheel outer bearing . (2-5/64" I.D. x 1-25/32" O.D. x 13/64" thk.)	2 528501

Group 6.326 SEAL ASSEMBLY, FRONT WHEEL HUB OIL

1940-54	All	2	504332
1955-57	All	2	518925
1958-60	All	2	533249

Group 6.330 CAP, FRONT WHEEL HUB INNER

1937-60	All	2	499204
---------	-----	---	--------

Group 6.335 BOLT, FRONT WHEEL HUB

NOTE: See Group 5.813 for Hub Bolt Nut.

1937-56	All	506051 RH	506052 LH
1958-60	All exc. taxi, police & H.D.C.	523777 RH	523778 LH
1958-60	All taxi, police, H.D.C. & trailer	531686 RH	531687 LH

Group 6.367 WEIGHT, WHEEL BALANCE

1946-60	All	(1/2 oz.)	AR	1318737
1946-60	All	(1 oz.)	AR	1318738
1946-60	All	(1-1/2 oz.)	AR	1318739
1946-60	All	(2 oz.)	AR	1318740
1946-60	All	(2-1/2 oz.)	AR	1318741
1946-60	All	(3 oz.)	AR	1318742
1946-60	All	(3-1/2 oz.)	AR	1330487
1946-60	All	(4 oz.)	AR	1330488
1946-60	All	(5 oz.)	AR	1330489
1946-60	All	(6 oz.)	AR	1330490
1960	All	1/4 oz.	AR	1165254
1960	All	3/4 oz.	AR	1165255
1960	All	1-1/4 oz.	AR	1165256
1960	All	1-3/4 oz.	AR	1165257

Group 6.507 SEAL AND GASKET PKG., POWER STEERING GEAR

1953-55	All P.S.		1	5680853
1956	All P.S.		1	5685041
1957-58	All P.S.		1	5685263
1959-60	All P.S.		1	5687181

Group 6.509 BOLT, STEERING GEAR

1937-60	All	gear to frame (Hex. 7/16"-14x3-1/2" Cad.)	AR	534383
1949-60	All	gear to frame (Hex. 7/16"-14x3" Cad.)	AR	534374
1959-60	All	WASHER, gear to frame . . . (15/32" I.D.x1-1/4" O.D.)	3	534218
1959-60	All P.S.	gear to frame (15/32" I.D.x1" O.D.)	1	534373

Group 6.512 COVER, STEERING WHEEL HUB

1949-52	All D	Upper	1	512098
1949-52	All D	except w/direction signal	1	511735
1953-54	All D	RING, steering wheel hub filler	1	515309
1955-56	All D		1	519303

Group 6.513 WHEEL, STEERING (DELUXE)

1942-48	All D		1	511198
1949-50	All D	black	1	511645
1950	2537 SD	rust color	1	513972
1951	All D	black	1	514645
1951	2537 SD	blue	1	514337
1952	2537 SD	green	1	516479
1952	All D	black	1	516478
1953-54	All D	black	1	515308
1953-54	All D-SD	palm green	1	517176

1954	All D	blue	1	517755
1954	All D	green	1	517756
1954	All SD	coral red	1	518272
1954	All SD	beige	1	518273
1954	All SD	yellow	1	518274
1955-56	All D	black	1	519300
1955	All D	princess blue	1	520767
1955	All D	saddle brown	1	520719
1955	All D	briar green	1	520769
1955	All SD	turquoise blue	1	520770
1955	All SD	firegold	1	520771
1956	All D	empress blue	1	522420
1956	All D	green	1	522421
1956	All D	white	1	522422
1956	All SD	catalina blue	1	522423
1956	All SD	tan	1	522424
1957	All D	grey	1	523161
1957	All D	green	1	524185
1957	All D	blue	1	524186
1957	All SD	light green	1	523899
1957	All SD	ivory	1	523900
1958	All D	medium blue	1	529370
1958	All D	dark blue	1	529367
1958	All D	copper	1	529372
1958	All D	medium green	1	529371
1958	All D	dark green	1	529368
1958	All D	ascot grey	1	529366
1958	All D	red	1	529373
1958	All D	turquoise	1	529369
1958	All D	kent grey	1	531475
1958	2849 SD	ivory and gold	1	531566
1959	All D	silvermist grey	1	532304
1959	All D	grey	1	533934
1959	All D	concord blue	1	533935
1959	All D	jademist green	1	533936
1959	All D	sunset glow	1	533937
1959	All D	sante fe copper	1	533938
1959	All D	buccaneer blue	1	533939
1959	All D	sherwood green	1	533940
1959	All D	red	1	533941
1960	All D	grey	1	536349
1960	All D	blue	1	535425
1960	All D	green	1	536549
1960	All D	gold	1	535427
1960	All D	red	1	536553

Group 6.513 WHEEL AND TRIM RING, STEERING (STANDARD)

1939-47	All	on 1939 thru 41 use 1-544408 pkg.	1	507490
1949-51	All exc. 2561-62-67		1	514839
1949-51	2561-62-67		1	513264
1952	All exc. 2562		1	516486
1952	2562		1	516487
1953	All exc. 2562-71		1	515421
1953	2562-71		1	517178
1954	2511-69		1	517998
1954	2562 All		1	517999
1955-56	All	black	1	519544
1955	2562	brown	1	520721
1955	2562	green	1	521245
1957	All	grey	1	523163

1957	All	blue	1	524380
1957	All	green	1	524381
1958	All	silver	1	529145
1958	All	blue	1	529537
1958	All	green	1	529538
1958	All	red	1	529539
1959	All	grey	1	533921
1959	All	blue	1	533922
1959	All	green	1	533923
1959	All	copper	1	533924
1959	All	red	1	533925
1960	21 All	grey	1	536168
1960	21 All	blue	1	536539
1960	21 All	green	1	536541
1960	21 All	gold	1	536543
1960	21 All	red	1	536545

Group 6.514 RING, STEERING WHEEL TRIM

1942-52	All	standard wheel	1	507572
---------	-----	----------------	---	--------

Group 6.515 NUT-WASHER, STEERING WHEEL SHAFT

1939-59	All	(8.916) NUT, wheel to shaft	(1/2"-20)	1	124934
1939-60	All	(8.921) spring lock	(1/2"-20)	1	107825
1939-60	All	WASHER, steering wheel to shaft	(17/32" I.D. x 15/16" O.D.)	1	5665807

Group 6.518 JACKET, STEERING COLUMN L.H.D.

1941-48	25 S.T.		1	266992
1949	All S.T.		1	5660578
1949	All H.T.		1	5660574
1950-52	All H.T.		1	5664224
1950-52	All S.T.		1	5664227
1953-54	All S.S.		1	5666949
1955-56	All S.S.		1	5666727
1957	All S.S.		1	5670627
1957	All P.S.	w/adaptor and clamp	1	5685891
1957	All P.S.	use w/5685892 adaptor	1	5685894
1958	All S.S.		1	5671851
1958	All P.S.		1	5686037
1959	All S.S.	orig. eqpt.	1	5672626
1959	All P.S.	orig. eqpt.	1	5687128
1959-60	All S.T.	w/534943 pkg. on 1959	1	5674195
1960	All H.T.-S.S.		1	5674265
1960	All H.T.-P.S.		1	5674196
1957	All P.S.	CLAMP, steering column jacket	1	5665245
1958-60	All P.S.	orig. eqpt. 1959	1	5686077
1959-60	All S.T.	w/534942 pkg. on 1959	1	5686077
1953	All P.S.	COVER ASSY., valve-w/steering column jacket	1	5680556
1954	All P.S.	w/steering column jacket	1	5681348
1955	All P.S.	w/steering column jacket	1	5682472
1956	All P.S.	w/steering column jacket	1	5682913

Group 6.519 ADAPTER, STEERING GEAR HOUSING UPPER BEARING

1949-52	All			1	5660576
1939-60	All S.S.	(8.971)	PLUG, steering gear oil filler (1/2" sq. hd.)	1	438159

Group 6.521 BEARING, STEERING SHAFT UPPER

1939-52	All			1	264887
1953-56	All S.S.			1	515163
1953-56	All P.S.			1	5680050
1957-58	All	(2.859)		1	5670954
1957-60	All P.S.		strg. shaft and jacket adapter Lower	1	5671516
1959	All	(2.859)	strg. shaft upper-w/horn cable	1	5672929
1957-60	All P.S.		RETAINER, strg. shaft and jacket adapter lower		
1957-60	All P.S.		SEAL, strg. shaft and jacket adapter lower bearing	1	5682903

Group 6.524 SHAFT AND WORM, STEERING GEAR

1939-40	25-26			1	269891
1941-48	26-29 All			1	269889
1941-48	25 All			1	269891
1949	All L.H.D.			1	5660505
1950-52	All L.H.D.			1	5661594
1953-54	All L.H.D., S.S.			1	5665720
1953	All P.S.		w/balls and nut	1	5680045
1954	All P.S.		w/balls and nut	1	5680486
1955-56	All L.H.D., S.S.		w/balls and nut	1	5666730
1955	All P.S.		w/balls and nut	1	5682469
1956	All L.H.D., P.S.		w/balls and nut	1	5684124
1957	All L.H.D., S.S.		w/balls and nut	1	5670629
1957-58	All P.S.		w/balls and nut	1	5685958
1958	All S.S.		w/balls and nut	1	5671854
1959	All S.S.		w/balls and nut	1	5672782
1960	All S.S.		w/balls and nut	1	5674274
1957	All P.S.		SHAFT AND FLANGE, steering gear upper	1	5685287
1958	All P.S.			1	5686040
1959-60	All P.S.			1	5687126

Group 6.525 ADAPTER-COUPLING-FLANGE-PIN-REINFORCEMENT-SEAL, STEERING GEAR

1957	All P.S.		ADAPTER ASSY., steering shaft to jacket-use w/5685284 jacket	1	5685293
1957	All P.S.		use w/5685894 jacket	1	5685892
1958-60	All P.S.			1	5686042
1957-58	All P.S.		COUPLING, strg. gear shaft flange-flexible	1	5682485
1959-60	All P.S.		FLANGE ASSY., steering gear lower	1	5688292
1960	All P.S.			1	5688292
1957-58	All P.S.		PIN, strg. gear lower flange	1	5682726
1957-59	All P.S.		REINFORCEMENT, strg. gear coupling	AR	5682486
1957-58	All P.S.		SEAL, strg. gear cap to housing top cover dust	1	5683127
1957-58	All P.S.		BOLT, flange coupling to lower flange (small hd. 5/16"-24x1-1/8")	1	5682484

1957-58	All P.S.	 (large hd. 5/16"-24x1-1/8")	1	5683957
1959-60	All P.S.	strg. gear flange to shaft		
		clamping (Spec. 3/8"-24 x 7/32")	1	5686553
1957-60	All P.S.	KIT, strg. gear shaft coupling upper flange bolt	2	5689776
1957-58	All P.S.	(6.164) NUT, strg. flange lower flange		
		coupling (Hex. 5/16"-24)	2	3722860
1957-58	All P.S.	WASHER, strg. gear upper flange bolt retainer	1	5683938
1959	All P.S.	strg. gear shaft flange	2	5683938

Group 6.526 SPRING, STEERING SHAFT UPPER BEARING

1939-52	All		1	3741877
1953-56	All S.S.		1	5660476
1957-60	All		1	5660476
1939-56	All S.S.	SEAT, steering shaft upper bearing spring	1	264831
1957-60	All		1	264831

Group 6.527 RACE, STEERING GEAR WORM THRUST BEARING

1939-54	All S.S.		2	263917
1955-60	All S.S.		2	5666683
1960	All S.T.-S.S.	steering gear housing	1	5666683

Group 6.530 BEARING, STEERING GEAR THRUST

1939-54	All S.S.	roller type	2	262200
1953-55	All P.S.	ball type	2	5663818
1955-60	All S.S.	ball type	2	5666693
1956	All P.S.	BEARING AND SPRING ASSY., thrust	1	5683402
1957-58	All P.S.		1	5686070
1959-60	All P.S.	BEARING KIT, Upper	1	5687185
1959-60	All P.S.	 Lower	1	5687186
1959-60	All P.S.	RING, upper end plug oil seal ret.	1	5684820
1959-60	All P.S.	PLUG ASSY., strg. gear upper end adjuster	1	5686866
1959-60	All P.S.	SEAL KIT, strg. gear adjuster plug	1	5687183
1956-58	All P.S.	SPRING PKG., thrust bearing centering	1	5683798

Group 6.531 NUT-WASHER, STEERING GEAR WORM BEARING ADJUSTING

1953-54	All P.S.	NUT w/rotor type pump	1	5664762
1954-56	All P.S.	w/vane type pump	1	5682242
1957-58	All P.S.		1	5684425
1959-60	All P.S.	 (2-1/4"-20)	1	5686556
1954-55	All P.S.	WASHER-w/vane type pump	1	5681216
1956	All P.S.		1	5682999
1957-58	All P.S.		1	5683580

Group 6.550 VALVE ASSY., STEERING GEAR HYDRAULIC

1953-54	All P.S.		1	5680076
1955	All P.S.		1	5683100
1956-58	All P.S.		1	5683646

1959-60	All P.S.	w/pin	1	5688272
1953-54	All P.S.	BOLT, elbow to valve	2	5664907
1956-58	All P.S.	valve to housing-w/lock washer (5/16"-18x13/16")	3	5684193
1953-54	All P.S.	ELBOW (90°)	2	5664906
1953-55	All P.S.	SEAL, elbow to valve	4	5665574
1953-55	All P.S.	UNION (return port 3/8")	1	5664020
1953-55	All P.S.	(pressure port 1/4")	1	5665614

Group 6.551 PLUNGER, STEERING GEAR VALVE CENTERING

1953-54	All P.S.		10	5663828
1955	All P.S.		10	5665638
1956-58	All P.S.	LINK ASSY., valve spool	1	5683302
1956-58	All P.S.	RING, valve retaining	1	5682766
1956-58	All P.S.	WASHER, annulus retainer	1	5682765

Group 6.552 STEERING GEAR VALVE PARTS

1956-58	All P.S.	ANNULUS, valve spool	1	5683462
1959-60	All P.S.	'O' RING, strg. gear valve spool dampener (1-15/64" I.D.)	1	5686546
1956-58	All P.S.	PLUG, valve body end	1	5683300
1956-58	All P.S.	RING, valve plug retaining	1	5683143
1959-60	All P.S.	RING KIT, strg. gear valve	1	5687182
1956-58	All P.S.	SEAL, valve end plug-"O" ring (47/64" I.D.)	1	5681876
1956-58	All P.S.	annulus-"O" ring (25/32" I.D.) Outer	1	5683463
1956-58	All P.S.	annulus-"O" ring (9/16" I.D.) Inner	1	5683464
1959	All P.S.	valve oil ring back up "O" ring	3	5687182
1953-54	All P.S.	SPRING, spool valve centering	5	5665555
1955	All P.S.	spool valve centering	5	5683101
1956-58	All P.S.	spool valve centering	1	5683191
1956-58	All P.S.	spool reaction control	1	5683307
1959-60	All P.S.	spool valve	1	5687252
1956-58	All P.S.	WASHER, centering spring thrust	1	5683131

Group 6.553 CHECK VALVE, STEERING GEAR HYDRAULIC VALVE

1953-55	All P.S.	with ball	1	5663874
---------	----------	-----------	---	---------

Group 6.554 COVER, STEERING GEAR VALVE

1953	All P.S.	w/steering column jacket	1	5680556
1954	All P.S.	w/steering column jacket	1	5681348
1955	All P.S.	w/steering column jacket	1	5682472
1956	All P.S.	w/steering column jacket	1	5682913
1956-58	All P.S.	valve linkage	1	5685257
1957	All P.S.	LEVER, valve actuating	1	5683211
1957-58	All P.S.		1	5685373
1956	All P.S.	SEAL, valve linkage cover-"O" ring type (1" I.D.)	1	5682175
1956-58	All P.S.	valve linkage cover to housing-"O" ring type (1-1/8" I.D.)	1	5682993
1957-58	All P.S.	valve linkage cover to top cover-"O" ring type (59/64" I.D.)	1	5685234

Group 6.555 SEAL, STEERING GEAR VALVE COVER OIL

1953-55	All P.S.		1	5663837
---------	----------	-------	---	---------

Group 6.556 SEAL, STEERING GEAR VALVE HOUSING

1953-55	All P.S.		"O" ring type		(2-13/16" I.D.)	2	5665836
1956	All P.S.		"O" ring type		(3/8" I.D.)	2	5681553
1957-58	All P.S.		"O" ring type		(5/16" I.D.)	2	5685078
			SEAL (see Group 6.584 for use)				5661386

Group 6.576 CYLINDER, STEERING GEAR POWER

1953-55	All P.S.				1	5663958
1953-54	All P.S.	 (6.679)	BOLT, elbow to cylinder		2	5664907
1953-54	All P.S.	 (6.679)	ELBOW	 (90°)	2	5664906
1953-55	All P.S.	 (6.674)	SEAL, elbow to cylinder		4	5665574

Group 6.577 GASKET, STEERING GEAR POWER CYLINDER

1953-55	All P.S.		1	5663876
---------	----------	-------	---	---------

Group 6.578 PISTON, STEERING GEAR POWER CYLINDER

1953-55	All P.S.		1	5664557
---------	----------	-------	---	---------

Group 6.579 RING, STEERING GEAR POWER CYLINDER PISTON

1953-55	All P.S.		2	5663824
1956-60	All P.S.		1	5684441
1960	All P.S.		1	5687958
1960	All P.S.		SEAL, piston ring back-up "O" ring	1 5687959

Group 6.580 ROD, STEERING GEAR POWER CYLINDER PISTON

1953-55	All P.S.		1	5663845
---------	----------	-------	---	---------

Group 6.581 NUT-WASHER, STEERING GEAR POWER CYLINDER
ROD

1953-55	All P.S.		NUT, lock		1	5680151
1953-55	All P.S.		WASHER, thrust		2	5663819

Group 6.584 ADAPTER, STEERING GEAR POWER CYLINDER

1935-55	All P.S.		w/seals		1	5664495
1956	All P.S.		w/seal, ring, pin and washer		1	5685225
1957-58	All P.S.		w/seals		1	5685261
1956-58	All P.S.		PIN, adapter dowel		1	5683294

1956-58	All P.S.	RING, adapter retaining	1	5682851
1953-55	All P.S. (6.556)	SEAL, "O" ring type (2-3/4" I.D.)	2	5661386
1953-55	All P.S.	"O" ring type (1-1/8" O.D.)	1	5661523
1953-55	All P.S.	piston rod	1	5664016
1956	All P.S. (6.611)	adapter to end cover-"O" ring (3" I.D.)	1	5680593
1956-58	All P.S. (6.611)	adapter to housing-"O" ring (3" I.D.)	1	5680593
1956-58	All P.S.	adapter to steering shaft (7/8" I.D.)	1	5682785
1956-58	All P.S.	WASHER, adapter seal retaining (15/16" I.D.)	1	5682852

Group 6.586 RACK, STEERING GEAR POWER CYLINDER

1953-55	All P.S.		1	5663849
1956-58	All P.S.	RACK AND PISTON ASSY.	1	5685746
1959-60	All P.S.	RACK, PISTON AND WORM ASSY.	1	5687956
1959-60	All P.S.	PLUG, rack piston end	1	5686990
1959-60	All P.S.	RING, piston end plug ret.	1	5686566

Group 6.587 PIN, STEERING GEAR POWER CYLINDER RACK

1953-55	All P.S.		1	5663850
---------	----------	--	---	---------

Group 6.590 GUIDE, STEERING GEAR POWER RACK

1955	All P.S.		1	5682736
------	----------	--	---	---------

Group 6.591 SHIM, STEERING GEAR POWER RACK COVER

1953-55	All P.S.	(.003" thick)	AR	5663880
1953-55	All P.S.	(.005" thick)	AR	5663881

Group 6.605 PUMP ASSY., STEERING GEAR OIL

1953-54	All P.S.	rotor type	1	5680082
1954	All P.S.	vane type	1	5680750
1955	All P.S.		1	5682667
1956	All P.S.		1	5683483
1957	All P.S.		1	5685221
1958	All P.S. exc. A.S.		1	5685516
1958	All P.S.-A.S.	w/rigid comp. mtg. (see note)	1	5686989
1959	All P.S. exc. A.S.		1	5686708
1959	All P.S.-A.S.		1	5687235
1960	All P.S.		1	5688068

NOTE: When used w/rubber mountings also use 2 5686279 studs and 2 273916 bolts.

Group 6.606 BRACKET, STEERING GEAR OIL PUMP

1953-54	P/6 P.S.	w/rotor type pump	1	518721
1953-54	P/8 P.S.	w/rotor type pump	1	518722
1954	P/6 P.S.	w/vane type pump	1	517874
1954	P/8 P.S.	w/vane type pump	1	517875
1955-57	P/8 P.S.-2 B.C.-4 B.C. exc. A.C.		1	519435

1957	All P.S.-F.I.-3/2 B.C. exc. A.C. (9.180)		1	523683
1958-60	All P.S. exc. A.S.		1	533374
1958	All P.S. exc. A.S.	oil pump belt adjusting strap	1	529953
1960	All P.S.	2nd type-cast iron	1	536855
1954	P/8 P.S.-A.C.	PLATE, oil pump mtg.-w/vane type pump Front	1	518753
1954	P/8 P.S.-A.C.	oil pump mtg.-w/vane type pump Rear	1	518731
1955-57	P/8 P.S.-A.C.-F.I.-3/2 B.C.		1	520989
1958	All P.S.-A.S. (8.900)	BOLT, oil pump to compressor . . . (3/8"-16x1-5/8")	2	180127
1958-60	All P.S. exc. A.S.	oil pump supt. to mtg. bracket . . . (1/2"-20x23/32")	2	530068
1959-60	All P.S. exc. A.S. . . . (7.452)	pump to front support . . . (3/8"-16x5/8" lock bolt)	2	9410884
1960	All P.S. (8.900)	pump to front support (2nd type-see note) (3/8"-16 x 3/4")	3	220706
1960	All P.S. (8.900)	pump mtg. brkt. to cyl. hd. (2nd type-see note) (3/8"-16 x 2-1/2")	1	9408978
1960	All P.S. (8.900)	pump mtg. brkt. to cyl. hd. (2nd type-see note) (3/8"-16 x 4-5/8")	1	9415316
1953-54	All P.S.	SCREW, bracket to cyl. head	3	517356
1954	P/8 P.S.-A.C.	rear plate to pump-w/vane type pump	2	518732
1958	All P.S. exc. A.S.	STRAP, oil pump adjusting	1	531012
1958	All P.S. exc. A.S.	oil pump belt adjusting	1	529954
1959-60	All P.S. exc. A.S.	pump belt adjusting (1st type on 1960 - see note) . . .	2	532510
1958	All P.S. exc. A.S.	SUPPORT, oil pump. Front	1	529949
1958	All P.S.	 Rear	1	529950
1959-60	All P.S. exc. A.S.	(1st type on 1960 - see note) Front	1	532645
1959-60	All P.S. exc. A.S.	(1st type on 1960 - see note) Rear	1	534585
1960	All P.S.	oil pump (2nd type-see note) Front	1	536856
1960	All P.S.	oil pump (2nd type-see note) Rear	1	536857
1953-54	All P.S. (3.275)	WASHER, oil pump to bracket (13/32" I.D. x 3/4" O.D. x 1/8" thick)	1	502306
1960	All P.S. (3.275)	pump mtg. bracket to cyl. head (13/32" I.D. x 3/4" O.D. x 1/8" thick)	1	502306

NOTE: 2nd type-used w/cast iron oil pump mtg. brkt.

Group 6.608 BODY, STEERING GEAR OIL PUMP

1953-54	All P.S.	w/bushing and rotor-w/rotor type pump	1	5680228
1954-55	All P.S.	w/vane type pump	1	5665669
1956	All P.S.		1	5683473
1957	All P.S.	w/bushing	1	5684945
1958	All P.S. exc. A.S.	w/bushing	1	5685518
1959	All P.S. exc. A.S.		1	5687038
1959	All P.S.-A.S.		1	5686883
1960	All P.S.		1	5688072
1953-54	All P.S.	BOLT, elbow to oil pump body-w/rotor type pump . . .	1	5680155
1954-55	All P.S.	DOWEL PIN, rotor ring-w/vane type pump	2	5680269
1956-58	All P.S.		2	5683678
1959-60	All P.S.		2	5686675
1953-54	All P.S.	ELBOW, to oil pump body-90°-w/rotor type pump . . .	1	5680154
1953-54	All P.S.	SEAL, elbow to oil pump body-"O" ring type- w/rotor type pump (3/4" I.D.)	2	5680177
1957	All P.S.-F.I.	pressure hose to elbow	2	5680177
1958	All P.S.-A.S.	SEAL AND TUBE ASSY., oil pump body	1	5686172

Group 6.609 COVER, STEERING GEAR OIL PUMP BODY

1953-54	All P.S.	w/rotor type pump	1	5680225
1954-55	All P.S.	w/vane type pump	1	5665650
1956	All P.S.		1	5683475
1957	All P.S.		1	5685048

1958	All P.S.	steering gear oil pump end	1	5686097
1959-60	All P.S.	BUSHING, valve cap-w/rotor type pump	1	5686676
1953-54	All P.S.	GASKET, body to cover-w/rotor type pump	1	5680255
1953-54	All P.S.	reservoir to pump body-w/vane type pump	1	5680256
1954-55	All P.S.	reservoir to pump cover-w/vane type pump	1	5664569
1954-55	All P.S.	reservoir to pump body and cover	2	5683968
1956-58	All P.S. exc. A.S.	reservoir to pump body	1	5686241
1958	All P.S.-A.S.	KIT, pump gasket-w/vane type pump	1	5665729
1954	All P.S.	gasket and seal	1	5685051
1957-58	All P.S. exc. A.S.	gasket and seal	1	5687086
1958	All P.S.-A.S.	bearing plate and pump, gasket and seal	1	5687257
1959	All P.S.-A.S.	RING, end cover retaining	1	5686680
1959-60	All P.S.	SEAL, reservoir to body-"O" ring type-w/rotor type pump (I.D. 5/16")	2	5680176
1953-54	All P.S. (6.608)	reservoir to body-"O" ring type-w/rotor type pump (I.D. 3/4")	2	5680177
1953-54	All P.S. (6.674)	elbow to pump cover-"O" ring type-w/rotor type pump	2	5665574
1953-54	All P.S. (6.674)	cover to body-"O" ring type-w/rotor type pump	1	5664015
1953-54	All P.S. (6.674)	bushing to cover-"O" ring type-w/rotor type pump (I.D. 13/16")	1	5680260
1954-58	All P.S. (6.674)	pressure port union-w/vane type pump	1	5664015
1959-60	All P.S.	end cover "O" ring	1	5686684
1959-60	All P.S.	pressure plate to hsg. "O" ring	1	5686685
1959	All P.S. exc. A.S.	SEAL KIT, pump "O" ring	1	5686716
1960	All P.S.	pump "O" ring	1	5688065
1958	All P.S.-A.S.	SPACER, power steering pump cover bolt	2	5687049
1958	All P.S. exc. A.S.	STUD, oil pump cover (5/16"x3-1/8" long)	2	5686235
1958	All P.S.-A.S.	oil pump cover (5/16"x3-7/8" long)	4	5686279
1953-54	All P.S. (6.679)	BOLT, to oil pump cover-w/rotor type pump	1	5664907
1957	All P.S. (8.900)	pump cover to body (5/16"-18x2-3/8")	2	273916
1957	All P.S.-F.I.	pressure hose to pump elbow	1	5681214
1957-58	All P.S. exc. A.S. (8.900)	pump cover to body (5/16"-18x3-1/8")	2	273917
1958	All P.S.-A.S. (8.900)	pump cover to body-w/rubber comp. mounting (5/16"-18x2-3/8")	2	273916
1953-54	All P.S. (6.679)	ELBOW, to oil pump cover-w/rotor type pump	1	5664906
1957	All P.S.-F.I.	pressure hose to pump	1	5685499
1954-55	All P.S. (6.673)	UNION, return port-w/vane type pump	1	5665572
1954-57	All P.S. exc. F.I. (6.673)	pressure port-w/vane type pump	1	5664020
1958	All	pressure port	1	5664020

Group 6.610 ROTOR, STEERING GEAR OIL PUMP

1953-54	All P.S.	w/rotor type pump	1	5681081
1954-55	All P.S.	w/vane type pump	1	5664585
1956-58	All P.S.		1	5683680
1959-60	All P.S.	w/sleeve	1	5687277
1959-60	All P.S.	RING, ROTOR AND VANE KIT, pump	1	5686718
1954-55	All P.S.	KIT, pump repair-w/vane type pump	1	5680505
1958	All P.S. exc. A.S.	RING, rotor retaining	1	5685525
1954-55	All P.S.	VANE KIT, oil pump rotor-w/vane type pump	1	5664610
1956-58	All P.S.		1	5683488
1959-60	All P.S.		1	5686719

Group 6.611 RING-SEAL, STEERING GEAR OIL PUMP ROTOR

1954-55	All P.S.	RING-w/vane type pump	1	5681137
1956	All P.S.		1	5683681
1957-58	All P.S.		1	5685047

1959-60	All P.S.	SEAL-w/vane type pump	(2-5/8" O.D.)	1	5686682
1954-56	All P.S.	SEAL-w/vane type pump	(2-5/8" O.D.)	2	5664578
1958	All P.S.	SEAL-w/vane type pump	(2-3/4" O.D.)	2	5685049
See Group 6.584 and 6.809 for use					5680593

Group 6.612 PLATE-SPRING, STEERING GEAR OIL PUMP

1954-55	All P.S.	PLATE, pressure-w/vane type pump		1	5665760
1956	All P.S.	pressure		1	5683543
1957	All P.S.	pressure		1	5685071
1958	All P.S.	pressure		1	5686941
1959-60	All P.S.	pressure		1	5686702
1959	All P.S.	thrust		1	5687321
1960	All P.S.	thrust		1	5687785
1959	All P.S.	PLUG, control valve plunger retaining		1	5686679
1959	All P.S.	RING, control valve plunger plug	(3/4" dia. bore)	1	274416
1959	All P.S.	SEAL, control valve plunger plug "O" ring		1	5686721
1954-55	All P.S.	SPRING, flow control valve-w/vane type pump		1	5665652
1956	All P.S.			1	5683871
1957-58	All P.S.			1	5684941
1959-60	All P.S.			1	5682367
1959-60	All P.S.	pump pressure plate		2	5686687

Group 6.614 SHAFT, STEERING GEAR OIL PUMP DRIVE

1953-54	All P.S.	w/rotor type pump	(w/3/8" tapped hole)	1	5681027
1956	All P.S.			1	5683544
1957	All P.S.			1	5684949
1958	All P.S. exc. A.S.			1	5685526
1959-60	All P.S. exc. A.S.			1	5687319
1954-55	All P.S.	SHAFT AND SEAL PKG., w/vane type pump		1	5681951
1953-54	All P.S.	PIN, rotor drive-w/rotor type pump		1	5680258

Group 6.615 BEARING, STEERING GEAR OIL PUMP SHAFT

1953-54	All P.S.	w/rotor type pump		1	900529
1954-55	All P.S.	w/vane type pump	Inner	1	903201
1954-56	All P.S.	w/vane type pump	Outer	1	954211
1956	All P.S.		Inner	1	5683561
1957	All P.S.		Outer	1	5684946

Group 6.616 RING, STEERING GEAR OIL PUMP BEARING RETAINER

1953-54	All P.S.	snap ring-w/rotor type pump		1	5680259
1954-56	All P.S.	outer bearing-w/vane type pump		1	5665651
1957	All P.S.	outer bearing	(39/64" I.D.)	1	5684935
1957	All P.S.	outer bearing	(1-11/16" I.D.)	1	5684948

Group 6.617 SEAL, STEERING GEAR OIL PUMP SHAFT

1953-54	All P.S.	w/rotor type pump		1	5680261
1954-55	All P.S.	w/vane type pump		1	5681410
1956-57	All P.S.			1	5683898

1958-60	All P.S. exc. A.S.	1	5686644
1958-59	All P.S.-A.S.	1	5686141

Group 6.622 VALVE ASSY., STEERING GEAR OIL PUMP RELIEF

1953-54	All P.S.	also flow control-w/rotor type pump	1	5680249
1953-54	All P.S.	PLATE, valve orifice-w/rotor type pump	1	5680079
1953-54	All P.S.	RING, relief and flow control valve retaining-w/rotor type pump	1	5680250
1953-54	All P.S.	SPRING, relief and flow control valve-w/rotor type pump (2-1/8" long)	1	5680262

Group 6.624 VALVE ASSY., STEERING GEAR OIL PUMP FLOW CONTROL

1954-55	All P.S.	w/vane type pump	1	5665656
1956	All P.S.		1	5685206
1957-58	All P.S.		1	5685449
1959	All P.S.		1	5687526
1959-60	All P.S.		1	5689397

Group 6.635 RESERVOIR, STEERING GEAR OIL PUMP

1953-54	All P.S.	w/rotor type pump	1	5680238
1954	All P.S.	w/vane type pump	1	5681696
1955	All P.S.		1	5682674
1956	All P.S.		1	5683904
1957	All P.S.		1	5685223
1958	All P.S. exc. A.S.		1	5684982
1959	All P.S. exc. A.S.		1	5687154
1959	All P.S.-A.S.		1	5687100
1960	All P.S.		1	5688094
1958	All P.S.-A.S.	RESERVOIR KIT	1	5686803
1953-54	All P.S.	BODY AND GUIDE ASSY., reservoir inlet orifice-w/rotor type pump	1	5680367
1956	All P.S.	BOLT, reservoir cover -w/washer (5/16"-18x2-1/2")	1	5685269
1957	All P.S. (8,900)	(5/16"-18x2-1/2")	1	180091
1959-60	All P.S. exc. A.S.	CAP, reservoir filler	1	5687648
1959	All P.S.-A.S.		1	5687771
1953-54	All P.S.	COVER, reservoir-w/rotor type pump	1	5680234
1954	All P.S.	w/vane type pump	1	5680157
1955	All P.S.		1	5682672
1956-58	All P.S. exc. A.S.		1	5683388
1958	All P.S.-A.S.		1	5686254
1953-54	All P.S.	ELEMENT, steering gear oil pump filter-w/rotor type pump	1	5664466
1956	All P.S.	FILTER, steering gear oil pump	1	5683882
1957-58	All P.S. exc. A.S.	w/retainer	1	5685072
1958	All P.S.-A.S.		1	5686242
1959	All P.S. exc. A.S.		1	5687446
1960	All P.S.	pump oil-w/fittings	1	5688079
1953-54	All P.S.	GASKET, reservoir cover-w/rotor type pump	1	5680237
1954	All P.S.	reservoir cover-w/vane type pump	1	5664930
1954	All P.S.	reservoir cover bolt-w/vane type pump	1	5664570
1955-58	All P.S.	reservoir cover	1	5682123
1958	All P.S.-A.S.	reservoir cover	1	5686619

1954	All P.S.	GUIDE, reservoir cover bolt-w/vane type pump	1	5664577
1956-58	All P.S. exc. A.S.	MANIFOLD, oil pump reservoir	1	5683874
1958	All P.S.-A.S.	MANIFOLD KIT, power steering	1	5686904
1956	All P.S.	RETAINER, oil pump filter	1	5683870
1958	All P.S. exc. A.S.		1	5683870
1953-54	All P.S.	RING ASSY., reservoir clamping-w/rotor type pump	1	5680229
1958	All P.S.-A.S. (8.934)	reservoir filter retaining	1	274267
1954-55	All P.S.	SCREW AND WASHER, reservoir to pump body-w/vane type pump	4	5680865
1956-58	All P.S.		4	5683542
1956	All P.S.	SPRING, oil pump filter	1	5683885
1958	All P.S.-A.S.		1	5686240
1959-60	All P.S.	SEAL, reservoir to pump hsg. "O" ring	1	5685792
1960	All P.S. (6.674)	reservoir body bolt to reservoir	2	5681740
1959	All P.S.	STUD, reservoir body to pump hsg.	2	5686985
1960	All P.S.	reservoir body to pump hsg.	2	5687796
1953-54	All P.S.	VALVE AND HANDLE ASSY., relief-w/rotor type pump	1	5680244
1954	All P.S.	WASHER, reservoir cover bolt-w/vane type pump	1	5664573
1955	All P.S.		1	5682657
1956-58	All P.S. exc. A.S.		1	5682148
1958	All P.S.-A.S.		1	5686445
1958	All P.S.	sealing	1	5685606
1959	All P.S.	reservoir sealing "O" ring	2	5687263
1959	All P.S.-A.S.	pump to comp. bolt sealing	2	5687396

Group 6.655 PULLEY, STEERING GEAR OIL PUMP

1953-54	All P.S.	w/rotor type pump (3-9/16" O.D.)	1	517337
1954	All P.S. exc. A.C.	w/vane type pump	1	517895
1954-56	All P.S.-A.C.	w/vane type pump	1	518687
1955-56	All P.S. exc. A.C.		1	519438
1957	All P.S.-A.C.-F.I.-3/2 B.C.	(3/8" groove-5-5/8" dia.)	1	524207
1957	All P.S. exc. A.C.-F.I.	(3/8" groove-5-5/8" dia.)	1	524208
1957-60	All P.S.-A.C. exc. A.S.	(1/2" groove-5-15/16" dia.)	1	530613
1958-60	All P.S. exc. A.S.-A.C.	(3/8" groove-5-5/8" dia.)	1	524207
1958-60	All A.C.-P.S.	w/6 cyl. comp.	1	538551
1953-54	All P.S.	PULLEY, guide	1	517340
1955-57	All P.S.-2 B.C.-4 B.C. exc. A.C.		1	534583
1957	All P.S.-F.I.-3/2 B.C.		1	524979
1958-60	All P.S.-A.S. exc. A.C.	(A)	1	534583
1953-54	All P.S.	KEY, pulley to shaft-w/rotor type pump	1	5680083
1954-60	All P.S. exc. A.S.	pulley to shaft-w/vane type pump	1	5687898
1953-54	All P.S.	WASHER, pulley to pump-w/rotor type pump	1	517338
1954-60	All P.S. exc. A.S.	w/vane type pump	1	563979

▲NOTE: Use with 529184 Harmonic Balancer on cars with air suspension.

Group 6.660 BELT, STEERING GEAR OIL PUMP

1953-54	All P.S.	w/rotor type pump	1	517323
1954	All P.S.	w/vane type pump	1	517873
1955-57	All P.S. exc. A.C.-F.I.-3/2 B.C.		1	519434
1957	All P.S.-F.I.-3/2 B.C. exc. A.C.		1	529358
1958-60	All P.S. exc. A.C.-A.S.		1	530071
1958-60	All P.S.-A.C. exc. A.S.		1	530621

Group 6.670 HOSE, STEERING GEAR OIL PRESSURE

1953	All P.S.	w/rotor type pump	1	5680042
1954	All P.S.		1	5681042
1955	All P.S.		1	5682487
1956	All P.S.		1	5683091
1957	All P.S. exc. F.I.		1	5685503
1957	All P.S.-F.I.		1	5685502
1958	All P.S.		1	5686329
1959-60	All P.S. exc. A.S.		1	5688506
1959	All P.S.-A.S.		1	5687187

Group 6.671 HOSE-PIPE, STEERING GEAR OIL RETURN

1953-54	All P.S.	HOSE, w/rotor type pump	1	5680043
1954	All P.S.	w/vane type pump	1	5681035
1955	All P.S.		1	5682488
1956	All P.S.		1	5683926
1957	All P.S.		1	5685227
1958	All P.S.		1	5686257
1959	All P.S. exc. A.S.		1	5686930
1959	All P.S.-A.S.		1	5687188
1960	All P.S.		1	5688303
1959	All P.S. exc. A.S.	END ASSY., return hose	1	5687195
1959	All P.S.-A.S.	return hose	1	5687197
1960	All P.S.	return hose	1	5684537
1957	All P.S.	PIPE ASSY., steering gear oil return	1	5683929
1958	All P.S.		1	5686265

Group 6.671 CLIP, STEERING GEAR OIL HOSE

1953-54	All P.S.		1	517645
---------	------------------	-----------	---	--------

Group 6.673 UNION, STEERING GEAR OIL HOSE TO VALVE

1953-55	All P.S.	pressure port (1/4")	1	5665614
1953	All P.S.	return port-w/rotor type pump (3/8")	1	5664020
1954-55	All P.S.	return port-w/vane type pump	1	5665572
1959	All P.S.	pressure port	1	5686688
1956-58	All P.S.	CONNECTOR, valve body inverted flare-pressure	1	5681757
1956-58	All P.S.	return line	1	5682044
1959-60	All P.S.	hose fitting to hsg. (1/4" I.D. x17/32" O.D.)	1	5682044
1959-60	All P.S.	hose fitting to hsg. (9/32" I.D. x39/64" O.D.)	1	5687538

Group 6.674 SEAL, STEERING GEAR ELBOW TO VALVE HOUSING

1953-55	All P.S.		4	5665574
1953-55	All P.S.	return line to valve housing	1	5664015
1953-55	All P.S.	pressure line to valve housing (I.D. 15/32")	1	5664142
1959	All P.S.	to pump hsg. "O" ring	1	5681740
1959	All P.S.	pump hsg. to reservoir	1	5681869
1960	All P.S.	to pump hsg. "O" ring	1	5688035
1960	All P.S.	pump hsg. to reservoir	1	5688049

Group 6.677 PIPE, STEERING GEAR VALVE OIL

1953-54	All P.S.	valve to rod end of cylinder	1	5663908
1955	All P.S.	valve to rod end of cylinder	1	5682413

Group 6.678 PIPE, STEERING GEAR VALVE OIL

1953-54	All P.S.	valve to head end of cylinder	1	5663907
1955	All P.S.	valve to head end of cylinder	1	5682412

Group 6.679 ELBOW, STEERING GEAR OIL PIPE

1953-55	All P.S.	universal fitting, 90°	4	5664906
1953-55	All P.S.	BOLT, universal fitting elbow	4	5664907

Group 6.681 PIPE, STEERING GEAR VALVE BLEED LINE

1953-54	All P.S.		1	5663906
1955	All P.S.		1	5681840

Group 6.750 BRACKET, STEERING COLUMN

1941	29 All		1	505365
1942-48	All exc. 2507		1	508037
1942-48	2507 All		1	508038
1942-48	26 All		1	508039
1949	All	Upper	1	511890
1949-52	All	Lower	1	512473
1940-52	All	Upper	1	513796
1953-54	All	Upper	1	516821
1953-54	All	Lower	1	516822
1955-56	All		1	518285
1957	All		1	523301
1958	All	Upper	1	529013
1958	All exc. P.S.	Lower	1	529012
1958	All P.S.	Lower	1	529915
1959	All	Upper	1	532211
1959	All S.S.	Lower	1	532210
1959	All P.S.	Lower	1	533177
1960	All	Upper	1	536393
1960	All S.S.	Lower	1	536382
1960	All P.S.	Lower	1	536383
1955	All L.H.D.	BEZEL, inst. panel strg. col. opening	1	518829
1956	2711-19-37-39-62-63 All	black	1	522102
1956	2764, 2819-37-39-67 All	chrome	1	518829
1959	All L.H.D.	PLATE, steering column finish-w/dir. signal	1	512435
1949	All L.H.D.	without dir. signal	1	511892
1949	All	without heater	1	511893
1950-52	All L.H.D.	with dir. signal	1	515720
1950-52	All	without dir. signal	1	515782
1957	All	SUPPORT, steering column	4690493 RH	4690494 LH
1959-60	All		1	4762328
1959	All S.T.-P.S.		1	531847
1960	All S.T.-P.S. exc. 4 SPD.		1	535064
1955-56	25/2764, 2819-37-39-67 All (12.118)	NUT, inst. panel strg. col. bezel	6	516711

Group 6.751 BOLT, STEERING COLUMN BRACKET

1953-56	All	screw	(5/16"-18x2-1/2")	2	515637
1958	All	lower bracket	(5/16"-18x1-1/2")	2	274543
1959	All		(5/16"-18x2")	2	534293
1960	All	to mounting bracket		2	534692
1959-60	All S.T.-P.S.	U BOLT, strg. column to lower support		1	529518

Group 6.758 INSULATOR-SILENCER, STEERING COLUMN BRACKET

1955-56	All	INSULATOR, strg. col. to brkt.-black		1	518286
1955	All SD	turquoise blue		1	520610
1955	All SD	firegold		1	520611
1955-57	All	strg. col. to inst. panel		AR	518287
1957	All exc. P.S.	strg. column to bracket		1	523300
1957	All P.S.	strg. column to bracket		1	524719
1958	All	strg. column to bracket	Upper	2	530245
1958	All	strg. column to bracket	Lower	1	530244
1959	All	strg. column to bracket	Upper	1	533699
1959	All	strg. column to bracket	Lower	1	532213
1960	All		Upper	1	536463
1960	All		Lower	1	536462
1959-60	All	SILENCER, steering column support		2	4572237

Group 6.786 BUSHING, PITMAN SHAFT

1937-60	All exc. 1956 P.S.			1	266316
1956	All P.S.			1	5683367
1957-58	All P.S.	BEARING ASSY., pitman shaft-needle		1	442612
1959	All P.S.		(1-1/4" I.D. x 1-1/2" O.D.)	1	5687117
1959-60	All P.S.		(1-1/4" I.D. x 1-5/8" O.D.)	1	5687757

Group 6.803 HOUSING, STEERING GEAR L.H.D.

1937-48	All exc. P/6 1937-38			1	263417
1949-54	All S.S.			1	5665659
1953-54	All P.S.			1	5680034
1955	All S.S.			1	5667354
1955	All P.S.			1	5682471
1956-57	All S.S.			1	5668483
1956	All P.S.			1	5683201
1957	All P.S.			1	5685323
1958	All S.S.			1	5671849
1958	All P.S.			1	5685810
1959	All S.S.			1	5672780
1959-60	All P.S.		(w/1-5/8" dia. bearing hole)	1	5687766
1960	All S.T.-S.S.			1	5674198
All	All	LUBRICANT, steering gear	(20 oz. tube)	AR	1461598

Group 6.806 SEAL ASSY., STEERING GEAR WORM

1953-55	All P.S.	BEARING, upper worm-needle type		1	5663834
1953-55	All P.S.	PLUG KIT, steering gear housing end		1	453896
1956-58	All P.S.	VENT ASSY., steering gear housing		1	5684069
1953-55	All P.S.			1	5681084

Group 6.807 COVER ASSY., STEERING GEAR HOUSING SIDE

1937-38	All L.H.D.	with bushing	1	263462
1939-54	All S.S.	with bushing	1	263462
1953-55	All P.S.		1	5663821
1955-57	All S.S.		1	5666722
1957-58	All P.S.		1	5685471
1958	All S.S.		1	5671845
1959-60	All S.S.		1	5666722
1959-60	All P.S.		1	5687820
1956	All P.S.	KIT, housing side cover	1	5684800
1957-58	All P.S.	(6.550) BOLT AND LOCKWASHER ASSY., housing		
		side cover (5/16"-18x13/16")	1	5684193
1956-58	All P.S.	SCREW, side cover to housing-special	1	5682837
1956	All P.S.	bleed	1	5683279

Group 6.809 GASKET-SEAL, STEERING GEAR HOUSING SIDE PLATE

1937-54	All S.S.	GASKET	1	263419
1953-55	All P.S.		1	5663817
1955-57	All S.S.		1	5666734
1958	All S.S.		1	5671858
1959-60	All S.S.		1	5666734
1956-58	All L.H.D.-P.S.	(6.611) SEAL, side cover to housing "O" ring (3" I.D.)	1	5680593
1959-60	All P.S.		1	5686570

Group 6.822 SCREW, STEERING GEAR SECTOR ADJUSTING

1934-54	All S.S.	pitman shaft or roller adj. (11/16" Dia.)	1	262566
1953-54	All P.S.	lash adjuster	1	266678
1955	All	lash adjuster	1	266678
1956-58	All S.S.	lash adjuster	1	266678
1956	All P.S.	lash adjuster	1	5682794
1959-60	All P.S.		1	266678

Group 6.823 NUT, PITMAN SHAFT ADJUSTING SCREW

1957-60	All P.S.	lash adjuster (7/16"-20)	1	5685372
---------	----------	--------------------------	---	---------

Group 6.824 COVER ASSY., STEERING GEAR HOUSING END

1937-48	All		1	263274
1949-54	All L.H.D., S.S.		1	5660825
1953-55	All P.S.		1	5663919
1956	All P.S.		1	5684205
1957-58	All P.S.	steering gear top	1	5686284
1959-60	All P.S.		1	5686815
1956-58	All P.S.	BOLT, housing end cover (Spec. 3/8"-16x1-1/2")	4	5682858
1959-60	All P.S.	RING, lower end plug retainer	1	5686814

Group 6.825 GASKET, STEERING GEAR HOUSING END PLATE

1937-54	All S.S.		1	263299
1953-55	All P.S.		1	5663903

1956	All P.S.	KIT, housing end cover seal	1	5683795
1957-58	All P.S.	housing top cover and valve seal	1	5685262
1937-47	All	PACKING, steering gear housing end plate	2	263309
1948-54	All S.S.		1	263309
1956-58	All P.S.	SEAL, housing end cover shaft oil	1	5682846
1959-60	All P.S.	steering gear end cover 'O' Ring . . . (3-1/2" O.D.)	1	5686577
1956-58	All P.S.	WASHER, housing end cover seal back-up	1	5683223

Group 6.826 BEARING, STEERING GEAR HOUSING END COVER

1953-55	All P.S.	roller type	1	453897
1956-60	All P.S.	roller type	1	5683229
1956	All P.S.	BUSHING, housing end cover	1	5683942
1957-58	All P.S.	housing top cover	1	5685237

Group 6.828 SHIM PKG., STEERING GEAR LASH ADJUSTER

1953-54	All P.S.		1	605142
1955-56	All		1	605142
1957-60	All S.S.		1	605142

Group 6.830 ADJUSTER-NUT-SCREW-SLEEVE-WASHER, STEERING GEAR

1955-60	All S.S.	ADJUSTER ASSY., worm thrust brg.	1	5666681
1955-60	All S.S.	NUT, worm bearing adjuster (2-3/4"-16)	1	5666699
1955-60	All S.S.	RETAINER, thrust adjuster lower brg.	1	5668489
1937-54	All S.S.	SCREW, worm bearing thrust	1	263302
1937-54	All S.S.	SLEEVE, lash adjuster	1	263303
1937-54	All S.S.	WASHER, worm thrust	1	263304

Group 6.840 RING-SEAL-WASHER, STEERING GEAR WORM SHAFT OIL SEAL

1956-58	All P.S.	RING, washer retaining	1	5682790
1956-58	All P.S.	SEAL, oil (39/64" I.D.)	1	5682788
1956-58	All P.S.	WASHER, retaining ring	1	5683110
1956-58	All P.S.	oil seal bronze Outer	1	5682789
1956-58	All P.S.	oil seal-steel Inner	1	5683394

Group 6.841 NUT, STEERING GEAR WORM BALL

1953	All P.S.		1	5661083
1954-55	All P.S.		1	5680784
1955-58	All S.S.		1	5666690
1959-60	All S.S.	KIT, strg. gear ball nut	1	5675672
1956-57	All P.S.	SCREW, ball nut retaining (Slotted)	1	5683582
1957-58	All P.S.		1	5685702
				(Hex. socket)

Group 6.842 GUIDE, STEERING GEAR WORM BALL RETURN

1953	All P.S.	4	267502
1954-55	All P.S.	4	5680786
1955-58	All S.S.	4	5666691
1956-58	All P.S.	2	5683319
1959-60	All S.S.	4	5672776
1959-60	All P.S.	2	5686540
1956	All P.S.	2	5683919
			CAP, ball return guide

Group 6.843 CLAMP, STEERING GEAR WORM BALL RETURN GUIDE

1953	All P.S.	1	5661082
1954-55	All P.S.	1	5680785
1955-58	All S.S.	1	5666692
1959	All S.S.	1	5672777
1959-60	All P.S.	1	5686539
1960	All S.S.	1	5674112
1955-59	All S.S.	1	187375
1959-60	All P.S.	2	187375
1960	All S.S.	1	5674113
			BOLT AND WASHER, clamp (1/4"-28x5/16")
			strg. gear ball return guide clamp (1/4"-28x5/16")

Group 6.844 BALL, STEERING GEAR WORM

1953-55	All P.S.	60	266800
1955-58	All S.S.	54	266800
1959-60	All S.S.	50	266800
1956	All P.S.	1	5684001
1956	All P.S.	1	5684002
1956	All P.S.	1	5684003
1956	All P.S.	1	5684004
1956	All P.S.	1	5684005
1956	All P.S.	1	5684006
1956	All P.S.	1	5684007
1956	All P.S.	1	5684008
1956	All P.S.	1	5684009
1956	All P.S.	1	5684010
1956	All P.S.	1	5684011
1956	All P.S.	1	5684012
1956	All P.S.	1	5684013
1957-60	All P.S.	1	5685706
1957-60	All P.S.	1	5685707
1957-60	All P.S.	1	5685708
1957-60	All P.S.	1	5685709
1957-60	All P.S.	1	5685710
1957-60	All P.S.	1	5685711
			BALL PKG., recirculating
			(.28077 dia.)
			(.28085 dia.)
			(.28093 dia.)
			(.28101 dia.)
			(.28109 dia.)
			(.28117 dia.)
			(.28125 dia.)
			(.28133 dia.)
			(.28141 dia.)
			(.28149 dia.)
			(.28157 dia.)
			(.28165 dia.)
			(.28173 dia.)
			(.28117 dia.)
			(.28125 dia.)
			(.28133 dia.)
			(.28141 dia.)
			(.28149 dia.)
			(.28157 dia.)

Group 6.850 SHAFT, STEERING GEAR PITMAN

1953-55	All P.S.	1	5664522
1955-57	All S.S.	1	5666735
1956	All P.S.	1	5683375
1957-58	All P.S.	1	5685406
1958	All S.S.	1	5671859
1959-60	All S.S.	1	5671822

1959-60	All P.S.	1	5687184
1937-54	All S.S. KIT, pitman shaft (▲)	1	510895
▲NOTE: Kit consists of 1 each-Roller and shaft, bushing, seal, nut, gasket, thrust washer and lock washer.			

Group 6.855 PACKING, STEERING GEAR PITMAN SHAFT

1953-55	All P.S.	1	270289
1955-60	All S.S.	1	270289
1937-54	All S.S. SEAL, steering gear pitman shaft grease	1	263463
1956	All P.S. steering gear pitman shaft dust	1	5682813
1956-59	All P.S. steering gear pitman shaft oil	1	5683373
1957-59	All P.S. steering gear pitman shaft oil-double lip	1	5684278
1957-60	All P.S. SEAL AND WASHER KIT, pitman shaft	1	5685355
1937-54	All S.S. WASHER, pitman shaft thrust	1	263306
1956-59	All P.S. pitman shaft seal back-up	2	5684477

Group 6.856 RETAINER, PITMAN SHAFT PACKING

1953-55	All P.S.	1	262156
1956-60	All S.S.	1	262156
1956-59	All P.S. RING, pitman shaft seal retaining	1	5682898

Group 6.859 ARM, STEERING GEAR PITMAN

1939	All L.H.D.	1	265908
1940	25-26 L.H.D.	1	265908
1940	29 L.H.D.	1	265094
1941-48	All	1	265094
1949-52	All L.H.D.	1	5661574
1953-54	All L.H.D., S.S.	1	5663354
1953-54	All P.S.	1	5665955
1955	All L.H.D.	1	5667571
1956	All L.H.D., P.S.	1	5668643
1956-57	All L.H.D., S.S.	1	5667571
1957	All P.S.	1	5671633
1958	All S.S.	1	5671950
1958	All P.S.	1	5671947
1959-60	All S.S.	1	5672750
1959-60	All P.S.	1	5672749
1960	Police (Spec. Order) (▲)	1	5674419
▲NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.			

Group 6.861 NUT, STEERING GEAR PITMAN ARM

1933-54	All S.S.	(3/4"-16)	1	254291
1953-54	All P.S.	(7/8"-14)	1	258779
1955-60	All	(7/8"-14)	1	258779

Group 6.870 ROD ASSEMBLY, STEERING CONNECTING L.H.D.

1939-48	All	1	265207
1953-55	All	1	5663364

1956-57	All		1	5670004
1958	All		1	5671960
1959-60	All		1	5672756
1960	Police (Spec. Order)	(▲)	1	5674418
1949-52	All	ROD AND SPACER PKG.	1	513485
1939-52	All	SPRING, SEAT AND PLUG PKG.	1	557397

▲NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 6.874 SEAT, STEERING CONNECTING ROD BALL

1933-38	All		3	595586
1939-58	All	at idler lever	4	264946
1959-60	All	at idler lever	4	264946
1959-60	All	at pitman arm end-slotted	2	5675302
1960	Police (Spec. Order)	(▲)	4	1324647

▲NOTE: For use only with Special Order Police jobs equipped with roller type wheel bearings.

Group 6.876 SPRING, STEERING CONNECTING ROD

1933-52	All	both ends	2	335976
1937-38	All	steering arm end	1	335976
1953-57	All	pitman arm end	2	516963
1953-57	All	idler arm end	1	335976
1958-60	All	both ends	2	335976

Group 6.881 PLUG, STEERING CONNECTING ROD END

1939-52	All	both ends	2	264945
1953-57	All	pitman arm end	1	1324652
1953-57	All	idler arm end	1	264945
1958-60	All	both ends	2	264945

Group 6.882 PLUG, STEERING CONNECTING ROD SAFETY

1937-38	All	steering arm end	1	263697
1939-52	All	both ends	2	263697
1953-57	All	pitman arm end	1	5664237
1953-57	All	idler arm end	1	263697
1958-60	All	both ends	2	263697

Group 6.883 SPACER, STEERING CONNECTING ROD BALL SEAT

1939-48	All L.H.D.	triangle type, short	1	264925
1949-52	All L.H.D.	pitman arm end	1	5660144
1949-52	All L.H.D.	idler arm end	1	5660145
1949-58	All	conn. rod inner plug	2	5661177
1953-57	All	idler arm end	1	516960
1953-55	All L.H.D.	pitman arm end	1	516961
1956-57	All L.H.D.	pitman arm end	1	521554
1958	All	idler arm end	1	528882
1958	All	pitman arm end	1	528883
1959-60	All	idler arm end	1	532399
1959-60	All	pitman arm end	1	532400

1959-60	All	conn. rod inner plug	1	5661177
1939-60	All	COVER, steering connecting rod ball seat spacer	2	265516

Group 6.885 WASHER, STEERING CONNECTING ROD SPACING

1939-60	All	inner	2	264988
1953-57	All L.H.D.	outer	1	264988

Group 6.886 COVER, STEERING CONNECTING ROD DUST

1939-52	All		2	265765
1953-57	All	pitman arm end	1	5663589
1953-58	All	idler arm end	1	265765
1959-60	All	(6.111)	2	5672757
1959-60	All	CUP, grease seal	1	535545

Group 6.888 SPRING, STEERING CONNECTING ROD DUST COVER

1939-60	All	at idler lever	2	264949
---------	-----	----------------	---	--------

Group 6.895 ARM ASSEMBLY, STEERING CONNECTING ROD IDLER

1939-54	All		1	264953
1955-60	All		1	5660450
1960	Police (Spec. order)	(See note)	1	5674412

NOTE: For use only with Special Order Police jobs equipped with roller type front wheel bearings.

Group 6.896 SUPPORT ASSY., STEERING CONNECTING ROD IDLER LEVER

1939-60	All	with bushing and seal	1	516710
1960	All	(8.900) BOLT, strg. idler lever brkt. to frame	2	181637

(3/8"-24x1")

Group 6.897 BUSHING, STEERING ARM IDLER SUPPORT

1939-60	All		1	5672926
---------	-----	--	---	---------

Group 6.898 SEAL, IDLER LEVER BUSHING OIL

1939-60	All		1	506529
---------	-----	--	---	--------