

YEAR	MODEL	PART NAME	PART NO.	PER CAR	PART NO.
------	-------	-----------	----------	---------	----------

Group 9.011 WASHER, BODY BOLT

1939-52	All		(7/16" I.D.)	AR	560063
1959-60	All (1.274)	No. 1 bolt	(15/32" I.D. x1-5/8" O.D.)	AR	1310521

Group 9.023 CUSHION-INSULATOR-SHIM-SPACER, BODY TO FRAME

1940-54	All	CUSHION, body bolt	Round	AR	504374
1955-60	2167, 2567, 2867 All	rubber	Round	AR	519587
1954-57	All exc. 2867	INSULATOR, body to frame-w/washer and spacer		AR	560957
1954-57	All exc. 2867	rubber	(1-3/4" O.D. x7/8" I.D. x9/16" thick)	AR	560958
1954	All exc. 2867	rubber	(1-3/4" x1-1/2" x9/16" thick)	4	517949
1955-60	2167, 2567, 2867 All	rubber		AR	519589
1958-60	All	w/washer and spacer	(1/2" thick)	AR	530856
1958-60	All	rubber	(1-3/4" O.D. x7/8" I.D. x9/16" thick)	AR	530855
1959-60	All exc. 2167, 2867	w/washer and spacer		AR	533658
1949-53	2537-67 All	SHIM, No. 1 bolt	(9/32" thick)	2	511865
1949-57	All	steel	(.060 thick)	AR	513290
1955-57	2867	No. 1 bolt	(7/16" thick)	2	519586
1958-60	All	steel	(.060 thick)	AR	530117
1960	All	steel	(.120)	AR	530119
1955-57	All	SPACER, floor pan to frame-rubber		4	519585

Group 9.030 KIT, UNIVERSAL CLIP AND TEE BOLT

NOTE: For attaching moldings to body and fenders.

All	All	zip clip kit		AR	561644
-----	-----	--------------	--	----	--------

Group 9.038 PLATE, STEERING COLUMN AND PEDAL

1949-52	All L.H.D.		Lower	1	511566
1953-54	All L.H.D., S.B.		Lower	1	517086
1953-54	All L.H.D., S.B.		Upper	1	517081
1955-56	All L.H.D., S.T.-S.B.			1	520136
1955-56	All L.H.D., H.T.-S.B.			1	521304
1957	All L.H.D.			1	523444
1958	All		Inner	1	529083
1958	All S.T.		Outer	1	529082
1958	All H.T.		Outer	1	529112
1949-52	All L.H.D.	PLATE, steering column and pedal, felt retainer filler		1	511564
1955-56	All L.H.D.			1	519386
1957	All L.H.D.	seal retainer		1	523446
1959-60	All S.T.-S.S.	PLATE, strg. col. opening cover		1	533395
1959-60	All S.T.-P.S.			1	531843
1959-60	All H.T.			1	533482
1960	All S.T.-S.S.	PLATE, strg. col. opening cover		1	533395
1959-60	All	INSERT, strg. col. opening cover		1	532278
1959-60	All S.T.	INSULATOR, strg. col. to dash		1	534135
1959-60	All H.T.			1	534360
1959-60	All (8.977)	SCREW, dash insulator to dash	(Oval Hd. No. 10-12x5/8")	3	168590
1953-57	All H.T. & P.G.	SEAL, clutch pedal floor hole		1	517090
1958-60	All			1	529096
1959-60	All S.T.-S.B. (8.147)	WASHER, strg. col. opening cover plate to toe pan		6	514084
1959-60	All (15.286)	dash insulator to dash-at steering column	(2-3/64" I.D. x35/64" O.D. x1/64" thk.)	2	140251
1959	All (15.286)	dash insulator to dash-at steering column	(2-3/64" I.D. x35/64" O.D. x1/64" thk.)	2	140251

Group 9.039 FELT, STEERING COLUMN AND PEDAL PLATE

1949	All L.H.D.	Upper	1	511570
1949	All L.H.D.	Lower	1	511571
1950-52	All L.H.D.	Lower	1	513799
1955-57	All S.B.	PLATE, pedal seal retaining	1	519387
1953-57	All P.B.	RETAINER, clutch pedal seal	1	518326
1953-54	All P.B.	steering column seal	1	518327
1958	All	steering column seal	1	530266
1959-60	All	steering column seal	1	532280
1953-57	All S.T.	SEAL, clutch pedal	1	517089
1953-57	All S.B.	brake pedal	1	517089
1955-57	All exc. P.B.	SUPPORT, clutch and brake pedal seal	AR	519385

Group 9.045 GROMMET-SEAL, STEERING COLUMN TOE BOARD

1949-52	All L.H.D.	GROMMET	1	511472
1953-54	All L.H.D.	black	1	515043
1954	All L.H.D.	beige	1	518384
1954	All L.H.D.	red	1	518385
1954	All L.H.D.	yellow	1	518386
1955-58	All L.H.D.	black	1	519549
1957	All S.D.	cordova red	1	524422
1957	All S.D.	silver beige	1	524423
1957	All S.D.	limefire green	1	524424
1957	All S.D.	fontaine blue	1	524731
1959-60	All		1	532279
1953-54	All L.H.D.	SEAL, steering column	1	517088
1955-57	All	(3-15/16" O.D.)	1	517088

Group 9.106 COVER ASSY., TRANSMISSION FLOOR HOLE

1948	All H.T.	inspection hole	1	513996
1949-54	All H.T.	servo band adjusting	1	511999
1949-54	All	inspection hole	1	513996
1950-54	All	pressure regulator	1	513744

Group 9.127 ANTI-SQUEAK, COWL LEDGE

1949-52	All		2	4562181
1953-54	All		1	4595571
1955	All		1	4650471
1956	All	Center	1	4674929
1956	All	Outer	2	4674930
1957	All		1	4688354
1958	All		1	4716862
1959-60	All		1	4760507
1950-52	All	BAFFLE, hood to shroud water-rubber	1	514121
1957	All	FASTENER, cowl ledge anti-squeak	2	4583318

Group 9.128 CLIP, SHROUD HOOD LEDGE LACING

1949-54	All		6	374488
1955-60	All		10	3767720

Group 9.131 BRACE, DASH TO INSTRUMENT PANEL

1953-54	2567	515111 RH	515112 LH
---------	------	-------	-----------	-----------

Group 9.170 COMPRESSOR, AIR CONDITIONER

NOTE: See Group 9.226 for compressor fittings adapter packages.

1954	All A.C.	COMPRESSOR ASSY.	1	3133322
1955	All A.C.	partial	1	5441308
1956-57	All A.C.	partial	1	5910224
1958-60	All A.C.	partial-w/5 cyl. comp.	1	5910425
1958-60	All A.C.	COMPRESSOR AND MOUNTING PKG., w/6 cyl. comp.- use with 541753-54-55-58-59-60 & 543166 adapter pkg's.	1	541761
1958	All Circulaire A.C.	COMPRESSOR DRIVE PKG.	1	531835
1958	All Circulaire A.C.-A.S.-P.S.	ADAPTER PKG., rigid mount air compressor- use with 531835 (▲)	1	531943
1958	All Circulaire A.C.-A.S.-S.S.	rigid mount air compressor-use with 531835 and 531944 (▲)	1	531943
1958	All Circulaire A.C.-A.S.-S.S.	standard steering-use with 531835 and 531943	1	531944
1958	All A.C.-S.S.	standard steering-w/6 cyl. comp., use with 541761 comp. pkg.	1	541760
1958-60	All A.C.-P.S.	power steering-w/6 cyl. comp., use with 541761 comp. pkg.	1	541758
1958	All A.C.	rocker arm cover and generator pulley-w/6 cyl. comp., use with 541761 comp. pkg.	1	541759
1954	All A.C.	GASKET, compressor bearing	2	3134102
1954	All A.C.	compressor bottom plate	1	3134103
1954	All A.C.	KIT, cyl. head and refrigerant pipe repair	1	3133304
1955	All A.C.	SPACER, compressor discharge hose	2	3134293
1956	All A.C.	compressor to condenser hose	2	3134293
1957-58	All Circulaire A.C.	compressor to condenser hose	1	3134293
1959-60	All Circulaire A.C.	temp. regulation valve to evaporator	2	3148420
1960	All Cool Pack A.C.	compressor to condenser hose	1	3134293

▲NOTE: For use when converting the rubber type compressor mtg. to the rigid type mtg.

Group 9.171 BRACKET-BRACE-INSULATOR, COMPRESSOR MOUNTING

1954	All A.C.	BRACKET ASSY., compressor mounting	1	518695
1955	All A.C.	compressor to front inner insulator	1	521377
1955	All A.C.	compressor to front outer insulator	1	521086
1955	All A.C.	compressor to rear inner insulator	1	521087
1955	All A.C.	compressor to rear outer insulator	1	521088
1956	All A.C.	compressor mounting	1	522522
1957	All A.C.	compressor mounting	Front	1 523681
1957	All A.C.	compressor mounting	Rear	1 523682
1958	All A.C.	compressor mounting	Front	1 531296
1958	All A.C.	compressor mounting	Rear	1 529599
1958	All A.C.	compressor mounting (▲)	Rear	1 532865
1958-60	All A.C.	compressor mtg.-w/6 cyl. comp.	1	541741
1959-60	All A.C.	compressor mounting	Front	1 532864
1959-60	All A.C.	compressor mounting	Rear	1 534310
1954	All A.C.	BRACE, compressor mounting bracket	1	518921
1954	All A.C.	compressor	1	519241
1956	All A.C.	compressor mounting bracket	1	522523
1957	All A.C. exc. F.I.	compressor mounting	Rear	1 523680
1957	All A.C.-F.I.	compressor mounting	Rear	1 528616
1958	All A.C. exc. F.I.	compressor mounting	Rear	1 529597
1958	All A.C.-F.I.	compressor mounting	Rear	1 529596
1958-60	All A.C.	compressor mounting-w/6 cyl. comp.	Rear	1 541187
1955	All A.C.	(0.027)	INSULATOR, compressor	Front inner	1 508748
1955	All A.C.	Front outer	1 760350
1955	All A.C.	Rear	1 521089
1958	All A.C.	PLATE, compressor mounting (▲)	Front	1 534305

1958	All A.C.	compressor mounting (▲)	Rear	1	532867
1958-60	All A.C.	compressor mounting-w/6 cyl. comp.	Front	1	541189
1958-60	All A.C.	compressor mounting-w/6 cyl. comp.	Rear	1	541190
1959-60	All A.C.	compressor mounting	Front	1	534305
1959-60	All A.C.	compressor mounting	Rear	1	532867
1957	All A.C.	SPACER, compressor mounting rear brace		1	523208
1958	All A.C.	compressor front mtg. bracket to cyl. head (▲)		1	532868
1958-59	All A.C.	comp. and gen. mtg. brkt. support to cyl. head elbow-w/6 cyl. comp.		2	541742
1958-59	All A.C.	compressor bracket to water inlet		2	531297
1958-60	All A.C. (2.277)	compressor rear mtg. plate-w/6 cyl. comp.		3	538790
1958-60	All Circulaire A.C. (2.277)	compressor rear brace to rear plate-w/6 cyl. comp.		1	538733
1959	All A.C.	comp. frt. mounting brkt. to cyl. head		2	532868
1959-60	All A.C.	frt. mounting brkt. to plate		2	534306
1960	All A.C.	comp. frt. mounting brkt. to cyl. head . . . (13/32" I.D. x 3/4" O.D. x 1-11/32")		2	536350
1960	All A.C.	comp. frt. mtg. bracket to cyl. head (13/32" I.D. x 3/4" O.D. x 1-5/32")		2	535471
1960	All A.C.	comp. and gen. brkts. to cyl. head elbow-w/6 cyl. comp.-w/heater		2	541743
1960	All A.C.	comp. and gen. brkts. to cyl. head-w/6 cyl. comp.-exc heater		2	541744
1958-60	All A.C.	SUPPORT, comp. and gen. mtg. brkt.-w/6 cyl. comp.		1	541748

▲NOTE: For use with double groove compressor pulley.

Group 9.172 COVER-GEAR-PIN, COMPRESSOR OIL PUMP

1959-60	All A.C.	COVER ASSY., comp. oil pump		1	5914019
1959-60	All A.C.	GEAR PKG., comp. oil pump-w/5 cyl. comp.		1	5876853
1959-60	All A.C.	PIN, comp. oil pump		1	5916215
1959-60	All A.C.	WASHER, comp. oil pump (2-7/64" I.D. x 2-49/64" O.D. x 1/8" thick)		1	5916242

Group 9.173 BOLT-NUT, COMPRESSOR INSULATOR

1955	All A.C. (5.506)	BOLT, front inner insulator		2	512389
1959-60	All A.C. (8.900)	comp. to rear mtg. plate (5/16"-24x3/4")		3	9408969
1959	All A.C.	comp. to rear mtg. plate and brace. (5/16"-24x7/8")		1	9411715
1959-60	All A.C. (8.900)	comp. front plate to front and rear bracket. (3/8"-16x1-1/2")		1	9408976
1959-60	All A.C. (1.064)	comp. to front mtg. plate (5/16"-24x5/8")		5	9409084
1960	All A.C. (7.452)	comp. mtg. rear plate to rear bracket (3/8"-16x1-1/8")		2	9410367
1960	All A.C. (7.452)	comp. mtg. frt. bracket to rear bracket (3/8"-16x5/8")		1	9410884
1955	All A.C. (6.172)	NUT, front inner insulator bolt		2	1435440

Group 9.175 COMPRESSOR SHAFT OIL SEAL PARTS

1954	All A.C.	KIT, compressor shaft seal		1	3135683
1956-60	All A.C.	SEAL, clutch coil housing (1-5/8" O.D.)		1	5918315
1956-57	All A.C.	clutch coil housing to pump. (2-3/4" O.D.)		1	5916214
1958	All A.C.	clutch coil housing to pump "O" ring		1	6554341
1959-60	All A.C.	clutch coil housing to pump. (2-3/4" O.D.)		1	5916214
1955	All A.C.	SEAL PKG., compressor shaft oil		1	5876641
1956-57	All A.C.			1	5876740
1958	All A.C.			1	5876905
1959-60	All A.C.			1	5876740
1956-60	All A.C.	SPACER, compressor shaft oil seal		1	5918459
1959-60	All A.C.	SHIM PKG., compressor clutch mounting-w/5 cyl. comp.	AR	5876742	
1955	All A.C.	SLINGER, compressor shaft oil		1	5917441

1955	All A.C.	PIN, seal seat	1	5917063
1956-60	All A.C.	compressor shaft seal drive	1	5918307
1955	All A.C.	RETAINER, seal seat mounting	1	5917100
1958-60	All A.C.	RING, compressor seal seat retainer	1	6554659
1955-59	All A.C. (8.908)	SCREW, seal housing mounting (1/4"-28x5/16")	6	439983
1960	All Circulaire A.C. (8.908)	compressor seal housing mounting (1/4"-28x5/8")	6	439983

Group 9.177 CORE-ELBOW-CAP, COMPRESSOR OIL TEST

1955	All A.C.	CORE ASSY., compressor oil test valve	AR	1138041
1958	All A.C.	gauge connector	2	1138041
1955-56	All A.C.	ELBOW ASSY., compressor oil test valve	1	5912192
1955-58	All A.C. (9.226)	CAP, compressor oil test valve	1	5917484
1956-60	All A.C.	GASKET, oil test valve charging connector	1	5858696
1956-60	All A.C.	SEAL, compressor housing to pump oil drain	1	5918627
1956-60	All A.C.	SCREW, oil test valve charging connector (5/16"-24 x 21/32")	1	6554898

Group 9.178 VALVE-GASKET, COMPRESSOR PRESSURE RELIEF

1955-60	All A.C.	VALVE ASSY.	1	5914435
1955-60	All A.C.	GASKET, pressure relief valve	1	640044

Group 9.180 PULLEY-SHAFT-BRACKET, COMPRESSOR

1954	All A.C.	PULLEY, COIL AND BRG. ASSY., compressor	1	3133346
1954-56	All S.S.-A.C.	PULLEY, idler	1	518730
1957	All S.S.-A.C.		1	523687
1958	All A.C. (7.450)	w/6 cyl. comp.	1	532679
1959-60	All A.C.-P.S. exc. A.S. (7.450)		1	532679
1955	All H.T.-A.C.	PULLEY AND BRG., compressor	1	5911928
1956	All A.C.		1	5912772
1957	All A.C.		1	5913628
1958	All Circulaire A.C.	single groove	1	5914292
1958	All Cool Pack A.C.	single groove	1	5914440
1958	All Circulaire A.C.	double groove	1	5914546
1959-60	All A.C.		1	5914518
1954-57	All S.S.-A.C.	SHAFT AND BRG., idler pulley	1	954604
1959	All A.C.-S.S. exc. A.S.		1	954604
1959	All A.C.-S.S. exc. A.S. (9.171)	SPACER, idler pulley brkt.	2	531297
1954	All S.S.-A.C.	BRACKET ASSY., idler pulley	1	518727
1955-56	All A.C.		1	520972
1955-56	All S.S.-A.C.	compressor idler	1	520980
1957	All A.C.	idler pulley	1	523683
1957	All S.S.-A.C.	compressor idler	1	523685
1958	All A.C.	idler pulley mtg.-w/6 cyl. comp.	1	534396
1959	All A.C.-S.S. exc. A.S.	idler pulley mtg.	1	534396
1959-60	All A.C.-P.S. exc. A.S. (7.450)	idler pulley adj.	1	532175
1960	All A.C.-S.S.	idler pulley mtg.	1	536579
1958	All A.C.-S.S.	BRACKET AND FLANGE ASSY., idler pulley adj.-w/6 cyl. comp.	1	541767
1959-60	All A.C.-S.S. exc. A.S. (1.062)	HUB, belt idler pulley-exc. 60 amp. Alt. C. or extra low cut in gen.	1	516100
1959-60	All A.C.-S.S. (2.275)	BOLT, idler pulley adj. brkt. & flange assy. (3/8"-16 x 1-1/4")	2	9408975
1960	All A.C.-S.S. (1.064)	comp. to front mtg. plate (5/16"-24x5/8")	4	9409084
1954-58	All S.S.-A.C. (3.275)	WASHER, idler pulley brkt. (13/32" I.D. x 3/4" O.D.)	1	502306
1960	All A.C.-S.S. (3.275)	idler pulley mtg. brkt. (13/32" I.D. x 1" O.D.)	2	501215

1960	All A.C.-S.S. (3,275)	idler pulley bracket (13/32" I.D. x3/4" O.D.)	2	502306
1960	All A.C. (3,275)	comp. mtg. plate to bracket Front and rear	2	502306

Group 9.181 BEARING-RING-SHIM-SCREW-WASHER, COMPRESSOR PULLEY

1955	All A.C.	BEARING, pulley	1	954984
1956-58	All A.C.	1	904704
1959-60	All A.C.	1	906952
1955-58	All A.C.	RING, pulley bearing retainer	1	5916837
1959-60	All A.C.	1	6554983
1955	All A.C.	SHIM PKG., clutch mtg. (.015, .020 and .025 thick)	AR	5876664
1956-60	All A.C.	compressor pulley (.010, .015, .020 and .025 thick)	AR	5876760
1956-58	All A.C.	SPACER, compressor hub to pulley bearings	1	5918343
1959-60	All A.C.	clutch hub to pulley bearing	1	6554988
1955	All A.C.	SCREW AND WASHER, pulley retaining	1	5911821
1955	All A.C.	WASHER AND FELT ASSY., pulley retaining	1	5912455
1956-58	All A.C.	WASHER, bearing seal	1	6554795
1956-60	All A.C.	WASHER, pulley mounting-lock	1	5918358
1959-60	All A.C.	pulley bearing	1	6555022
1956-60	All A.C.	NUT, pulley mounting (1/2"-20)	1	639795

Group 9.186 CLAMP-CLIP-COIL-GASKET-RETAINER, COMPRESSOR CLUTCH

1955-60	All A.C.	CLAMP, clutch wires	1	5917231
1956-60	All A.C.	CLIP AND TERMINAL, clutch wire	1	5912009
1955-60	All A.C.	COIL, clutch actuating	1	5912343
1955-60	All Circulaire A.C.	GASKET, clutch coil insulator Inner	1	6555089
1955-56	All A.C. Outer	1	5918107
1959-60	All A.C. Outer	1	5918107
1955-60	All A.C.	RETAINER PKG., clutch coil-w/5 cyl. comp.	1	5876681

Group 9.188 BRUSH-HOUSING-PLATE-RETAINER-RING, COMPRESSOR CLUTCH

1955-57	All A.C.	BALL, clutch actuating-nylon	3	5919632
1958-60	All A.C.	3	6554611
1954	All A.C.	BRUSH AND BRACKET ASSY.	1	3133349
1954	All A.C.	BRUSH ASSY., compressor clutch Positive	1	3132728
1954	All A.C. Ground	1	3134013
1959-60	All A.C.	COVER, clutch plate	1	6555004
1959-60	All A.C.	HOUSING ASSY., compressor ball and seal	1	5914557
1956-60	All A.C.	KEY, compressor clutch to shaft	1	5916332
1954	All A.C.	PLATE AND HUB ASSY., compressor clutch	1	3133392
1955	All A.C.	PLATE AND WEIGHT ASSY., clutch	1	5912346
1956	All A.C.	1	5913711
1957	All A.C.	1	5913710
1958	All A.C.	1	5914266
1959-60	All A.C.	1	5914608
1955	All A.C.	PLATE AND ARMATURE ASSY., clutch	1	5912345
1957	All A.C.	1	5913707
1958-60	All A.C.	1	5914452
1957-60	All A.C.	compressor clutch actuating plate	3	5918904
1954	All A.C.	RETAINER, compressor clutch plate and hub	1	3132442
1954	All A.C.	RING, compressor clutch spacer	1	3132486
1955	All A.C.	clutch spring retainer-snap	1	5916839
1955-58	All A.C.	clutch cover-also use 6-6554854	1	6554853
1957-58	All A.C.	SCREW AND WASHER, clutch cover ring	6	6554854
1955	All A.C.	SPRING, clutch	1	5916834
1956	All A.C.	compressor plate actuating	3	5918339
1957-59	All A.C.	compressor clutch actuating plate	3	5918904
1954	All A.C.	BOLT, compressor clutch brush and bracket	2	3132635

Group 9.190 CONDENSER ASSY., REFRIGERANT

1954	All A.C.		1	8522905	
1955	All A.C.		1	8522665	
1956	All A.C.		1	8523660	
1957	All A.C.		1	8525186	
1958	All Circulaire A.C.		1	8526158	
1958	All Cool Pack A.C.		1	8527579	
1959-60	All A.C.		1	8529178	
1957	All Cool Pack A.C.-H.T.	BRACKET, condenser to radiator supt. 531829 RH		531830	LH
1958	All Cool Pack A.C.	condenser mounting	1	3142002	
1954	All A.C.	SUPPORT, condenser mounting	1	520219	

Group 9.195 RECEIVER ASSY., REFRIGERANT

1954	All A.C.	includes shut-off valve	2	3132218	
1955	All A.C.	includes shut-off valve	1	3133064	
1955	All A.C.	includes dehydrator-2nd type (13-3/4" long)	1	3134839	
1956	All A.C.	includes dehydrator	1	5912676	
1957	All A.C.	includes dehydrator	1	524712	
1958	All Circulaire A.C.	includes dehydrator	1	8526706	
1958	All Cool Pack A.C.	includes dehydrator	1	8527545	
1959	All A.C.	includes dehydrator and sight glass	1	8527991	
1960	All A.C.	includes dehydrator and sight glass	1	8529172	

Group 9.198 VALVE ASSY., AUTOMATIC EXPANSION

1954-55	All A.C.	hot gas by pass	1	535291	
1958	All Circulaire A.C.	temperature regulation-hot gas by-pass	1	1998830	
1958	All Cool Pack A.C.	temperature regulation-hot gas by-pass	1	1998848	
1959-60	All Circulaire A.C.	temperature regulation-hot gas by-pass	1	1998876	
1958	All A.C.	BRACKETS, temperature reg. valve mtg.-w/6 cyl. comp.	1	538580	
1959-60	All Circulaire A.C.	temperature reg. valve mtg.-w/6 cyl. comp.	1	541557	
1959-60	All Circulaire A.C.	REPAIR PKG., hot gas by-pass valve	1	1942494	
1958-60	All A.C.	SPACER, temperature reg. valve mtg. brkt. bolt-w/6 cyl. comp.	1	542752	
1959-60	All Circulaire A.C. . . (7.397)	temperature reg. valve to brkt.-w/6 cyl. comp.	1	541628	
1959-60	All A.C.	SPRING, hot gas by-pass lever return	1	1939314	
1959-60	All Circulaire A.C.	LEVER ASSY., temp. regulation valve (▲)	1	1950675	

▲NOTE: Use when 535397 support is used.

Group 9.202 INDICATOR, LIQUID REFRIGERANT (SIGHT GLASS)

1954	All A.C.		1	3132214	
1955	All A.C.		1	3133352	
1956-57	All A.C.		1	3135380	
1954	All A.C.	GASKET, indicator to dehydrator	1	3132439	

Group 9.205 DEHYDRATOR ASSY., REFRIGERANT

1954-55	All A.C.		1	3132362	(10" long)
1955	All A.C.	CLAMP, dehydrator-1st type (2" dia.)	1	3133321	
1955-56	All A.C.	2nd type (2-1/4" dia.) Upper	1	3134439	
1955-56	All A.C.	2nd type (2-1/4" dia.) Lower	1	3134440	
1957	All A.C.		1	529196	

Group 9.206 BRACKET-SUPPORT, DEHYDRATOR

1954	All A.C.	BRACKET, dehydrator to fender skirt	1	518827	
1954	All A.C.	SUPPORT, dehydrator to fender skirt	1	518826	

Group 9.210 EVAPORATOR AND PARTS, REFRIGERANT

1954	All A.C.	EVAPORATOR, w/expansion valve	1	3132093
1955	All A.C.	w/3 outlet valve (▲)	1	3134452
1956	All A.C.	w/expansion valve	1	3135230
1957	All A.C.	w/expansion valve	1	3137027
1958	All Circulaire A.C.	w/fittings	1	3139975
1958	All Cool Pack A.C.	1	3141830
1959	All Circulaire A.C.	w/fittings	1	3142664
1959	All Cool Pack A.C.	1	3144610
1960	All Circulaire A.C.	w/fittings	1	3147203
1960	All Cool Pack A.C.	1	3147100
1958	All Circulaire A.C.	CAP, evaporator test valve	1	3141739
1954	All A.C.	CORE ASSY., evaporator-w/insulation	1	8522715
1955	All A.C.	w/fittings	1	8523319
1956	All A.C.	w/fittings	1	8525246
1957	All A.C.	w/fittings	1	8525627
1958	All Circulaire A.C.	w/fittings	1	8526240
1958	All Cool Pack A.C.	1	8526690
1959	All Circulaire A.C.	w/pipes	1	8527982
1959	All Cool Pack A.C.	w/pipes	1	8528672
1960	All Circulaire A.C.	evaporator-w/pipes	1	8529144
1960	All Cool Pack A.C.	w/pipes	1	8529514
1960	All Cool Pack A.C.	EMBLEM, evaporator-Pontiac	1	3147222
1960	All Circulaire A.C. . . (9.775)	GROMMET, evaporator outlet pipe	1	3140663
1958	All Cool Pack A.C.	NAME PLATE, Cool Pack air conditioner	1	3141786
1955	All A.C.	TUBE ASSY., expansion valve external equalizer	1	3133355
1954	All A.C.	VALVE ASSY., evaporator pressure regulator	1	3132678
1955	All A.C.	three outlets (▲)	1	3134442
1958-60	All A.C.	evaporator test	1	3141348

▲NOTE: Also use 3134453 Pipe, 3134490 Elbow and 3134491 Hose when replacing 1st type valve w/four outlets.

Group 9.211 DRAIN-CLAMP-HOSE-GASKET, EVAPORATOR

1958	All Cool Pack A.C.	BRACKET, evaporator mounting	1	3142643
1959	All Cool Pack A.C.	1	3144646
1960	All Cool Pack A.C.	evaporator mtg. Upper	1	3147217
1957	All A.C.	CASE, air cond. evaporator Front	1	3135373
1957	All A.C.	air cond. evaporator Rear	1	3135377
1958	All A.C.	evaporator inlet	1	3140585
1958	All A.C.	evaporator outlet-w/brackets	1	3140588
1959	All Cool Pack A.C.	evaporator	1	3144634
1959-60	All Circulaire A.C.	air cond. evaporator Inner	1	3142667
1959-60	All Circulaire A.C.	air cond. evaporator Outer	1	3142668
1960	All Cool Pack A.C.	evaporator Upper	1	3146635
1960	All Cool Pack A.C.	evaporator Lower	1	3146626
1958-59	All A.C.	CLAMP, evaporator case drain tube	1	3135649
1960	All Circulaire A.C.	evaporator drain tube	1	3135649
1960	All Circulaire A.C.	air duct drain tube	1	3143798
1955	All A.C.	DRAIN, evaporator case	1	3134505
1958	All Cool Pack A.C.	HOSE, evaporator drain (20" long)	1	3143084
1959-60	All Cool Pack A.C.	1	3145657
1954	All A.C.	GASKET, evaporator to fender baffle-rubber	1	3132263
1955	All A.C.	evaporator case	1	3133261
1955-57	All A.C.	evaporator to dash	1	3133317
1956-57	All A.C.	evaporator case	2	3135372
1958	All A.C.	evaporator to dash (10-3/4"x12-1/8")	1	529969
1958-60	All Circulaire A.C.	compressor hose to evaporator- "O" ring (3/4" O.D.)	2	3140852
1958	All Cool Pack A.C.	compressor hose to evaporator- "O" ring (5/8" O.D.)	2	3140748
1958-60	All Circulaire A.C.	condenser to receiver- "O" ring (3/8" O.D.)	1	8526398

1959	All A.C.	evaporator case to dash	Inner	1	3142671
1959	All A.C.	evaporator case to dash	Outer	1	3143674
1958-60	All Circulaire A.C.	evaporator tube to liquid indicator-			
		"O" ring	(3/8" O.D.)	2	8526398
1958-60	All Circulaire A.C.	evaporator tube to union-"O" ring	(3/8" O.D.)	2	8526398
1960	All Circulaire A.C.	evaporator case to dash	Inner	1	3142671
1960	All Circulaire A.C.	evaporator case to dash	Outer	1	3143674
1958	All Cool Pack A.C.	PAN, evaporator case drain		1	3141454
1959	All Cool Pack A.C.			1	3144613
1958	All A.C.	SEAL, evaporator inlet case to outlet case		1	3140587
1958	All A.C.	evaporator outlet case to dash		1	3140583
1958	All A.C.	inlet case to evaporator core		1	3140583
1959	All A.C.	evaporator case	Front and rear	AR	3142673
1959	All A.C.	evaporator core to case		1	3142672
1960	All Circulaire A.C.	evaporator case		1	3143354
1960	All Circulaire A.C.	evaporator core to case		1	3147276
1960	All Cool Pack A.C.	evaporator core side	Upper	2	3146632
1960	All Cool Pack A.C.	evaporator core side	Lower	2	3146624
1960	All Cool Pack A.C.	evaporator core	Bottom	1	3146625
1960	All Circulaire A.C.	TUBE, air duct drain		1	3148423
1958-60	All Circulaire A.C.	evaporator drain		1	3148473

Group 9.213 VALVE ASSY., THERMOSTATIC EXPANSION

1954	All A.C.			1	3132216
1955	All A.C.			1	3135111
1956	All A.C.			1	5910950
1957	All A.C.			1	5911030
1958	All Circulaire A.C.			1	5911194
1958	All Cool Pack A.C.			1	5911185
1959	All Circulaire A.C.			1	6550034
1959	All Cool Pack A.C.			1	6550029
1960	All Circulaire A.C.			1	6550037
1960	All Cool Pack A.C.			1	6550038
1957-58	All A.C.	INSULATION, expansion valve capillary bulb		2	3135379
1959	All A.C.			2	8526387
1960	All Circulaire A.C.			2	8526387

Group 9.214 SCREEN ASSY., THERMOSTATIC EXPANSION VALVE INLET

1957-60	All A.C.			1	5913540
1958-59	All A.C.	GASKET, evaporator hose to valve-			
		"O" ring	(1/2" O.D.)	2	3140600
1958-59	All A.C.	condenser hose to compressor-			
		"O" ring	(1/2" O.D.)	2	3140600
1958-59	All A.C.	compressor tube to valve-"O" ring	(1/2" O.D.)	2	3140600
1960	All Circulaire A.C.	evaporator hose to valve-"O" ring	(1/2" O.D.)	AR	3140600
1960	All Circulaire A.C.	condenser hose to compressor-			
		"O" ring	(1/2" O.D.)	AR	3140600
1960	All Circulaire A.C.	compressor tube to valve-"O" ring	(1/2" O.D.)	AR	3140600
1955-60	All A.C.	GASKET PKG., "O" ring		1	541643

Group 9.215 BLOWER-MOTOR-DUCT, AIR CONDITIONER

1954	All A.C.	BLOWER ASSY., w/motor		1	3132090
1955	All A.C.	w/motor		1	3133152
1956	All A.C.	w/motor and filter		1	3135236
1960	All Cool Pack A.C.	w/motor		1	3147096
1959	All Circulaire A.C.	BLOWER AND AIR DUCT ASSY.,		1	3143013
1960	All Circulaire A.C.			1	3147095
1954	All A.C.	MOTOR ASSY., blower		1	5047725
1955	All A.C.			1	5047785

1956	All A.C.		1	5047855
1957	All A.C.		1	5047950
1958	All Circulaire A.C.		1	5044332
1958	All Cool Pack A.C.		1	5044322
1959	All Circulaire A.C.		1	5044369
1960	All Circulaire A.C.	blower	1	5044393
1960	All Cool Pack A.C.		1	5044378
1957	All A.C.	ADAPTER, blower to dash	1	524067
1959	All A.C.	evaporator to blower	Upper half	1 575920
1959	All A.C.	evaporator to blower	Lower half	1 575921
1960	All Circulaire A.C.	evaporator to blower	Lower half	1 575921
1960	All Circulaire A.C.	evaporator to blower	Upper half	1 575920
1954	All A.C.	DUCT ASSY., blower outlet-w/air valves		1 3132091
1960	All Cool Pack A.C.	blower to evaporator		1 3147099
1959	All A.C.	EXTENSION, evaporator to blower lower adapter		1 576602
1960	All Circulaire A.C.	evaporator to blower lower adapter		1 576602
1955	All A.C.	GASKET, blower to fender skirt		1 3133245
1957	All A.C.	blower motor to mounting plate-rubber		1 3139096
1957	All A.C.	blower adapter to dash		1 530365
1954	All A.C.	HOSE, blower outlet. (4" I.D.)		1 518814
1955	All A.C.			1 3134400
1956	All A.C.			1 522416
1957	All A.C.	air filter housing to evaporator		1 524123
1957	All A.C.	NUT, blower to blower inlet-spring type		5 528308
1957	All A.C.	blower impeller to motor (Spring type)		1 3130055
1959-60	All A.C.	blower impeller to motor (Spring type)		1 3130055
1957	All A.C.	PLATE, blower motor mounting		1 3138928
1960	All Circulaire A.C.	RESISTOR ASSY., blower motor (single field)		1 535084
1958-59	All A.C.	SHIELD, blower motor protective		1 531718
1960	All Circulaire A.C.	blower motor protective		1 531718
1959	All A.C.	SCREW, upper adapter to lower adapter (No. 8-18x7/16")	6	454576
1960	All Circulaire A.C.	upper adapter to lower adapter (8-18x7/16")	6	454576
1960	All Circulaire A.C.	upper adapter to lower adapter & blower duct	7	416194

Group 9.216 INLET-FILTER-GASKET, EVAPORATOR

1954	All A.C.	INLET ASSY., evaporator-w/filter	1	3132092
1955	All A.C.	CONTROL ASSY., air recirculating	1	520713
1955	All A.C.	COVER, filter access hole-w/gaskets (cut to required length for 1957)	1	3133293
1956-57	All A.C.	FAN ASSY., blower motor	1	3134166
1955	All A.C.		1	3132700
1958	All Cool Pack A.C.		1	3141765
1959	All Cool Pack A.C.		1	3145752
1954	All A.C.	FILTER ASSY., evaporator inlet	1	3132237
1955	All A.C.		1	3134296
1956	All A.C.		1	3135652
1957	All A.C.		1	523207
1955	All A.C.	HOUSING ASSY., filter	1	3133249
1957	All A.C.	w/valve	1	3138472
1960	All A.C.	IMPELLER ASSY., evaporator blower	1	3144683
1955	All A.C.	BOOT, inlet valve to filter hsg.	1	3133254
1954	All A.C.	BRACKET, filter retaining-on air scoop	Side	1 520409
1954	All A.C.	on air scoop	Lower	1 520410
1954	All A.C.	GASKET, inlet to fender baffle-rubber		1 3132255
1955	All A.C.	filter housing to fender skirt		1 3133313
1955	All A.C.	air inlet valve assy.		1 3133724
1955	All A.C.	air filter access hole cover		1 3133320
1957	All A.C.	air inlet housing		1 3138567
1956	All A.C.	LINK ASSY., blower air valve lever		1 3133031
1955	All A.C.	PLUG, filter housing flush hole		1 3134412
1955-58	All A.C.	evaporator flush hole	2	3134412

1955	All A.C.	RETAINER, air filter access hole cover	2	3134180
1955	All A.C.	SCREW, air filter access hole cover	2	3133285
1955	All A.C.	VALVE ASSY., air inlet	1	3133251

Group 9.220 HOSE-CLAMP-CONNECTOR-SLEEVE, EVAPORATOR

1954	All A.C.	HOSE (4" I.D.) Inlet	1	518814
1954	All A.C. (4" I.D.) Outlet	1	3132253
1954	All A.C.	CLAMP, hose	AR	3133386
1954	All A.C.	SLEEVE, air outlet hose clamp-rubber	1	3132440
1960	All Cool Pack A.C.	CONNECTOR ASSY., freon hose	1	8528448

Group 9.225 HOSE ASSY., COMPRESSOR DISCHARGE

1954	All A.C.	to elbow	1	3133308
1955	All A.C.	1	3133295
1956	All A.C.	to condenser	1	3135235
1957	All A.C.	to condenser	1	3138184
1958	All Circulaire A.C.	to condenser	1	530545
1958	All Cool Pack A.C.	to condenser	1	3141717
1959-60	All Cool Pack A.C.	to condenser	1	3144680
1959	All Circulaire A.C.	to condenser	1	533613
1954	All A.C.	ELBOW ASSY., discharge hose to condenser	1	3133303

Group 9.226 VALVE-CAP-GASKET-LEAF-SCREEN, COMPRESSOR

1954	All A.C.	VALVE ASSY., compressor shut-off-suction	1	3132368
1954	All A.C.	discharge	1	3133307
1955	All A.C.	suction and discharge	1	5912100
1956	All A.C.	suction and discharge	1	5912811
1957	All A.C.	suction and discharge	1	5913640
1958	All A.C.	suction and discharge	1	5914295
1960	All A.C.	VALVE AND FITTING, compressor	1	533636
1958	All Cool Pack A.C.	FITTING ASSY., compressor-w/6 cyl. comp.	1	543167
1958	All Circulaire A.C.	compressor-w/6 cyl. comp.	1	541967
1959	All Circulaire A.C.	compressor	1	533636
1959	All Cool Pack A.C.	compressor	1	3144655
1959-60	All Circulaire A.C.	compressor-w/6 cyl. comp.	1	541968
1960	All Cool Pack A.C.	compressor	1	3147216
1958	All Cool Pack A.C.	ADAPTER PKG., comp. fittings-w/6 cyl. comp., use with 541761 comp. pkg.	1	543166
1958	All Circulaire A.C.	w/6 cyl. comp., use with comp. 541761 pkg.	1	541753
1959-60	All Circulaire A.C.	w/6 cyl. comp., use with 541761 comp. pkg.	1	541754
1959-60	All Cool Pack A.C.	w/6 cyl. comp., use with comp. 541761 pkg.	1	541755
1955-58	All A.C.	CAP, compressor valve	2	5917027
1955-58	All A.C.	valve gauge connector (1/4" flare spec.)	2	5917484
1959	All Circulaire A.C.	to condenser	1	533613
1958	All Cool Pack A.C.	valve gauge connector	2	3143474
1959-60	All A.C.	valve gauge connector	1	3143474
1954	All A.C.	GASKET, valves to compressor	2	3132986
1954	All A.C.	suction screen recess	1	3134101
1955-58	All A.C.	valve shaft cap	2	624357
1956	All A.C.	SEAL, suction and discharge valve "O" ring	2	6555088
1954	All A.C.	LEAF, suction valve	2	3134089
1954	All A.C.	PLATE ASSY., valve	1	3134086
1954	All A.C.	SCREEN, suction recess	1	3134090
1954	All A.C.	SCREW, valve to compressor	4	3133323
1955-57	All A.C.	1	5917030
1955	All A.C.	SCREW AND WASHER, valve body mounting	1	5911916
1958-59	All A.C.	1	5911916

Group 9.227 PIPE ASSY., CONDENSER TO RECEIVER

1954	All A.C. (17" dev. length)	1	3132679
------	------------------	-----------------------------	---	---------

1955	All A.C.	(10-1/2" dev. length)	1	3133065
1955	All A.C.	2nd type (12-3/4" dev. length)	1	3134430
1956	All A.C.	(12-3/8" dev. length)	1	522514
1957	All A.C. exc. F.I.	(26" dev. length)	1	523731
1957	All A.C.-F.I.	(26-1/2" dev. length)	1	529865

Group 9.229 ELBOW-HOSE-PIPE, COMPRESSOR SUCTION AND BY-PASS

1955	All A.C.	ELBOW ASSY., w/1 male and 2 female fittings	1	3134490
1958	All Cool Pack A.C.	FITTINGS ASSY., compressor	1	3142043
1955	All A.C.	HOSE-w/male and female fittings	1	3134491
1956	All A.C.	w/male and female fittings	1	3135234
1957	All A.C.	w/male and female fittings	1	3138296
1958	All Circulaire A.C. exc. F.I.	evaporator to compressor	1	530570
1958	All Circulaire A.C.-F.I.	evaporator to compressor (1-1/8" O.D. x 35-1/2")	1	531477
1958	All Cool Pack A.C.	evaporator to compressor	1	3141772
1958	All Circulaire A.C.	temp. reg. to evaporator	1	530544
1958	All Cool Pack A.C.	temp. reg. to evaporator	1	3141719
1958	All A.C. exc. F.I.	comp. to temp. regulator valve	1	531774
1959-60	All Circulaire A.C.	evaporator to compressor	1	533614
1959	All Cool Pack A.C.	evaporator to compressor	1	3144679
1959	All A.C.	temperature reg. to evaporator	1	534667
1960	All Circulaire A.C.	condenser to compressor	1	536652
1960	All Cool Pack A.C.	evaporator to compressor	1	3147666
1960	All Circulaire A.C.	temperature reg. to evaporator	1	534667
1954	All A.C.	PIPE, vibration eliminator type	1	3132681
1958	All A.C.-F.I.	comp. to temp. regulator valve	1	530546
1959	All A.C.	TUBE ASSY., comp. to temp. reg. valve	1	533424
1960	All Circulaire A.C.	comp. to temp. reg. valve	1	533424

Group 9.231 PIPE ASSY., RECEIVER TO LIQUID INDICATOR

1954	All A.C.	expansion valve to indicator	1	3132680
1955	All A.C.	receiver to dehydrator	1	3133353
1955	All A.C.	receiver to indicator	1	3133337
1956	All A.C.	receiver to indicator	1	3135233
1957	All A.C.	receiver to indicator	1	524055
1958	All Circulaire A.C.	evaporator to indicator Front	1	530547
1958	All Circulaire A.C.	evaporator to indicator Rear	1	531719
1959	All A.C.	evaporator to indicator Front	1	533607
1959	All A.C.	evaporator to indicator Rear	1	533606
1960	All Circulaire A.C.	TUBE ASSY., evaporator to indicator Front	1	536351
1960	All Circulaire A.C.	evaporator to indicator Rear	1	536962
1960	All Cool Pack A.C.	HOSE ASSY., receiver to evaporator	1	3145758
1960	All Cool Pack A.C.	TUBE AND NUT ASSY., evaporator liquid	1	3147224
1958-59	All A.C.	UNION, indicator front pipe to rear pipe	1	3141723
1960	All Circulaire A.C.	indicator front pipe to rear pipe	1	3141723

Group 9.235 HOSE-PIPE ASSY., DEHYDRATOR TO EXPANSION VALVE

1954	All A.C.	PIPE ASSY.	1	3132428
1955	All A.C.	(▲)	1	3133350
1955	All A.C.	(▲▲)	1	3134838
1958	All Cool Pack A.C.	HOSE ASSY.	1	3142042
1959	All Cool Pack A.C.	HOSE ASSY.	1	3145793

▲NOTE: 1st type used on cars with separate Receiver and Dehydrator.

▲▲NOTE: 2nd type used on cars with Receiver, Filter and Dehydrator in one unit.

Group 9.238 PIPE ASSY., EVAPORATOR

1955	All A.C.	PIPE ASSY., regulator to by-pass valve (27-1/4" long)	1	3135014
1954	All A.C.	BRACKET, compressor suction pipe to fender skirt	1	518828

Group 9.240 SEAL, COMPRESSOR VALVE BODY

1955-60 All A.C. to compressor-"O" ring 2 5887997

Group 9.242 BRACKET-CLAMP-SPACER-SUPPORT, COMPRESSOR

1954 All A.C. BRACKET, receiver to liquid indicator and by-pass
pipes 1 518825
1959-60 All Cool Pack A.C. CLAMP, freon hose (3/4" I.D.) 1 3144280
1959-60 All Cool Pack A.C. freon hose (1" I.D.) 2 3152065
1959-60 All A.C. EXTENSION, comp. hose support-w/6 cyl. comp. 1 541913
1955 All A.C. SPACER, fluid pipes-rubber 1 3133319
1959-60 All Circulaire A.C. evaporator to comp. hose 1 533616
1959 All A.C. SUPPORT, compressor to condenser hose 1 533068
1960 All Circulaire A.C. compressor to condenser hose 1 533068

Group 9.250 SCOOP, BLOWER AIR INLET

1954 All A.C. 1 3132089
1955 All A.C. w/gasket 1 3133250
1959 All A.C. BAFFLE, blower inlet water 1 3144640
1960 All Circulaire A.C. blower inlet water 1 536375
1958 All A.C. exc. F.I. BRACKET, air inlet diaphragm mounting 1 531116
1958 All A.C.-F.I. 1 531431
1958 All A.C. exc. F.I. COVER ASSY., air inlet housing 1 529769
1958 All A.C. exc. F.I. HOUSING ASSY., air inlet 1 530128
1958 All A.C.-F.I. 1 531432
1958 All A.C. exc. F.I. LINK, air inlet diaphragm 1 1942385
1958 All A.C.-F.I. 1 1942521
1958 All A.C. REINFORCEMENT, air inlet filter housing flange 1 529364
1955 All A.C. GASKET, air scoop Inlet end 1 3133314
1955 All A.C. Outlet end 1 3133315
1958 All A.C. exc. F.I. air inlet housing cover (1/4"x21" long) Front 1 529389
1958 All A.C. exc. F.I. air inlet housing
cover (1/4"x1/2"x6-1/2" long) Rear 1 529363
1959-60 All Circulaire A.C. air duct 1 3143111
1958 All A.C.-F.I. SEAL, recirculating air valve 1 531425

Group 9.255 CLAMP, AIR HOSE

1954 All A.C. (9.786) 5 513479
1955-57 All A.C. air hose to steering column 1 520525

Group 9.260 HOSE, DISTRIBUTOR OUTLET

1954 All A.C. (2-1/2" I.D.) 518805 RH
1954 All A.C. (3" I.D.) 518807 LH
1954 All A.C. (2" I.D.) Center 1 518806
1955-56 All A.C. (2-1/2" I.D. x 12") 520313 RH
1955-56 All A.C. (3" I.D. x 50") 520315 LH
1955-56 All A.C. (2" I.D. x 26") Center 1 520314
1957 All A.C. (2-1/2" I.D. x 8" long) 524824 RH
1957 All A.C. (3" I.D. x 48" long) 524825 LH
1957 All A.C. (2" I.D. x 17" long) Center 1 524823
1958 All A.C. (2-1/2" I.D. x 12" long) 520313 RH
1958 All Circulaire A.C. (3" I.D. x 76" long) 530663 LH

1958	All Circulaire A.C.	(2" I.D.x29" long) Center	1	530662
1959	All A.C.	(7-3/8" long) 532411 RH		
1959	All Circulaire A.C.	(3-1/4" I.D. x38-3/4" long)		533552 LH
1959-60	All Circulaire A.C.	(3-1/4" I.D.x33" long)		534575 LH
1958	All A.C.	BRACKET, hose to w/s wiper trans.	530716 RH	530717 LH
1955-56	All A.C.	SUPPORT, air hose to dash	520528 RH	518923 LH
1958	All A.C.	hose to defroster	Center	530657 LH
1958	All A.C.		Side	2 530749 LH
1955-56	All A.C. (9.215)	NUT, air hose to dash-spring type		528308 LH

Group 9.262 AIR DISTRIBUTOR PARTS

1954	All A.C.	DISTRIBUTOR ASSY., air	1	3132094
1955	All A.C.		1	3133252
1956	All A.C.		1	521242
1957	All A.C.	BAFFLE, shroud top opening	1	530752
1954	All A.C.	COVER, air distributor	1	519114
1958	All A.C.	air outlet hose	1	530718
1957	All A.C.	COVER PKG., air recirculating hole	1	530840
1959	All A.C.	DUCT ASSY., air distributor	1	532418
1960	All Circulaire A.C.	air distributor	1	532418
1954	All A.C.	FLANGE, air distributor to dash	1	518671
1959	All A.C.	RETAINER AND SUPPORT ASSY., air distributor	1	532434
1960	All Circulaire A.C.	air distributor	1	532434
1954	All A.C.	RING, air distributor dash sealing	1	519492
1959	All A.C.	SEAL, air dist. to shroud retainer	1	532412
1960	All Circulaire A.C.	air dist. to shroud retainer	1	532412
1954	All A.C.	SLEEVE, air dist. to dash inlet flange	1	518813
1954	All A.C.	SPACER, air dist. to dash	4	518802
1958	All A.C. (9.779)	SPRING, air distribution heater air shut off valve	1	3141409

Group 9.264 AIR OUTLET PARTS

1955-56	All A.C.	ADAPTER, outlet nozzle	520184 RH	520185 LH
1957	All A.C.		524079 RH	524031 LH
1959	All A.C.		532470 RH	532614 LH
1960	All Circulaire A.C.	air outlet nozzle	535013 RH	536958 LH
1957	All A.C.	BEARING, air outlet nozzle-nylon		2 529195
1958	All A.C.			2 528610
1959	All A.C.		Front	2 532325
1959	All A.C.		Rear	2 532324
1954	All A.C.	BEZEL ASSY., air outlet nozzle	518737 RH	518738 LH
1955-56	All A.C.		520481 RH	
1955	All A.C.			520482 LH
1956	All A.C.			521857 LH
1957	All A.C.		524066 RH	524044 LH
1958	All A.C. exc. SD		530104 RH	530158 LH
1958	All A.C.-SD		529224 RH	529221 LH
1959	All A.C.		533061 RH	533060 LH
1960	All Circulaire A.C.	air outlet nozzle	536860 RH	536859 LH
1958-60	All Circulaire A.C.		Center	1 538618
1960	All Cool Pack A.C.	evaporator case		1 3148047
1955-56	All A.C.	BRACKET, nozzle mounting	Inner 520178 RH	520179 LH
1955-56	All A.C.		Outer 520180 RH	520181 LH
1960	All Cool Pack A.C.	DOOR, evaporator center air outlet		2 3147118

1954	All A.C.	DUCT, air outlet	Center	1	518711
1955-56	All A.C.		Center	1	520273
1957	All A.C.			1	523725
1959-60	All Circulaire A.C.	ELBOW, nozzle adapter to hose			534546 LH
1960	All Circulaire A.C.	FELT, air outlet nozzle retainer ring		2	535030
1960	All Circulaire A.C.	air outlet nozzle bezel		2	535029
1957	All A.C.	HOUSING, center air valve		1	523878
1954	All A.C.	NOZZLE, air outlet		2	518681
1955-57	All A.C.			2	520398
1958	All A.C.			2	528611
1959	All A.C.			2	533059
1960	All Circulaire A.C.	air outlet		2	535031
1958	All A.C.	OUTLET, core case air-three hose		1	531205
1958	All A.C.	center air		1	530099
1959	All Cool Pack A.C.	evaporator main air		2	3144561
1960	All Cool Pack A.C.	main air-ball type		2	3146628
1960	All Cool Pack A.C.	evaporator side air		2	3146638
1955-56	All A.C.	PLATE, nozzle retaining		2	520477
1957	All A.C.			2	524004
1954	All A.C.	RETAINER, nozzle	515739 RH		518740 LH
1955-56	All A.C.			2	520189
1957	All A.C.			2	524032
1958	All A.C.			2	528609
1959	All A.C.	nozzle ring		2	532469
1960	All Circulaire A.C.	RING, air outlet nozzle retainer		2	535027
1959	All A.C.	SEAL, bezel adapter		2	531854
1960	All Circulaire A.C.	bezel adapter		2	531854
1960	All Cool Pack A.C.	main air outlet		2	3152207
1960	All Cool Pack A.C. . . (9.260)	main air outlet bezel		2	3151323
1957	All A.C.	SHIELD ASSY., instrument panel air blower		1	528592
1954	All A.C.	SPACER, nozzle mounting	518709 RH		518710 LH
1955-56	All A.C.	SPRING, nozzle tension		2	520194
1957	All A.C.			4	524033
1959	All A.C.			2	532326
1955-56	All A.C.	SCREW, outlet adapter to			
		nozzle (Hex. Hd. 10-24x1/2")		4	172313
1958	All A.C. (8.977)	core case (Pan Hd. 10-24x3/4")		4	9411453
1959	All A.C. (8.977)	air duct to inst. panel . . (Oval Hd. No. 10-24x7/8")		2	449529
1959	All A.C. (8.977)	blower and duct to dash . . (Hex. Hd. 1/4"-14x1")		5	451617
1959	All A.C. (8.977)	evaporator core and case to			
		dash (Hex. Hd. 1/4"-14x1")		9	451617
1960	All Circulaire A.C. . . (8.977)	air duct to inst. panel . . (Oval Hd. No. 10-24x7/8")		2	449529
1960	All Circulaire A.C. . . (8.977)	blower and duct to dash . . (Hex. Hd. 1/4"-14x1")		5	451617
1960	All Circulaire A.C. . . (8.977)	evaporator core and case to			
		dash (Hex. Hd. 1/4"-14x1")		9	451617
1954	All A.C.	NUT, air outlet spacer retaining . . . (3-11/16" O.D.)		2	518708

Group 9.275 SWITCH ASSY., MASTER

1954	All A.C.	SWITCH		1	1998083
1955	All A.C.			1	520146
1956	All A.C.			1	1998144
1957	All A.C.			1	1998177
1958	All A.C.	clutch control		1	7271403
1958	All A.C.	relay control		1	7271402
1959-60	All Circulaire A.C.	relay control		1	7273142
1959-60	All Circulaire A.C.	clutch control		1	7271403
1959	All Cool Pack A.C.	clutch control rancostat		1	3145534
1958-60	All Circulaire A.C. . . (8.952)	SPRING, clutch and relay control		2	7259072
1958	All Cool Pack A.C.	CLIP, blower motor resistor mtg.		1	3138468
1959	All Cool Pack A.C.	COVER, clutch control rancostat switch		1	3146096
1955	All A.C.	LINK, switch actuating		1	520137

1954	All A.C. (10.777)	RELAY ASSY., switch	1	1116897
1955-57	All A.C. (10.777)	1	1116895
1958	All A.C.	master	1	1116951
1958	All A.C.	control	1	1116959
1959-60	All Circulaire A.C.	master	1	534289
1959-60	All Cool Pack A.C.	control	1	1116959
1954	All A.C.	RESISTOR, blower switch	1	518967
1960	All Cool Pack A.C.	blower motor	1	3146618
1958-59	All Cool Pack A.C.	RESISTOR ASSY., evaporator	1	3141821
		CLIP (See Group 8.852 for use)		3138468

Group 9.276 SWITCH-RESISTOR-WIRE-THERMOSTAT, AIR CONDITIONER

1954	All A.C.	SWITCH ASSY., blower motor	1	518966
1955	All A.C.	1	520161
1956	All A.C.	1	521599
1957	All A.C.	1	523881
1958-59	All Circulaire A.C.	1	7272719
1958	All Cool Pack A.C.	evaporator control	1	3143071
1959	All Cool Pack A.C.	evaporator control	1	3145829
1960	All Circulaire A.C.	blower motor	1	7272719
1960	All Cool Pack A.C.	blower motor	1	3148044
1960	All Cool Pack A.C.	temperature control	1	3146633
1954	All A.C.	WIRE HARNESS, air conditioner	1	2961215
1955	All A.C.	air conditioner main	1	2963457
1956	All A.C.	air conditioner main	1	2964253
1957	All A.C.	air conditioner main	1	2968241
1958	All A.C.	air conditioner main	1	2970408
1958	All Cool Pack A.C.	relay to high blower	1	2970976
1958-59	All Circulaire A.C.	blower motor jumper	1	2972923
1959	All Circulaire A.C.	air conditioner main-Field installation	1	2971560
1959	All Cool Pack A.C.	air conditioner main	1	2972557
1954	All A.C.	WIRE ASSY., master switch to relay . . (6-1/8" long)	2	2961916
1955-57	All A.C.	voltage regulator to relay-w/fuse . . (19-1/4" long)	1	2961693
1958	All A.C.	voltage regulator to relay-w/fuse . . (11-1/4" long)	1	2970409
1958-59	All Cool Pack A.C.	clutch (58" long)	1	3141724
1958-60	All A.C.	air conditioner adapter-w/6 cyl. comp.- 2 wires (6-3/4" long)	1	2979827
1959	All Cool Pack A.C.	resistor to rancostat switch (8" long)	1	3145833
1959	All Cool Pack A.C.	evaporator relay ground (7" long)	1	3145677
1960	All Circulaire A.C.	air conditioner main-Field installation	1	2975513
1960	All Cool Pack A.C.	air conditioner main	1	2975256
1960	All Cool Pack A.C.	air conditioner evaporator	1	3146619
1955-60	All A.C. (8.965)	FUSE, regulator to relay (30 amp.)	1	120114
1955	All A.C.	STRAP, compressor ground	1	2963355
1956	All A.C.	THERMOSTAT ASSY., distributor	1	522239
1957	All A.C.	1	523916
1957	All A.C.	PLATE, thermostat mounting	1	524234

Group 9.277 CONTROL-VALVE-SHAFT, AIR OUTLET

1954	All A.C.	CONTROL ASSY., less knob	1	518797
1955	All A.C.	1	520147
1956	All A.C.	1	522166
1957	All A.C.	1	523873
1954	All A.C.	VALVE ASSY., center air outlet	1	518715
1955-56	All A.C.	1	520156
1957	All A.C.	1	524993
1958-59	All A.C.	1	529942
1960	All Circulaire A.C.	center air outlet	1	529942
1958-59	All A.C.	RETAINER, air outlet valve-feit Center	2	530067

1960	All Circulaire A.C.	air outlet valve-felt	Center	2	530067
1954	All A.C.	SHAFT, center air outlet valve		1	518714
1955-57	All A.C.			1	520155
1954-57	All A.C.	WASHER, air valve anti-rattle		2	518713

Group 9.278 KNOB, AIR CONTROL

1954	All A.C.	(8.866)		1	516914
1955	All A.C.			1	520154
1956	All A.C.			1	522293
1957	All A.C.			1	523879
1958-59	All Cool Pack A.C.			2	3141677
1960	All Cool Pack A.C.	fan and temperature		2	3147220

Group 9.279 PANEL ASSY., AIR CONDITIONER CONTROL

1954	All A.C.	w/lens		1	518735
1955	All A.C.			1	520138
1956	All A.C.			1	522198
1957	All A.C.			1	523880
1958	All A.C.	CONTROL ASSY., air conditioner		1	7270462
1959	All A.C.			1	7272762
1960	All Circulaire A.C.			1	7275162
1954	All A.C.	CLAMP, control panel		1	518712
1955	All A.C.		Upper	1	520143
1955-56	All A.C.		Lower	1	520144
1958-60	All Circulaire A.C.	CLAMP, temp. control cable to dial hsg.-w/P.B.C.		1	7268954
1958	All A.C.	ESCUTCHEON, control dial housing		1	7271405
1959-60	All Circulaire A.C.	(8.866) FILTER, vacuum valve air		1	7271063
1958	All A.C.	FRAME, control dial housing		1	7271345
1957	All A.C.	HOUSING, control panel light-w/lens		1	523874
1958	All A.C.	NUT, control dial housing		1	530163
1954	All A.C.	RETAINER, control panel		1	518700
1959-60	All Circulaire A.C.	(8.866) vacuum valve air filter		1	7270237
1958	All A.C.	STATOR AND ROTOR PKG., vacuum valve		1	7272728
1959-60	All Circulaire A.C.	vacuum valve		1	7274519

Group 9.281 CABLE-CLAMP-DIAPHRAGM-BRACKET-LEVER, CONTROL

1954	All A.C.	CABLE, air valve and master switch			
		control	(58-3/4" long)	1	518785
1954	All A.C.	air temp. valve control	(55-3/4" long)	1	518786
1955	All A.C.	air valve control	(43-1/4" long)	2	520271
1956	All A.C.	air valve control	(21" long)	1	522322
1956	All A.C.	thermostat control	(29-1/4" long)	1	522321
1957	All A.C.	air valve control	(30-1/4" long)	1	523913
1957	All A.C.	thermostat control	(35" long)	1	523914
1958	All A.C.	temp. valve control		1	530542
1958	All Cool Pack A.C.	evaporator temp. regulation valve		1	3142578
1959-60	All Circulaire A.C.	temp. control valve (rubber covered)		1	535389
1959	All Cool Pack A.C.	clutch control switch		1	3144632
1954	All A.C.	CLAMP, control cables		4	518793
1955-57	All A.C.	air temp. and control valve cable		4	520145
1958-59	All A.C.	temp. valve control cable		1	1937662
1960	All Circulaire A.C.	temp. valve control cable		1	1937662
1958	All A.C.	CLIP, temp. valve control cable to dash		1	530541

1958	All A.C.	temp. valve control cable to blower	1	531182
1959	All A.C.	temp. valve control cable to blower-use w/533872 cable	1	533617
1959-60	All Circulaire A.C.	temp. control cable to blower-use w/535389 cable . .	1	535386
1959	All A.C. (8.950)	vac. check valve to blower and duct retaining	1	120526
1960	All Circulaire A.C.	temp. valve control cable to blower-use w/533872 cable	1	533617
1958	All A.C.	DIAPHRAGM ASSY., air inlet	1	1942441
1958	All A.C. (8.850)	air distributor	1	1998847
1958	All A.C.	core and case air shut-off valve	1	1998842
1959	All A.C.	air inlet valve	1	3143130
1959	All A.C.	auxiliary air inlet	1	3143613
1959	All A.C.	air outlet valve	1	3143612
1958-60	All Circulaire A.C. (8.850)	auxiliary-air outlet valve	1	3143146
1960	All Circulaire A.C.	air inlet valve	1	3143130
1960	All Circulaire A.C.	auxiliary air inlet	1	3143613
1960	All Circulaire A.C.	air outlet valve	1	3143612
1959-60	All Circulaire A.C.	GROMMET, temp. control cable to valve	1	535387
1959	All A.C.	HARNES ASSY., vacuum hose-w/heater	1	533975
1959	All A.C.	vacuum hose-exc. heater	1	532553
1960	All Circulaire A.C.	vacuum hose-w/heater	1	536917
1960	All Circulaire A.C.	vacuum hose-exc. heater	1	536918
1958	All A.C.	HOSE, control to air inlet diaphragm	1	531271
1959	All A.C.	control to air inlet & outlet aux. diaphragm-w/heater	AR	533860
1960	All Circulaire A.C.	control to air inlet & outlet aux. diaphragm-w/heater	AR	533860
1954	All A.C.	BRACKET, valve and master switch cable	1	518782
1954	All A.C.	air temp. valve control cable	1	518783
1955	All A.C.	air control valve cable clamp	1	521522
1959-60	All Circulaire A.C.	BUSHING, temp. regulation valve lever pin	1	535390
1954	All A.C.	LEVER, air valves control	2	518784
1959-60	All Circulaire A.C.	SUPPORT, temp. control cable (▲)	1	535397
1955-56	All A.C. (9.264)	SCREW, air temp. and valve control cable clamp	4	172313
1959	All A.C. (8.850)	TEE, vacuum hose harness	3	570267
1960	All Circulaire A.C. (8.850)	vacuum hose harness	3	570267
1960	All A.C. exc. 3/2 B.C. (8.846)	vacuum hose-nylon-less heater	1	535224
1959-60	All Circulaire A.C.	VALVE ASSY., vacuum check	1	534656

▲NOTE: For use when installing 2nd type cable (535389) without replacing 1st type valve.

Group 9.282 REFRIGERANT, AIR CONDITIONER

1954-60	All A.C.	REFRIGERANT, air cond.-25 lb. cyl. Freon No. 12 . . .	AR	563875
1954-57	All A.C.	15 oz. can	AR	3727736
1954-60	All A.C.	LEAK DETECTOR, 4 oz. bottle	AR	1470927
1955-57	All A.C.	OIL, compressor-1 qt. bottle-525 viscosity	AR	5416939
1958-60	All A.C.	1 qt. bottle-1000 viscosity	AR	5879246

Group 9.647 ANTENNA PARTS, RADIO

1958	All w/Casco	ANTENNA ASSY., motor operated-complete	1	529086
1959	All exc. 2135-45, 2735 & H.D.C.	motor operated-w/integral switch	1	534428
1959-60	All exc. 2135-45, 2735 & H.D.C.	motor operated-less integral switch	1	531931
1959	2135-45, 2735	motor operated-w/integral switch	1	533050
1959	2135-45, 2735	motor operated-less integral switch	1	531932
1960	2135-45, 2735 & H.D.C.	motor operated	1	536745

1949-52	All	ADAPTER, antenna to fender-manual operated antenna	1	515717
1953-54	All	antenna to fender	1	515536
1955-56	All	antenna to shroud	Upper	1 520121
1955-56	All	antenna to shroud	Lower	1 520120
1957	All	antenna to shroud	Upper	1 523668
1957	All	antenna to shroud	Lower	1 523667
1958	All exc. 2793-94	antenna to fender	Upper	1 529003
1958	All exc. 2793-94	antenna to fender	Lower	1 529004
1958	2793-94	antenna to fender	Upper	1 529052
1958	2793-94	antenna to fender	Lower	1 529053
1959	All	antenna to fender-w/manual operated antenna	Upper	1 533813
1959	All	antenna to fender-w/manual operated antenna	Lower	1 533853
1960	All	antenna to fender-w/manual operated antenna	Upper	1 536345
1960	All	antenna to fender-w/manual operated antenna	Lower	1 536342
1960	2135-45, 2735 & H.D.C.	w/motor operated antenna	Upper	1 536345
1960	2135-45, 2735 & H.D.C.	w/motor operated antenna	Lower	1 536342
1952	All	ADAPTER, antenna switch to inst. panel-w/motor operated antenna	1	516427
1952	All	antenna to fender	1	516421
1953-54	All	antenna to fender	1	516591
1953-54	All	antenna switch to inst. panel	1	516954
1955-56	All	antenna to fender	1	520348
1957	All	antenna to fender	1	523982
1958	All exc. 2793-94	antenna to fender	1	529166
1958	2793-94	antenna to fender	1	529167
1958-60	All w/Casco	ARM ASSY., antenna drive pressure	2	528668
1958	All	BEZEL, antenna switch-w/motor operated antenna	1	529102
1959	All	antenna switch	1	532687
1960	All	antenna switch	1	536208
1949-52	All	BODY AND TUBE ASSY., antenna support, die cast type-manual operated antenna	1	512237
1953-54	All	w/manual operated antenna	1	515537
1955-56	All	w/manual operated antenna	1	520122
1958	All	w/manual operated antenna	1	520122
1959	All	w/manual operated antenna	1	533851
1960	All	antenna supt.-w/lead-in	1	536832
1955-56	All	BRACE, antenna motor to fender bracket	1	522426
1957	All exc. 2762-63-64	antenna motor to fender bracket	1	523980
1957	2762-63-64	antenna motor to fender bracket	1	522426
1949-52	All	BRACKET, support tube to fender-manual operated antenna	1	512240
1952	All	support tube to fender-w/motor operated antenna	1	516426
1952	All	antenna support-w/motor operated antenna	1	516423
1953-54	All	support tube to fender-w/manual operated antenna	1	515540
1953-54	All w/Casco	support tube to fender	1	516906
1953-54	All	antenna support-w/motor operated antenna	1	516903
1955-56	All	motor brace to fender bracket	1	520033
1957	All	motor brace to fender-w/motor operated antenna	1	523981
1958	All exc. 2793-94	antenna support	1	530618
1958	2793-94	antenna support-w/motor operated antenna	1	530444
1959	All exc. 2135-45, 2735	antenna to body	1	533139
1959	2135, 2735	antenna to body-w/motor operated antenna	1	533136
1959	2145	antenna to body-w/motor operated antenna	1	534072
1959	2135, 2735	antenna to motor	2	534398
1960	All exc. 2135-45, 2735 & H.D.C.	antenna to body	1	536661
1960	2135-45, 2735 & H.D.C.	antenna anti-twist-w/motor operated antenna	1	575719
1960	All w/Casco exc. 2135-45, 2735 & H.D.C.	antenna anti-twist w/motor operated antenna	1	536660

1960	2135-45, 2735 & H.D.C.	antenna to body-w/motor operated antenna	1	536732
1957-58	All w/Pioneer	BUSHING, antenna tube lead-in contact insulating	1	524133
1957-58	All w/Pioneer	antenna upper insulating	1	569012
1957-58	All w/Pioneer	CAM, antenna switch-w/motor operated antenna	1	528800
1957-58	All w/Pioneer	CLIP, antenna tube lead in contact	1	524134
1957	All w/Pioneer (8,798)	antenna lead in and wire harness kick pad	1	1457094
1958	All w/Casco	antenna drive reed to reel ret.	1	528657
1959	All w/Casco	antenna drive reed to reel ret.-use w/533050 or 534428 antenna	1	528657
1958	All	COLLAR, antenna-w/manual operated antenna	1	530358
1958	All exc. 2793-94	w/motor operated antenna	1	533445
1959	2135, 2735 All w/Casco	COLLAR, antenna-w/motor operated antenna	1	530445
1959	All w/Casco	CORD, antenna motor ground-use w/533050 or 534428 antenna	1	533037
1949-50	All	CONTACT, antenna ground-hood	1	512244
1949-50	All	fender	1	512245
1952-54	All	antenna lead in mast-w/motor operated antenna	1	517059
1955-57	All	antenna lead in mast-w/motor operated antenna	1	520043
1958	All w/Casco	antenna lead in mast	1	531667
1957-58	All w/Pioneer	COUPLING, antenna motor to worm gear	1	569007
1957-58	All w/Pioneer	COVER, antenna limit switch	1	528801
1958	All w/Casco	1	531708
1958	All w/Casco	antenna drive wire	1	528659
1959	All w/Casco	antenna limit switch-use w/533050 or 534428 antenna	1	531708
1959	All w/Casco	antenna drive wire-use w/533050 or 534428 antenna	1	528659
1959-60	All w/Casco exc. 2135-45, 2735 & H.D.C.	antenna drive housing-use w/531931 antenna	1	531947
1959	2135-45, 2735 All w/Casco	antenna drive housing-use w/531932 antenna	1	531953
1958	All w/Casco	DISC, antenna motor to drive-thrust	1	528660
1959	All w/Casco	antenna motor to drive-thrust - use w/533050 or 534428 antenna	1	528660
1960	2135-45, 2735 & H.D.C.- All-w/Tenna	DRIVE ASSY., antenna w/motor operated antenna	1	535097
1959	All exc. 2135-45, 2735	ESCUTCHEON, antenna to fender-w/motor operated antenna	1	532760
1959	2135-45, 2735	antenna to fender-w/motor operated antenna	1	534002
1960	All exc. 2135-45, 2735 & H.D.C.	antenna to fender-w/motor operated antenna	1	536683
1959-60	All w/Casco	EYELET, antenna insulator to mast	1	533040
1955-60	All (8,965)	FUSE, 14 amp.-w/motor operated antenna	1	147685
1955-60	All w/Casco	GASKET, antenna insulator and pin	1	1166118
1957-58	All w/Pioneer	antenna lead in contact retainer	1	1466035
1957-58	All w/Pioneer	GEAR, antenna pulley drive worm	1	569003
1957-58	All w/Pioneer	GEAR AND PULLEY ASSY., antenna	1	528798
1958	All w/Casco	1	531699
1959-60	All w/Casco	1	533043
1941-52	All	GROMMET, antenna lead-in	1	4115225
1953-54	All	1	4603180
1955	All	antenna motor lead-in thru dash	1	520035
1955	All	antenna motor power lead thru dash	1	520036
1956-57	All exc. 2762-63-64	antenna lead-in thru trunk	1	522054
1956-57	2762-63-64 All	antenna motor lead-in thru dash	1	520035
1956-57	2762-63-64 All	antenna motor power lead thru dash	1	520036
1959	All exc. 2135, 2735	antenna brkt. to body	1	533134
1960	All exc. 2135-45, 2735 & H.D.C.	GROMMET, antenna brkt. to body	1	533134
1960	2135-45, 2735 & H.D.C.	antenna mtg. brkt. w/motor operated antenna	2	536734
1957-58	All w/Pioneer	HOUSING ASSY., antenna gear and switch cover, w/switch	1	524128
1957-58	All w/Pioneer	antenna gear and switch cover, w/switch	1	524128
1957-58	All w/Pioneer	antenna drive	1	528802
1957-58	All w/Pioneer	antenna gear and nylon cord	1	528804
1958	All w/Casco	antenna drive	1	531700

1953-54	All	INSULATOR, antenna tube nipple-w/motor operated antenna	1	517171
1955-56	All	antenna to fender-w/motor operated antenna	1	520037
1957	All	antenna tube to fender-w/motor operated antenna	1	523984
1958	All	antenna support to collar-w/manual operated antenna	1	530608
1958	All	antenna support to collar-w/motor operated antenna	1	530607
1958	All	antenna tube to fender-w/motor operated antenna	1	529168
1959	All exc. 2135-45, 2735	antenna to fender	1	532922
1959	2135-45, 2735	antenna tube to fender-w/motor operated antenna	1	534003
1959-60	All w/Casco	antenna to drive housing	1	533041
1960	All exc. 2135-45, 2735 & H.D.C.	antenna to fender	1	536787
1959-60	All w/Casco	INSULATOR AND PIN, antenna lead-in mast-w/motor operated antenna	1	531667
1958	All	KIT, antenna mounting repair-w/motor operated antenna	1	531720
1958	All	KNOB, antenna switch-w/motor operated antenna	1	529761
1959	All	antenna switch-w/motor operated antenna	1	532698
1960	All	antenna switch-w/motor operated antenna	1	536196
1949-52	All	LEAD IN ASSEMBLY, antenna to radio	1	512241
1953-54	All	antenna to radio	1	515541
1955-56	All	w/manual operated antenna	1	520123
1957	All	antenna to radio-w/manual operated antenna	1	523235
1955	All	w/motor operated antenna	Front	1 520038
1955	All	w/motor operated antenna	Rear	1 520476
1956-57	All exc. 2762-63-64	w/motor operated antenna	Front (170" long)	1 522056
1956-57	2762-63-64 All	w/motor operated antenna	Front (194" long)	1 522055
1956-57	All	w/motor operated antenna	Rear (32" long)	1 522057
1957-58	All w/Pioneer	w/motor operated antenna	Rear (32" long)	1 524135
1958	All exc. 2793-94	antenna to radio		1 529005
1958	2793-94 All			1 531352
1959-60	All exc. 2135-45, 2735	antenna to radio	(217" long)	1 532963
1959	2135-45, 2735	antenna to radio	(223" long)	1 532964
1960	2135-45, 2735 & H.D.C.	antenna to radio		1 536790
1957-58	All w/Pioneer	LINER, antenna pressure-w/motor operated antenna	1	569005
1946-47	All w/Ward	MAST ASSEMBLY, antenna	1	509136
1947-54	All	w/manual operated antenna	(63" long)	1 511188
1948-54	All	w/manual operated antenna	(93" long)	1 511503
1952-54	All	w/motor operated antenna		1 516641
1955-60	All	w/manual operated antenna	(57" long)	1 520124
1955-57	All w/Casco			1 1190857
1957-58	All w/Pioneer			1 524130
1958	All w/Casco			1 528874
1959	All w/Casco exc. 2135-45, 2735	w/motor operated antenna-use w/534428 antenna	1	534431
1959-60	All w/Casco exc. 2135-45, 2735 & H.D.C.	w/motor operated antenna-use w/531931 antenna	1	531948
1959	2135-45, 2735 All w/Casco	w/motor operated antenna-use w/533050 antenna	1	533046
1959	2135-45, 2735 All w/Casco	w/motor operated antenna-use w/531932 antenna	1	531952
1960	All w/Tenna exc. 2135-45, 2735 & H.D.C.	w/motor operated antenna	1	535211
1960	2135-45, 2735 & H.D.C. All w/Tenna	w/motor operated antenna	1	575716
1952	All w/Casco	MOTOR AND DRIVE UNIT ASSY.	1	516645
1953-54	All w/Casco		1	517315
1955	All w/Casco		1	520025
1956-57	All w/Casco		1	522058
1960	All w/Tenna exc. 2135-45, 2735 & H.D.C.	antenna	1	535210
1959	All w/Casco	MOTOR AND HOUSING ASSY., antenna-use w/533050 or 534428 antenna	1	531940
1959-60	All w/Casco	use w/531931 or 531932 antenna	1	531949
1957-58	All w/Pioneer	MOTOR, antenna	1	524129
1958	All w/Casco		1	531701

1942-48	All w/Radiart	NUT, mast mounting	1	507982
1949-54	All	to fender	1	554422
1949-54	All	mast to support	1	554371
1952	All w/Casco	antenna mounting	1	516424
1952	All w/Casco	switch to inst. panel	1	516430
1952-54	All w/Casco	support bracket mounting	1	516646
1953-54	All w/Casco	antenna mounting	1	517192
1953-54	All w/Casco	switch to inst. panel	1	516958
1955-57	All	switch to inst. panel-w/motor operated antenna	1	520207
1955-59	All	antenna mounting-w/manual operated antenna	1	520125
1955-59	All	body to adapter-w/manual operated antenna	1	520126
1955-58	All w/Casco	antenna to fender	1	522756
1957	All w/Pioneer	antenna to fender	1	528590
1958	All exc. 2793-94	antenna adjustment-w/motor operated antenna	1	531682
1958	All exc. 2793-94 (8.921)	antenna adjustment lock-w/motor operated antenna	1	107821
1959-60	All w/Casco	antenna mounting	1	533468
1959-60	All w/Casco exc. 2135-45, 2735 (8.919)	antenna to body brkt. (1/4"-28)	1	131657
1959	All (9.647)	switch to inst. panel	1	533868
1960	All	antenna to fender mounting-w/manual operated antenna	1	536343
1960	All exc. 2135-45, 2735 & H.D.C. (8.148)	antenna to fender escutcheon-w/manual operated antenna	1	446059
1960	2135-45, 2735 & H.D.C.	antenna mtg. upper adapter-w/motor operated antenna	1	536343
1960	2135-45, 2735 & H.D.C.	antenna mtg. brkt.-w/motor operated antenna	2	536734
1960	All	antenna switch to inst. panel-w/motor operated antenna-chrome	1	536246
1960	All	antenna switch to inst. panel-w/motor operated antenna-zinc	1	536303
1960	All	radio to inst. panel	2	536303
1949-52	All	PAD, to fender adapter-manual operated antenna	1	512242
1952	All	to fender adapter-w/motor operated antenna	1	516428
1953-54	All	antenna to fender-w/motor operated antenna	1	517172
1955-56	All	antenna to shroud-w/manual operated antenna	1	520127
1955-56	All	antenna to fender-w/motor operated antenna	1	520039
1956	2762-63 All	antenna to fender-w/motor operated antenna	1	522393
1957-58	All	antenna to shroud-w/manual operated antenna	1	523666
1957	All	antenna to fender-w/motor operated antenna	1	523983
1958	All	antenna to fender-w/motor operated antenna	1	529169
1959	All	to fender upper adapter-w/manual operated antenna	1	533812
1959	All exc. 2135-45, 2735	mounting escutcheon-w/motor operated antenna	1	532917
1959	2135-45, 2735	mounting escutcheon-w/motor operated antenna	1	534004
1960	All	to fender upper adapter-w/manual operated antenna	1	536344
1960	All exc. 2135-45, 2735 & H.D.C.	mounting escutcheon-w/motor operated antenna	1	536786
1960	2135-45, 2735 & H.D.C.	mounting escutcheon-w/motor operated antenna	1	536344
1958	All exc. 2793-94	PLATE, antenna mounting-w/motor operated antenna	1	531681
1958	All w/Casco	REEL ASSY., antenna drive	1	528664
1959	All w/Casco	use w/533050 or 534428 antenna	1	533044
1957-59	All	RELAY, antenna-w/motor operated antenna-use w/533050 or 534428 antenna	1	1116928
1955-57	All	RETAINER, antenna lead in contact	1	1166016
1958-60	All w/Casco (8.934)	RING, antenna drive reel	1	274574
1942-54	All	SEAL, antenna mounting nut-manual operated antenna	1	507984
1953-54	All	fender adapter-w/manual operated antenna (1" O.D.)	1	515542
1957-58	All w/Pioneer	antenna motor to housing (1-19/64" I.D.)	1	1466034
1958	All w/Casco	antenna insulator to tube (3/4" I.D.)	1	531706
1959-60	All	antenna to body pillar-w/manual operated antenna	1	533808
1960	All exc. 2135-45, 2735 & H.D.C.	antenna escutcheon "O" ring-w/motor operated antenna	1	274249

1942-54	All	SCREW, tube and bracket support-manual operated antenna	3	142806
1958	All (8,975)	motor support set (1/4"-28 x 1-1/2")	1	139020
1958-60	All w/Casco	antenna drive pressure arm adj. (1/2"-32 x 19/32")	2	528666
1958-60	All w/Casco	SHELL AND COLLAR ASSY., antenna	1	531705
1957-58	All w/Pioneer	SHIM, antenna gear and pulley to housing (.014)	2	1466039
1957-58	All w/Pioneer (.029)	2	1466030
1950-54	All	SLEEVE, antenna non-glare - w/manual operated antenna	1	514102
1958	All w/Casco	antenna motor wire-rubber (3/8" I.D. x 3/4" long)	1	531707
1959	All	antenna brkt. stud to antenna-w/motor operated antenna	3	533137
1959	All w/Casco	antenna motor wire-use w/533050 or 534428 antenna (3/8" I.D. x 3/4" long)	1	531707
1960	2135-45, 2735 & H.D.C.	antenna grommet-w/motor operated antenna	1	536735
1949-54	All	SPACER, antenna to fender-manual operated antenna	1	512243
1953-54	All	antenna tube to fender-w/motor operated antenna	1	517173
1955-60	All	lower adapter to body-w/manual operated antenna	1	520128
1957-58	All w/Pioneer	antenna nylon cord housing	1	528503
1960	All	antenna switch to bezel-w/motor operated antenna	1	536290
1957-58	All w/Pioneer	SPRING, antenna pressure liner	11	569004
1958	All w/Casco	antenna pressure arm	2	531702
1959-60	All w/Casco	antenna pressure arm	1	528667
1952	All	SWITCH, antenna-w/motor operated antenna	1	516429
1953-54	All	1	520492
1955-56	All	1	520040
1957	All w/Pioneer	plunger type	1	523891
1957	All w/Casco	double throw type	1	524751
1958	All	1	529097
1958	All w/Casco	antenna limit	1	531703
1959	All w/Casco	antenna limit-use w/533050 or 534428 antenna	1	531703
1959	All w/Casco	antenna control-use w/531931 or 531932 antenna	1	531926
1959	All	antenna control-w/motor operated antenna-use w/533050 or 534428 antenna	1	533129
1960	All	antenna-w/motor operated antenna	1	536330
1952-54	All	TIP, antenna mast-w/motor operated antenna	1	516643
1955-56	All	w/motor operated antenna	1	1166019
1957-60	All w/Casco	w/motor operated antenna	1	524342
1957-58	All w/Pioneer	w/motor operated antenna	1	524131
1952	All w/Casco	TUBE ASSY., antenna nylon housing	1	516644
1952	All w/Casco	antenna body-w/bushing and insulator	1	516640
1953-54	All w/Casco	antenna nylon housing	1	516905
1953-54	All w/Casco	antenna body-w/bushing and insulator	1	516904
1955-57	All w/Casco	antenna nylon housing	1	522271
1955-57	All	antenna body-w/bushing and insulator-w/motor operated antenna	1	520029
1957-58	All w/Pioneer	antenna body-w/bushing, insulator and lead-in	1	522052
1957-58	All w/Casco	antenna body-w/insulator	1	528650
1959-60	All exc. 2135-45, 2735	antenna-w/insulator-w/motor operated antenna	1	534294
1959	2135-45, 2735	antenna-w/insulator-w/motor operated antenna	1	533045
1960	All w/Tenna exc. 2135-45, 2735 & H.D.C.	antenna-w/motor operated antenna	1	535212
1955-56	All	WASHER, mast to body-w/manual operated antenna	1	520129
1958	All w/Casco	antenna limit switch positioning (7/32" I.D.)	1	528651
1958-60	All w/Casco	antenna drive reel-thrust (5/16" I.D.)	AR	528654
1959-60	All w/Casco	antenna drive reel-thrust Inner (33/64" I.D. x 3/4" O.D.)	2	533039
1959	All w/Casco	drive cover spacing-use w/533050 or 534428 antenna (7/32" I.D.)	1	528651
1959-60	All	antenna to body seal retaining (15/16" I.D. x 1-55/64" O.D.)	1	531970
1959	All (10,201)	antenna to fender escutcheon-sealing	1	516932
1960	All exc. 2135-45, 2735 & H.D.C. (10,201)	antenna to fender escutcheon	1	516932

1957-58	All w/Pioneer	WICK, antenna moisture dissipator-w/motor operated antenna	1	1466033
1952-54	All w/Casco	WIRE ASSY., switch to antenna	1	5296415
1955-57	All	antenna brace to fender brkt. ground	1	2961567
1955-56	All	switch to fuse block	1	2961569
1955	All	switch to dash (47" long)	1	2961568
1955	All	motor to dash (166" long)	1	2963451
1956	All exc. 2762-63-64	motor to dash (184" long)	1	2964189
1956	2762-63-64 All	motor to dash (133" long)	1	2963759
1956	2762-63-64 All	switch to dash (47-1/2" long)	1	2964337
1957	All exc. 2762-63-64	motor to relay (189" long)	1	2966825
1957	2762-63-64 All	motor to relay (197" long)	1	2966824
1957	All	radio to relay (24" long)	1	2967417
1957	All	relay to fuse block (40" long)	1	2966826
1958	All exc. 2793-94	motor to relay (202" long)	1	2970020
1958	2793-94 All	motor to relay (226-1/2" long)	1	2970012
1958	All	relay to fuse block (50" long)	1	2970011
1958	All w/Casco	motor to lead (24" long)	1	531704
1959	All w/Casco	motor to lead-use w/533050 or 534428 antenna (24" long)	1	531704
1959	All w/Casco exc. 2135-45, 2735	motor to relay-use w/534428 antenna (205" long)	1	2971718
1959-60	All w/Casco exc. 2135-45, 2735	motor to switch-use w/531931 antenna (188" long)	1	2972638
1959	2135-45, 2735 All w/Casco	motor to relay-use w/533050 antenna (212" long)	1	2971717
1959	2135-45, 2735 All w/Casco	motor to switch-use w/531932 antenna (196" long)	1	2972639

NOTE: The Ward Antenna may be identified by the red plastic ball on the top.
The Radiart Antenna may be identified by the steel ball on the top.

Group 9.649 KNOB, RADIO

1942-48	All	tuning and volume control	2	507505
1949-50	All	tuning and volume control	2	511834
1951	All	tuning and volume control-chrome	2	514608
1951-52	All	tuning and volume control-black	2	515718
1942-48	All	tone control	1	507511
1949-52	All	tone control-black	1	511833
1951	All	tone control-chrome	1	514784
1953-54	All	tuning and volume control	2	516948
1953-54	All	tone control	1	516946
1955	All	tuning and volume control	2	518916
1955-57	All	tone control	1	518915
1956-57	All	sensitivity control-Electramatic	1	522248
1956	All	tuning and volume control	2	522253
1957	All	tuning and volume control-metallic pearl	2	523507
1957	All	tuning and volume control-chrome	2	523150
1958	All	tuning and volume control-Sportable radio	2	7271613
1958	All	tone control-deluxe radio	1	529078
1958	All	tone control-Sportable radio	1	7272110
1958	All	tuning and volume control-deluxe radio	2	529079
1959	All	tuning and volume control	2	532456
1959	All	tone control	1	532455
1959	All	radio dummy	1	532707
1960	All (9.647)	tuning and volume control	2	536196
1960	21 All	tone control	1	532455
1960	All (9.647)	rear seat speaker switch	1	536196
1960	21 All	radio dummy	1	532707
1960	23-24-27-28 All	tone control	1	536278
1960	23-24-27-28 All	radio dummy	1	536108
1953-54	All	KNOB ASSY., rear speaker control	1	515125
1958	All (9.647)	rear speaker switch	1	529761

1958	All	rear speaker control-Sportable radio	1	7272111
1958	All	dummy-exc. rear seat speaker-Sportable radio	1	7271616
1959	All	rear seat speaker switch	1	532698
1956	All Electramatic	ADAPTER, rear speaker control mounting	1	522262
1958	All	BEZEL, rear speaker switch	1	529101
1959	All	rear seat speaker switch	1	532624
1960	All	rear seat speaker switch	1	536207
1955	All	DIAL ASSY., rear speaker control	1	519815
1956	All exc. A.C.	rear speaker control	1	522264
1957	All	rear speaker control	1	523509
1949-52	All	DUMMY KNOB SPACER- back of tuning control knob-black	1	511831
1953-54	All	back of tuning control knob	1	516945
1955-57	All	back of tuning control knob	1	518914
1958	All	back of tuning control knob-deluxe radio	1	529077
1958	All	ESCUTCHEON, tone control knob-Sportable radio	1	7271614
1958	All	rear speaker control knob-Sportable radio	1	7271615
1958	All	FERRULE, tuning and volume control knob-deluxe radio	2	529076
1958	All	NUT, trim plate to switch-Sportable radio	1	7272457
1949-52	All	PLATE, rear speaker control	1	515854
1942-48	All	PUSH BUTTON, radio tuner-deluxe radio	5	7242136
1949-50	All		5	1218885
1959	All	SPRING, control knob	2	533576
1960	All	control knob	2	536718
1959-60	All	SCREW, knob to shaft (No. 8-32x3/16")	AR	192208
1941-48	All	WASHER, knob spacer collar spring	1	7238755
1941-54,				
1958	All	radio tone control knob-felt	2	505630
1949-52	All	dummy knob anti-rattle	1	513486
1953-56	All	dummy knob spring	1	7238755
1957-58	All	radio tone and sensitivity control knob	2	517453
1958	All	dummy knob spring-deluxe radio	1	530564
1958	All	radio tone control knob spring-Sportable radio	1	7272635
1958	All	rear seat speaker to switch-Sportable radio	1	7272635
1959	All	tuning shaft spacer	1	533863
1960	27-28 All	tuning shaft spacer	1	533863

NOTE: See Group 10.256 for Radio Controls Finish Plate.

Group 9.650 STATIC COLLECTOR PARTS

1937-54	All	BRACKET, rear wheel static collector	2	231895
1937-54	All	BRUSH, rear wheel static collector	2	1862394
1934-54	All	COLLECTOR, front wheel static	2	494786
1960	All	front wheel static	2	494786
1937-54	All	SPRING, rear wheel static collector	2	231896
1937-57	All	STRAP, cylinder head ground	1	5298902
1958-60	All	cylinder head and exhaust pipe ground	2	501454
1959-60	All	ground to underbody	1	534243

Group 9.654 CONTROL-CONNECTOR-FUSE-HOLDER-RECEIVER-SPEAKER, RADIO

1949-52	All	CABLE AND CONTROL ASSY., radio rear speaker	1	514255
1953-54	All		1	7260922
1955	All		1	7265158
1956	All		1	7266674
1957	All		1	7268330
1958	All exc. 2547-67		1	7270142
1958	2547-67, 2793-94 All		1	7270414

1959	2111-19-37-39, 2411-19-39, 2839 All				1	533446
1959	2135-45-67, 2735, 2837-67				1	533942
1958	2547-67 All	WIRE ASSY., rear speaker to switch	(157" long)		1	7271657
1958-59	2135-45, 2735-93-94 All		(163" long)		1	7272088
1959-60	2111-19-37-39, 2411-19-39, 2839			(170" long)	1	7273457
1959-60	2137-67, 2837-67			(140" long)	1	7273458
1960	2135-45, 2735			(175" long)	1	7275848
1960	All exc. 2135-45, 2735	SWITCH AND WIRE, rear seat speaker			1	7275142
1960	2135-45, 2735				1	7275152
1956-57	All	CONNECTOR, radio rear speaker lead wires			1	2962737
1959	All	PLATE ASSY., radio speaker mounting			1	7273037
1960	All	radio speaker mtg.			1	7275843
1958	All	RECEIVER ASSY., sportable radio			1	7271582
1959-60	All				1	7273422
1956	All	SPEAKER ASSY., radio	Rear	522337 RH		522338 LH
1957-58	All exc. 2547-67		Rear	524273 RH		524274 LH
1957	All	less housing		Front	1	7268329
1958	All			Front	1	7270132
1958-60	2137-67, 2547-67, 2837-67 All	Delco		Rear	1	7270412
1958-59	2135-45, 2735-93-94 All	Magnavox		Rear	1	524273
1959	All			Front	1	7272752
1959	2111-19-37-39, 2411-19-39, 2839	Magnavox		Rear	1	524274
1960	All	radio		Front	1	7275766
1960	All exc. 2167, 2837-67	Magnavox		Rear	1	535109
1960	All	GASKET, radio speaker mtg.			1	7275954
1960	All (9.647)	SPACER, rear seat speaker switch			1	536290
1957	All Cool Pack A.C.-H.T.	STRAP, radio speaker mounting			1	531833
1959	All	NUT, rear seat speaker switch			1	533868
1960	All (9.647)	rear seat speaker switch-chrome	(5/16"-32)		1	536246
1960	23-24-27-28 All (9.647)	rear seat speaker switch-zinc	(1/2"-28)		1	536303
1959	All	SCREW, radio speaker to plate	(No. 10-32x5/8")		4	455329

Group 9.655 GRILLE, RADIO SPEAKER

1949-50	All				1	511573
1951-52	All			Outer	1	515786
1951-52	All			Inner	1	515785
1953-54	All			Inner	1	516812
1953-54	All			Center	1	516813
1953-54	All			Outer	1	516814
1955	2564, 2819-37-67 All				1	519630
1955	2511-19-37-62-63 All				1	519631
1956	2711-19-37-39-62-63 All				1	521499
1956	2764, 2819-37-39-67 All				1	521725
1957	All				1	523395
1958	All	with inst. panel cushion		Front	1	4728713
1958	2547SD-67SD			Rear	1	4721068
1958	2567			Rear	1	4724849
1958	2731-39-41-49, 2831-39-49 All			Rear	2	7271653
1958-59	2135-45, 2735-93-94 All	rear qtr.			1	7264992
1959-60	All				1	4758023
1959	All	rear seat speaker			1	7274237
1959	2167	rear seat back speaker			1	4758929
1959	2837, 2867	rear seat back speaker			1	4758065
1960	All	rear seat speaker			1	7275388
1960	2837-67	rear seat back speaker			1	4797229
1960	2167	rear seat back speaker			1	4797228
1958	All	BUMPER, inst. panel speaker grille			1	4119339

1959	All exc. 2837-39-67 . (10.263)	inst. panel speaker grille	AR	4119339
1959-60	All (10.331)	inst. panel speaker grille-w/inst. panel cushion . . .	2	4652124
1959	2111-19-35-37-39-45-67, 2419-39 (10.331)	inst. panel speaker	4	4652124
1960	21-23-24 All	inst. panel speaker	4	4767485
1959	All	BOLT, speaker and inst. panel supt.	2	533406
1958	2567 All	GUARD, rear speaker	1	4715958
1957	All	HOUSING, radio speaker	1	524024
1955	2564, 2819-37-67 All	NAME PLATE, radio speaker grille-Star Chief	1	520214
1955	25 All	Pontiac	1	519632
1956	2564, 2819-37-39-67 All	Star Chief	1	521817
1956	All L.H.D.	Pontiac	1	521818
1959	2837-67 (10.256)	rear seat speaker name-Bonneville	1	532374
1955-57	All	NUT, grille name plate-spring type	AR	520026
1956	2764, 2819-37-39-67 All	AR	445149
1958	All	speaker to housing Front	4	530459
1958	2547SD-67SD	rear speaker ornament	2	1165134
1958	2547-67 All (8.040)	rear speaker grille ret.	4	572846
1959	2167, 2837-67 (8.921)	rear seat speaker grille (1/8")	4	3752642
1959	All	inst. panel and speaker supt. to body (No. 10-24 Speed)	2	5931962
1958	2547SD-67SD	ORNAMENT, rear speaker grille	1	4724860
1953-54	All	RETAINER, radio speaker grille	1	514938
1957	All	1	523199
1959	All	SPACER, inst. panel speaker grille-w/inst. panel cushion Front	2	533707
1959	All	w/inst. panel cushion Rear	2	533708
1958	2547SD	SUPPORT, rear seat speaker grille	1	4714844
1958	2567	1	4714845
1958	2567 SD	1	4747808
1959	All	speaker and inst. panel 533411 RH		533410 LH
1959	All	inst. panel speaker brace	2	4768069
1959-60	2167	rear seat back speaker grille	1	4740279
1959-60	2867	rear seat speaker grille	1	4765491
1958	All (10.256)	CLIP, inst. panel speaker grille	4	4718818
1959-60	21-23-24 All	inst. panel speaker grille	4	4697015
1959	21-24 All	w/inst. panel cushion Front	2	4778878
1959	21-24 All	w/inst. panel cushion Rear	2	4762917
1959	27-28 All Front	2	4778878
1959	27-28 All Rear	2	4762917
1960	21-23-24 All	w/inst. panel cushion Front	2	4801120
1960	21-23-24 All	w/inst. panel cushion Rear	2	4801121
1960	27-28 All Front	2	4801120
1960	27-28 All Rear	2	4801121
1957	All	SCREW, radio speaker to housing	4	529149

Group 9.656 GASKET-INSULATOR-NUT-WASHER, RADIO GRILLE

1949-52	All	GASKET, radio speaker grille	1	511576
1953-54	All	grille screen to outer grille	1	517444
1949-50	All	INSULATOR, radio speaker grille screen	1	511574
1953-54	All	WASHER, grille screen to inner grille	3	517445

Group 9.658 SCREEN, RADIO SPEAKER GRILLE

1949-50	All	1	511575
1951	All	1	514581
1952	All	1	516492
1953-54	All	1	514937

Group 9.663 CONDENSER, RADIO

1940-54	All	generator-w/clamp (.5 mfd.)	1	1917580
1949-60	All L.H.D.	generator regulator-w/clamp (.5 mfd.)	1	1932222
1955-60	All	generator-w/clamp	1	1914827
1949-52	All	CLAMP, generator regulator	1	1911137

Group 9.667 BRACE-BOLT-NUT, RADIO RECEIVER TO INSTRUMENT PANEL

1955-56	All	BRACE, receiver unit to panel	1	519417
1957	All		1	523740
1959-60	All		1	533517
1941-54	All	BOLT, receiver unit to brace	1	505629
1940-60	All	NUT, receiver unit to panel	2	7235968

Group 9.709 LIGHTER ASSEMBLY, CIGAR

1942-48	All		1	507400
1949-50	All		1	511823
1951	All	w/chrome knob	1	514611
1951-52	All	w/black knob	1	515712
1953-54	All		1	516950
1955-56	All	BASE ASSY., cigar lighter-w/Casco lighter	1	518910
1957	All	w/Casco lighter	1	529054
1958	All	w/Casco lighter	1	529610
1959-60	All	w/Casco lighter	1	532907
1959-60	All exc. 21	BEZEL, lighter to inst. panel	1	532402
1959-60	21 All	lighter to inst. panel-exc. Decor group	1	532417
1959-60	21 All	lighter to inst. panel-w/Decor group	1	532402
1956	All	CASE AND CIRCUIT BREAKER ASSY., lighter		
		w/Rochester lighter	1	7008641
1957-60	All	w/Rochester lighter	1	7015165
1956-59	All	CAP ASSY., cigar lighter and circuit breaker-		
		w/Rochester lighter	1	7002804
1960	All	lighter-w/Rochester lighter	1	7002265
1957	2711-19-37-39-62-63, 2819D			
	All exc. A.C.	FERRULE, cigar lighter	1	523452
1938-54	All	HEATING ELEMENT, with plug	1	609829
1955	All		1	1471449
1956-60	All	w/Casco lighter	1	3710581
1956-60	All	w/Rochester lighter	1	7011823
1940-48	All	INSULATOR, cigar lighter	1	503486
1942-48	All	KNOB, cigar lighter	1	507402
1949-50	All		1	511827
1951-52	All		1	515715
1953-54	All		1	516953
1955	All		1	518913
1956	All	w/Casco lighter	1	522268
1957	All	w/Casco lighter-metallic pearl	1	523451
1957	All	w/Casco lighter-chrome	1	523105
1958	All	w/Casco lighter-chrome	1	529612
1959	All	w/Casco lighter	1	532405
1960	All	w/Casco lighter	1	536274
1942-48	All	KNOB, PLUG AND ELEMENT, cigar lighter	1	507401
1949-50	All		1	511825
1951	All	w/chrome knob	1	514612

1951-52	All	w/black plastic knob	1	515713
1953-54	All		1	516952
1955	All		1	518912
1956	All	w/Casco lighter	1	522263
1956	All	w/Rochester lighter	1	7008642
1957	All	w/Casco lighter-metallic pearl	1	523450
1957	All	w/Rochester lighter-metallic pearl	1	7010321
1957	All	w/Casco lighter-chrome	1	523104
1957	All	w/Rochester lighter-chrome	1	7010314
1958	All	w/Casco lighter	1	529611
1958	All	w/Rochester lighter	1	7011868
1959	All	w/Casco lighter	1	532909
1959	All	w/Rochester lighter	1	7012885
1960	All	w/Casco lighter	1	536273
1960	All	w/Rochester lighter	1	7015608
1958	All	PLATE, cigar lighter housing finish	1	528540
1956	All	RETAINER, lighter to inst. panel-w/Rochester lighter	1	7002184
1957	All	w/Rochester lighter	1	7011551
1958	All	w/Rochester lighter	1	7002184
1959-60	All	w/Rochester lighter	1	7012888

Group 9.712 FUSE, CIGAR LIGHTER

1941-60	All		1	1314453
---------	-----	--	---	---------

Group 9.718

NOTE: For windshield wiper pipes see Group 8.964 copper tubing.

Group 9.743 INSTRUMENT PANEL CLUSTER PARTS

1953-54	All	CASE (battery and fuel)	1	1501356
1953-54	All	(oil and water)	1	1507706
1955-56	All	(fuel and oil)	1	1583250
1955-56	All	(battery and water)	1	1583258
1957	All L,H,D.	(battery and water)	1	1584662
1957	All L,H,D.	(fuel and oil)	1	1584663
1957	All L,H,D.	speedometer	1	1584547
1958	All	instrument cluster-w/shield	1	1585488
1959	All	battery and fuel	1	1586494
1960	All	inst. panel cluster-exc. safeguard speedometer	1	1588499
1960	All	CASE AND TERMINAL ASSY., inst. cluster-w/safeguard speedometer	1	1588018
1959	All police	CLUSTER AND HOUSING ASSY., inst. panel-w/special calibrated speedometer-exc. 43-15 axle	1	1587367
1955-56	All	BEZEL, instrument cluster (fuel-oil, battery-water)	AR	1583255
1957	All L,H,D.	(battery and water)	1	1584493
1957	All L,H,D.	(fuel and oil)	1	1584496
1957	All L,H,D.	speedometer	1	1584524
1958	All	speedometer and instrument cluster	2	1585424
1960	All	inst. panel cluster-w/safeguard speedometer-exc. clock	1	1588287
1960	All	inst. cluster-w/safeguard speedometer and clock	1	1588649
1960	21 & H,D,C. All	inst. panel cluster-exc. safeguard speedo. or clock	1	1587871
1960	21 All & H,D,C.	inst. panel cluster-exc. safeguard speedo.-w/clock	1	1588648
1960	23-24-27-28 All	inst. panel cluster-exc. safeguard speedo.	1	1588648
1960	All	BEAD, inst. panel face trim-w/clock	1	1588380

1951	All	BODY ASSY., instrument cluster	1	1580821
1952	All	instrument cluster	1	1581956
1953-54	All	instrument cluster	1	1582147
1955	All	speedometer-black	1	1583739
1956	All	speedometer	1	1584196
1959	All	BODY AND STUD ASSY., inst. panel	1	1586635
1960	All	BOLT AND BUSHING, inst. cluster	2	1586095
1959	All	BRACKET, inst. panel gauge ret.	2	1586383
1960	All	CAP AND SLEEVE ASSY., hi-beam tell-tale	1	1588496
1960	All	inst. panel safeguard speedometer tell-tale	1	1588284
1959	All	CASE & STUD ASSY., inst. panel tell-tale	1	1586495
1959	All	CLAMP, inst. cluster & hsg. to panel	2	533245
1957	All L.H.D.	BUSHING, instrument cluster-rubber	2	523785
1958	All	DIAL, speedometer	1	1585456
1957	All L.H.D.	EYELET, instrument cluster	2	523783
1951-52	All	FACE, instrument cluster (oil and water)	1	1580817
1951-52	All	(battery and fuel)	1	1580818
1953-54	All	instrument panel cluster (Miles)	1	1581321
1955	All	speedometer (Miles)	1	1583243
1956	All	speedometer (Miles)	1	1584220
1957	All L.H.D.	(battery and water)	1	1584494
1957	All L.H.D.	(fuel and oil)	1	1584490
1957	All L.H.D.	speedometer (Miles)	1	1584511
1958	All	instrument cluster (oil, fuel, battery and water)	1	1585490
1958	All	speedometer-exc. safeguard (Miles)	1	1585491
1959	All	(oil and water)	1	1586333
1960	All	battery	1	1587908
1960	All	oil, water and fuel	1	1587907
1955-56	All	GASKET, speedo. ret. and case to face	2	1583274
1955	All	bezel to ret. and face (fuel-oil, battery-water)	AR	1583257
1958	All	speedometer and instrument cluster	2	1585652
1959	All	speedometer glass	1	1586479
1959	All	inst. panel oil pressure tell-tale (9.749)	1	1585460
1960	All	speedometer lens	2	1587912
1960	All	inst. panel oil pressure tell-tale	1	1587910
1960	All	inst. panel gauge	6	1587899
1960	All	inst. panel trim bead-w/clock	2	1588387
1960	All	speedometer dust	1	1568724
1960	All	odometer lens retainer	2	1587956
1960	All	cold, hot gas & hi-beam tell-tale	AR	1587911
1958	All	GLASS, speedometer and instrument cluster	2	1585651
1959	All	speedometer-exc. safeguard speedometer	1	1586331
1958	All A.C.	HOUSING ASSY., safeguard speedometer dial (Miles)	1	1585931
1958	All exc. A.C.	speedometer dial (Miles)	1	1586102
1958	All	INSULATOR, safeguard speedometer lamp socket	1	531518
1960	All	inst. panel fuel gauge	1	5640011
1960	All	LAMP ASSY., inst. panel thermister and tell-tale - w/safeguard speedometer	1	5643256
1960	All	LENS, speedometer	1	1587905
1960	All	LENS, inst. panel odometer	1	1587896
1951-52	All	PLATE, instrument cluster back (battery and fuel)	1	1501285
1951-52	All	(oil and water)	1	1512286
1959	All	inst. panel fuel gauge back	1	5640283
1960	All	inst. panel fuel gauge back-exc. safeguard speedometer	1	5643165
1960	All	inst. panel ammeter back	1	1502006
1959	All	PLUG, inst. panel tell-tale case Front	1	1586681
1949-50	All	RING, speedometer head plastic figure (Miles)	1	1569876
1951-52	All	instrument cluster figure (Miles)	1	1580814
1949-50	All	RETAINER AND BEZEL ASSY., instrument panel cluster (oil and water)	1	1507352
1949-50	All	(speedometer figure ring)	1	1569875
1955	All	RETAINER AND FACE ASSY. (fuel and oil)	1	1583316
1955	All	(battery and water)	1	1583317
1956	All	(fuel and oil)	1	1584228

1956	All	(battery and water)	1	1584229
1959	All	(battery and fuel)	1	1586493
1955	All	RETAINER AND CASE ASSY., speedometer	1	1583247
1956	All		1	1584219
1951-52	All	RETAINER, instrument panel face (oil and water)	1	1580819
1951-52	All	(battery and fuel)	1	1580820
1951-52	All	(speedometer figure ring)	1	1580816
1953-54	All	instrument panel face	1	1581320
1957	All L.H.D.	instrument panel gauge face (battery-water, fuel-oil)	2	1584491
1957	All L.H.D.	speedometer	1	1584523
1958	All	speedometer and instrument cluster	2	1585650
1958	All	speedometer and instrument cluster glass	2	1585425
1959	All	speedometer glass	1	1586326
1959	All	inst. panel cluster and housing	2	533570
1959	All	oil and water gauge face	1	1586321
1960	All	speedometer lens	1	1588131
1960	All	SPACER, inst. panel dial	2	1588354
1959	All	STUD, inst. panel body mounting	2	1586480
1953-54	All	SCREW, instrument cluster to brace	2	516922
1960	All	inst. cluster case and bezel (No. 6-32x7/16")	9	1586269
1960	All (8.977)	inst. cluster and hsg. to panel (No. 10-12 x 1-1/4")	3	162485
1958	All	SEAL, safeguard speedometer dial connector body	1	531239
1958	All A.C.	SWITCH AND WIRE ASSY., safeguard speedometer	1	2970410
1958	All exc. A.C.		1	2970015
1958	All	WIRE ASSY., safeguard speedometer indicator	1	2970411
1959-60	All	WIRE HARNESS, inst. panel-w/safeguard speedo.	1	2972824

Group 9.749 GASKET

GASKET (see Group 9.743 for use) 1585460

Group 9.762 BUZZER ASSY., SAFEGUARD SPEEDOMETER

1958	All		1	1116952
1959-60	All		1	536889
1960	All	BUSHING, inst. panel safeguard speedo. cable	1	1585785
1959	All	COVER, POINTER AND KNOB ASSY., safeguard speedometer	1	1587022
1960	All	KNOB, inst. panel safeguard speedo. cable	1	1588021

Group 9.772 CLOCK PARTS, ELECTRIC

1957	All	CLOCK ASSY., inst. panel electric	1	528902
1958	All		1	528698
1959	All		1	532376
1960	All		1	536235
1942-48	All	BEZEL	1	507833
1949-50	All		1	512511
1951-52	All		1	515710
1953-54	All		1	517382
1958	All		1	531391
1958	All	BUMPER, clock to inst. panel (5/8" long)	2	531648
1957	All	CLAMP, clock mounting-Borg	1	529098
1957	All	Jaeger	1	523210
1949-50	All	CRYSTAL	1	512512
1949-50	All		1	512512
1951-54	All	CRYSTAL PKG., clock-consists of crystal, reflector and instruction sheet	1	517390
1958	All exc. SD	HOUSING	1	530129
1956	All	LENS-New Haven (4" dia.)	1	522998

1956	All	Jaeger	(3-3/4" dia.)	1	522999
1957	All	Jaeger		1	528763
1957	All	New Haven and Borg		1	528764
1958	All			1	531393
1949-50	All	GASKET		1	512513
1955-57	All	FUSE, 1-1/2 amp.	(8.965)	1	432640
1957-58	All	1 amp. used w/Borg clock	(8.965)	1	149559
1958	All	RETAINER, lens		1	531394
1951	All	SCREW, set, clock to grille		2	514599
1949-50	All	WIRE ASSEMBLY		1	5289477
1951-52	All			1	5291069
1953-54	All			1	5292830
1955-56	All			1	2961353
1957-58	All			1	2966974
1959-60	All			1	2971602

Group 9.773 SAFETY LIGHT PARTS (Inside Controlled)

1949-52	2561-62 All	ARM AND PINION PACKAGE		1	5943640
1953-54	All exc. 2562			1	5943972
1953-54	2562 All			1	5943976
1955-56	All			1	5946521
1949-52	All	BASE AND SWITCH KNOB ASSEMBLY		1	5938510
1953-54	All			1	5943852
1949-53	All	BEARING, handle		1	5937965
1949-52	All	BRACKET, outside mounting			5940979 LH
1953-54	All exc. 2562	outside mounting	5940786 RH		5940785 LH
1953-54	2562 All	outside mounting			5943825 LH
1955-57	All	outside mounting			5945825 LH
1958	All	outside mounting	531080 RH		531081 LH
1960	All	lamp mtg.	535082 RH		535083 LH
1949-52	All	BRACKET AND NUT ASSY., inside			
		mounting	5939016 RH		5940959 LH
1953-54	All exc. 2562	inside mounting	5943820 RH		5943819 LH
1953-54	2562 All	inside mounting			5943821 LH
1955-57	All	inside mounting			5945831 LH
1958	All	inside mounting	531078 RH		531079 LH
1939-42	All	CAP, switch		1	3699178
1958	All	handle		1	531212
1955	All	COVER AND SWITCH		1	5946258
1956	All			1	5947329
1957	All			1	5948406
1955-57	All	DOOR ASSEMBLY, chrome		1	5946248
1958	All			1	3738383
1949-54	All	HANDLE		1	5938359
1955	All			1	5946259
1956	All L.H.D.			1	5947327
1957	All	silver grey		1	5948411
1958	All	black		1	531210
1950-53	All	MIRROR ASSEMBLY		1	5939383
1954	All			1	5945261
1955-57	All			1	5946240
1958	All			1	531225
1949-54	All	PINION AND BEARING ASSEMBLY, handle end		1	5936462
1955-57	All	handle end		1	5946251
1958	All			1	3738382
1949-52	All	PINION AND BEARING PACKAGE, lamp end		1	5938954
1953-57	All	lamp end		1	5940643
1949-54	All	SCREW, handle		1	5937929
1949	All	mirror attaching		1	445542

1950-54	All	mirror attaching	1	450628
1958	All	handle cap	1	531211
1960	All	lamp mtg. brkt. to fender (10-24x1" Chrome)	3	167582
1960	All	lamp mtg. bracket to shaft tension (1/4"-20x1/2" Chrome)	1	132256
1948	All	SEALED BEAM UNIT	1	444279
1949-54	All		1	451651
1955-57	All		1	273227
1958-60	All	inside controlled lamp	1	456720
1958-59	All	outside controlled lamp	1	274331
1949-54	All	SPRING, base and switch knob contact	1	5936458
1949-54	All	lens retaining unit (9.774)	3	238288
1949-54	All	STIFFENER, mirror	1	5938145
1939-48	All	SWITCH	1	602272
1958	All	w/wire	1	531207
1958-59	All	outside controlled lamp	1	1179136
1949-54	All	WASHER, mirror-spring type	1	5938700

Group 9.774 FOG LIGHT PARTS

1949	All	BRACKET, mounting	2	5938529
1950	All		2	5939451
1951-52	All		2	514751
1953	All		2	5940750
1954	All			5945038 RH
1946-52	All	CONNECTOR, with dual fog lamp (3 wire type)	AR	1872486
1953-54	All		1	3698457
1948	All	DOOR ASSEMBLY with dual fog lamps	2	5937619
1949-54	All	with dual fog lamps	2	5938377
1949-52	All	ESCUTCHEON, fog light switch mounting	1	512660
1953-54	All	fog light switch mounting	1	516920
1951	All	KNOB ASSEMBLY, fog light switch-chrome	1	514543
1951-52	All	black	1	515722
1953-54	All		1	516966
1949-52	All	LAMP ASSEMBLY	2	926827
1953-54	All		2	926078
1949-53	All	NUT, fog light switch mounting	1	512658
1948	All	SEALED BEAM UNIT-with dual lights . . (4-5/8" dia.)	2	451653
1949-52	All		2	451652
1953-54	All		2	453910
1949-52	All	SPACER, mounting bracket bolt	1	512661
1953-54	All	switch mounting	1	515348
1949	All	SUPPORT, bracket	2	5938530
1950	All		2	5939472
1951-52	All		2	514752
1949-52	All	SWITCH, use with factory installed fog lights	1	512657
1949-52	All	use with field installed fog lights	1	512929
1953-54	All		1	515349
		SPRING (see Group 9.773 for use)		238288

Group 9.775 GROMMET, RUBBER

1948-54	All	safety light wire thru inst. panel	1	510458
1953-54	All	thermo gauge pipe thru dash	1	515384
1954	All A.C.	air conditioner blower motor wire thru fender skirt	1	510458
1955-56	All	oil and thermo gauge pipes thru dash	1	520277
1955	All	head and parking lamp wires thru baffle	4	117972
1955-59	All A.C.	air conditioner discharge hose	1	3133318

1955	All A.C.	dehydrator to expansion valve pipe	1	3133351
1956-57	All A.C.	receiver to evaporator tube	1	3133351
1957	All	oil pressure pipe thru dash	1	524176
1958	All	thermo gauge pipe thru dash	1	515384
1958	All A.C.	evaporator inlet pipe	1	3140594
1958-59	All A.C.	evaporator outlet pipe	1	3140663
1959	All A.C.	evaporator inlet pipe	1	3142670
1959-60	All A.C.	air conditioner control cable to dash	1	3711345
1959-60	All Cool Pack A.C.	freon hose thru dash	1	3148362
1959-60	All Cool Pack A.C.	freon hose thru radiator baffle	1	142350
1959	All Cool Pack A.C.	freon hose thru radiator baffle	1	127979
1959	All A.C.	liquid indicator to evaporator tube to rad. baffle	1	533569
1960	All Circulaire A.C.	evaporator outlet pipe	1	3140663
1960	All Circulaire A.C.	evaporator inlet pipe	1	3142670
1960	All Circulaire A.C.	comp. discharge hose	1	3133318
1960	All A.C.	control cable to dash (9/16" hole)	1	3711345
1960	All A.C.	control cable to dash (3/4" Hole)	1	536945
1960	All exc. A.C.	air inlet cable to dash-w/M.C. heater	1	3711345
1960	All Cool Pack A.C.	freon hose thru rad. baffle	2	142350
1960	All Circulaire A.C.	liquid indicator tube to rad. baffle	1	533569
1960	All	wire harness thru rad. baffle	2	536858
		GROMMET (see Group 10.152 for use)		493998

Group 9.779 DEFROSTER ASSEMBLY, HOT WATER HEATER WINDSHIELD

1953-54	All	with U/S heater	1	3128087
1955-56	All	with U/S heater	1	3132229
1957	All	with U/S heater	1	3136568
1949-52	All	DEFROSTER PKG., consists of defroster and shaft end	1	514453
1955-56	All (8.866)	CLIP, air control rod to dial hsg. lever	1	520511
1955-57	All (8.866)	air valve control rod to defroster lever	1	520511
1942-48	All	CORE ASSEMBLY, defroster-U/S heater	1	3116289
1949-52	All	U/S heater	1	3126137
1953-54	All	U/S heater	1	3128258
1955-57	All	U/S heater	1	3138510
1942-48	All	ELBOW, defroster air inlet	1	507464
1949-52	All	ELBOW AND SUPPORT ASSY., air outlet-U/S heater	1	512276
1953-54	All	U/S heater	1	515277
1940-48	All (8.846)	GROMMET, defroster pipe thru dash-U/S and dash heater	2	503425
1950-52	All (8.846)	heater pipe thru dash-dash heater	2	503425
1940-48	All	HOSE, U/S and dash heater (1-1/2" x 21-1/2")	1	3113681
1942-48	All	defroster pipe connector air, rubber-U/S heater	2	509176
1949-54	All	defroster air inlet-U/S heater (8-1/4" long)	1	512285
1949-52	All	defroster nozzle air-U/S heater	512286 RH	514165 LH
1950-52	All	defroster air-dash heater	514094 RH	514095 LH
1953-54	All	defroster nozzle air-U/S heater	515447 RH	521881 LH
1955	All	defroster nozzle air-U/S heater	521881 RH	
1955	All	defroster air to inner and outer nozzle	2	521882 LH
1955	All	defroster air to outer nozzle	520578 RH	
1955-57	All	defroster air inlet-U/S heater	1	518548
1956	All	defroster nozzle air-U/S heater	522212 RH	522213 LH
1957	All	defroster nozzle air-U/S heater	524502 RH	524503 LH
1958	All	defroster nozzle air		530539
1959-60	All	defroster air (2-1/2" dia.)	2	533590
1953-54	All	LEVER ASSY., defroster air control-U/S heater	1	516887
1953-54	All	defroster air valve shaft	1	3128091
1955-57	All	LINK ASSY., defroster air valve lever	1	3133031
1958	All	defroster air valve diaphragm	1	3141433

1949-52	All	NOZZLE ASSEMBLY, defroster air hose	2	512288	
1953-54	All	U/S heater	515184	RH	515185 LH
1955	All	U/S heater	519810	RH	519811 LH
1955	All	U/S heater	519808	RH	519809 LH
1956	All	U/S heater			2 521414
1957	All	U/S heater	523597	RH	523715 LH
1958	All		529896	RH	529897 LH
1959-60	All		4753796	RH	4753797 LH
1955	All	OUTLET ASSY., defroster air to hose	1	520336	
1956-57	All	U/S heater	1	521237	
1958	All	defroster air	1	529855	
1953-54	All	ROD, defroster air control-U/S heater	1	515298	
1955	All	U/S heater	1	519786	
1956	All	U/S heater	1	522242	
1957	All	U/S heater	1	528489	
1958	All exc. A.C.	SEAL, defroster air valve	1	3141427	
1958	All A.C.	defroster air valve	1	3141253	
1949-50	All	SHAFT ASSEMBLY, defroster, air control-U/S heater	1	513652	
1951-52	All	U/S heater	1	514432	
1949-52	All	SHAFT AND LINK ASSEMBLY, defroster air valve (thru defroster unit) U/S heater	1	3122391	
1949-55	All	SPRING, defroster air valve-U/S heater	1	3124496	
1949-54	All	defroster air valve shaft, anti-rattle - U/S heater	1	3127573	
1958	All	defroster air distributor air valve closing	1	3141409	
1958-60	All	(8.852) defroster high speed switch	1	7259072	
1942-48	All	(8.852) SWITCH, heater and defroster-U/S heater	1	515740	
1958-59	All	defroster high speed	1	7271401	
1960	All	defroster-w/P.B.C. heater	1	7276184	
1949-57	All	TRUNNION, defroster air valve shaft outer lever-U/S heater	1	512452	
1953-54	All	air control rod-U/S heater	1	515331	
1955	All	air control rod-U/S heater	1	512452	
1955-57	All	VALVE ASSY., defroster air-U/S heater	1	3133033	
1958	All A.C.	defroster air-w/baffle	1	3141252	
1958	All exc. A.C.	defroster air-w/baffle	1	3141443	
1941-48	All	(9.792) WIRE, blower to switch-U/S heater			3142299 LH
1948	All	(8.857) SCREW, defroster inlet	4	3120880	
1951-52	All	(8.866) air control shaft to defr.-U/S heater	1	140918	

Group 9.779 BACK WINDOW DEFROSTER PARTS

1955-57	All	MOTOR ASSY.	1	520094	
1955	All	BRACKET, switch mounting	1	520225	
1955-56	All	GRILLE	1	520095	
1955	All	KNOB, switch	1	520096	
1955-56	All exc. 25/2762-63-64, 2867	(9.774) SWITCH, back window defroster	1	515349	

Group 9.782 ELBOW, AIR INTAKE

1942-54	All	air intake frame-U/S heater	1	510729	
1942-48	All	blower to front tube	1	507288	
1955-57	All	air intake frame-U/S heater	1	522357	

Group 9.784 CLAMP, AIR INLET

1941-48	All	(1.166)	CLAMP, air inlet screen to tube-U/S heater (for 2-1/2" I.D. hose)	1	3692864
---------	-----	---------	--	---	---------

Group 9.785 COVER, AIR INTAKE

1942-48	All		COVER, in L.H. radiator baffle	1	507092
1949-54	All		in L.H. fender skirt baffle	1	507092
1949-54	All	(9.215)	NUT, air intake deflector to dash. (Spring type)	6	528308
1949-52	All	(9.215)	air control cable clip to dash	1	528308

Group 9.786 AIR INTAKE PARTS

1942-48	All		HOSE, rear intermediate-U/S heater (4-1/16" I.D.x19" long)	1	510941
1949-54	All		to dash connector (Rubber)	2	511966
1949-54	All		heater to blower-U/S heater	1	515423
1955	All		blower to elbow-U/S heater	1	518547
1956-57	All		blower to elbow-U/S heater	1	522304
1955	All		BOOT, air intake valve case to blower flange	1	518546
1949-52	All		COVER, heater intake valve cont. rod- U/S heater Upper	1	512338
1949-52	All		U/S heater Lower	1	512317
1953-54	All		U/S heater Upper	1	515425
1953-54	All		U/S heater Lower	1	515428
1955-57	All		U/S heater	1	519793
1958	All		blower air intake opening	1	530263
1958	All		temp. control valve opening	1	530280
1942-58	All		CLAMP, air intake tube AR		513479
1942-48	All		rear tube to body bracket-U/S heater	1	507462
1949-54	All		rear tube to body bracket-U/S heater	1	511901
1955-57	All		elbow to frame-U/S heater	1	520622
1958	All		CLIP, air valve diaphragm link AR		3138305
1949-54	All		DEFLECTOR, air intake	2	511964
1958	All exc. A.C.		DUCT ASSY., blower air intake	1	3141381
1958	All exc. A.C.		ESCUTCHEON, inst. panel vent control	1	529589
1949-54	All		FLANGE, air intake tube to air duct	1	512284
1959-60	All exc. Circulaire A.C.		GASKET, heater air inlet duct	1	3143560
1955-57	All		GRILLE, air intake-on cowl trim pad 4651629 RH		4651630 LH
1958	All	 4717700 RH		4717701 LH
1959-60	All	 4739018 RH		4739019 LH
1958	All exc. A.C.	(8.852)	NUT, air inlet diaphragm link	1	3140546
1955-56	All		SCREEN, air intake grille	2	4667701
1942-48	All		SHIELD, air intake rear tube-U/S heater	1	507478
1949-52	All		car heater air hose-U/S heater	1	511903
1953-54	All		heater air hose-U/S heater	1	515424
1942-54	All		SLEEVE, air intake elbow to heater-U/S heater	1	513389
1955-57	All		U/S heater	1	518572
1959-60	All exc. A.C.		heater blower to air inlet duct	1	533526
1958	All exc. A.C.		SPRING, heater air intake valve closing	1	3141391
1958	All A.C.	(8.858)	core and case air valve closing	1	3138393
1959	All exc. 2439		SUPPORT, shroud top vent grille	2	4758211
1942-48	All		TUBE, air intake-front (Metal) - U/S heater	1	507289
1942-48	All		intermediate (metal)-U/S heater	1	507290
1942-48	All		rear (steel)-U/S heater	1	507831
1949-54	All		car heater rear air-U/S heater	1	511904
1949-52	All		heater air intake (complete)-U/S heater	1	512307
1953-54	All		heater air intake (complete)-U/S heater	1	515427

1955	All	VALVE ASSY., heater air inlet	1	520242
1958	All exc. A.C.	air inlet case-w/baffle	1	3141394
1958	All exc. A.C. (8,852)	WASHER, air inlet diaphragm link	1	3137091

Group 9.787 CONTROL ASSEMBLY, AIR INLET

1949-51	All		1	514834
1952	All		1	516499
1953-54	All	516923 RH		516924 LH
1955	All	4651481 RH		4651482 LH
1956	All	4678334 RH		4678335 LH
1957	All		1	4694986
1958	All		1	4736167
1959	All exc. A.C.		2	533226
1960	All exc. A.C.	536331 RH		
1960	All			536331 LH
1949-54	All (8,077)	CLIP, control cable to body	2	511984
1958	All		2	4652350
1953-54	All	FERRULE, air intake control	2	516832
1958	All	KNOB, air vent control 530746 RH		530747 LH
1955-56	All	SUPPORT, air vent control	2	4648770
		NUT (See Group 8.845 and 8.866 for use)		3126659

Group 9.789 VALVE AND BODY ASSY., AIR VENTILATOR

1949-54	All	in right hand duct	1	511967
1949-54	All	in left hand duct	1	511968

Group 9.795 VALVE ASSY., HEATER WATER TEMPERATURE CONTROL

1942-48	All	VALVE ASSY., car temperature control-U/S heater	1	510768
1949-52	All	U/S heater	1	514452
1953-54	All	U/S heater	1	3128099
1955-56	All	U/S heater	1	519769
1957	All	U/S heater	1	523223
1958	All		1	529471
1959	All		1	3144335
1960	All	car temperature control-w/P.B.C. heater	1	3147574
1960	All	w/M.C. heater	1	3142623
1959-60	All	GASKET, heater core to temp. control valve	1	3142694
1958	All	SEAL, temperature control valve dash	1	529473
1949-57	All	SPRING, temperature control shaft anti-rattle-U/S heater	1	507329
1953-54	All	STUD, control lever pivot-U/S heater	1	515295
1953-54	All	control lever and pivot anti-rattle - U/S heater	1	515296

Group 9.795 COVER

COVER (see Group 8.845 for use)	3143581
---------------------------------	---------

Group 9.802 DUCT ASSEMBLY, BODY AIR INTAKE

1949-54	All	511722 RH		511723 LH
1949-54	All	SCREEN, body air intake	2	511793

Group 9.988 LENS, LUGGAGE COMPT. LAMP

1956-60 All 1 568467

Year	Description	Quantity	Unit Price	Total Price
1956
1957
1958
1959
1960